User's Guide **TPS5442x5** 降压转换器评估模块用户指南

TEXAS INSTRUMENTS

内容	
1 引言	3
2 说明	3
2.1 典型的终端用户应用	3
2.2 EVM 特性	3
3 EVM 电气性能规格	3
4 原理图	4
5 测试设置	5
5.1 测试和配置软件	<mark>5</mark>
5.2 测试设备	5
5.3 PWR-681EVM	<mark>6</mark>
5.4 测试点、跳线和开关列表	7
6 采用 Fusion GUI 配置 EVM	8
6.1 配置步骤	<mark>9</mark>
7 测试步骤	10
7.1 线性/负载调整率测量步骤	10
7.2 效率	10
7.3 波特图测量步骤	10
7.4 设备停机	10
8 性能数据和典型特性曲线	11
8.1 效率	11
8.2 负载调整率	11
8.3 线性调整率	12
8.4 瞬态响应	12
8.5 输出纹波	13
8.6 控制开启	14
8.7 控制关闭	15
8.8 过流保护	15
8.9 控制环路波特图	1 <mark>6</mark>
8.10 热像图	17
9 Fusion GUI	18
10 EVM 装配图和 PCB 布局	39
11 物料清单	42
12 修订历史记录	43

插图清单

图 4-1	. PWR-681EVM 原理图	4
图 5-1	. PWR-681EVM 概述	. 6
图 5-2	. 尖端和接地筒测量	. 6
图 8-1	. 在 0.95V 输出下的效率与线路/负载间的关系	11
图 8-2	. 0.95V 输出下的负载调整率	.11
图 8-3	. 在 0.95V 输出下的线性调整率	12
图 8-4	. V _{IN} 为 12V、瞬态为 0A 至 20A、2.5A/μs 且输出电压为 0.95V 时的瞬态响应	12
图 8-5	. 在 0.95V 输出下且 V _{IN} 为 12V、输出为 0A 时的输出纹波和开关节点	13
图 8-6	. 在 0.95V 输出下且 V _{IN} 为 12V、输出为 20A 时的输出纹波和开关节点	13
图 8-7	. 从控制启动, V _{IN} 为 12V、输出电流为 20A 且输出电压为 0.95V	14
图 8-8	. 0.5V 从控制预偏置启动,V _{IN} 为 12V、输出电流为 0A 且输出电压为 0.95V	14
图 8-9	. 从控制软停止,V _Ⅳ 为 12V、输出电流为 20A 且输出电压为 0.95V	15

图 8-10. 过流保护, V _{IN} 为 12V、输出电流为 36A 且输出电压为 0.95V	
图 8-11. 从过流保护重新启动, V _{IN} 为 12V 且输出电压为 0.95V	16
图 8-12. 12V _{IN} 、20A 输出电流和 0.95V 输出电压时的波特图	
图 8-13. V _{IN} 为 12V、输出电流为 20A 且输出电压为 0.95V 时的热像图	
图 8-14. V _{IN} 为 12V、输出电流为 30A 且输出电压为 0.95V 时的热像图	
图 9-1. Fusion 启动时显示的第一个窗口	18
图 9-2. 成功扫描找到器件	
图 9-3. 软件启动中	19
图 9-4. 软件启动中	19
图 9-5. 成功启动后显示的第一个屏幕 - 配置:限值与开/关	20
图 9-6. 配置:限值和开/关 - 开/关配置弹出窗口	21
图 9-7. 配置:限值和开/关 - 开/关配置弹出窗口及更改	22
图 9-8. 配置:高级	23
图 9-9. 配置:器件信息	24
图 9-10. 配置:SMBALERT # 屏蔽	25
图 9-11. 配置:全部	<mark>26</mark>
图 9-12. 配置:所有配置 - 开/关配置弹出窗口	27
图 9-13. 配置: <i>将配置存储到 NVM</i>	28
图 9-14. 将视图屏幕更改为监视屏幕	29
图 9-15. 监视屏幕	30
图 9-16. 系统仪表板	31
图 9-17. 状态屏幕	32
图 9-18. 导入工程/导入配置文件	33
图 9-19. 将配置存储到存储器中	34
图 9-20. 数据日志	35
图 9-21. 数据日志文件	<mark>36</mark>
图 9-22. PMBus 日志记录	37
图 9-23. PMBus 日志详细信息	38
图 10-1. PWR-681EVM 顶层装配图 (顶视图)	39
图 10-2. PWR-681EVM 顶层 (顶视图)	39
图 10-3. PWR-681EVM 第 1 层 (顶视图)	40
图 10-4. PWR-681EVM 第 2 层 (顶视图)	40
图 10-5. PWR-681EVM 底层 (顶视图)	41
图 10-6. PWR-681EVM 底层装配图 (顶视图)	41

表格清单

表 3-1. PWR-681EVM 电气性能规格	3
表 5-1 . 每个测试点的功能	7
表 6-1. 关键出厂配置参数	8
表 7-1. 线路/负载测量的测试点列表	10
表 7-2. 效率测量的测试点列表	10
表 11-1 PWR681 物料清单	42

商标

所有商标均为其各自所有者的财产。



1 引言

PWR681EVM 评估模块使用 TPS544B25 或 TPS544C25 器件。TPS544B25 和 TPS544C25 都是高度集成的同步降压转换器,分别能够提供高达 20A 或 30A 的电流输出。

2 说明

PWR681EVM 设计为单输出直流/直流转换器,可在典型低电压应用中演示 TPS544B25 或 TPS544C25,同时提供多个测试点来评估性能。它使用标称的 12V 输入总线来生成 0.95V 稳压输出(最大负载电流为 20A 或 30A,具体取决于所安装的器件)。

2.1 典型的终端用户应用

- 高密度电源解决方案
- 通信设备
- 服务器和计算设备
- 智能电源系统

2.2 EVM 特性

- 0.95V 稳压输出,高达 30ADC 稳态输出电流
- 可通过 PMBus 接口配置的功能包括:
 - 通过 PMBus 接口提供可编程的输出电压
 - 通过 PMBus 接口进行可编程 UVLO、软启动和启用
 - 可编程过流警告和故障限制,可通过 PMBus 接口编程对故障的响应
 - 可编程过压和欠压警告与故障限制,可通过 PMBus 接口编程对故障的响应
 - 可编程外部过热警告和故障限制,可通过 PMBus 接口编程对故障的响应
- 便捷的测试点,用于探测关键波形
- 可选的外部温度传感器

3 EVM 电气性能规格

表 3-1. PWR-681EVM 电气性能规格

	参数	测试条件		典型值	最大值	单位		
输入特	性							
	电压范围	V _{IN}	4.5	12	18	V		
	最大输入电流	V _{IN} = 8V , I _O = 30A			5	А		
	空载输入电流	V _{IN} = 12V , I _O = 0A		42		mA		
输出特	性							
V _{OUT}	输出电压	输出电流 = 10A		0.95		V		
I _{OUT}	输出负载电流	I _{OUT(min)} 至 I _{OUT(max)}	0		30	А		
输出电压调节		线性调整率:输入电压 = 4.5 V 至 18 V		0.5%				
		负载调整率:输出电流 = 0A 至 I _{OUT(max)}		0.5%				
V _{OUT}	输出电压纹波	V _{IN} = 12V , I _{OUT} = 30A	V _{IN} = 12V , I _{OUT} = 30A 20			mV _{PP}		
V _{OUT}	输出过流	36			А			
系统特	系统特性							
	开关频率	Fsw		500		kHz		
V _{OUT}	峰值效率	V _{IN} = 12V , I _O = 13A , F _{SW} = 500kHz 88%						
	工作温度	T _{oper}	0		105	°C		

4 原理图



图 4-1. PWR-681EVM 原理图

5 测试设置

5.1 测试和配置软件

要更改 EVM 上的任何默认配置参数,必须获取 TI Fusion Digital Power Designer 软件。该软件可从 TI 网站下载。

5.1.1 说明

Fusion Digital Power Designer 是图形用户界面 (GUI),用于配置和监测安装在此评估模块上的德州仪器 (TI) TPS544B25 或 TPS544C25 电源转换器。此应用使用 PMBus 协议,通过 TI USB 适配器经由串行总线与控制器 进行通信。这种适配器可通过 http://www.ti.com.cn/tool/cn/usb-to-gpio 购买。

备注

TI USB 适配器必须单独购买。该 EVM 套件不包含该适配器。

5.1.2 特性

通过 GUI 可以执行的一些任务包括:

- 通过硬件控制线路或 PMBus 操作命令打开或关闭电源输出。
- 监测实时数据。通过 GUI 持续监控和显示输入电压、输出电压、输出电流、温度和警告/故障等项目。
- 配置常见的工作特性,例如 VOUT、UVLO、软启动时间、警告和故障阈值、故障响应以及开/关。

此软件可通过 http://www.ti.com.cn/tool/cn/fusion_digital_power_designer 下载。

5.2 测试设备

电压源:输入电压源 VIN 必须是能够提供至少 8Apc 的 0V 至 18V 可变直流电源。将 VIN 连接至 J1 图 5-1。

万用表:建议使用两个单独的万用表图 5-1。一个仪表用于测量 V_{IN},另一个用于测量 V_{OUT}。

输出负载:建议在测试中使用可变电子负载图 5-1。它必须在低至 0.9V 的电压下支持 30A。

示波器:建议使用示波器测量输出噪声和波纹。输出纹波必须使用尖端和接地筒方法或更好的方法进行测量,如图 5-2 所示。示波器必须调整为 20MHz 带宽,交流耦合为 50mV/div,并且必须设置为 1µs/div。

风扇:在高负载下长时间运行期间,可能需要通过一个针对 EVM 的小风扇提供强制空气冷却。EVM 上器件的温度必须保持在 105℃以下。

USB 转 GPIO 接口适配器: EVM 和主计算机之间需要用到通信适配器。此 EVM 专为使用德州仪器 (TI) USB 转 GPIO 适配器而设计。这种适配器可通过 http://www.ti.com.cn/tool/cn/usb-to-gpio 购买。

建议线规:负载线中的电压降必须保持尽可能低的水平,以使负载处的工作电压保持在其工作范围内。请参阅下表,了解在最大 30A 负载下实现不超过 0.2V 压降的推荐线规和长度。





AWG 测量仪表	每英尺电阻值 (Ω)	负载线组合长度 (Ft)	每根导线的长度 (Ft)
12	1.59E-3	6.30	3.15
14	2.53E-3	3.96	1.98
16	4.02E-3	2.49	1.25
18	6.39E-3	1.57	0.78

备注

如果使用 AWG 12 导线,则 EVM 和负载之间的导线长度不得超过 3.15 英尺。

5.3 PWR-681EVM



图 5-1. PWR-681EVM 概述



Tip and Barrel V_{OUT} Ripple Measurement 图 5-2. 尖端和接地筒测量

|--|

项目	类型	名称	说明	
TP1	T-H 环路	SW	电源开关节点	
TP2	T-H 环路	CH-B	衡量环路稳定性	
TP3	T-H 环路	CH-A	衡量环路稳定性	
TP4	T-H 环路	V_sense +	遥感 +	
TP5	T-H 环路	V_sense -	遥感 -	
TP6	T-H 环路	Vout	使用该 V _{OUT} 进行效率测量	
TP7	T-H 环路	SYNC/RST	从时钟源输入同步信号;或者向 RESET V _{OUT} 施加逻辑低电平信号,以达到 VSET 引脚设置的初始启动电压。有关详细信息,请参阅数据表。	
TP8	T-H 环路	VDD	为内部电路供电	
TP9	T-H 环路	SMB_Alert	监测警报	
TP10	T-H 环路	GND	通用接地	
TP11	T-H 环路	Tsns/SS	监测 TSNS/SS 引脚上的电压	
TP12	T-H 环路	PGOOD	PGOOD (也驱动 LED 灯)	
TP13	T-H 环路	V _{OUT}	用于尖筒纹波测量	
TP14	T-H 环路	GND	用于尖筒纹波测量	
JP1	2 引脚跳线	LED Vin	移除跳线来测量 Vin 以提高效率。用 PGOOD 取代跳线和 LED 灯。	
JP2	2 引脚跳线	CNTL	将控制引脚分流到 GND (对于 ON_OFF_CONFIG 的默认配置,则关闭 IC,详 情请参阅数据表)	
S1	SPDT 开关	TSNS 和 SS 开关	在外部温度传感器和 SS 电阻器之间切换以连接到 TSNS/SS 引脚	



6 采用 Fusion GUI 配置 EVM

此 EVM 上安装的 TPS544B25 或 TPS544C25 在出厂时进行了预先配置。请参阅表 6-1, 查看从配置文件中获取 的关键出厂配置参数简短列表。

地址 (十六进制)	地址(十进制)	器件 ID		
0x24	36	TPS544x25		
		常规	I	
命令代码	命令代码 (十六进 制)	编码(十六进制)	解码	备注
VIN_OFF	0x36	0xF010	4.0 V	关断电压
VIN_ON	0x35	0xF012	4.5V	导通电压
IOUT_CAL_OFFSET	0x39	0xE000	0.0000A	GUI 读数的电流偏移量
	0×46	0xF848 (TPS544C25)	36 A	00 地際祝知
	0,40	0xF830 (TPS544B25)	24A	
IOUT_OC_FAULT_RESPONSE	0x47	0xBF	重启	对 OC 故障的响应
IOUT OC WARN LIMIT	0×44	0xF844 (TPS544C25)	34 A	00 数件规则
	034A	0xF82C (TPS544B25)	22 A	- 00 著百级加
VOUT_COMMAND	0x21	0x01E6	0.95V	输出电压
VOUT_MAX	0x24	0x0300	1.5V	最大输出电压
VOUT_TRANSITION_RATE	0x27	0xD03C	1mV/us	输出电压转换率
VOUT_SCALE_LOOP	0x29	0xF004	1	主控制环路的输出检测缩放比
VOUT_OV_FAULT_LIMIT	0x40	0x0290	1.281 V	输出过压故障阈值
VOUT_OV_FAULT_RESPONSE	0x41	0xBF	重启	输出过压故障响应
VOUT_OV_WARN_LIMIT	0x42	0x0267	1.201 V	输出过压警告阈值
VOUT_UV_WARN_LIMIT	0x43	0x0143	0.631 V	输出欠压警告阈值
VOUT_UV_FAULT_LIMIT	0x44	0x0130	0.594 V	输出欠压故障阈值
VOUT_UV_FAULT_RESPONSE	0x45	0xBF	重启	输出欠压故障响应
ON_OFF_CONFIG	0x02	0x16	仅 CNTL,高电平有效	无需控制信号和操作命令
操作	0x01	0x00	操作不用于启用调节;器件:立即关闭	
OT_FAULT_LIMIT	0x4F	007x0D	125°C	OT 故障级别
OT_WARN_LIMIT	0x51	0x0064	100°C	OT 警告级别
TON_DELAY	0x60	0x0000	Oms	导通延迟
TON_RISE	0x61	0x0005	5ms	软启动时间
TON_MAX_FAULT_LIMIT	0x62	0x0064	100ms	输出电压达到调节的上限
TOFF_DELAY	0x64	0x0000	Oms	关断延迟
TOFF_FALL	0x65	0x0000	1ms	软停止下降时间
MFR_VOUT_MIN	0xA4	0x0100	0.5V	最小输出电压

表 6-1. 关键出厂配置参数

如果需要将 EVM 配置为表 6-1 所示出厂设置之外的设置,可以使用 TI Fusion Digital Power Designer 软件重新 配置。在启动软件之前,必须为 EVM 施加输入电压,这样安装的 TPS544B25 或 TPS544C25 才处于有效状态并 能对 GUI 做出响应,而 GUI 才能识别器件。EVM 的默认配置在输入电压为 4.5V 时开始转换,因此,为了避免在 配置期间发生任何转换器活动,必须施加低于 4.5V 的输入电压。建议施加的电压为 4V。

6.1 配置步骤

- 1. 调整输入电源以提供 4V_{DC},将电流限制为 1A_{DC}。
- 2. 对 EVM 施加输入电压。请参阅图 5-1, 了解 EVM 及其连接的概要信息。
- 3. 启动 Fusion GUI 软件。更多信息,请参阅节 9 中的屏幕截图。
- 4. 根据需要配置 EVM 运行参数。
- 5. VSET 引脚上拉至 EVM 上的 BP3,因此启动时 VOUT_COMMAND 将从内部 EEPROM 恢复。在此设置下, SYNC/RESET_B 引脚配置为 SYNC 功能。为了使用 VSET 或 RESET_B 功能,应安装适当的电阻器 R19 并 移除电阻器 R18。详细信息,请参阅数据表。
- 6. EVM 上的 S1 提供了在 EVM 上使用外部温度传感器 Q1 的选项。

备注

要读取 PMBus 上的外部温度值,需要将 (E5h) MFR_SPECIFIC _21 寄存器中的位 8 (SS_DET_DIS) 设置为 1。否则,READ_TEMPERATURE_2 将始终返回 25°C。

7. 当输入为 4V_{DC} 时,内部配置电路将通电并处于活动状态,但器件仍处于 UVLO 状态,并且输出将关闭。

7 测试步骤

7.1 线性/负载调整率测量步骤

- 1. 确保电子负载设为消耗 0A_{DC}。
- 2. 将 V_{IN} 从 0V 增至 12V,使用数字万用表测量输入电压。
- 3. 使用其他数字万用表测量 TP4 和 TP5 的输出电压 V_{OUT}。

表 7-1. 线路/负载测量的测试点列表

测试点	节点名称	说明
JP1	VIN	VIN+VE 的测量点(移除跳线,LED 不亮)
TP10	GND	VIN - VE 的测量点
TP4	V_sense +	VOUT +VE 的测量点
TP5	V_sense -	VOUT - VE 的测量点

- 4. 将负载从 0A_{DC} 改为最大额定输出 A_{DC} (TPS544B25 = 20A, TPS544C25 = 30A)。V_{OUT} 必须保持在表 3-1 中规定的范围内。
- 5. 将 V_{IN} 从 4.5V 改为 18V。V_{OUT} 必须保持在表 3-1 中规定的范围内。
- 6. 将负载降至 0A。
- 7. 将 V_{IN} 降至 0V 或关闭电源。

7.2 效率

为了评估 EVM 上动力总成的效率,在正确位置测量电压非常重要。这是十分必要的,否则测量将包含与动力总成本身无关的效率损耗。覆铜布线以及输入和输出连接器上的压降产生的损耗与动力总成的效率无关,不得包含在效率测量的范围之内。

测试点	节点名称	说明
JP1	VIN	VIN+VE 的测量点(移除跳线,LED 不亮)
TP10	GND	VIN - VE 的测量点
TP6	VOUT	VOUT +VE 的测量点
TP10	GND	VOUT - VE 的测量点

表 7-2. 效率测量的测试点列表

输入电流可以在输入线的任何一点进行测量,而输出电流可以在被测输出线的任何一点进行测量。采用这些测量 点时,效率测量不包含连接器和 PCB 布线产生的损耗。

7.3 波特图测量步骤

- 1. 按照节 7.1 中所述将 VIN 和负载设置为所需的运行条件。
- 2. 将隔离变压器的交流小信号注入连接到测试点 TP2 和 TP3。
- 3. 将输入信号振幅测量探头 (通道 A) 连接到 TP3。
- 4. 将输出信号振幅测量探头(通道 B)连接到 TP2。
- 5. 将通道 A 和通道 B 的接地引线连接到 TP10。
- 6. 通过隔离变压器注入 10mV 或更低的信号。
- 7. 扫描频率从 500Hz 到 500kHz,使用 10Hz 或更低的后置滤波器。
- 8. 控制环路增益可以通过 20 × log (ChannelB/ChannelA) 测量得出。
- 9. 控制环路相位可由通道 A 和通道 B 之间的相位差进行测量。
- 10. 按照节 7.4 中所述关闭设备电源。

7.4 设备停机

- 1. 将负载电流降至 0A。
- 2. 将输入电压降至 0V。
- 3. 关闭外部风扇 (如果正在使用中)。
- 4. 关闭设备。

10 TPS5442x5 降压转换器评估模块用户指南

8 性能数据和典型特性曲线

图 8-1 至图 8-13 显示了 PWR-681EVM 的典型性能曲线。

8.1 效率



图 8-1. 在 0.95V 输出下的效率与线路/负载间的关系

8.2 负载调整率





8.3 线性调整率



图 8-3. 在 0.95V 输出下的线性调整率

8.4 瞬态响应



Ch1 = V_{IN} (5V/div) , Ch3 = V_{OUT} (30mV/div) , Ch4 = I_{OUT} (10A/div)





CH1 = SW (5V/div)、Ch3 = 20mV/div 时的 V_{OUT} 纹波





CH1 = SW (5V/div)、Ch3 = 20mV/div 时的 V_{OUT} 纹波

图 8-6. 在 0.95V 输出下且 V_{IN} 为 12V、输出为 20A 时的输出纹波和开关节点



8.6 控制开启



 $Ch1 = V_{\text{IN}} \ (10V/\text{divi}) \ , \ Ch2 = CNTL \ (2V/\text{div}) \ , \ Ch3 = V_{\text{OUT}} \ (500\text{mV/div}) \ , \ Ch4 = \text{PGOOD} \ (5V/\text{div})$





 $Ch1 = V_{\text{IN}} (10V/\text{divi}) \text{ , } Ch2 = CNTL (2V/\text{div}) \text{ , } Ch3 = V_{\text{OUT}} (500\text{mV/div}) \text{ , } Ch4 = \text{PGOOD} (5V/\text{div})$

图 8-8. 0.5V 从控制预偏置启动,V_{IN} 为 12V、输出电流为 0A 且输出电压为 0.95V



8.7 控制关闭



Ch1 = V_{IN} (10V/divi) , Ch2 = CNTL (2V/div) , Ch3 = V_{OUT} (500mV/div) , Ch4 = PGOOD (5V/div)



8.8 过流保护



Ch1 = V_{IN} (10V/div) , Ch2 = I_{IN} (2A/div) , Ch3 = V_{OUT} (500mV/div) , Ch4 = I_{OUT} (10A/div)

图 8-10. 过流保护,V_{IN} 为 12V、输出电流为 36A 且输出电压为 0.95V



	111		· · · · ·	1.1.1	1 1 1 1	1 1 1	1 1		
-					·				
VIN									
VOUT									
IOUT		┛┝							
(01) 10.0V/div	1	MΩ ^B W:20.0M		-2.94V		, † ,	1.1.	A (380mV	20.0ms/div 500kS/s 2.0µs/pt
600mV/di 600mV/di 600mV/di	iv 1 liv 5	MΩ ^B W:20.0M 0Ω ^B W:20.0M		1.133V 4.073V					Preview Single Seq
	Value	Mean	Min	Max	St Dev	Count	Info		
					0.0	10			
(G) Mean	34.54mV	34.541041m	34.54m	34.54m	0.0	1.0			
Mean Max	34.54mV 3.326V	34.541041m 3.32625	34.54m 3.326	34.54m 3.326	0.0	1.0			
C3 Mean C2 Max C1 Freq	34.54mV 3.326V 11.63kHz	34.541041m 3.32625 11.625654k	34.54m 3.326 11.63k	34.54m 3.326 11.63k	0.0	1.0	0		

Ch1 = V_{IN} (10V/div) , Ch2 = I_{IN} (2A/div) , Ch3 = V_{OUT} (500mV/div) , Ch4 = I_{OUT} (10A/div)

图 8-11. 从过流保护重新启动, V_{IN} 为 12V 且输出电压为 0.95V

8.9 控制环路波特图



图 8-12. 12VIN、20A 输出电流和 0.95V 输出电压时的波特图



8.10 热像图



图 8-13. V_{IN} 为 12V、输出电流为 20A 且输出电压为 0.95V 时的热像图



图 8-14. VIN 为 12V、输出电流为 30A 且输出电压为 0.95V 时的热像图



9 Fusion GUI

TEXAS INSTRUMENTS	
Fusion Digital Power Designer Version 1.8.138 [2011-11-15]	
Restoring user preferences and data	

图 9-1. Fusion 启动时显示的第一个窗口

TEXAS INSTRUME	NTS
Fusion Digital Power Designer Version 1.8.138 [2011-11-15]	
Scanning USB Adapter #1 for devices 1 device found	Device Found

图 9-2. 成功扫描找到器件





Fusion Digital Power Designer

Version 1.8.138 [2011-11-15]

1 device found; continuing with GUI startup ...

图 9-3. 软件启动中



Fusion Digital Power Designer

Version 1.8.138 [2011-11-15]

Reading parameters from device & creating graphical interface ...

图 9-4. 软件启动中



下一个屏幕用于配置以下各项(图 9-5):

- OV 和 UV 故障及警告限值
- OC 故障和 OC 警告限值
- OT 故障和 OT 警告限值
- 故障响应
- UVLO
- 开/关配置
- 时序控制
- Vour 命令电压

💖 Fusion Digital Powe	r Designer - TPS544C25 🛛 A	Address 36d - Texas Instruments			
File Device Tools	Debug Help				TPS544C25 @ Address 36d - Rail #1
Configure	Limits & On/Off Debug Mode	Test Mode Advanced Device Info SMBA	LERT # Mask All Config		
	Voltage Limits				
Write to Hardware	Voit Mode:	FXP -9			-
device change	Vout Command:	0.949 🚔 V			
Discard Changes	Yout OV Warn Limit:	1.201 V	Vout LIV Warn Limits	0.631 🗇 V	
	Vout OV Fault Limit:	1.281 🐳 V	Vout UV Fault Limit:	0.594 T v	
Store Config to NVM	Vout OV Fault Response:	Respo V	Vout UV Fault Response	No. Respective	
Restore NVM Config	MFR Vout Min:	0.500 🗘 V	,	Keapon V	
Clear Restore Notices	Vout Max	1.500 📩 V			
	Current Limits		Temperature Limits		
	Iout OC Warn Limit:	34.0 🕀 A	Temp Warn Limit:	100 🕀 °C	-
	Iout OC Fault Limit:	36.0 🕀 A	Temp Fault Limit:	125 🕀 °C	
	Iout OC Fault Response:	Respo 🗸	OT Fault Response:	Record Ly	
				Kespo V]
	Turn On/Off				1
-	Vin On:	4.50 🗸 V	Vin Off:	4.00 🗸 V	
	Turn On Rise:	5 🗸 ms	Turn Off Fall:	0 🖂 ms	
	Turn On Delay:	0 🗸 ms	Turn Off Delay:	0 💟 ms	
	Turn On Max Fault Limit:	100 🗸 ms			
	Turn On Max Fault Response:	Respo V			
	On/Off Config:	0x16			
		Active High, Use			
		TOFF_DELAT/TOFF_FALL			J
[Tips & Hints			PMBus Log	
	VOUT_UV_WARN_LIMIT [0x43]	1			
🚸 Configure	warning. This value is typically great	e at the sense or output pins that causes an ou er than the output undervoltage fault threshold	d.		
Monitor			~		
3 Status			Fin 1997	PMBus Log	<u>ل</u> ام ۲
Fusion Disital Draws 5			CD Adapter of 0.11.0		Jin Town Income State
Fusion Digital Power L	Jesigner v2.0.37 [2015-03-2	27] 1PS544C25 @ Address 36d U	58 Adapter v1.0.11 [PEC; 400 KHZ]	TEXAS INSTRUMENTS fusion digital power

图 9-5. 成功启动后显示的第一个屏幕 - 配置:限值与开/关



更改开/关配置时,系统会打开一个弹出窗口,其中包括选项的详细信息(图 9-6)。

TUSION DIGITAL POWE	er besigner - 1PS544C25 @	Address 30d	· Texas histruments			
File Device Tools	s Debug Help				TPS544C25 @ Address 36d - Rail #1	×
Configure	Limits & On/Off Debug Mode	Test Mode Ad	vanced Device Info SMBALERT# Mask All Config			
Write to Hardware	Voltage Limits		×			
Auto write on rail or device change	Vout Mode:	EXP -9	On / Off Control			
Discard Changes	Vout OV Warn Limit:	1.201	Unit powers up any time power is present, regardless of state of the CONTROL pin or	0.631 👻 V		
Store Config to NVM	Vout OV Fault Limit:	1.281 束	CONTROL Pin Only	0.594 🔹 V		
Restore NVM Config	Vout OV Fault Response: MFR Vout Min:	Respo ~	The device ignores the on/off portion of the OPERATION command from serial bus. Power is converted when the CONTROL pin is active.	e: Respo v		
Clear Restore Notices	Vout Max	1.500 🐳	OPERATION Only The device ignores the CONTROL pin. Power is converted when the on/off portion of the OPER ATTON compared is on			
	Current Limits		Both CONTROL Rin & OPERATION			
	Iout OC Warn Limit:	34.0 🗘 A	The CONTROL pin must be active and the on/off portion of the OPERATION command	100 × °C		
	Iout OC Fault Limit:	36.0 🎲 A	on for the device to convert power.	125 😴 °C		
	Iout OC Fault Response:	Respo 🗸	Active low (Pull pin low to start the unit)	Respo 🗸		
	Turn On/Off		 Active high (Pull high to start the unit) 			
	Vin On:	4.50 🗸	- Control Pin Turn Off Configuration	4.00 V		
	Turn On Rise:	5 🗸	Use the turn off delay configured by	0 🖂 ms		
	Turn On Delay:	100 🖂	TOFF_FALL	0 🖂 ms		
	Turn On Max Fault Response:	Resno V	 Furn off the output and stop transferring energy to the output as fast as possible 			
	On/Off Confin:	0x16				
		Mode: CONTR Active High, U: TOFF_DELAY/	DL Pin Only; Control: se YOFF_FALL			
					-	
	Tips & Hints			PMBus Log		Ť.
Configure	ON_OFF_CONFIG [0x02] Configures the combination of COI and off. This includes how the unit	NTROL pin input ar responds when p	id serial bus commands needed to turn the unit on			^
Monitor			~			~
🔄 Status			E	PMBus Log		Fa 🗑
Fusion Digital Power	Designer v2.0.37 [2015-03-	27] TPS5440	25 @ Address 36d USB Adapter v1.0.11 [PEC; 400 kHz]	🖓 Texas Instruments fusio	n digital power

图 9-6. 配置:限值和开/关 - 开/关配置弹出窗口



选择更改后,会显示橙色 U 图标,以提供 Undo Change 选项。在选择 Write to Hardware 或 Store Config to NVM 后会保留更改。选择 Write to Hardware 时,更改会存储到易失性存储器,并会在输入下电上电时默认恢复为以前的设置。选择 Store Config to NVM 时,更改会存储到非易失性存储器并成为新的默认设置(图 9-7)。

🕀 Fusion Digital Pow	ver Designer - TPS544C25 @	Address 36d	- Texas Instruments		- 🖻 🔺
File Device Too	ls Debug Help				TPS544C25 @ Address 36d - Rail #1
Configure	Limits & On/Off Debug Mode	Test Mode A	dvanced Device Info SMBALERT# Mask All Confi		
(Mithe he Mandulan	Voltage Limits				
- Auto write op rail or	Vout Mode:	EXP -9	- On / Off Control		
device change	Vout Command:	0.949 🕀	O Always Converting		
Discard Changes	Vout OV Warn Limit:	1.201 👽	Unit powers up any time power is present, regardless of state of the CONTROL pin or OPERATION command	0.631 🐳 V	
Store Config to NVM	Vout OV Fault Limit:	1.282 🛬	O CONTROL Pin Only	0.594 🕀 V	
Restore NVM Config	Vout OV Fault Response:	Respo V	The device ignores the on/off portion of the OPERATION command from serial bus. Power	e: Respo 🗸	
Clear Pastore Nation	MPK YOUT MIN:	0.500 -	S converted when the CONTROL pin is active.		
Clear Restore Noutes	Vout Max	1.500 😌	OPERATION Only: The device ignores the CONTROL pin. Power is converted when the on/off portion of the OPERATION command is on.		
	Current Limits		O Both CONTROL Pin & OPERATION		
	Iout OC Warn Limit:	34.0 💭 A	The CONTROL pin must be active and the on off portion of the OPERATION command	100 💭 °C	
	Iout OC Fault Limit:	36.0 💭 A	on for the device to convert power.	125 🐨 ℃	
	Iout OC Fault Response:	Respo V	- Control Pin Polarity	Resp. V	
			O Active low (Pull pin low to start the unit)		
	Turn On/Off		 Active high (Pull high to start the unit) 		
	Vin On:	4.50 🗸	- Control Pin Turn Off Configuration	4.00 V	
	Turn On Rise:	5 🗸	Use the turn off delay configured by	0 🗸 ms	
	Turn On Delay:	0 🗸	 TOFF_DELAY and fall time configured by TOFF_FALL 	0 🗸 ms	
	Turn On Max Fault Limit:	100 🗸	O Turn off the output and stop transferring		
	Turn On Max Fault Response:	Respo 🗸			
	On/Off Config:	0x1A ∨			
		Mode: OPERA	TION Only		
				Printipus Log	(H)
🚸 Configure	Minimum rated value, in volts, to v	which the output v	oltage may be set.		<u>^</u>
Monitor				~	
🚸 Status			h.	PMBus Log	Fa 🕲
Fusion Digital Power	Designer v2.0.37 [2015-03	-27] TPS544	C25 @ Address 36d USB Adapter v1.0.1	1 [PEC; 400 kHz]	TEXAS INSTRUMENTS fusion digital power





使用"Advanced"标签来配置以下各项(图 9-8):

- E5h 选项 (MFR_SPECIFIC_21)
- F0h MISC_CONFIG_OPTIONS 选项 (MFR_SPECIFIC_32)



图 9-8. 配置: 高级



器件信息、"User Scratch Pad"、"Write Protection"选项,以及"Vout Scale Loop"、"Vout Transition Rate"和"lout Offset"的配置可以在"Device Info"标签(图 9-9)中找到。可通过键入或滚动浏览来为 I_{OUT} 偏移量输入新值。I_{OUT} 校准偏移量范围为 -4A 至 3.9375A,分辨率阶跃为 62.5mA。如果键入的值在提供的离散步长之间,则键入的值不会更改,但会保留最近的离散步长。Fusion GUI 会在重新启动时显示实际步长。

🕀 Fusion Digital Pow	er Designer - TPS544C25 @ Address 36d - Texas Instruments		- 🖻 🛓
File Device Tool	ls Debug Help		TPS544C25 @ Address 36d - Rail #1
Configure	Limits & On/Off Debug Mode Test Mode Advanced Device Info SMB	ALERT# Mask All Config	
Write to Hardware Write to Hardware Auto write on rail or device change Discard Changes Store Config to NMM Restore NVM Config Clear Restore Notices	Lintis & On/Off Debug Mode Test Mode Advanced Device Info SMB Device Constants 0x2700 (TPS544C25) IC Device ID: 0x2700 (TPS544C25) Device Rev: 0x000 Revision: 0x00 PMBus Revision: 1.0,12 - Part I: 1.0, Part II: 1.2 Capability: Maximum Supported Bus Speed: 400 MHz Packet Error Checking (PEC) Supported: Yes SHBALERT# Supported: Yes Wintferr the device has an the SMBus Alert Response protocol. Vout Mode: DIP -9	ALERT # New All Contig Write Protect Disable al writes except to the Disable al writes except to the UNRTE_PROTECT command Disable al writes except to the Disable al writes to copy to the Disable al writes to all commands Calibration Vout Scale Loop: Vout Transition Rate: 1000 V mv/us	
Configure	HFR_SPECIFIC_00 15 14 13 12 11 10 9 8 7 6 User Soratch Pad: 0x0052 D	S 4 3 2 1 0 ■ ■ □ □ ■ □ ■ □ ■ ■ □ ■ □ ■ □ PMBus Log	• • • •
Monitor Status		PMBus Log	Image: Contract of the second sec
Eusion Digital Power	Designer v2.0.37 [2015-03-27] TPS544C25 @ Address 36d	ISB Adapter v1 0.11 (BEC: 400 kHz)	a Texas Instantian digital name

图 9-9. 配置:器件信息

可以在"SMBALERT # Mast"屏幕(图 9-10)中找到和配置可屏蔽的 SMBALERT 源。



usion Digital Power Designer v2.0.37 [2015-03-27] TPS544C25 @ Address 36d USB Adapter v1.0.11 [PEC; 400 kHz]

图 9-10. 配置: SMBALERT # 屏蔽



使用 "All Config" 标签可配置所有可配置参数 (图 9-11)。该屏幕还会显示十六进制 (hex) 编码等其他详细信 息。

File Device Tool	ls Debug Help								TPS544C25 @ Address 36d - Rail #1
Configure	Limits & On/Off Debug Mode Test Mode	Advanced	Device Info SMBAL	ERT# Mask A	Il Config				
	Command	Code	Value/Edit	Hex/Edit	Command	Code	Value/Edit	Hex/Edit	
Auto write on rail or	▼ Calibration				On/Off Configuration				
device change	IOUT_CAL_OFFSET	0x39	0.0000 🕀 A	0xE000	ON_OFF_CONFIG	0×02	0x16 🗸	0x16	
	VOUT_SCALE_LOOP	0x29	1.00 🖂	0xF004	OPERATION	0x01	0x00 🖂	0x00	
Store Config to NVM	▼ Configuration				TOFF_DELAY	0x64	0 🖂 ms	0x0000	
Restore NVM Config	IC_DEVICE_ID	0×AD	0x2700 🗸	0x2 ∨	TOFF_FALL	0x65	0 🖂 ms	0x0000	
	IC_DEVICE_REV	0×AE	0x0000 ~	0x0 ∨	TON_DELAY	0x60	0 🖂 ms	0x0000	
	MFR_21 (OPTIONS)	0×E5	PMB_V ⊻	0x00C7	TON_MAX_FAULT_LIMIT	0x62	100 🖂 ms	0x0064	
Sort Parameters By:	MFR_32 (API_OPTIONS)	0xF0	OV_RE ∨	0x0001	TON_MAX_FAULT_RESPONSE	0x63	Click 🗸	0xBF	
Command Name Command Code	SMBALERT_MASK_CML	0×1B	000000 🗸	0x00	TON_RISE	0x61	5 🗸 ms	0x0005	
	SMBALERT_MASK_INPUT	0×1B	000000 🗸	0x00	▼ Status				
Group by Category	SMBALERT_MASK_IOUT	0×1B	000000 🗸	0x00	READ_IOUT	0x8C	0.00 A	0xE000	
	SMBALERT_MASK_MFR_SPECIFIC	0×1B	000000 🗸	0x00	READ_TEMPERATURE_2	0×8E	25 °C	0x0019	
	SMBALERT_MASK_TEMPERATURE	0×1B	000000 🗸	0x00	READ_VOUT	0×8B	0.010 V	0x0005	
	SMBALERT_MASK_VOUT	0×1B	000000 🗸	0x00	STATUS_BYTE	0×78	010000 🖂	0x42	
	SMBALERT_MASK_WORD	0×1B	000010 🗸	0x08	STATUS_CML	0×7E	100000 🗸	0x82	
	VOUT_COMMAND	0x21	0.949 🗘 V	0x01E6	STATUS_INPUT	0x7C	000000 🖂	0x00	
	VOUT_MAX	0x24	1.500 🐳 V	0x0300	STATUS_IOUT	0×7B	000000 🗸	0x00	
	VOUT_MODE	0×20			STATUS_MFR_SPECIFIC	0x80	000100 🖂	0x10	
	VOUT_TRANSITION_RATE	0x27	1.000 V mV	0xD03C	STATUS_TEMPERATURE	0×7D	000000 🗸	0x00	
	WRITE_PROTECT	0×10	0x00 🖂	0x00	STATUS_YOUT	0x7A	000000 🖂	0x00	
	▼ Limits				STATUS_WORD	0×79	Click 🗸	0x0842	
	IOUT_OC_FAULT_LIMIT	0x46	36.0 🕀 A	0xF848	User Parameters				
	IOUT_OC_FAULT_RESPONSE	0x47	Click 🗸	0xBF	MFR_00 (FOR USER)	0xD0	0x0052 🗸	0x0052	
	Tips & Hints				PMBus Log				
Configure	ON_OFF_CONFIG [0x02] Configures the combination of CONTROL pin in and off. This includes how the unit responds wi	out and serial b nen power is ap	us commands needed plied.	to turn the unit (on 📃				
Monitor									
Status					PMBus Log				6
, otatas	۱L								

图 9-11. 配置: 全部

开/关配置也可以从"All Config"屏幕进行配置,同样的过程适用(图 9-12)。

File Device Tool	s Debug Help							TPS544C25 @ /	Address 36d - Rail #1
Configure	Limits & On/Off Debug Mode Test Mode	Advanced	Device Info SMBAL	ERT# Mask A	Il Config				
Write to Hardware	Command	Code	¥alue/Edit	Hex/Edit	Command	Code	Value/Edit	Hex/Edit	<u>^</u>
Auto write on rail or	▼ Calibration				On/Off Configuration				
Discard Changes	IOUT_CAL_OFFSET	0x39	0.0000 🕀 A	0xE000	ON_OFF_CONFIG	U 0x02	0x1A 🖂	0x1A	
Discard changes	VOUT_SCALE_LOOP	0×29	1.00 🗸	0xF004	OPERATION	0x01	0x00 🗸	On / Off Control	
Store Config to NVM	Configuration		_		TOFF_DELAY	0x64	0 🗸	Unit powers up any time power is present,	
Restore NVM Config	IC_DEVICE_ID	0xAD	0x2700 🗸	0x2 ∨	TOFF_FALL	0×65	0 🗸	regardless of state of the CONTROL pin or OPERATION command.	
Class Destars Nation	IC_DEVICE_REV	0×AE	0x0000 ~	0x0 ⊻	TON_DELAY	0x60	0 🗸	O CONTROL Pin Only	
Clear Restore Nobles	MFR_21 (OPTIONS)	0×E5	PMB_V ∨	0x00C7	TON_MAX_FAULT_LIMIT	0x62	100 🗸	OPERATION command from serial bus. Power	er =
Sort Parameters By:	MFR_32 (API_OPTIONS)	0×F0	0V_RE 🖂	0x0001	TON_MAX_FAULT_RESPONSE	0x63	Click 🗸	OPERATION Only	e.
Command Name	SMBALERT_MASK_CML	0×1B	000000 🖂	0x00	TON_RISE	0x61	5 🗸	The device ignores the CONTROL pin. Powe	ris
	SMBALERT_MASK_INPUT	0×1B	000000 🗸	0x00	▼ Status			OPERATION command is on.	
Group by Category	SMBALERT_MASK_IOUT	0x1B	000000 🖂	0x00	READ_IOUT	0x8C	0.00	Both CONTROL Pin & OPERATION The CONTROL pin any st be active and the	
	SMBALERT_MASK_MFR_SPECIFIC	0×1B	000000 🖂	0x00	READ_TEMPERATURE_2	0x8E	25	on/off portion of the OPERATION command	
	SMBALERT_MASK_TEMPERATURE	0×1B	000000 🖂	0x00	READ_VOUT	0×88	0.010	Control Bin Bolarity	
	SMBALERT_MASK_VOUT	0x1B	000000 🖂	0x00	STATUS_BYTE	0x78	010000 🖂	Active low (Pull pin low to start the unit)	
	SMBALERT_MASK_WORD	0×1B	000010 🗸	0x08	STATUS_CML	0x7E	100000 🖂	 Active high (Pull high to start the unit) 	
	VOUT_COMMAND	0x21	0.949 🐳 v	0x01E6	STATUS_INPUT	0x7C	000000 🗸		
	VOUT_MAX	0x24	1.500 👽 V	0x0300	STATUS_IOUT	0x78	000000 🗸	Use the turn off delay configured by	
	YOUT_MODE	0x20	EXP -9		STATUS_MFR_SPECIFIC	0x80	000100 🗸	 TOFF_DELAY and fall time configured by TOFF_FALL 	
	VOUT_TRANSITION_RATE	0x27	1.000 V mV	0xD03C	STATUS_TEMPERATURE	0x7D	000000 🗸	O Turn off the output and stop transferring	
	WRITE_PROTECT	0x10	0x00 ~	0x00	STATUS_VOUT	0x7A	000000 🗸	energy to the output as last as possible	
	▼ Limits				STATUS_WORD	0x79	Click 🗸		
	IOUT_OC_FAULT_LIMIT	0x46	36.0 🌩 A	0xF848	▼ User Parameters				
	IOUT_OC_FAULT_RESPONSE	0x47	Click 🖂	0x8F	MFR_00 (FOR USER)	0xD0	0x0052 🗸	0x0052	~
	Tips & Hints				PMBus Log				Ŧ
Configure	ON_OFF_CONFIG [0x02] Configures the combination of CONTROL pin in and off. This includes how the unit responds w	put and serial b hen power is ap	us commands needed oplied.	to turn the unit	on 🔿				~
Monitor					\sim				~
Status					PMBus Log				Fa 🗑
Fusion Digital Power	Designer v2.0.37 [2015-03-27] TPS	544C25 @ /	Address 36d US	B Adapter	/1.0.11 [PEC; 400 kHz]			4	TEXAS INSTRUMENTS fusion digital power



更改一个或多个可配置参数后,可以通过选择 Store Config to NVM 将这些更改存储到非易失性存储器。执行此操 作后,系统会打开确认选择弹出窗口,如果确认,这些更改便会存储到非易失性存储器(图 9-13)。

File Device Too	ols Debug Help								TPS544C25 @ Address 36d - Rail #1
Configure	Limits & On/Off Debug Mode Test Mode	Advanced	Device Info SMBA	ALERT# Mask	All Config				
Write to Hardware	Command	Code	Value/Edit	Hex/Edit	Command	Code	Value/Edit	Hex/Edit	<u>^</u>
Auto write on rail or	▼ Calibration				On/Off Configuration				
Discard Chappes	IOUT_CAL_OFFSET	0×39	0.0000 🕀 A	0xE000	ON_OFF_CONFIG	0×02	0x16 🗸	0x16	
	VOUT_SCALE_LOOP	0x29	1.00 🗸	0xF004	OPERATION	0x01	0x00 🗸	0x00	
Store Config to NVM	▼ Configuration				TOFF_DELAY	0x64	0 🗸 ms	0x0000	
Restore NVM Config	IC_DEVICE_ID	0xAD	0x2700 🗸	0x2 ⊻	TOFF_FALL	0x65	0 🖂 ms	0x0000	
Clear Restore Notices	IC_DEVICE_REV	0×AE	0x0000 🖂	0x0 ∨	TON_DELAY	0x60	0 🗸 ms	0x0000	
Cest Deservation Day	MFR_21 (OPTIONS)	0×E5	PMB_V ∨	0x00C7	TON_MAX_FAULT_LIMIT	0x62	100 🖂 ms	0x0064	=
Sort Parameters By:	MFR_32 (API_OPTION5)	0xF0	0V_RE 🖂	0x0001	TON_MAX_FAULT_RESPONSE	0x63	Click 🗸	0xBF	
Command Code	SMBALERT_MASK_CML	0×1B	000000 🖂	0x00	TON_RISE	0x61	5 🗸 ms	0x0005	
Crown by Catagory	SMBALERT_MASK_INPUT	0×1B	000000				Y		
Group by Category	SMBALERT_MASK_IOUT	0×1B	00000 Confir	m Store to F	lash	-	A	0xE000	
	SMBALERT_MASK_MFR_SPECIFIC	0×1B	00000				°C	0x0019	
	SMBALERT_MASK_TEMPERATURE	0×1B	00000	🔒 This op	peration will store all configuration	values to fla	ish v	0x0005	
	SMBALERT_MASK_VOUT	0×1B	00000	ы memo	ry on the TPS544C25 @ Address 36	5d. Do you w	ish to	0x42	
	SMBALERT_MASK_WORD	0×1B	00001	procee	ia r			0x82	
	VOUT_COMMAND	0x21	0.1					0x00	
	VOUT_MAX	0x24	1.		Ve		No	0x00	
	VOUT_MODE	0×20	EXP -9					0x10	
	VOUT_TRANSITION_RATE	0x27	1.000	0xD03C	STATUS_TEMPERATURE	Ux7D	000000	0x00	
	WRITE_PROTECT	0×10	0x00 ~	0x00	STATUS_VOUT	0x7A	000000 🗸	0x00	
	▼ Limits				STATUS_WORD	0x79	Click 🗸	0x0842	
	IOUT_OC_FAULT_LIMIT	0×46	36.0 🗘 A	0xF848	▼ User Parameters				
	IOUT_OC_FAULT_RESPONSE	0x47	Click 🗸	0xBF	MFR_00 (FOR USER)	0×D0	0x0052 ~	0x0052	\checkmark
	Tips & Hints				PMBus Log				Ŧ
🔅 Configure	IC_DEVICE_ID [0xAD] IC Device ID.				^				A
Monitor					~				~
🗄 Status					PMBus Log				Fi 🕄
Fusion Digital Power	r Designer v2.0.37 [2015-03-27] TPS	544C25 @	Address 36d U	SB Adapter	v1.0.11 [PEC; 400 kHz]				TEXAS INSTRUMENTS fusion digital power

图 9-13. 配置:将配置存储到 NVM

在左下角,可以更改不同的视图屏幕。可以根据需要在 Configure、Monitor 和 Status 之间更改视频屏幕(图 9-14)。

😲 Fusion Digital Pov	wer Designer - TPS544C25 @	Address 36d - Texas Instrumen	ts			e 🛛
File Device Too	ols Debug Help				TPS544C25 @ Address 36d - Rail #1	~
Configure	Limits & On/Off Debug Mode	Test Mode Advanced Device Info	SMBALERT# Mask All Config			
	Voltage Limits					
Auto write on rail or	Vout Mode:	EXP -9				
device change	Vout Command:	0.949 💭 V				
Discard Changes	Vout OV Warn Limit:	1.201 💌 V	Vout UV Warn Limit:	0.631 🗘 V		
Store Config to NVM	Vout OV Fault Limit:	1.281 💭 V	Vout UV Fault Limit:	0.594 💭 V		
Pestore NIVM Config	Vout OV Fault Response:	Respo V	Vout UV Fault Response	Respo V		
	MFR Vout Min:	0.500 🕆 V				
Clear Restore Notices	Vout Max	1.500 🗘 V				
	Current Limits		Temperature Limits			
	Iout OC Warn Limit:	34.0 💌 A	Temp Warn Limit:	100 👻 °C		
	Iout OC Fault Limit:	36.0 v	Temp Fault Limit:	125 💭 ℃		
	Iout OC Fault Response:	Respo 🗸	OT Fault Response:	Respo 🗸		
	Turn On/Off					
	Vin On:	4.50 V	Vin Off:	4.00 V		
	Turn On Rise:	5 🗸 ms	Turn Off Fall:	0 🗸 ms		
	Turn On Delay:	0 🖂 ms	Turn Off Delay:	0 🖂 ms		
	Turn On Max Fault Limit:	100 🛩 ms				
	Turn On Max Fault Response:	Respo 🖂				
	On/Off Config:	0x16 🗸				
		Mode: CONTROL Pin Only; Control: Active High, Use				
		TOFF_DELAY/TOFF_FALL				
	Tins & Hints			PMBus Log		
	ON_OFF_CONFIG [0x02]					
🚸 Configure	Configures the combination of COI and off. This includes how the unit	NTROL pin input and serial bus commands n t responds when power is applied.	eeded to turn the unit on			
🚸 Monitor			~			~
Status			Ę	PMBus Log		Fa 😭
Fusion Digital Powe	er Designer v2.0.37 [2015-03-	-27] TPS544C25 @ Address 360	d USB Adapter v1.0.11 [PEC; 400 kHz]	🐌 Texas Instruments fusion digital	power

图 9-14. 将视图屏幕更改为监视屏幕



选择 Monitor 屏幕(图 9-15)后,屏幕会改为显示由控制器测量的参数的实时数据。此屏幕提供对下述内容的访 问:

- VOUT、IOUT 和 Temperature 的图表如图所示, Pout 显示已关闭。 •
- Start/Stop Polling,可以打开/关闭数据的实时显示。 •
- Clear Faults,可以清除之前的所有故障标志
- 快速访问开/关配置
- 控制引脚激活和操作命令。
- PMBus 日志,用于显示 PMBus 上的活动。
- Tips and hints,当光标悬停在可配置参数上时显示附加信息。 •

首次启动 GUI 时,可能会由于上电期间的通信而发生故障。在器件启用后,便可以清除这些故障。



sion Digital Power Designer v2.0.42 [2015-05-01] TPS544C25 @ Address 36d USB Adapter v1.0.11 [PEC; 400 kHz]

图 9-15. 监视屏幕



从左侧中间的屏幕选择 System Dashboard 时将添加一个新窗口,其中显示系统级信息(图 9-16)。

File Device Too	ls Debug	g Help	TPS	5544C25 @ /	Address 36d - Rail #1	[
Monitor	PMBus F	the Contrary Development				×
Show/Hide Plots:	Vout:	System Dashboard -	usion bigital Power besigner		34.0 PA	
Vout Vout	Iout:	Layout Devices				
□ Pout(calc [] Temp	Temp:	System-Level Actions a	nd Settings			
Fit All Plots on Screen	Status R	On/Off Config	OPERATION Control Line (USB) Fault Management Other			
O Scale Plots to Screen Width	Vout:	CONTROL Pin Only	Write Setting Margining V Turn On Immed Off OHigh Clow Clear Faults Store to Flash			
Height: 200 😂	lout:		Soft Off			
Width: 400 😂	Temp:					
Show Warn & Fault Limit Editors	Input:					
Show Value Labels	CML:	Rails Davies Pail				
- on Plots	Mfr:	Device Rail				
Poling Rate: 500 💭	SMBAL	1P5544C25@36d 1 Kall				0.44 A
				5:20	55:40	56:00
Stop Polling						
Device Dashboard	On/Off (
System Dashboard	0x					
	OPERAT					
	On/Off:	Status Registers				
		STATUS WORD	OK			
	Marginir	STATUS VOUT	ок	_		
	, i ci gini	STATUS_IOUT	ОК			
		STATUS_TEMPERATURE	ок	_		
	Margin	STATUS_INPUT	ОК			
	Fault Action:	STATUS_CML	OK			
		STATUS_MFR_SPECIFIC	ОК			
	Control					
	Tips & H					₽
	VOUT_U	Status Registers Log				~
Configure	Sets the fault.		14:49:37.177: USB-SAA #1: CONTROL3 now Low			
+0 Monitor			14:49:43.547: TPS544C25 @ 36d: CLEAR_FAULTS [0x03]: executed SendByte			
						Y
🥹 Status			역의 (PMBus Log			lii 🗑
usion Digital Powe	r Designer	v2.0.37 [2015-03-27] TF	5544C25 @ Address 36d USB Adapter v1.0.11 [PEC; 400 kHz]	1	TEXAS INSTRUMENTS fus	sion digital power

图 9-16. 系统仪表板



在左下角选择 Status 即可显示控制器的状态 (图 9-17)。



图 9-17. 状态屏幕

从左上方菜单栏中选择 *File - Import Project* 下拉菜单可用于立即根据需要来配置器件中的所有参数,甚至恢复为 *已知良好的* 配置。此操作将生成浏览类型序列,从中可以找到并加载所需的配置文件(图 9-18)。



图 9-18. 导入工程/导入配置文件



从器件下拉菜单中选择 Store User Configuration to Flash Memory 具有与配置屏幕中 Store Config to NVM 按钮 相同的功能。它会将当前配置存储到非易失性存储器(图 9-19)中。



图 9-19. 将配置存储到存储器中

从"Tools"下拉菜单中选择 Data Logging(图 9-20)。这可以记录各种常见的操作值,例如 V_{OUT}、I_{OUT}和温度。系统将提示用户选择文件的存储位置以及文件类型。选择文件的存储位置和文件类型。选择 Start Data Logging 按钮时会开始记录,重新选择时便会停止记录。



图 9-20. 数据日志



数据日志的常用内容如(图 9-21)所示。

X		- =		Data-Log-2	015.05.01-15.12	2.27-TPS544C2	5-SAA1-Addr36.	txt [Read-Or	nly] - Micro	osoft Exc	el	Section 2.		X
F	le Home	Insert	Page Layout	Formulas	Data Revie	w View	Add-Ins Acrob	at					a 🕜 🗆	ēr XX
ľ	Cali	ibri	- 11 - A	а. "т = н	= 들 🗞 -	Genera	al ,				ia Insert →	Σ Z	æ	
Pas	te 🦪 🖪	Ι <u>υ</u> ·	🖽 🔹 🤷 🔹	<u>A</u> - = =	医泪 律律	· · ·	% *	Conditional Formatting	Format as Table T	Cell Styles *	📕 Format 🔹	Q ▼ Sort & Filter ▼	Find & Select *	
Clipt	ooard 🖫	Fo	ont	5	Alignment	12	Number i	2	Styles		Cells	Editing	ł	
	A1	• (=	Ĵx	Timestamp			1			1	1			v
	А	В	С	D	E	F	G		Н	1	J	K	L	-
1	Timestamp	Adapter	Part_ID	Address	READ_VOUT	READ_IOUT	READ_TEMPE	RATURE_2						
2	12:27.4	1	TPS544C25	36	0.943	0.5		25						=
3	12:27.9	1	TPS544C25	36	0.943	0.4375		25						
4	12:28.4	1	TPS544C25	36	0.943	0.5		25						
5	12:29.1	1	TPS544C25	36	0.943	0.4375		25						
6	12:29.4	1	TPS544C25	36	0.943	0.4375		25						
7	12:29.9	1	TPS544C25	36	0.943	0.4375		25						
8	12:30.4	1	TPS544C25	36	0.943	0.4375		25						
9	12:30.9	1	TPS544C25	36	0.943	0.4375		25						
10	12:31.4	1	TPS544C25	36	0.943	0.4375		25						
11	12:31.8	1	TPS544C25	36	0.943	0.4375		25						
12	12:32.4	1	TPS544C25	36	0.943	0.5		25						
13	12:32.9	1	TPS544C25	36	0.943	0.4375		25						
14	12:33.3	1	TPS544C25	36	0.943	0.4375		25						
15	12:34.0	1	TPS544C25	36	0.943	0.4375		25						
16	12:34.4	1	TPS544C25	36	0.943	0.4375		25						
17	12:34.9	1	TPS544C25	36	0.943	0.4375		25						
18	12:35.2	1	TPS544C25	36	0.943	0.4375		25						
19	12:35.7	1	TPS544C25	36	0.943	0.5		25						
20	12:36.2	1	TPS544C25	36	0.943	0.5		25						-
14 4	▶ ▶ Data	-Log-2015	.05.01-15.1	2.27-TP	2/									
Rea	dy		-							_	■□□1	00% 🗩		-(+)

图 9-21. 数据日志文件

从"Tools"下拉菜单中选择 PMBus Logging (图 9-22)可以通过数据记录相同的方式来记录所有 PMBus 活动。 这包括 GUI 和器件之间每个轮询循环的通信流量。它还包括各种常见的操作值,例如 Vour、 lour 和温度。系统 将提示用户选择文件的存储位置。请参阅下一屏幕(图 9-23)。

🔫 Fusion Digital Po	ower Designer - TPS544C25 @ Address 36d -	Texas Instrum	ents						- 2 🎽		
File Device To	ools Debug Help						TPS544C25 @	Address 36d - Rail #1	~		
Monitor	Device/Project Configuration Compare	Vout - Output	Vout - Output Voltage				8 Tout - Output Current				
Show/Hide Plots:	Debug Console	OVF:	1.281 🕀 V OVW:	1.201 🕀 V Vout:	0.949 💭 V	OC Fault:	36.0 🕀 A OC Warn:	34.0 🏵 A 🛛 Write			
Vout Vout	Data Logging	uvw:	0.631 🕀 V UVF:	0.594 🕀 V MAX:	1.500 🕆 V	40.00					
Fit All Plots on Sci	PMBus Logging	MIN:	0.500 🕀 V 🛛 Write								
Scale Plots to Scr	SMBus & SAA Tool	1.60									
Height: 200	Numeric Encode/Decode Tester	1.40				-					
Width: 400	Device Read/Write Stress Tester	1.20-				20.00					
Show Warn & Fa Limit Editors	Group Command Protocol Tester	0.80			0.943 V						
Show Value Labe	Configuration Import Tester	0.60 -				10.00					
Poling Pater 500	ASCII Tool	0.40				-					
(msec)	EEPROM File Tool	0.20				0.00			0.50 A		
Stop Poling	EEPROM File Compare Tool		09:40 10	:00 10:20	10:40		09:40 10:00	10:20	10:40		
Device Dashboar	PEC & SMBus -> I2C Translation Tool	Temperature	Temperature								
System Dashboard	Download USB Adapter Firmware	OT Fault:	125 🐨 ℃ OT War	m: 100 🐳 °C	Write						
		140.00		1		-					
		120.00				-					
	Immediate Off	100.00 -									
	◯ Soft Off	80.00									
	Margining: None	00.00									
	O Low	60.00									
	Margin Act On Fault	40.00									
	Fault Action:	20.00			25.0 °C						
		0.00	09:40 1	0.00 10.20	10:40	-					
	Control Line	~]			10110						
	Tips & Hints			PMBus Log					<u></u>		
Configure	Determines how voltage settings and readings are end	coded.		15:03:06.649: USB-SA/ 15:03:06.734: USB-SA/ 15:02:06.739: USB-SA/	#1: CONTROL1 now High #1: CONTROL2 now Low				^		
li Manitan	-			15:03:06.741: USB-SA4 15:03:14.549: USB-SA4	#1: CONTROL4 now Low						
Monitor				15:03:29.001: USB-SA	#1: CONTROL 1 now High				~		
🛷 Status				PMBus Log					Fa 😭		
Fusion Digital Pow	er Designer v2.0.37 [2015-03-27] TPS544C2	25 @ Address 3	36d USB Adapter v1.0.1	1 [PEC; 400 kHz]				TEXAS INSTRUMENTS fu	sion digital power		

Fusion Digital Power Designer v2.0.37 [2015-03-27] TPS544C25 @ Address 36d USB Adapter v1.0.11 [PEC; 400 kHz]

图 9-22. PMBus 日志记录

选择文件的存储位置和文件类型。如图所示(图 9-23),文件是 CSV 文件并会存储在所示的目录路径中。选择 Start Logging 按钮时记录便会开始,重新选择该按钮时就会停止记录(就像 Stop Logging 一样)。此文件大小可 能会迅速增加,因此建议在使用此函数时保持谨慎。



Fusion Digital Power Designer v2.0.37 [2015-03-27] TPS544C25 @ Address 36d USB Adapter v1.0.11 [PEC; 400 kHz]

图 9-23. PMBus 日志详细信息

10 EVM 装配图和 PCB 布局

图 10-1 至图 10-6 显示了 PWR-681EVM 印刷电路板 (PCB) 的设计。



ALL ARTWORK VIEWED FROM TOP SIDE	BOARD #: PWR681	REV: A	SVN REV	: Not In VersionControl
LAYER NAME = Top Overlay				
PLOT NAME = Top Overlay	GENERATED : 3/30/2	2015 11:10:41	AM	TEXAS INSTRUMENTS

图 10-1. PWR-681EVM 顶层装配图 (顶视图)



ALL ARTWORK VIEWED FROM TOP SIDE	BOARD #: PWR681	REV: A	SVN REV	: Not In VersionControl
LAYER NAME = Top Layer				
PLOT NAME = Top Layer	GENERATED : 3/30/2	2015 11:10:42	AM	TEXAS INSTRUMENTS

图 10-2. PWR-681EVM 顶层(顶视图)

° °	
•	•••
0	
°.	

ALL ARTWORK VIEWED FROM TOP SIDE	BOARD #: PWR681	REV: A SVN REV		: Not In VersionControl	
LAYER NAME = MidLayer1					
PLOT NAME = Inner Layer 1	GENERATED : 3/30/2	2015 11:10:42	AM	TEXAS INSTRUMENTS	

图 10-3. PWR-681EVM 第1层(顶视图)



ALL ARTWORK VIEWED FROM TOP SIDE	BOARD #: PWR681	REV: A	SVN REV	: Not In VersionControl
LAYER NAME = MidLayer2				
PLOT NAME = Inner Layer 2	GENERATED : 3/30/2	2015 11:10:43	AM	TEXAS INSTRUMENTS

图 10-4. PWR-681EVM 第 2 层 (顶视图)



\bigcirc_{\circ}°		•
•		
° •		
•	· · · · · · · · · · · · · · · · · · ·	• • • •
•		
° O .		.0.0

ALL ARTWORK VIEWED FROM TOP SIDE	BOARD #: PWR681	REV: A	SVN REV	: Not In VersionControl
LAYER NAME = Bottom Layer				
PLOT NAME = Bottom Layer	GENERATED : 3/30/2	2015 11:10:43	AM	TEXAS INSTRUMENTS

图 10-5. PWR-681EVM 底层(顶视图)



ALL ARTWORK VIEWED FROM TOP SIDE	BOARD #: PWR681	REV: A	SVN REV	: Not In VersionControl
LAYER NAME = Bottom Overlay				
PLOT NAME = Bottom Overlay	GENERATED : 3/30/2	2015 11:10:44	AM	TEXAS INSTRUMENTS

图 10-6. PWR-681EVM 底层装配图(顶视图)



11 物料清单

基于原理图的 EVM 元件列表如表 11-1 所示。

备注

本示例中使用了 TPS544C25 版本。除了 U1 外, TPS544B25 EVM 的物料清单与 TPS544C25 EVM 相同。

数量	标识符	说明	制造商	器件型号
1	РСВ	印刷电路板	不限	PWR681
1	C1	电容,陶瓷,33pF,100V,±5%,C0G/NP0,0603	AVX	06031A330JAT2A
2	C2、C10	电容,陶瓷,1000pF,100V,±5%,X7R,0603	AVX	06031C102JAT2A
2	C3 , C4	电容,陶瓷,1200pF,50V,±5%,C0G/NP0,0603	ТDК	C1608C0G1H122J
1	C5	电容,陶瓷,330pF,50V,±1%,C0G/NP0,0603	TDK	C1608C0G1H331F080A A
1	C6	电容,陶瓷,1µF,25V,±10%,X7R,0603	MuRata	GRM188R71E105KA12D
1	C7	陶瓷电容器 4.7 µ F 10V ±10% X5R 0603	Kemet	C0603C475K8PACTU
1	C8	电容,陶瓷,2.2 μ F,6.3V,±10%,X6S,0402	MuRata	GRM155C80J225KE95D
1	C9	电容,陶瓷,0.1µF,25V,±5%,X7R,0603	Kemet	C0603C104J3RACTU
7	C11、C12、 C21、C22、 C23、C27、 C28	多层陶瓷电容器,100 μ F,6.3V,X5R,1210	Wurth	885012109004
4	C13、C14、 C15、C16	多层陶瓷电容器,22 μ F,25V,X5R,1210	Wurth	885012109014
2	C17、C18	电容,陶瓷,6800pF,25V,±10%,X7R,0402	MuRata	GRM155R71E682KA01D
2	C19 , C20	陶瓷电容器 22 μ F 6.3 V ±20% X5R 0805	MuRata	GRM21BR60J226ME39L
1	C24	电容,钽,100μF,25V,±10%,0.1Ω,SMD	AVX	TPSV107K025R0100
1	D1	LED,粉红色,SMD	Bivar	SMS1105PKD
4	H1、H2、H3、 H4	缓冲垫,圆柱形,0.312 X 0.200,黑色	3M	SJ61A1
2	H5 , H6	螺钉, 6-32 x 3/8 英寸钢	B&F Fastener Supply	PMSSS 632 0038 PH
1	J1	2 引脚端子块,0.200 英寸间距	Wurth	691216510002
1	J2	10 引脚接头, 2x5, 0.100 英寸间距, 有罩	Wurth	61201021621
2	J3 , J4	模锻螺纹螺柱,黄铜,模锻支架,TH	Keystone	1546
2	JP1、JP2	2 引脚接头, 0.100 英寸间距	Wurth	61300211121
1	L1	电感器,屏蔽鼓芯,铁氧体,470nH,35A,0.00032Ω, SMD	Wurth Elektronik eiSos	744301047
1	LBL1	热转印打印标签,0.650"(宽)x0.200"(高)-10,000/卷	Brady	THT-14-423-10
1	Q1	晶体管,NPN,40V,0.2A,SOT-23	Fairchild Semiconductor	MMBT3904
1	Q2	MOSFET,N 沟道,60V,0.24A,SOT-23	Vishay-Siliconix	2N7002E-T1-E3
1	R1	电阻器,100kΩ,1%,0.1W,0603	STD	STD
1	R2	电阻器,10.5kΩ,1%,0.1W,0603	STD	STD
4	R3、R5、R10、 R18	电阻器,10.0k Ω ,1%,0.1W,0603	STD	STD
3	R6、R13、R15	电阻器,49.9Ω,1%,0.1W,0603	STD	STD
1	R7	电阻器,40.2kΩ,1%,0.1W,0603	STD	STD
1	R8	电阻器,300Ω,1%,0.1W,0603	STD	STD

表 11-1. PWR681 物料清单

42 TPS5442x5 降压转换器评估模块用户指南

数量	标识符	说明	制造商	器件型号
2	R11、R12	电阻器,51.1kΩ,1%,0.1W,0603	STD	STD
1	R14	电阻器,0Ω,5%,0.1W,0603	STD	STD
1	R16	电阻器,1.0Ω,5%,0.25W,1206	STD	STD
1	R17	电阻器,0 Ω,5%,0.1W,0603	STD	STD
1	R20	电阻器,21.5Ω,1%,0.1W,0603	STD	STD
1	R21	电阻器,38.3kΩ,1%,0.1W,0603	STD	STD
1	S1	开关,滑动式,单刀双掷 100mA,SMT	Copal Electronics	CAS-120TA
2	SH-JP1、SH- JP2	分流器,100mil,镀金,黑色	3M	969102-0000-DA
6	TP1、TP7、 TP8、TP9、 TP11、TP12	测试点,微型,白色,TH	Keystone	5002
5	TP2、TP3、 TP4、TP6、 TP13	测试点,微型,红色,TH	Keystone	5000
2	TP5、TP14	测试点,微型,黑色,TH	Keystone	5001
1	TP10	测试点,多用途,黑色,TH	Keystone	5011
1	U1	18V、30A PMBus 同步降压转换器,RVF0040A	德州仪器 (TI)	TPS544C25RVF
1	U2	3 端可调电流源,8引脚窄体 SOIC,无铅	德州仪器 (TI)	LM334SM/NOPB
0	C25、C26	电容,钽,330μF,6.3V,±20%,0.025Ω,SMD	Sanyo	6TPE330ML
0	FID1、FID2、 FID3、FID4、 FID5、FID6	基准标记。没有需要购买或安装的元件。	不适用	不适用
0	R4	电阻器,0 Ω,5%,0.1W,0603	Panasonic	ERJ-3GEY0R00V
0	R9、R19	电阻器,30.1kΩ,1%,0.1W,0603	Vishay-Dale	CRCW060330K1FKEA

表 11-1. PWR681 物料清单 (continued)

12 修订历史记录

注:以前版本的页码可能与当前版本的页码不同

CI	hanges from Revision A (September 2015) to Revision B (August 2021)	Page
•	更新了整个文档中的表格、图和交叉参考的编号格式。	3
•	更新了用户指南标题	3

Changes from Revision * (May 2015) to Revision A (September 2015)		Page
•	添加了更新的 EVM 装配图和 PCB 布局图	
•	更改了 C11、C12、C21、C22、C23、C27、C28 说明、制造商和器件型号。	
•	更改了 C13、C14、C15、C16 说明、制造商和器件型号。	
•	更改了 J1 说明、制造商和器件型号。	42
•	更改了 J2 说明、制造商和器件型号。	
•	更改了 JP1 和 JP2 说明、制造商和器件型号。	42
•	更改了 L1 器件型号。	
•	将所有电阻器制造商和器件型号更改为 STD。	42

重要声明和免责声明

TI提供技术和可靠性数据(包括数据表)、设计资源(包括参考设计)、应用或其他设计建议、网络工具、安全信息和其他资源,不保证没有瑕疵且不做出任何明示或暗示的担保,包括但不限于对适销性、某特定用途方面的适用性或不侵犯任何第三方知识产权的暗示担保。

这些资源可供使用 TI 产品进行设计的熟练开发人员使用。您将自行承担以下全部责任:(1) 针对您的应用选择合适的 TI 产品,(2) 设计、验证并测试您的应用,(3) 确保您的应用满足相应标准以及任何其他安全、安保或其他要求。这些资源如有变更,恕不另行通知。TI 授权您仅可将这些资源用于研发本资源所述的 TI 产品的应用。严禁对这些资源进行其他复制或展示。您无权使用任何其他 TI 知识产权或任何第三方知识产权。您应全额赔偿因在这些资源的使用中对 TI 及其代表造成的任何索赔、损害、成本、损失和债务,TI 对此概不负责。

TI 提供的产品受 TI 的销售条款 (https://www.ti.com/legal/termsofsale.html) 或 ti.com 上其他适用条款/TI 产品随附的其他适用条款的约束。TI 提供这些资源并不会扩展或以其他方式更改 TI 针对 TI 产品发布的适用的担保或担保免责声明。

邮寄地址:Texas Instruments, Post Office Box 655303, Dallas, Texas 75265 Copyright © 2021,德州仪器 (TI) 公司

重要声明和免责声明

TI"按原样"提供技术和可靠性数据(包括数据表)、设计资源(包括参考设计)、应用或其他设计建议、网络工具、安全信息和其他资源, 不保证没有瑕疵且不做出任何明示或暗示的担保,包括但不限于对适销性、某特定用途方面的适用性或不侵犯任何第三方知识产权的暗示担 保。

这些资源可供使用 TI 产品进行设计的熟练开发人员使用。您将自行承担以下全部责任:(1) 针对您的应用选择合适的 TI 产品,(2) 设计、验 证并测试您的应用,(3) 确保您的应用满足相应标准以及任何其他功能安全、信息安全、监管或其他要求。

这些资源如有变更,恕不另行通知。TI 授权您仅可将这些资源用于研发本资源所述的 TI 产品的应用。严禁对这些资源进行其他复制或展示。 您无权使用任何其他 TI 知识产权或任何第三方知识产权。您应全额赔偿因在这些资源的使用中对 TI 及其代表造成的任何索赔、损害、成 本、损失和债务,TI 对此概不负责。

TI 提供的产品受 TI 的销售条款或 ti.com 上其他适用条款/TI 产品随附的其他适用条款的约束。TI 提供这些资源并不会扩展或以其他方式更改 TI 针对 TI 产品发布的适用的担保或担保免责声明。

TI 反对并拒绝您可能提出的任何其他或不同的条款。

邮寄地址:Texas Instruments, Post Office Box 655303, Dallas, Texas 75265 Copyright © 2022,德州仪器 (TI) 公司