


Reset

TEXAS  
INSTRUMENTS**CC2650 LaunchPad**

Rev: 1.3

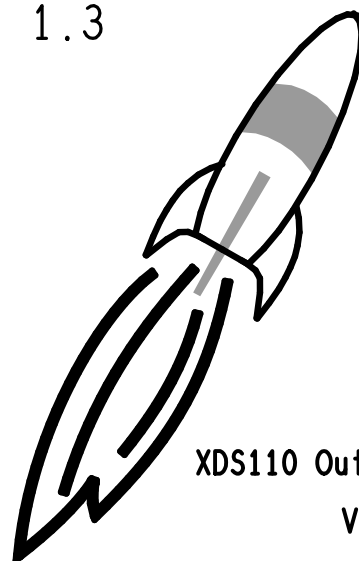

XDS110 Out

VSENSE

XDS110  
Power  
Extern  
Pwr

BTN-1  
DIO13

GND

5V

3V3

RXD&lt;&lt;

TXD&gt;&gt;

RESET

TMS

TCK

TDI

TDO

SWO

CC2650 In

BTN-2  
DIO14

J1 1 21 J3

3V3

DIO23

DIO3

DIO2

DIO22

DIO24

DIO10

DIO21

DIO4

DIO5

10 30

J3

5V

GND

DIO25

DIO26

DIO27

DIO28

DIO29

DIO30

DIO0

DIO1

LEDs

Red:  
DIO6Green:  
DIO7

J4 40 20 J2

BP Lp DIO7

DIO6

DIO20

DIO19

DIO18

BPRST

TMS

TCK

DIO16

DIO17

31 11

GND

DIO12

DIO11

NC

LPRST

DIO9

DIO8

DIO13

DIO14

DIO15

GND  
GND  
5V

GND  
GND  
3V3

Mount for:  
CC-ANTENNA-DK

CCSD 2010-05-20

<<LAUNCHX-L-CC5020

baqhcnuol\moc.it.www

For evaluation only, please do not use for approval or resale

