







UM

OUT1

UM

OUT2

UM

OUT3

UM

OUT4

SRC3

SRC2

SRC4

SRC1



CAUTION. READ USER GUIDE BEFORE USE

Quick Start  
1. Connect USB, UM, GND, and Load  
2. Open GUI at [dev.ti.com/gallery](http://dev.ti.com/gallery)  
3. In the GUI start running each channel.



CE

3V3

nFAULT

SDI/IN1

SCLK/IN2

nSCS/IN3

SDO/IN4

RSLEW/CNTL

XDS\_VCC

IRSTN

ITDI

ITDO

ITCK

ITMS

GND