


For EZFET-LITE Flashing Only

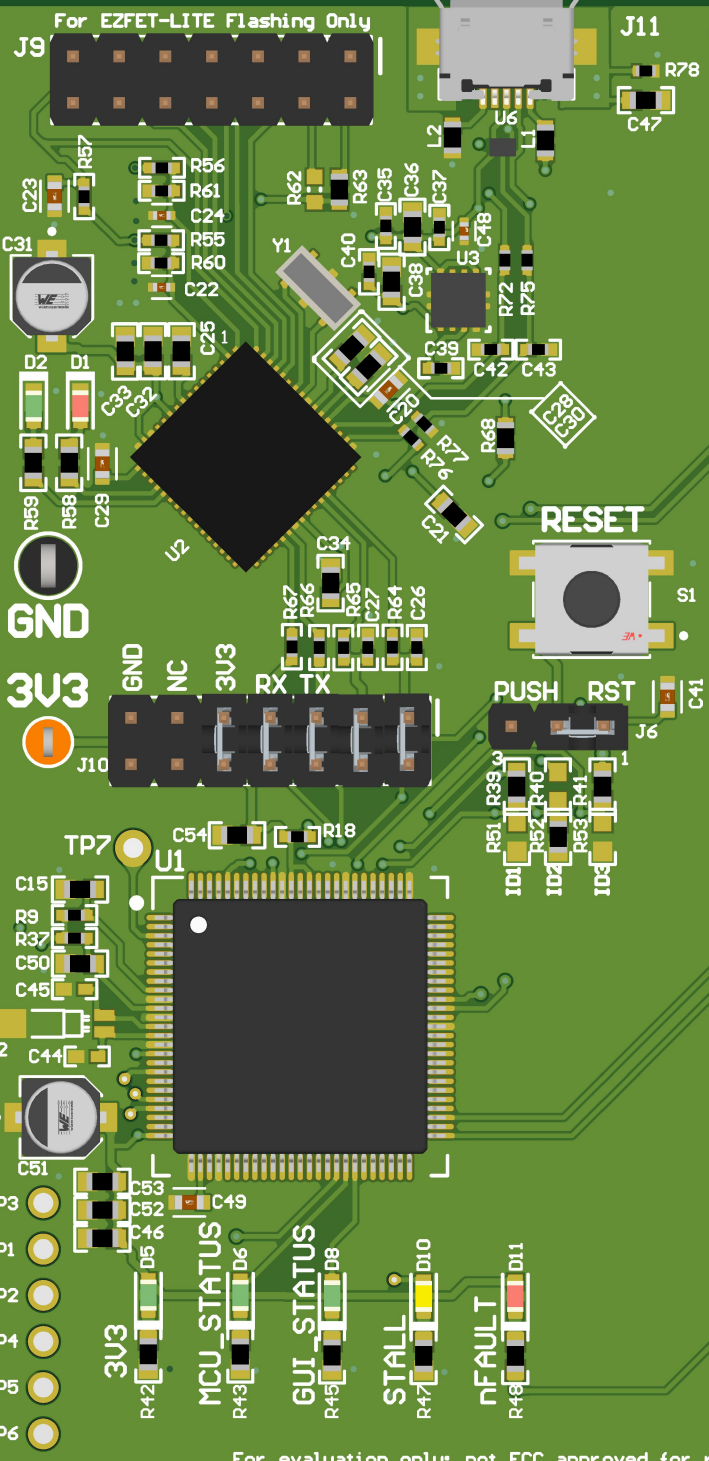

GND




GND

3V3




RESET

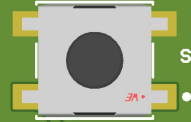


PUSH RST




P1

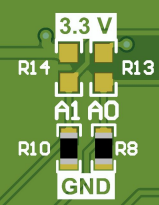


DRV8214_34

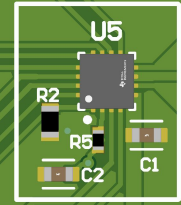

OUT2

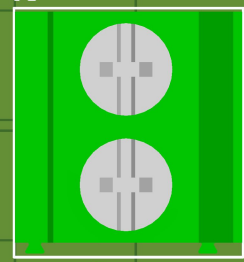

OUT1

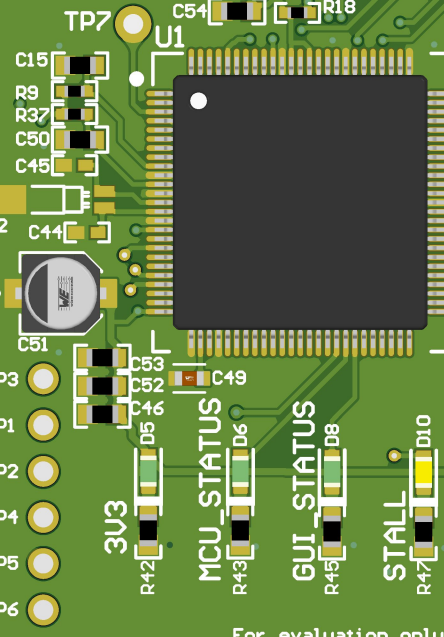

For evaluation only; not FCC approved for resale.

