




TEXAS INSTRUMENTS
TSW3070 EVM
REV C
LAYER 2

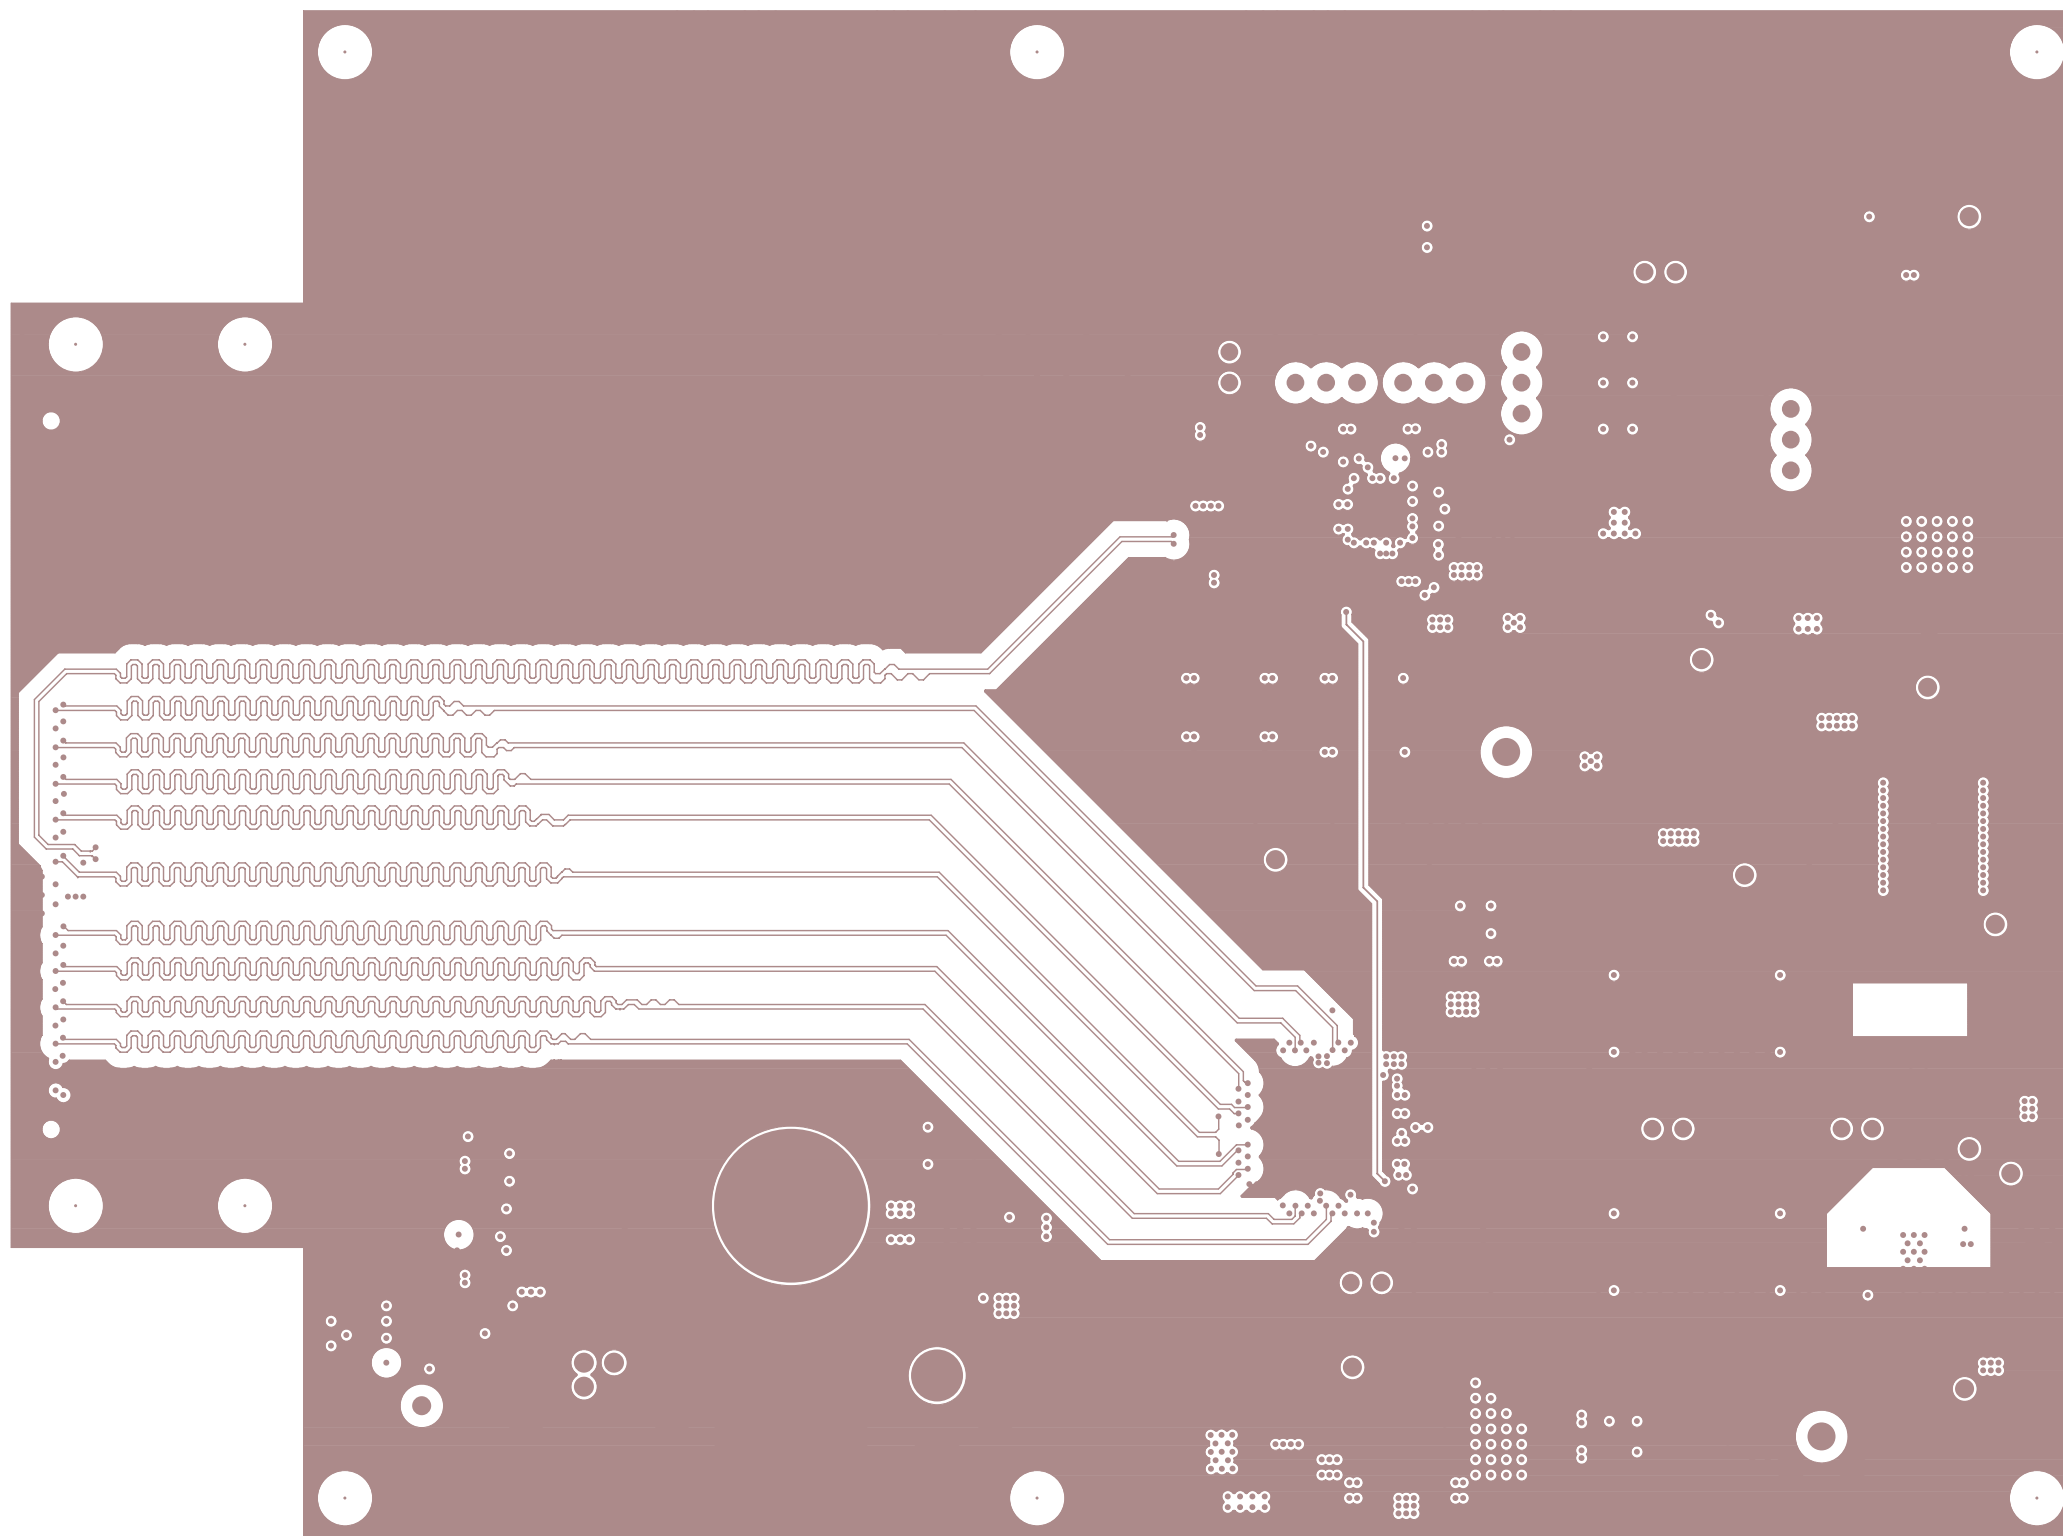


TEXAS INSTRUMENTS
TSW3070 EVM
REV C
LAYER 3

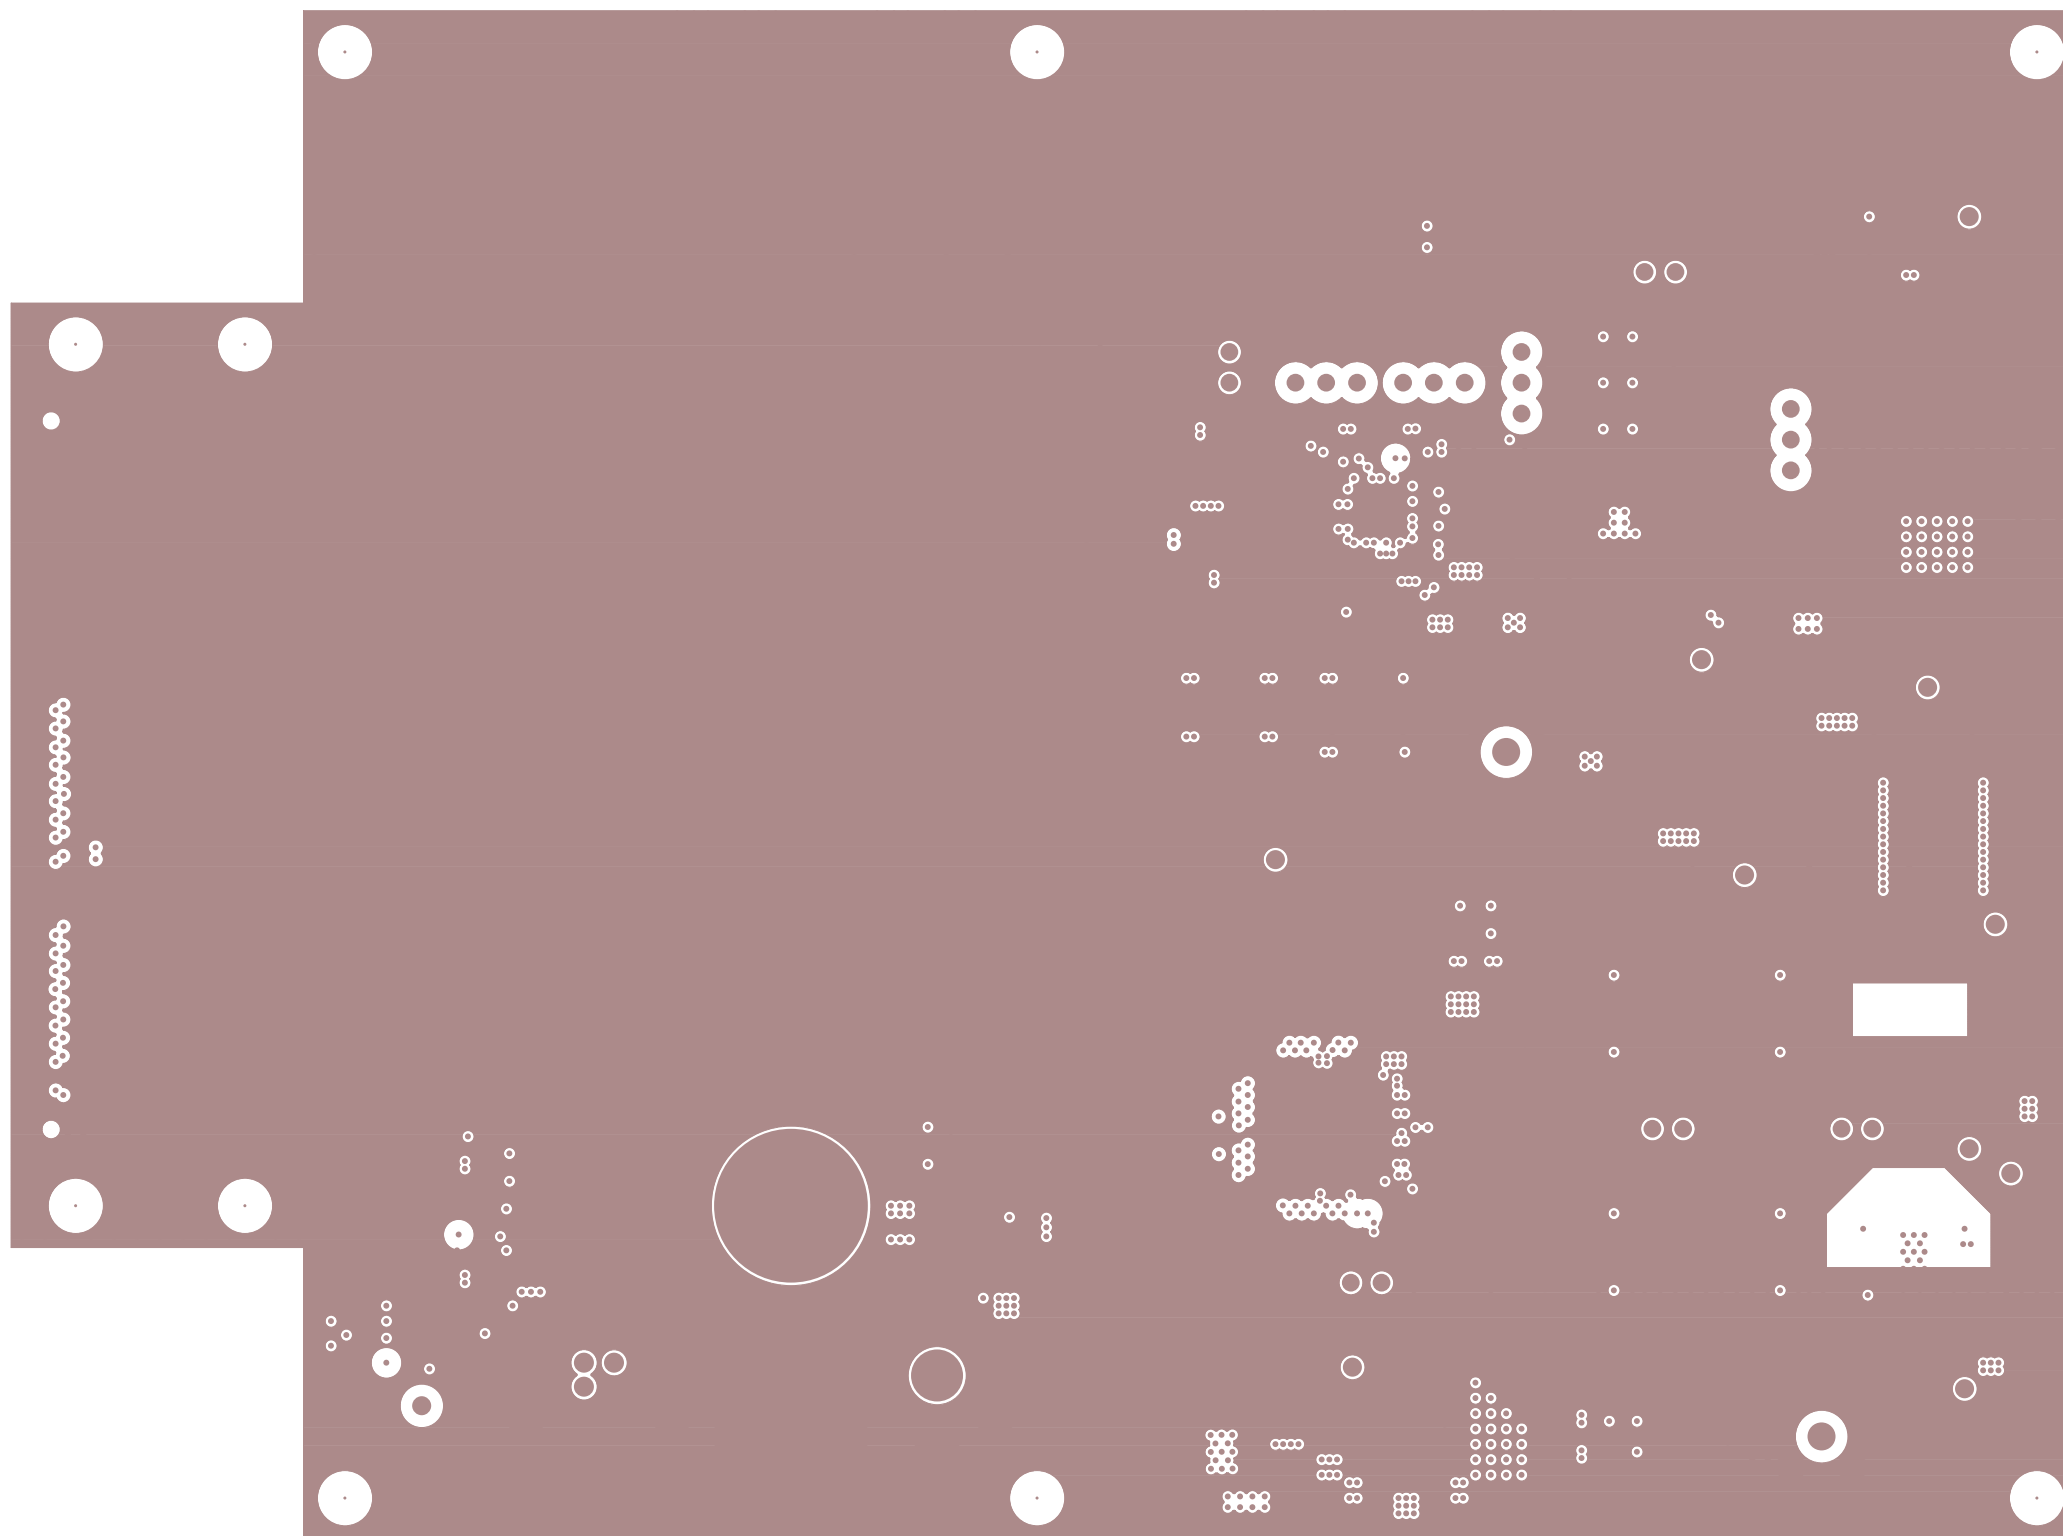


TEXAS INSTRUMENTS
TSW3070 EVM
REV C
LAYER 4

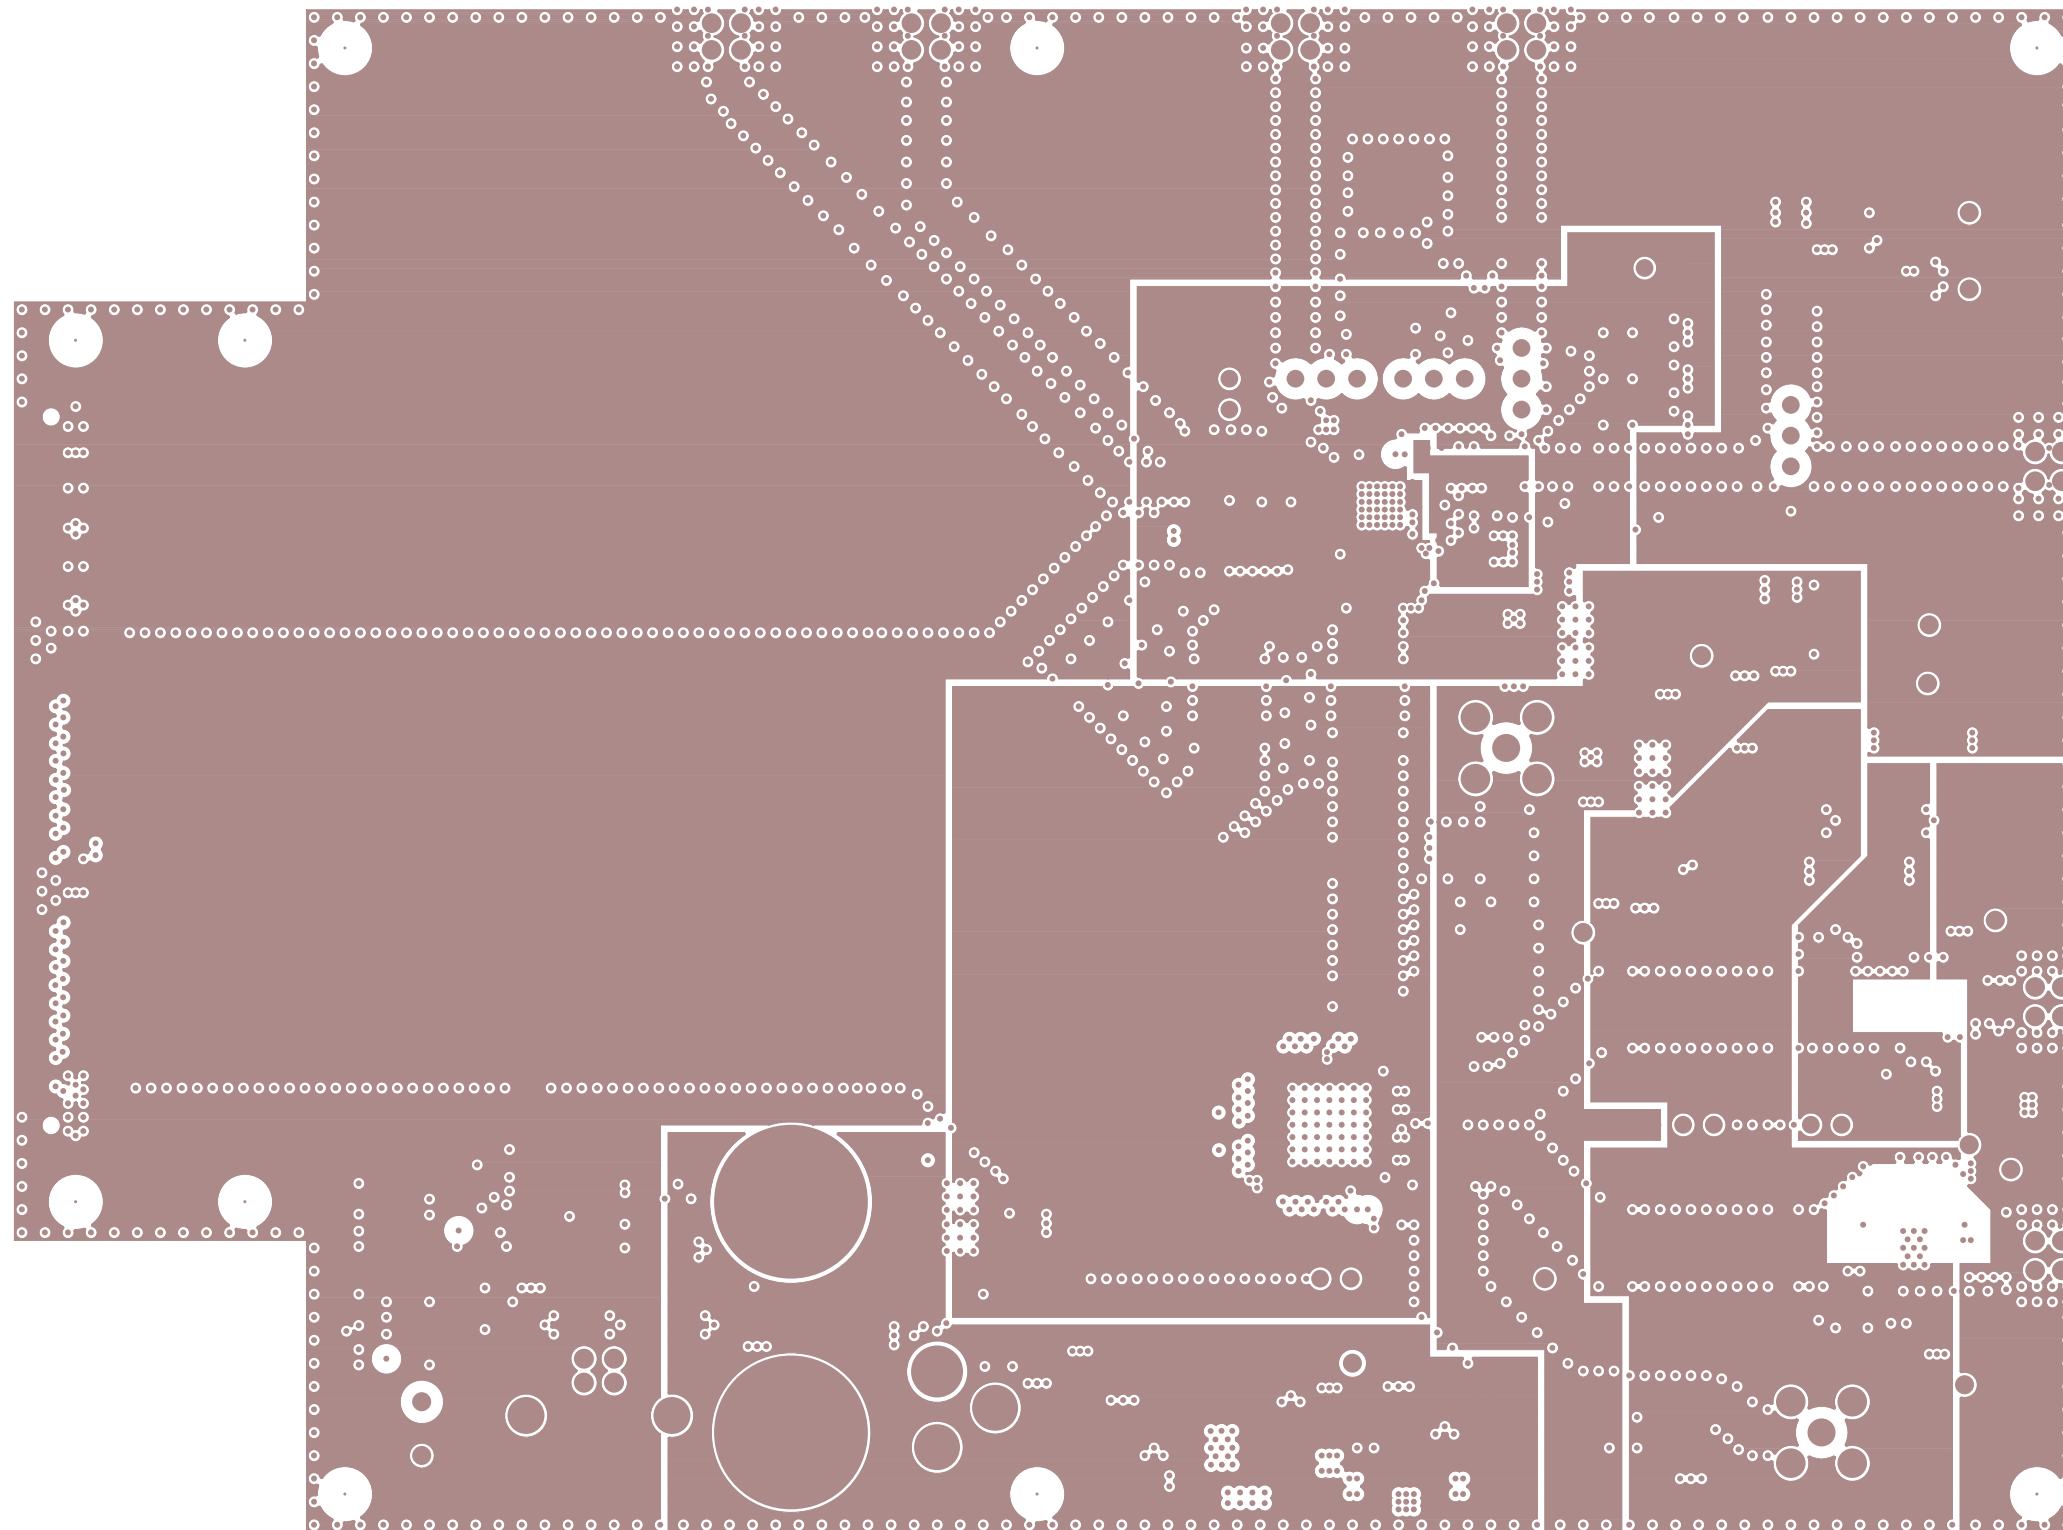


TEXAS INSTRUMENTS
TSW3070 EVM
REV C
LAYER 5

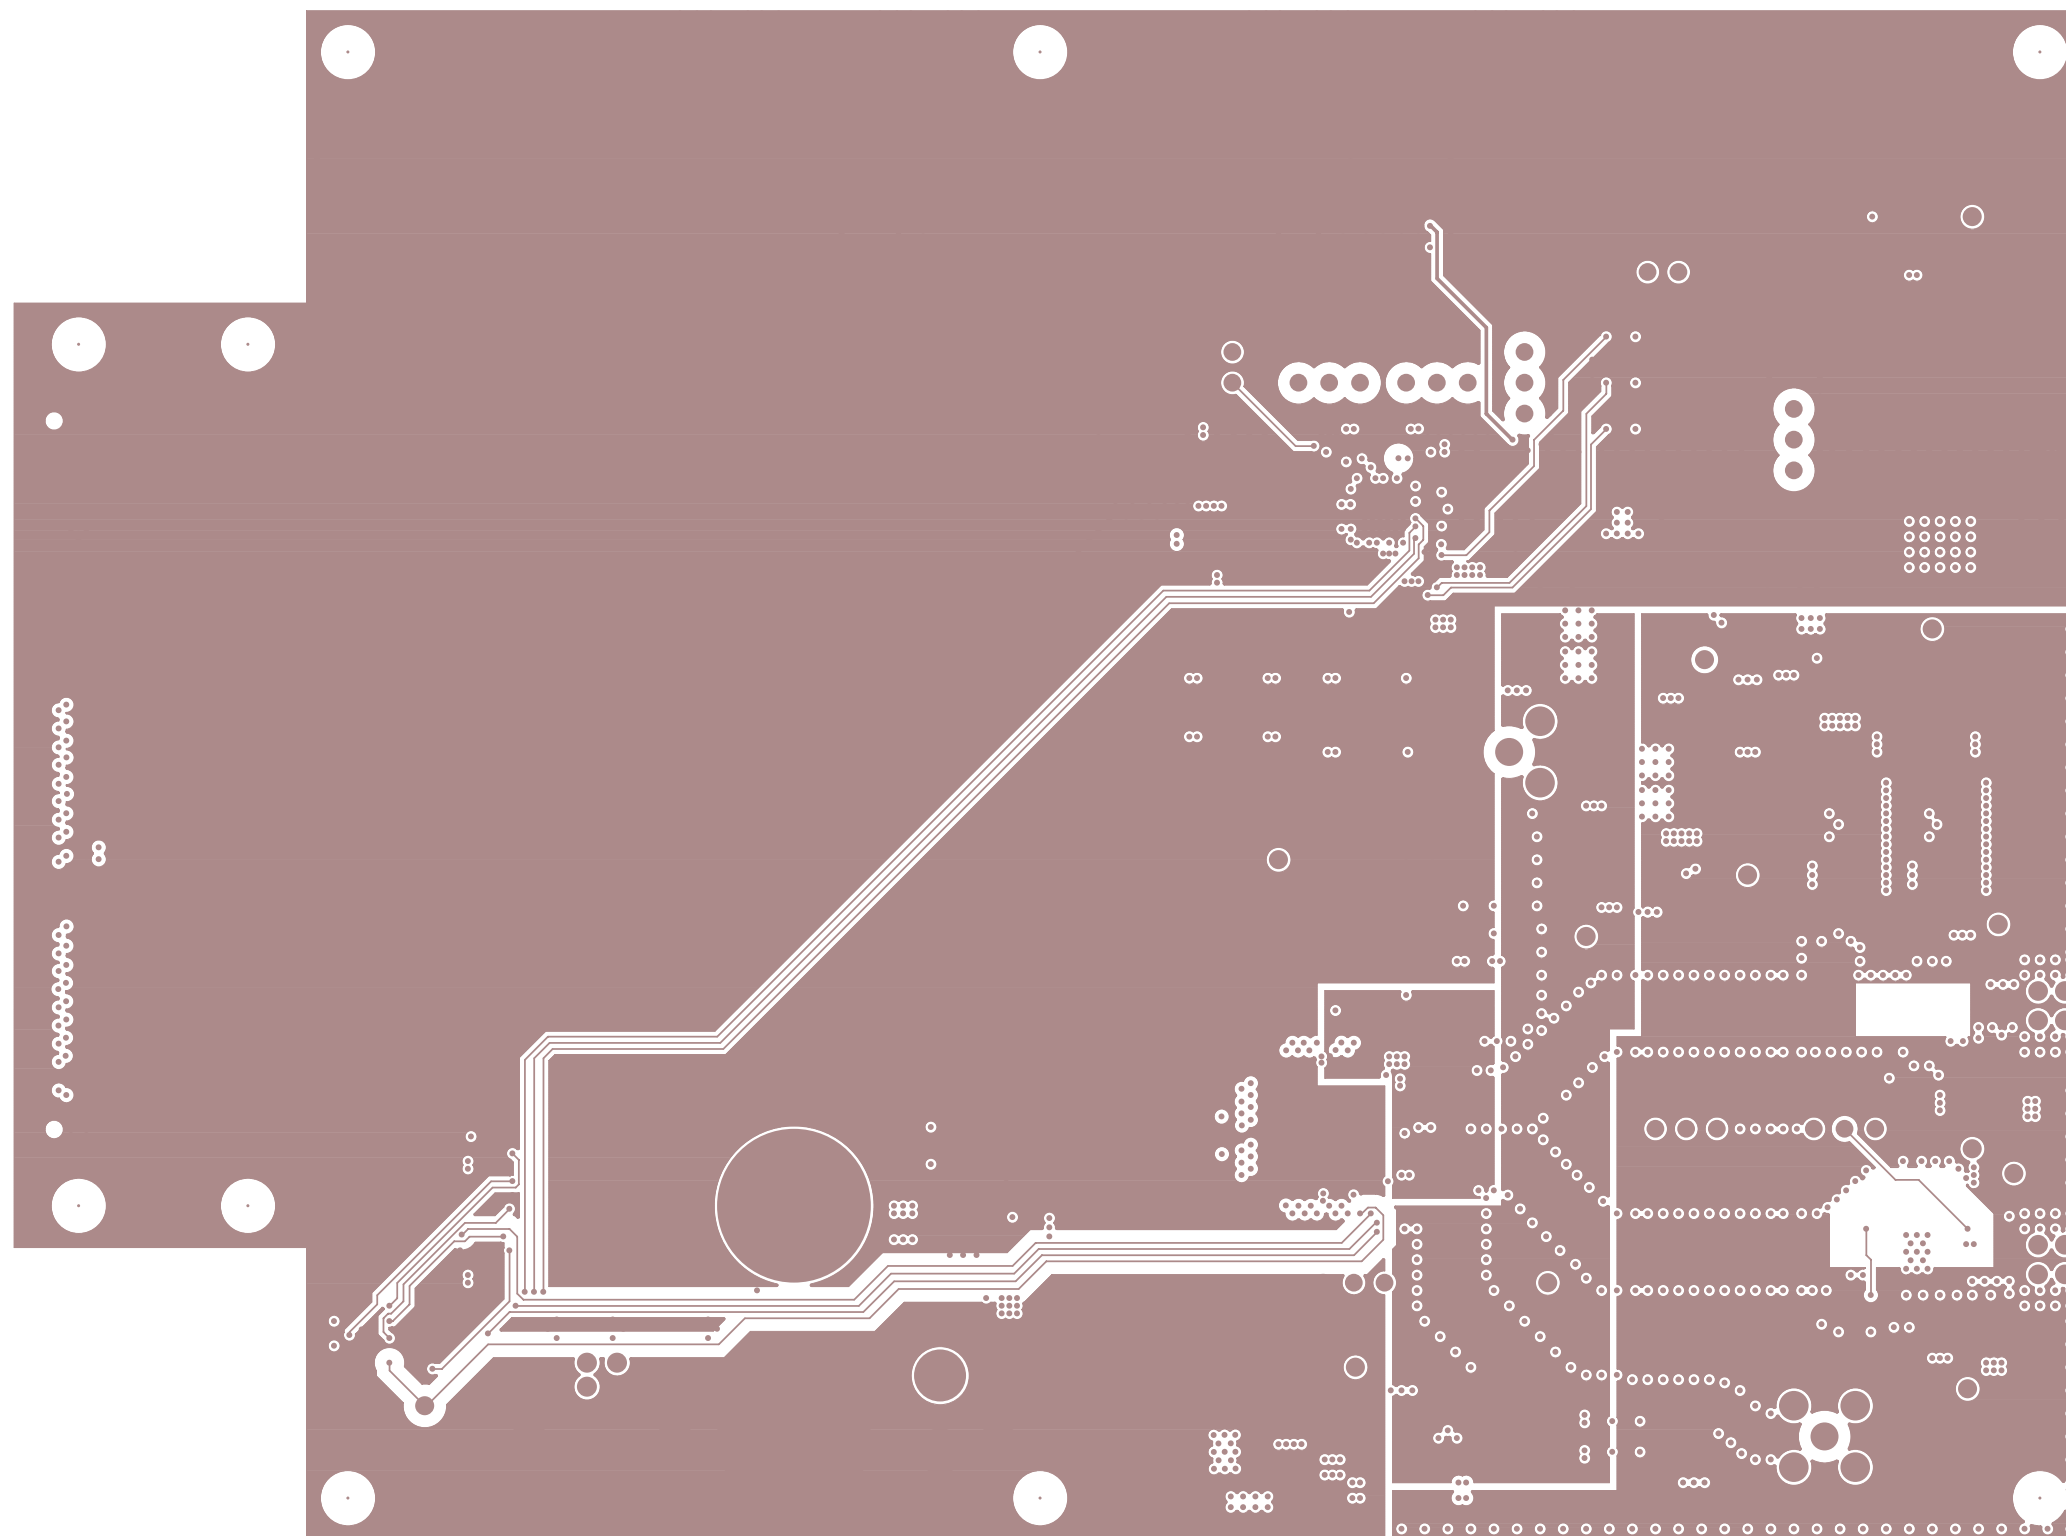


TEXAS INSTRUMENTS
TSW3070 EVM
REV C
LAYER 6

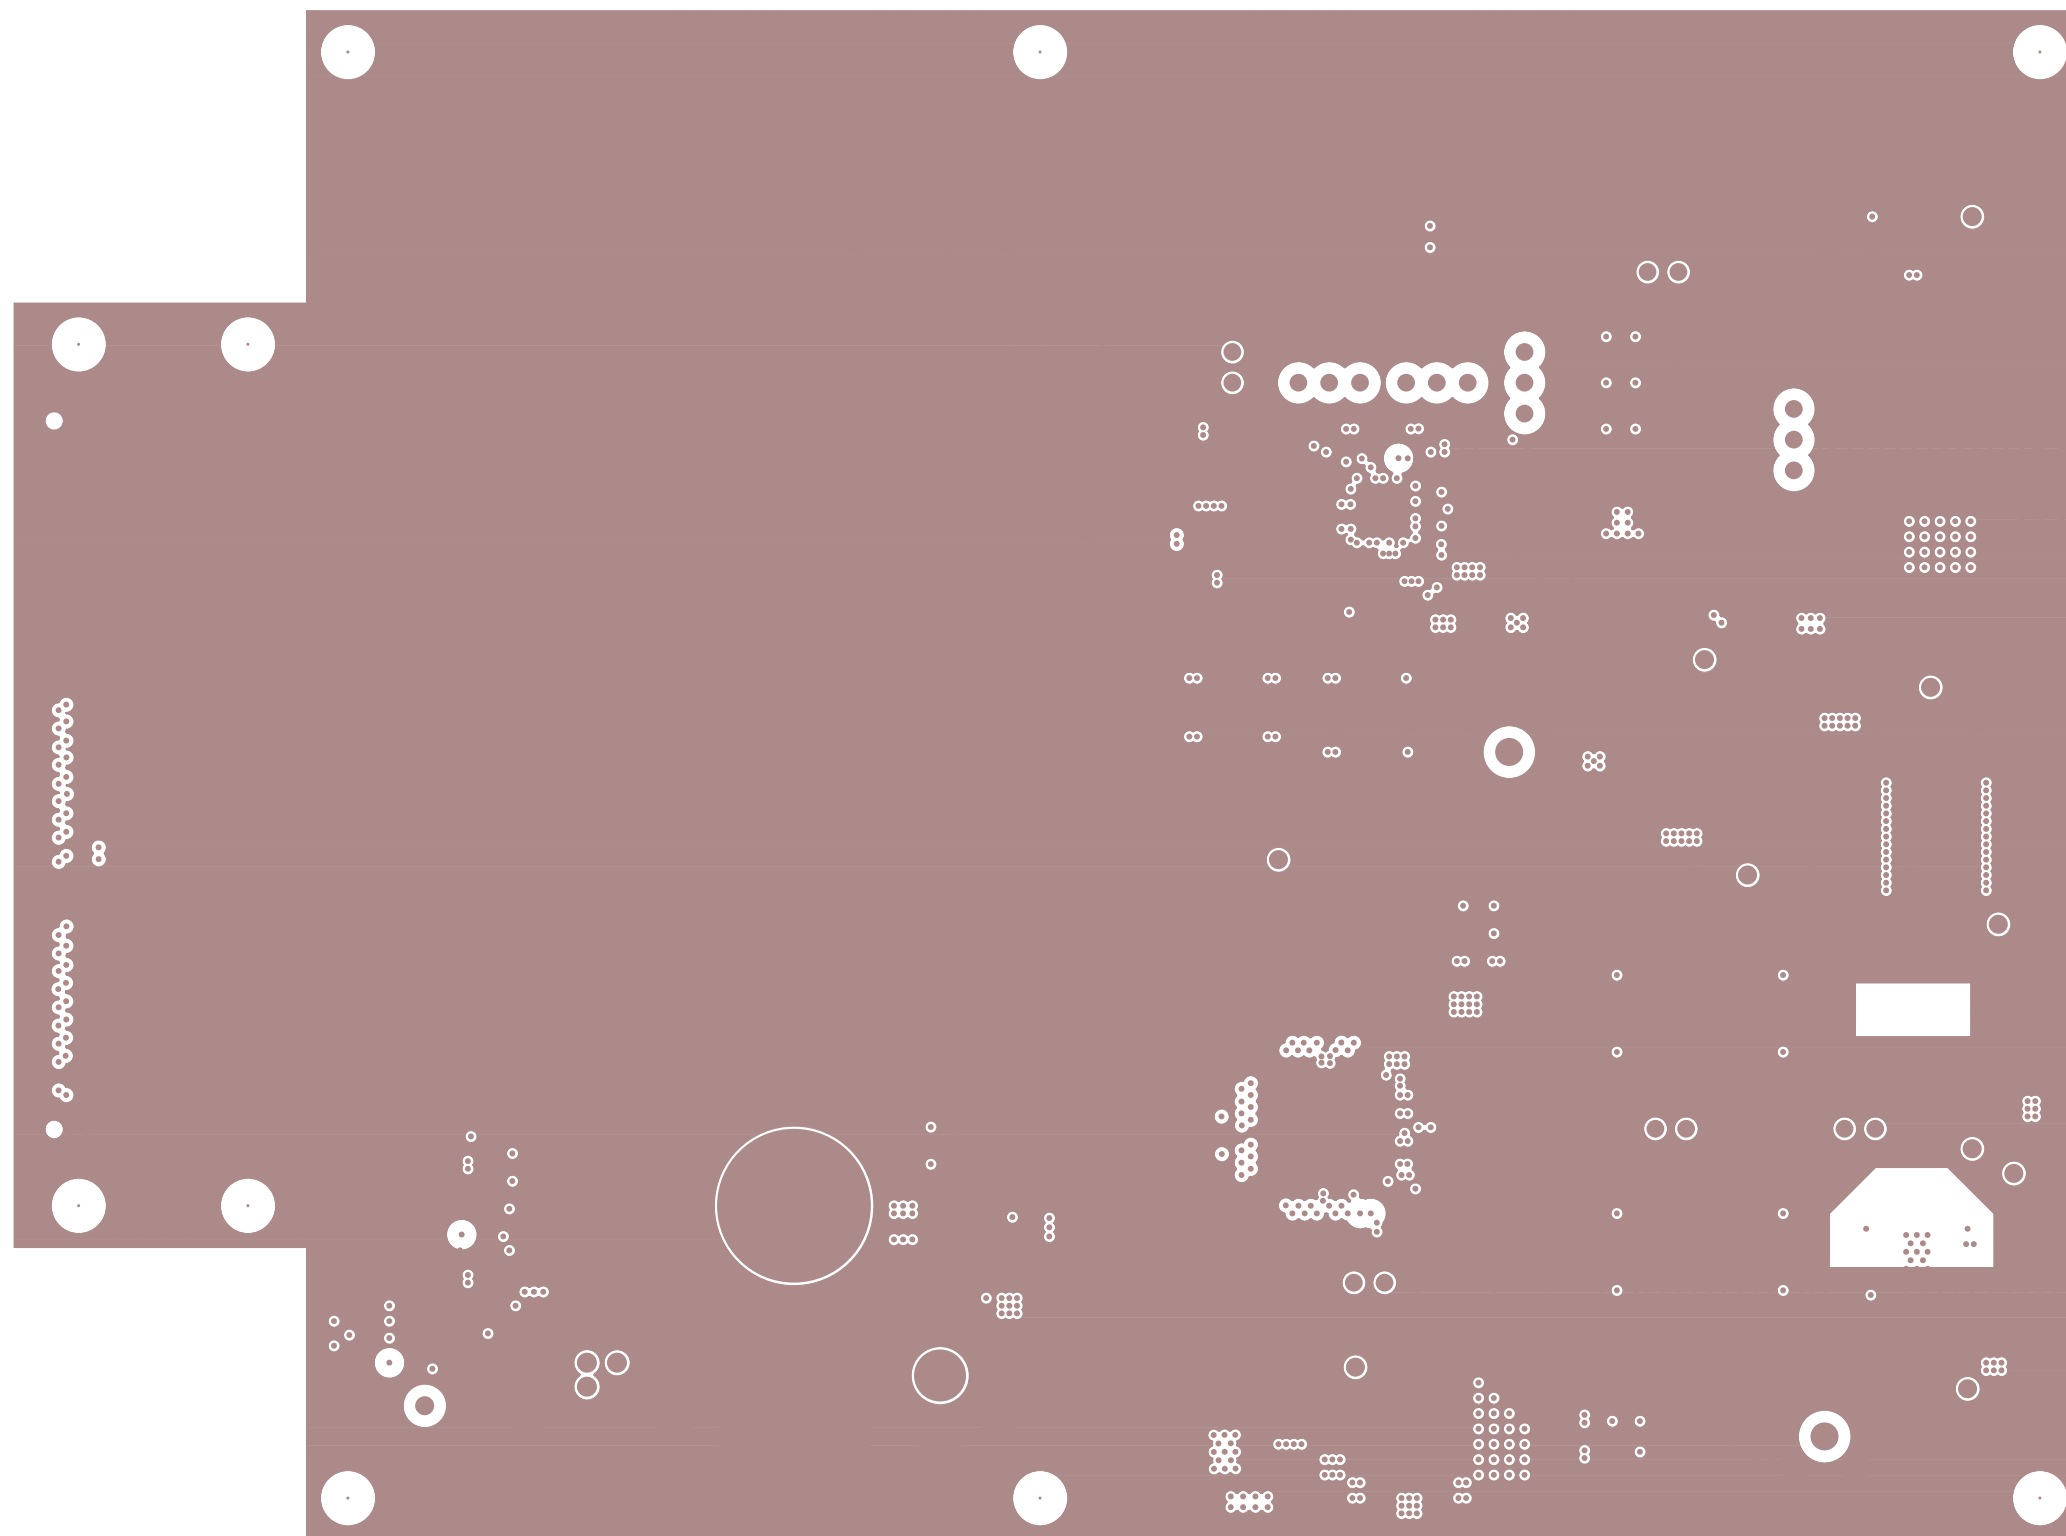


TEXAS INSTRUMENTS
TSW3070 EVM
REV C
LAYER 7

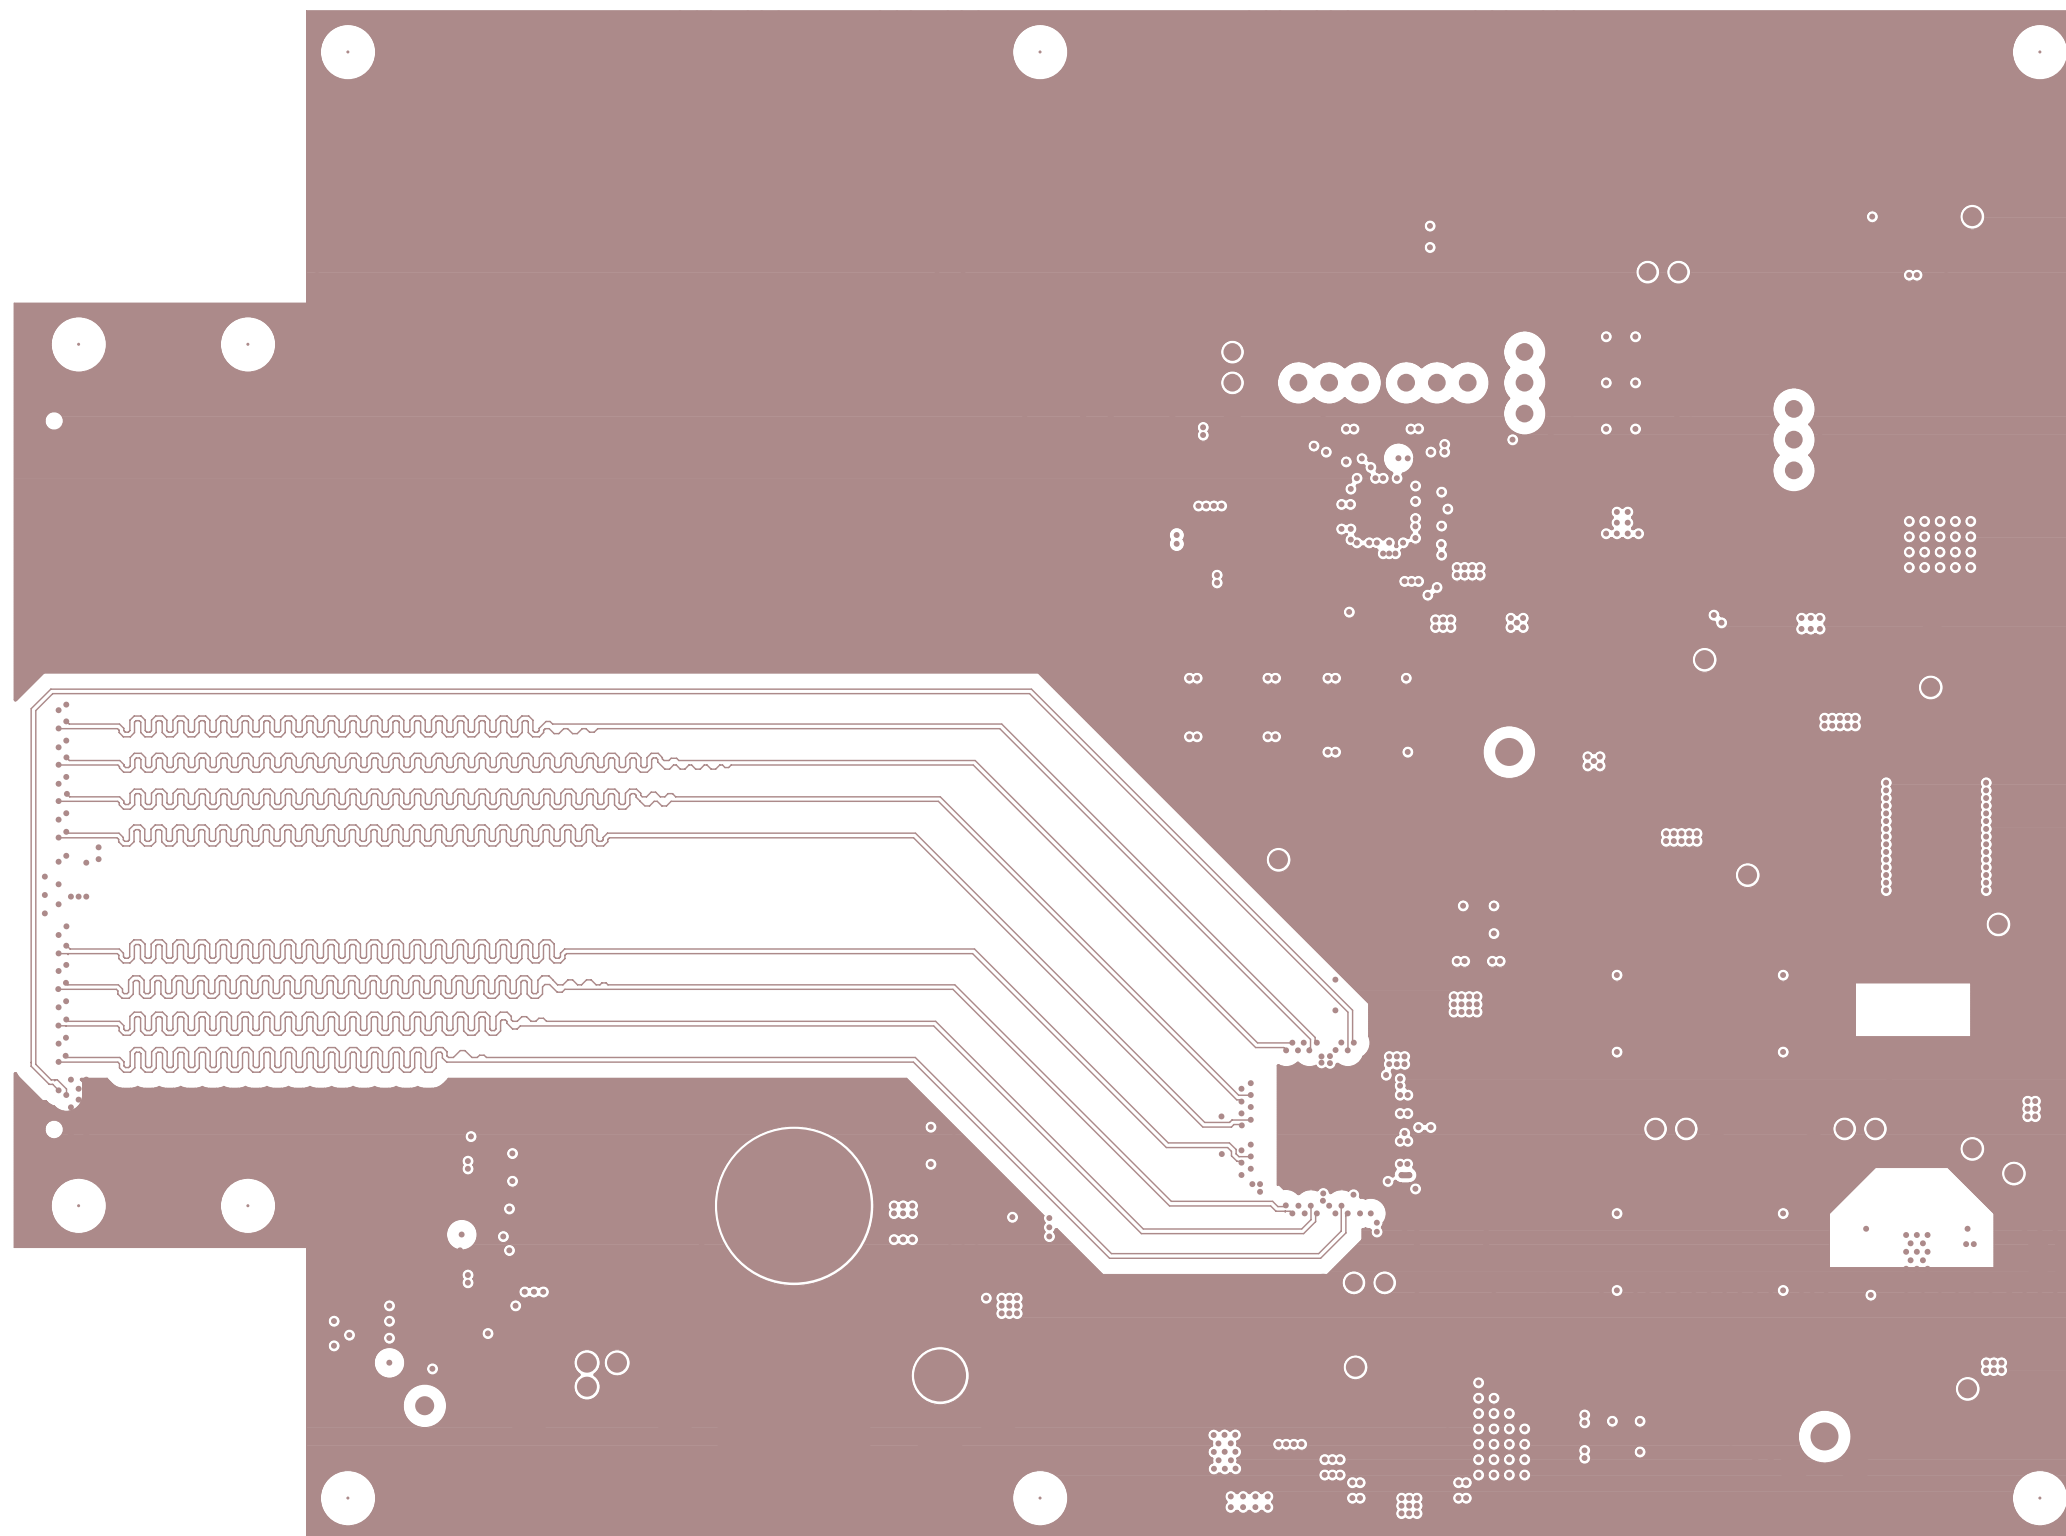

TEXAS INSTRUMENTS
TSW3070 EVM
REV C
LAYER 8

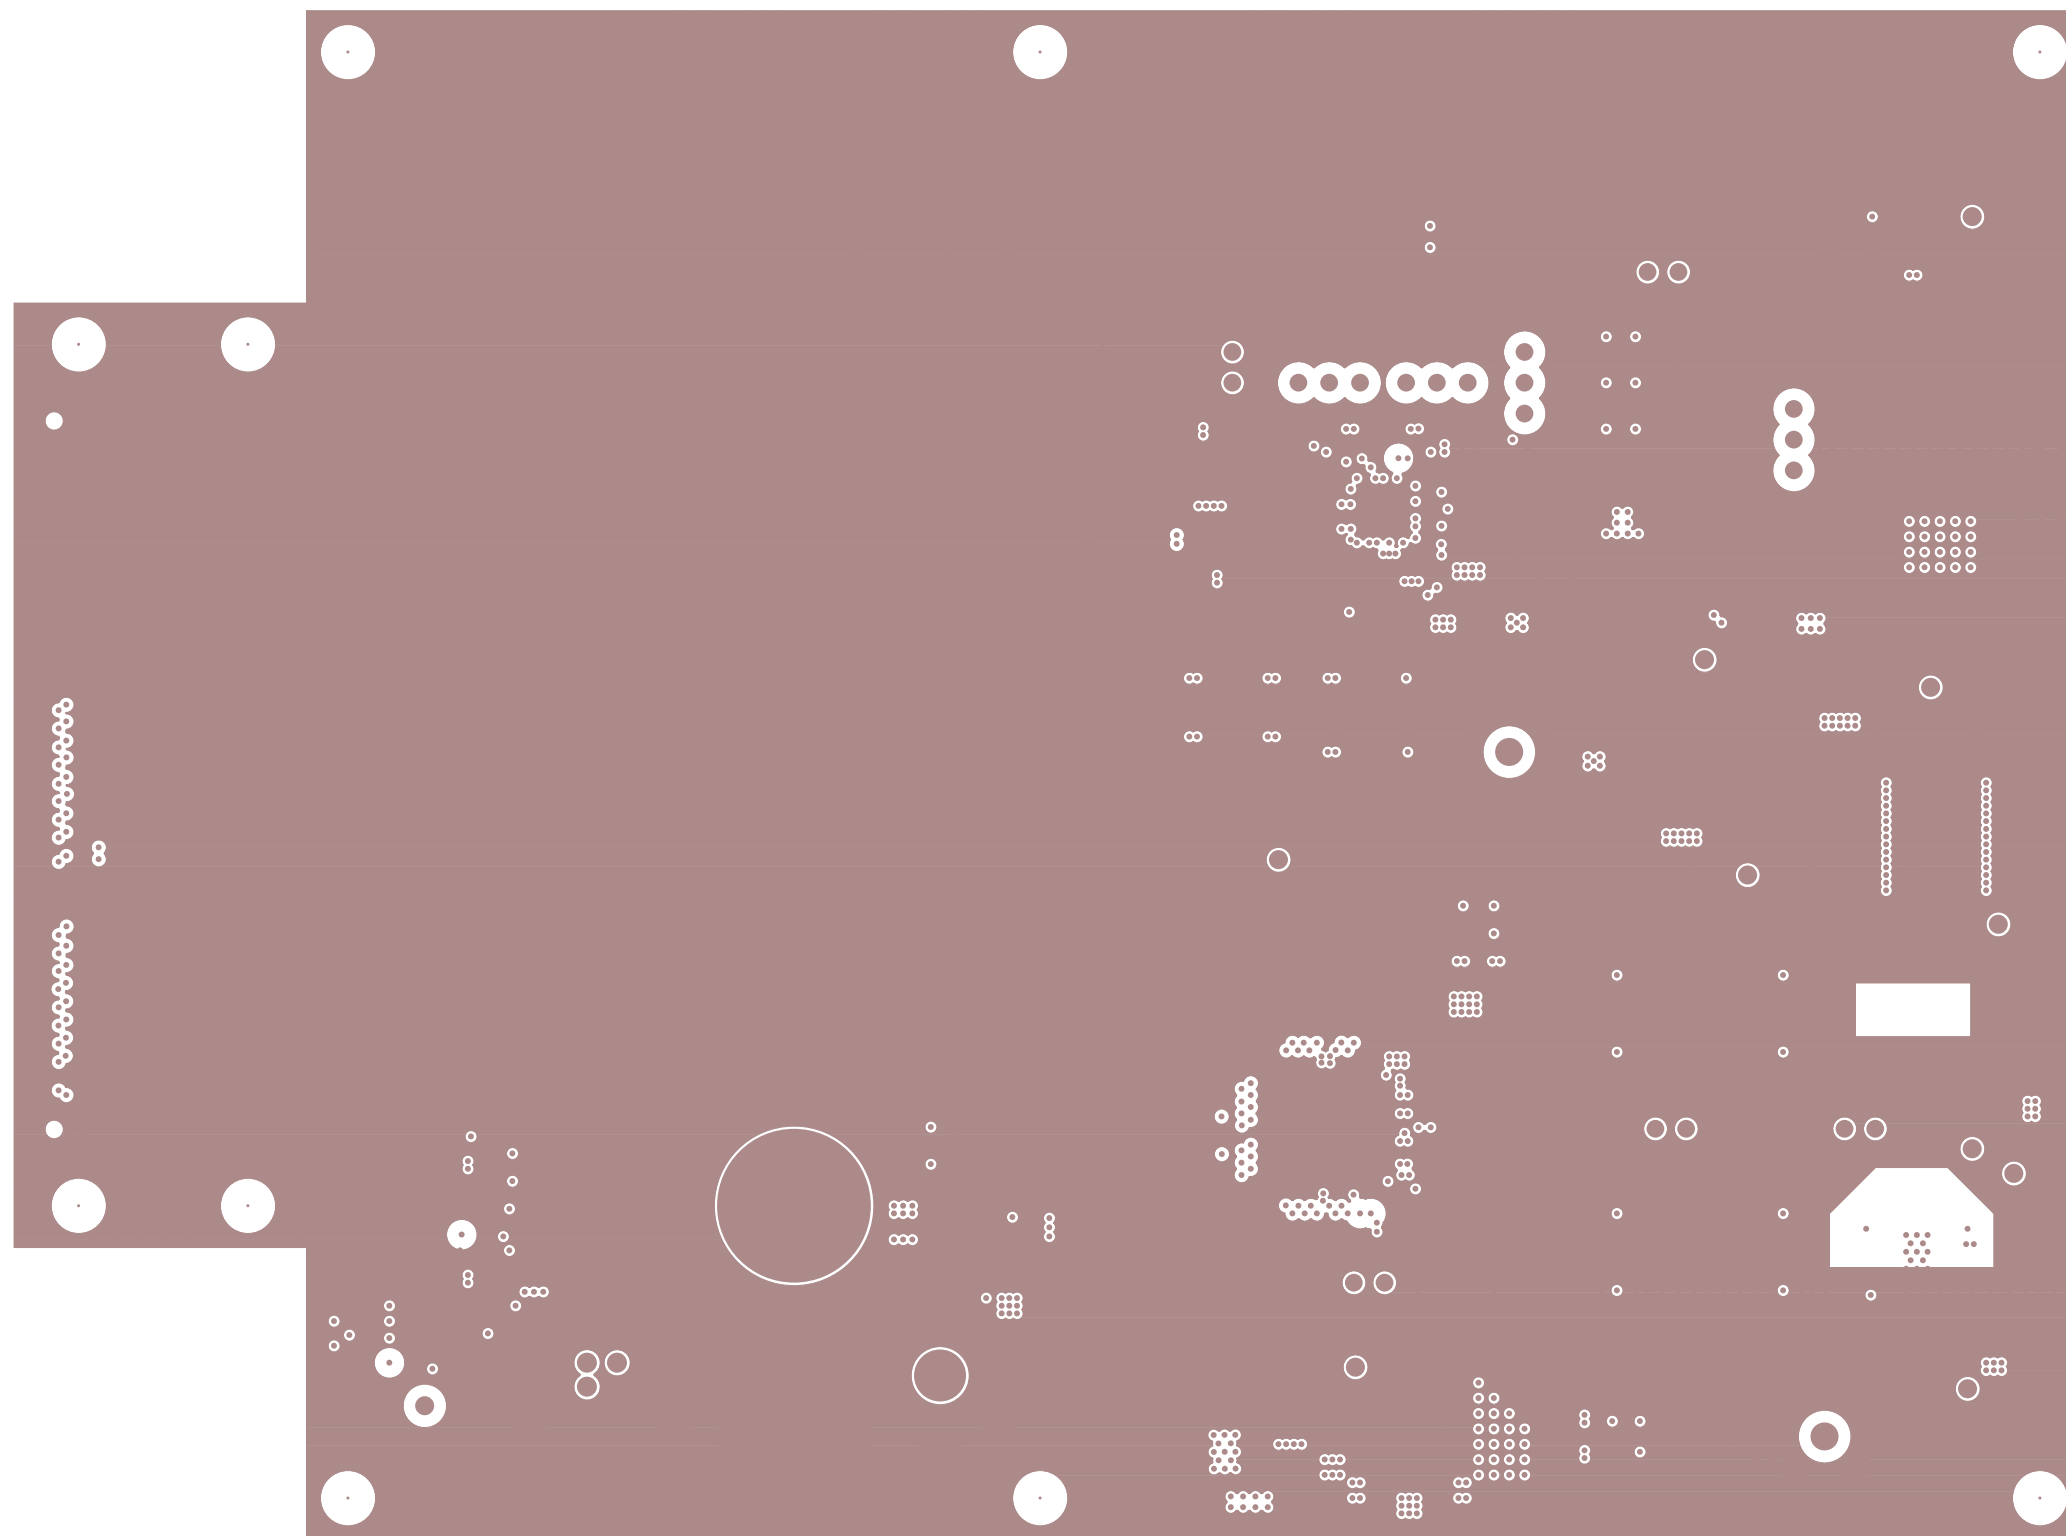

TEXAS INSTRUMENTS
TSW3070 EVM
REV C
LAYER 9

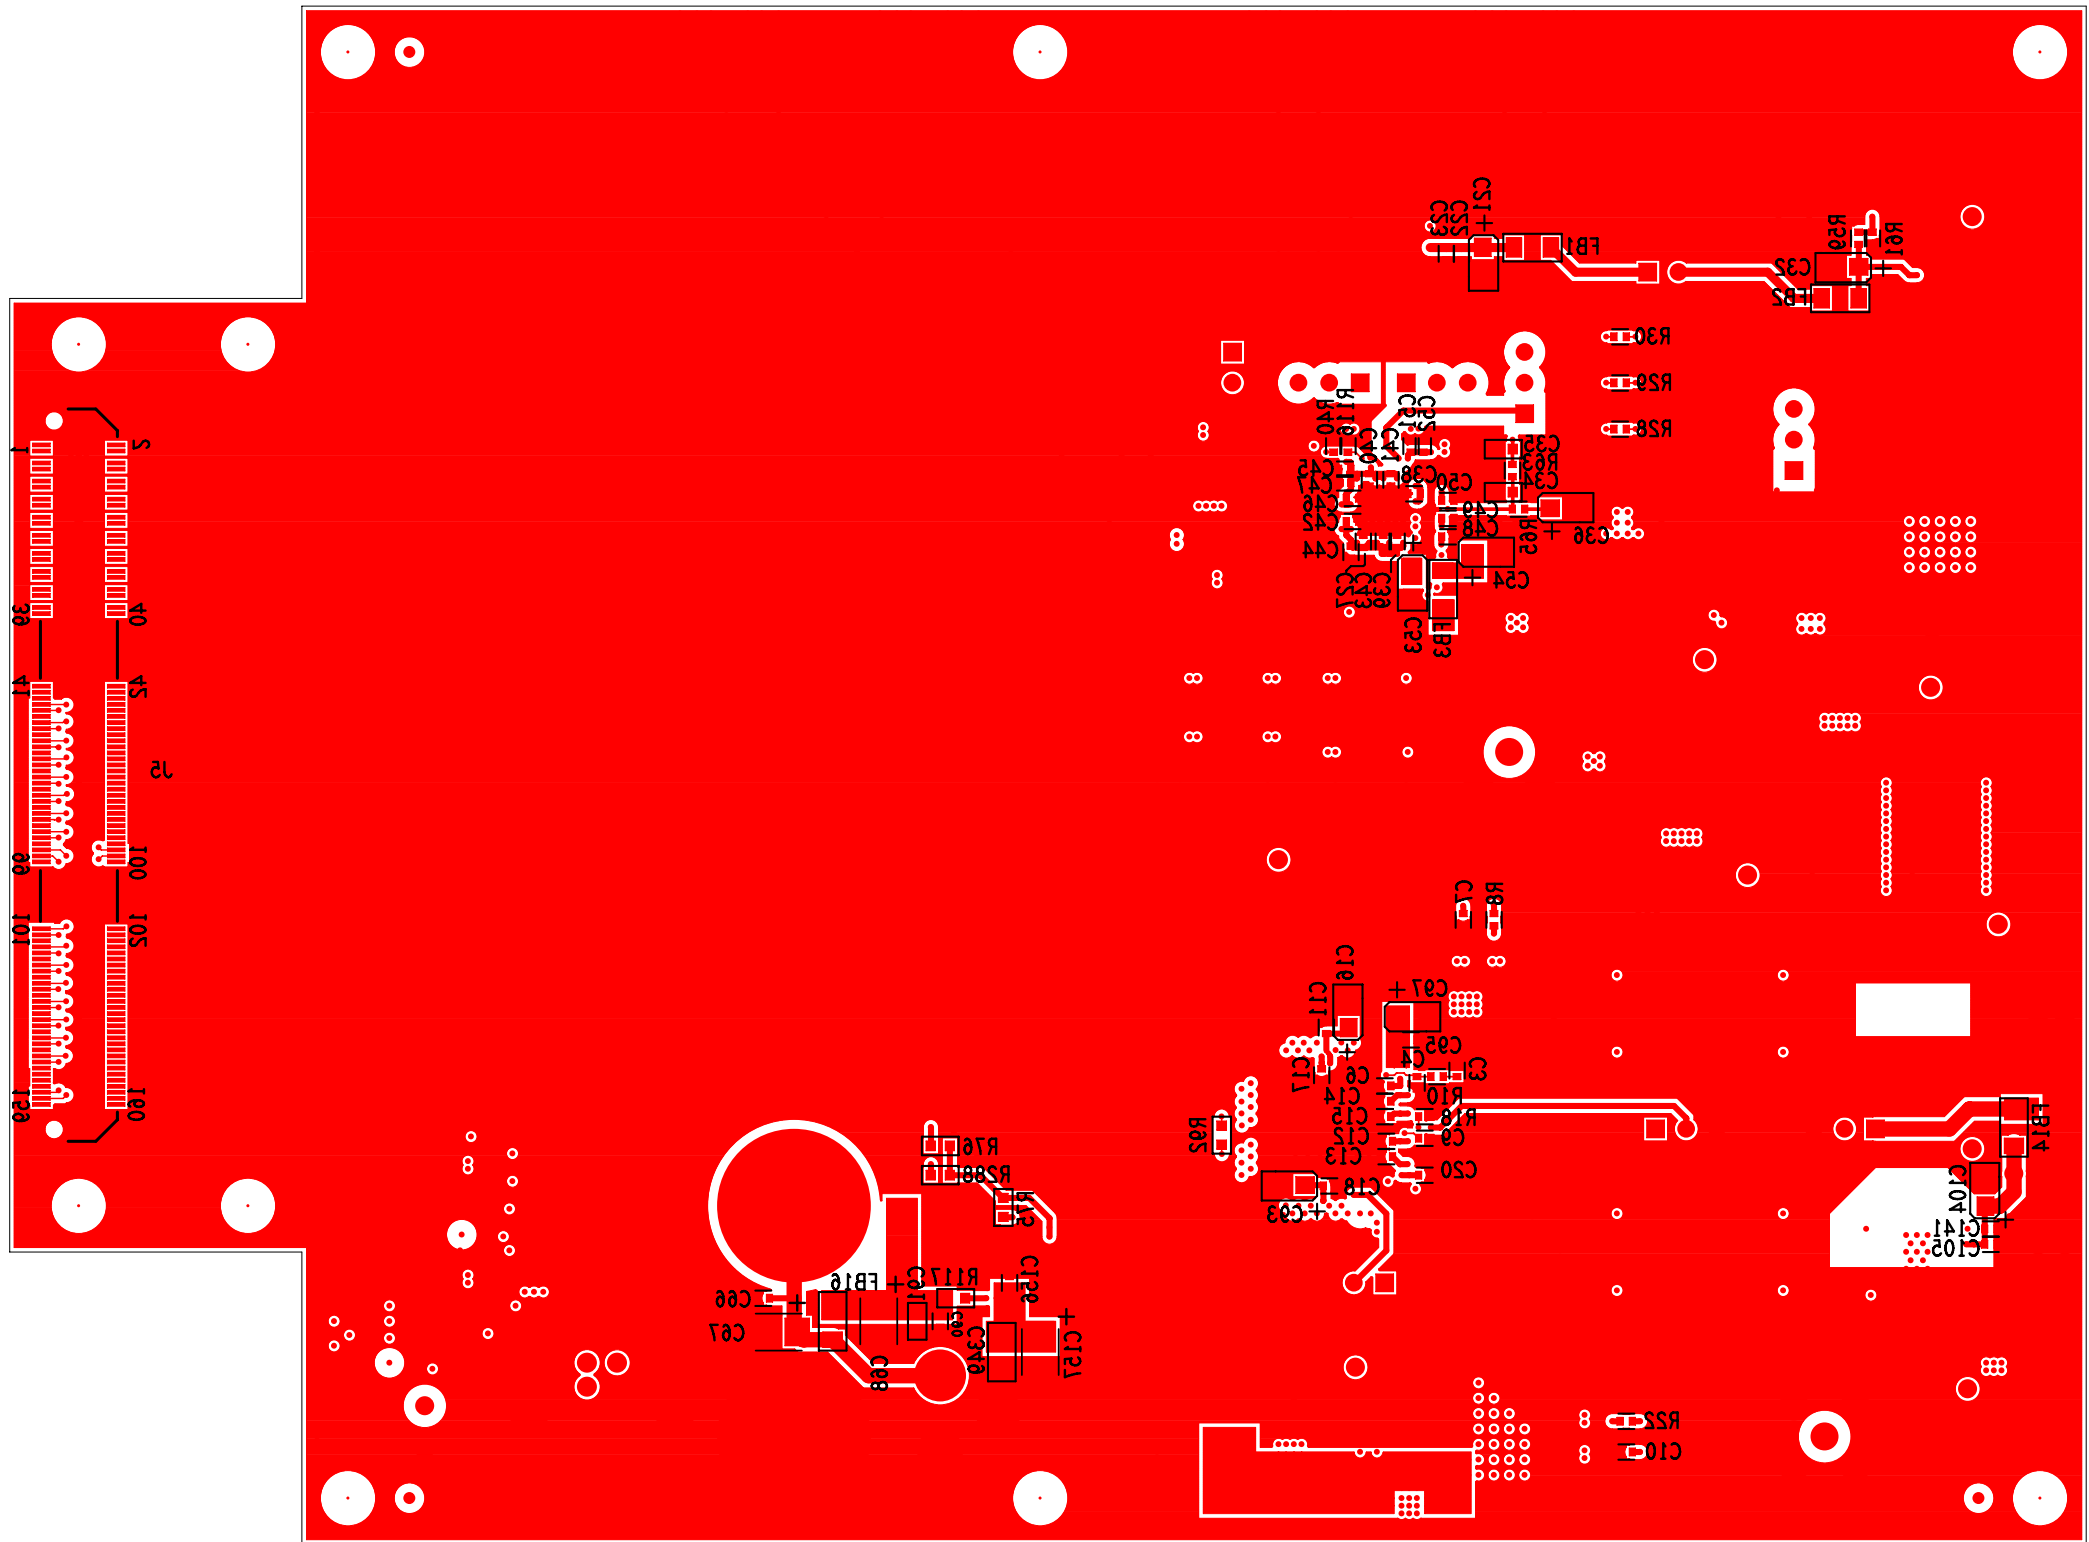

TEXAS INSTRUMENTS
TSW3070 EVM
REV C
LAYER 10 (BOTTOM SIDE)
SILKSCREEN BOTTOM