

# TI 参考设计 高温镜面触摸屏参考设计



## 设计概述

作为人与机器的主要交互方式之一，人机界面 (HMI) 是制炼厂的基本组成部分。TIDA-00464 参考设计为环境恶劣且危险的区域应用提供了 HMI 解决方案。在制炼厂中，操作人员需要与封装在拧紧式金属外壳中的防爆显示屏或控制器进行交互，该外壳具有用于本地读取和编程功能的厚玻璃窗。

TIDA-00464 TI 参考设计使用了集成在 FDC2214 中的电容式传感技术，借助该参考设计，操作人员无需打开外壳即可与控制器交互，由此省去了开工许可或避免工厂停工，从而节省时间。

## 设计资源

TIDA-00464  
FDC2214  
FDC2214EVM

设计文件夹  
产品文件夹  
工具文件夹




请咨询我们的 E2E 专家

## 设计 特性

- 单步和多步按钮
- 实施了四个强大的按钮选项
- 按钮与玻璃之间具有可变气隙 (1mm 至 2mm)
- 通过 10mm 厚的玻璃进行触摸检测
- 工作时可佩戴手套，并能够适应恶劣的环境（水、油、灰尘等）
- 温度范围：-40°C 至 125°C

## 特色 应用

- HMI
- 工艺控制
- 场发射器
- 场传动器

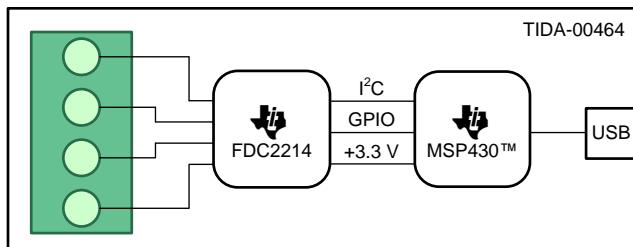

Copyright © 2016, Texas Instruments Incorporated



该 TI 参考设计末尾的重要声明表述了授权使用、知识产权问题和其他重要的免责声明和信息。

## 1 Key System Specifications

表 1. Key System Specifications

PARAMETER	SPECIFICATION	DETAILS
Glass thickness	9.5 mm	See 3.2 节
Glass diameter	80 mm	See 3.2 节
Air gap	1 mm to 2 mm	See 3.3 节
Number of buttons	Four	See 3.3 节
Work with gloves	—	See 8.2 节
Harsh environment resistant	—	See 8 节
SNR	—	See 8 节
Crosstalk	—	See 8 节
Temperature range	-40°C to 125°C	—

## 2 System Description

The TIDA-00464 design combines a button board with the FDC2214EVM, which processes the inputs given by an operator.

The complete system offers an HMI solution for harsh or difficult hazardous area applications in process plants that require operators to interact with an explosion-proof display or controller. Displays and controllers are housed in screw-on metallic enclosures with thick glass windows to display local readout and programming functions.

The FDC2214 device allows the operator to interact with the controller without requiring them to open the enclosure, which saves time by avoiding a work permit or plant shutdown.

The FDC2214 device also provides high-resolution capacitive-touch sensing, which allows plant operators to touch buttons through the thick glass window while offering high reliability and noise immunity at the lowest power (see 图 1).



图 1. Touch Through-Glass Application

### 3 System Design Theory

This section focuses on the design theory of the electrode board. For more information on the FDC2214EVM, consult the following *FDC2114* and *FDC2214 EVM User's Guide* ([SNOU138](#)).


#### 3.1 Mechanical Design

Designing the electrode board requires attention to a few key mechanical details. Note that the board is to be housed in a screw-on metallic enclosure (see [3.2 节](#)), which can be removed by unscrewing the unit. To prevent any interference with the electronics when the user removes the enclosure, the electrode board must not be in direct contact with the glass window. The distance between the window glass and the electrode board can vary depending on the application.

The typical placement of the electrode board is in the lower part of the glass window to leave space for a liquid-crystal display (LCD) on the upper part of the glass window for a local readout of the sensor parameters.

#### 3.2 Explosion-Proof Enclosure

The TIDA-00464 design uses an explosion-proof enclosure made of stainless steel with a 9.5-mm thick glass window. [图 2](#) shows the mechanical specifications of this enclosure.

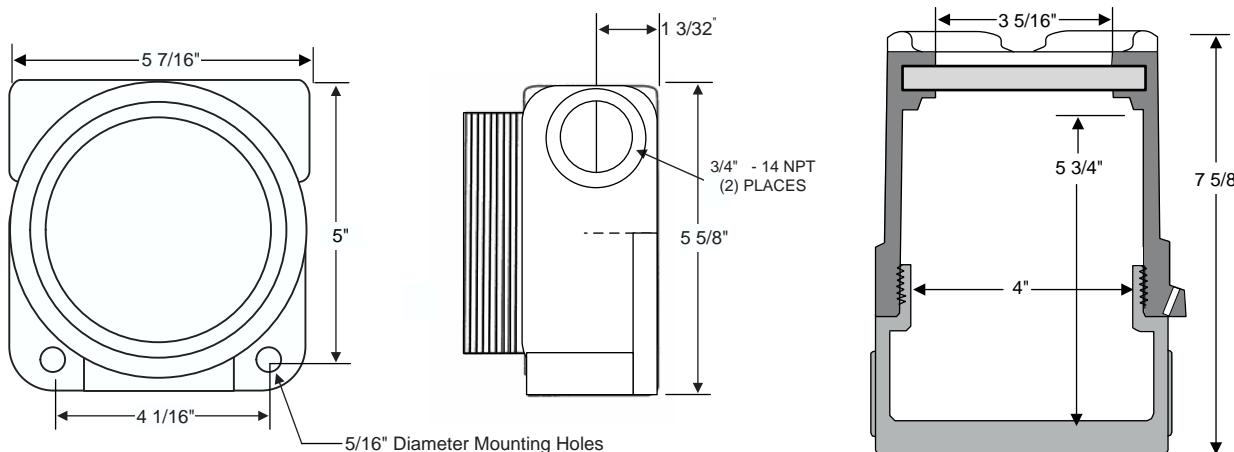

**图 2. Explosion-Proof Enclosure (XIHLDGCX From Adalet)**

The enclosure is big enough to contain the electronics and has a hole on the bottom side that allows the user to wire the USB cable, which is used to connect to the PC and acquire data from the sensors.

The enclosure must be grounded. If the enclosure is floating, a touch on it may couple together all of the buttons and cause a false detection.

However, the buttons closer to the enclosure or any conductive surface that is tied at a fixed potential are less sensitive than the other buttons because the grounded enclosure pulls in the electric field, which limits the field above the glass in the desired area of interaction.

### 3.3 Electrode Design

The diameter and shape of the electrodes are defined by a tradeoff between obtaining the maximum sensitivity (公式 1) and the mechanical constraints of the application (see 图 3).

$$C = \epsilon_r \times \epsilon_0 \times \frac{A}{d} \quad (1)$$

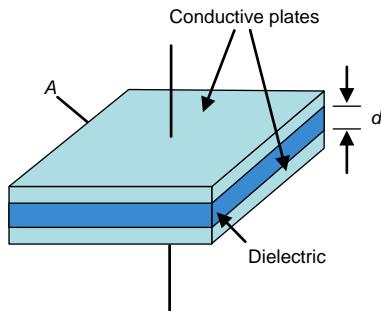


图 3. Parallel Plate Capacitor

The area of the button must be as big as possible or at least the same size of the average finger press for a higher sensitivity. The button diameter of the TIDA-00464 is equal to 10 mm, which is a bit smaller than the average finger press of an operator and is limited by the mechanical constraints of the application.

This application typically requires the use of a glass window with a diameter that spans from 4 cm up to 12 cm and contains three to six buttons, which are placed behind the glass on the lower section. In this setup, the space for each button is approximately 1 cm to 2 cm without accounting for the minimum distance required between the buttons, which is fundamental to avoiding crosstalk, and the space occupied by the microcontroller (MCU), light-emitting diode (LED), and passives in the printed circuit board (PCB).

A medium-sized enclosure has an 8-cm glass window diameter and a four-button application. To account for the application requirements of this design, the TIDA-00464 has four buttons with 10-mm diameters.

3.1 节 explains the importance of placing the buttons a certain distance from the metallic enclosure. Additionally, the buttons must be placed as far as possible from each other to avoid crosstalk, which increases as the air gap between the glass and buttons increase. Note that the dielectric of this application is not negligible (see 图 4).

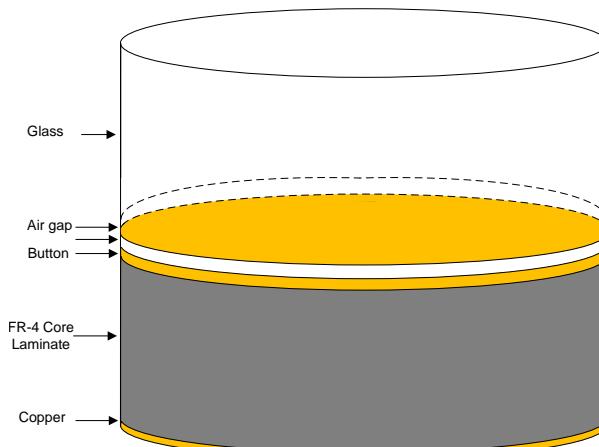



图 4. Application Stackup

Every 1 mm of air gap is equivalent to 7 mm to 8 mm of glass (see 表 2). So with a glass thickness of 10 mm, the actual stackup consists of approximately 25 mm to 30 mm of glass. This ratio of material affects the sensitivity of the buttons, too.

**表 2. Dielectric Material**

MATERIAL	DIELECTRIC CONSTANT (Er)
Air	1.0
FR-4	4.8
Glass	7.6 to 8.0
Gorilla and regular glass	7.2 to 7.6
Polycarbonate	2.9 to 3.0
Acrylic	2.8
ABS	2.4 to 4.1

图 5 shows the configuration of the buttons.

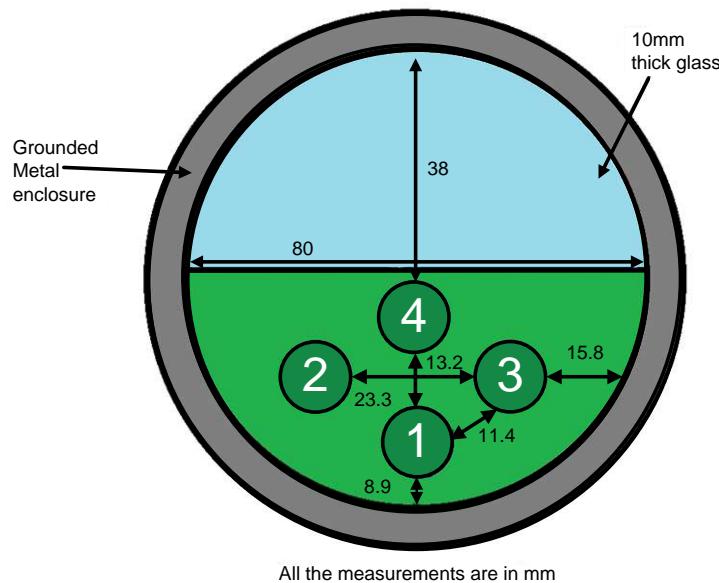


**图 5. Button Configuration**

This configuration allows the user to test how the crosstalk varies among the buttons and how the metal enclosure influences the different buttons.

The TIDA-00464 design utilizes buttons known as self-capacitance buttons.

### 3.4 Self-Capacitive Buttons

A self-capacitive button sensor is a single electrode. Self-capacitive buttons are simple to lay out and each button is assigned to only one pin on the MCU (see [图 6](#)). Self-capacitive buttons provide greater sensitivity as compared to a mutual capacitive button, but are more influenced by parasitic capacitances to ground.

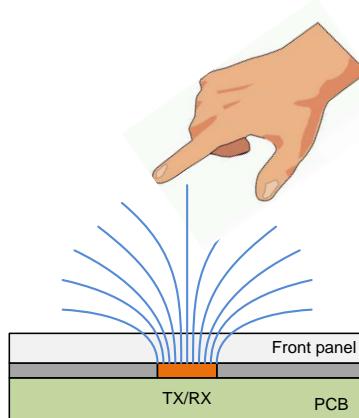

**图 6. Example Diagram—Self-Capacitive Button Design**

[表 3](#) shows the basic specifications of self-capacitive buttons.

**表 3. Self-Capacitive Button Properties**


PARAMETER	GUIDANCE
Radiation pattern	Between electrode and ground
Size	Equivalent to interaction
Shape	Various: typically round or square
Spacing	0.5 × overlay minimum thickness

#### 3.4.1 Self-Capacitive Button Shapes

The electrode shape is typically rectangular or round with common sizes of 10 mm and 12 mm. Ultimately, the size depends on the required touch area. A good design practice is to keep the size of the button as small as possible, which minimizes the capacitance and helps with the following:


- Reduce susceptibility to noise
- Improve sensitivity
- Lower power operation as a result of smaller capacitance and reduced electrode scan time

[图 7](#) shows an example of a silkscreen-button outline pattern.

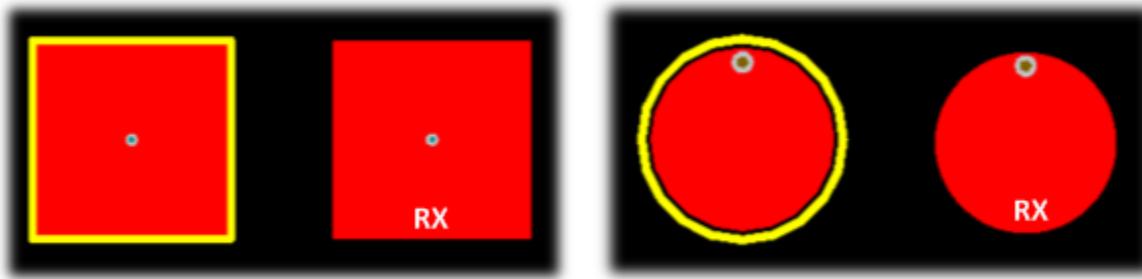

**图 7. Silkscreen-Button Outline Pattern**

The goal of the button area is to provide a sufficient signal when the user touches the overlay above the electrode. Typically, a nonconductive decal or ink is used to identify the touch area above the electrode. The relationship between the decal and the electrode can be varied so that contact with the outer edge of the decal registers a touch. Conversely, the electrode can also be small to ensure that the button only activates after touching the center of the decal. The following [图 8](#) and [图 9](#) show how the effective touch area is a function of the electrode size and the size of the finger making contact.

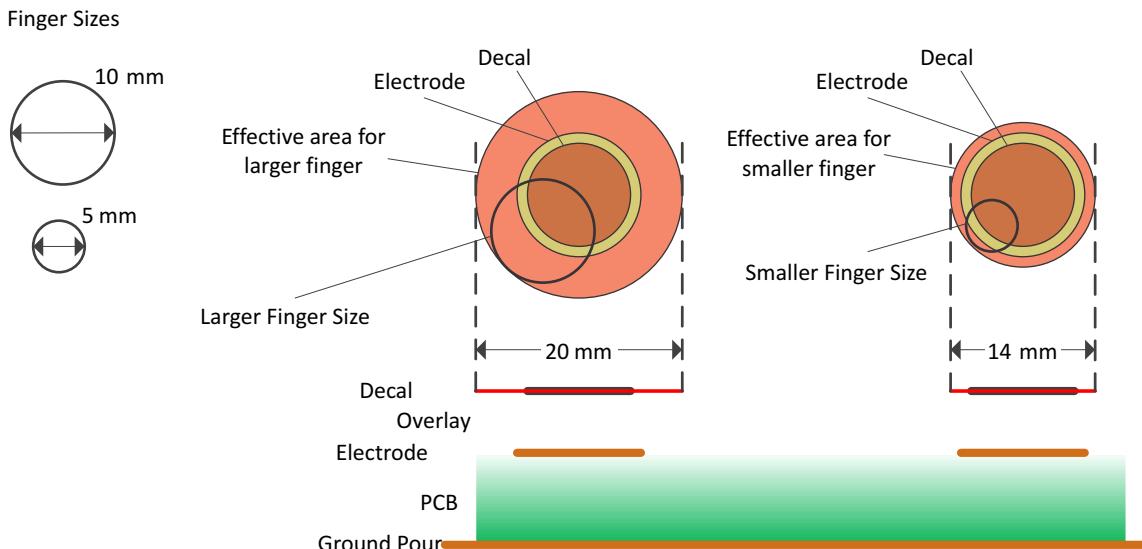

**图 8. Effective Area Example for Electrodes Larger Than Decal**


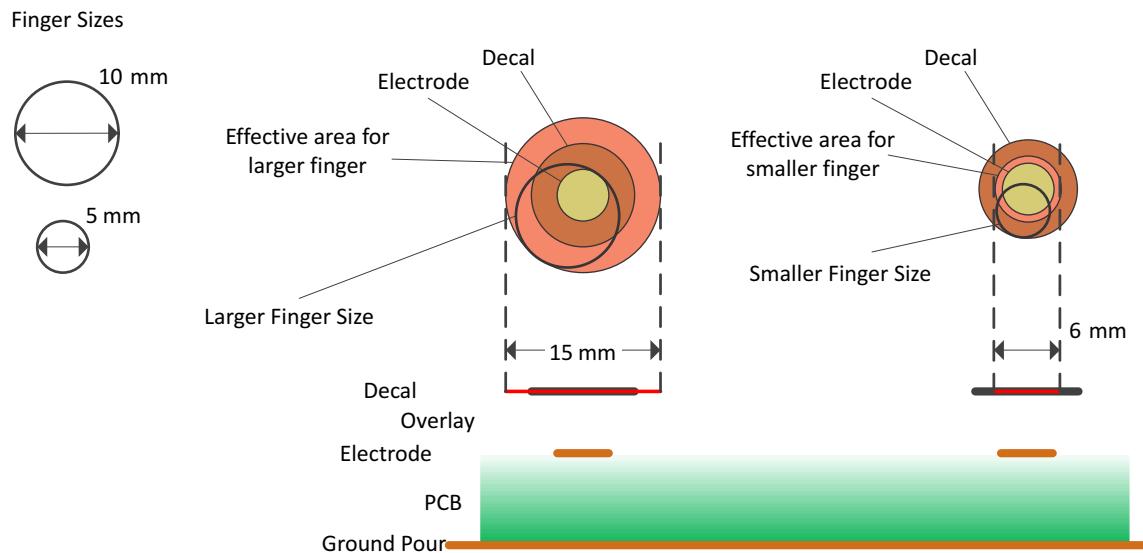


图 9. Effective Area Example for Electrode Smaller Than Decal


One common mistake is to make the electrode the same shape as the icons printed (in nonconductive ink) on the overlay. As [图 10](#) shows, this action can lead to electrodes with odd shapes that create discontinuities and reduce surface area.

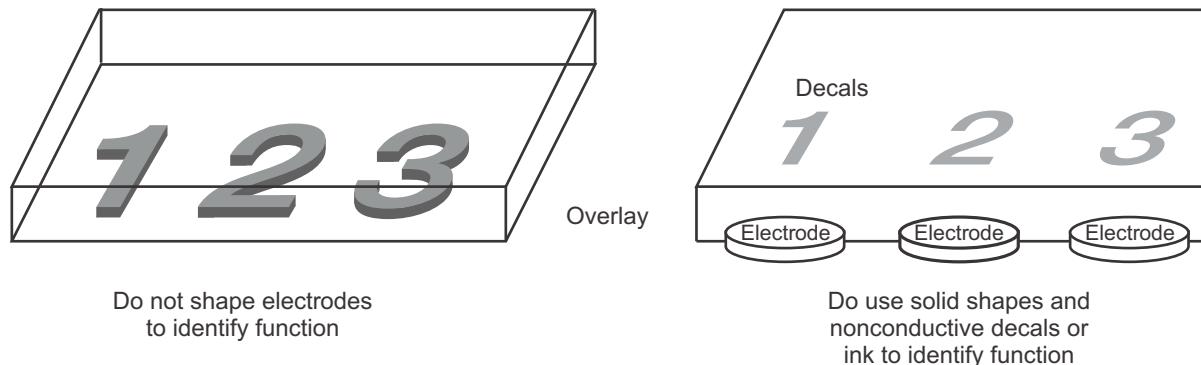

**图 10. Button Shape Examples—Dos and Don'ts**

As the distance of the overlay increases, the effective area decreases; therefore, it is important to keep the button electrode diameter at least three times the laminate thickness.

## 4 Block Diagram

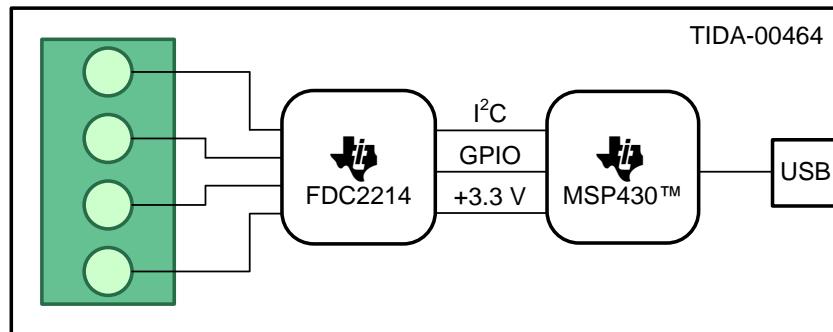

Copyright © 2016, Texas Instruments Incorporated

图 11. TIDA-00464 Block Diagram

### 4.1 Highlighted Products

The key part of the TIDA-00464 system design is the FDC2214, which allows capacitive sensing by pressing a button. The touch of this button registers, even through layers, such as a screen of thick glass.

#### 4.1.1 FDC2214

##### Features:

- EMI-resistant architecture
- Maximum output rates (one active channel):
  - 13.3 ksps (FDC2112, FDC2114)
  - 4.08 ksps (FDC2212, FDC2214)
- Maximum input capacitance: 250 nF (at 10 kHz with 1 mH inductor)
- Sensor excitation frequency: 10 kHz to 10 MHz
- Number of channels: 2, 4
- Resolution: up to 28 bits
- System noise floor: 0.3 fF at 100 sps
- Supply voltage: 2.7 V to 3.6 V
- Power consumption: Active: 2.1 mA
- Low-power sleep mode: 35 uA
- Shutdown: 200 nA
- Interface: I<sup>2</sup>C
- Temperature range: -40 ° C to +125 ° C

**Applications:**


- Proximity sensor
- Gesture recognition
- Level sensor for liquids, including conductive ones such as detergent, soap, and ink
- Collision avoidance
- Rain, fog, ice, and snow sensor
- Automotive door and kick sensors
- Material size detection

**Description:**

Capacitive sensing is a low-power, low-cost, high-resolution contactless sensing technique that can be applied to a variety of applications ranging from proximity detection and gesture recognition to remote liquid level sensing. The sensor in a capacitive sensing system is any metal or conductor, allowing for low cost and highly flexible system design.

The main challenge limiting sensitivity in capacitive sensing applications is noise susceptibility of the sensors. With the FDC2x1x innovative electromagnetic interference (EMI) resistant architecture, performance can be maintained even in presence of high-noise environments.

The FDC2x1x is a multi-channel family of noise and EMI-resistant high-resolution, high-speed capacitance-to-digital converters for implementing capacitive sensing solutions. The devices employ an innovative narrow-band based architecture to offer high rejection of noise and interferers while providing high resolution at high speed. The devices support a wide excitation frequency range, offering flexibility in system design. A wide frequency range is especially useful for reliable sensing of conductive liquids such as detergent, soap, and ink.

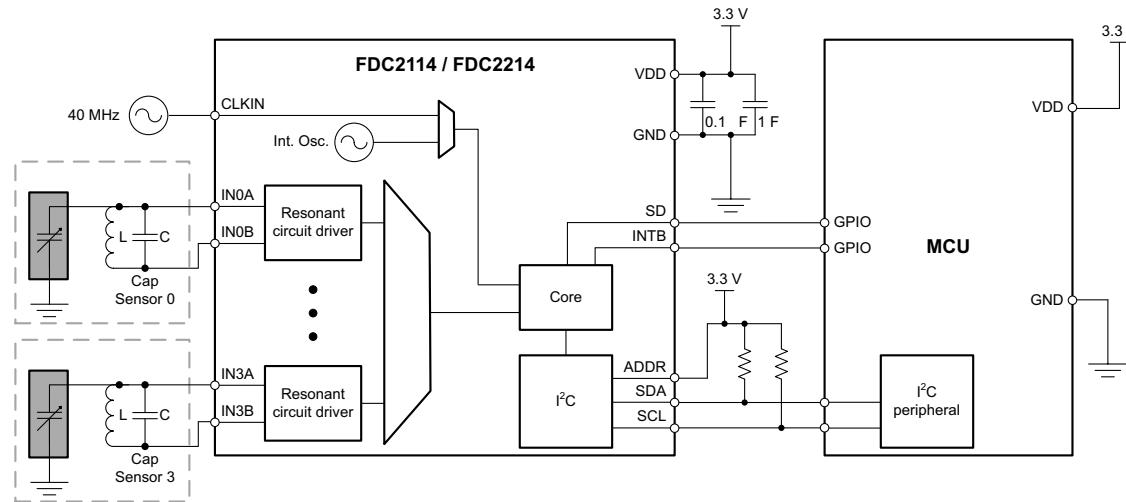

**图 12. FDC2114 Simplified Schematic**

## 5 Getting Started Hardware

Implement the following steps to set up the hardware:

1. Connect the two example PCB sensors from the FDC2214EVM. For more information about the FDC2214EVM, visit the tool folder at: [www.ti.com/tool/fdc2214evm](http://www.ti.com/tool/fdc2214evm).
2. Connect the electrode board to the FDC2214EVM through wires. A helpful tip is to solder the connectors in the four input channels of the FDC2214EVM. The following 表 4 shows the corresponding connections:

表 4. Electrode Board to FDC2214EVM Connections

CONNECTOR ELECTRODE BOARD (J1)	CONNECTOR FDC2214EVM (J10)
B1	CH0
B2	CH1
B3	CH2
B4	CH3
L1	NC
L2	NC
L3	NC
L4	NC
GND	GND
GND	Enclosure

3. Use plastic spacers to elevate the board from the floor up to the glass. The length of the spacers depends on the used enclosure.
4. Use screws, nuts, spacers, or bumpers to establish a defined air gap between the glass window and the board.
5. Place the board inside the enclosure with the electrode board facing the glass window, as 图 13 shows.
6. Connect the FDC2214EVM to the PC through a micro-USB cable.

## 6 Getting Started Firmware

Follow these steps to get started with the firmware. For more information, refer to the *FDC2114 and FDC2214 EVM User's Guide (SNOU138)*:

1. Download the [Sensing Solutions EVM GUI Tool v1.8.8](#).
2. Start the [SensingSolutions GUI](#).

## 7 Test Setup

The electrode board and the FDC2214EVM must be connected as outlined in [5 节](#) and then contained in an explosive-proof enclosure. A USB wire is the only object that is allowed to protrude from the enclosure and this USB must be connected to a laptop, which uses the [Sensing Solutions EVM GUI Tool v1.8.8](#) to acquire the sensor data. [图 13](#) shows an image of the final test setup.



图 13. Test Setup

Adjusting certain parameters in the [Sensing Solutions EVM GUI Tool v1.8.8](#) is important for obtaining the best performance using the TIDA-00464.

Navigate to the *Input Deglitch Filter* setting in the *Configuration* page of the GUI. Select the lowest setting that exceeds the oscillation tank oscillation frequency, which is set to 10 MHz for the TIDA-00464. Enable the four channels in the *Measurement Settings* tab of the *Configuration* page to retrieve the samples from the four buttons. Increase the amplitude of oscillation by increasing the *Idrive* in the *Current Drive and Power* tab. The amplitude of oscillation has been increased to 1.2 V for the TIDA-00464 by increasing the *Idrive* of the four channels to 20.

Increase the value for the *Divider Code* to 2 in the *Measurement Settings* tab and then play with the *Parallel Inductance* values in the *Sensor Properties and Input Adjustments* tab to ensure the same total capacitance for the four buttons.

Be sure to set the RCOUNT registers (08-0B) to xFFFF in the registers page.

The following tests were performed:

- Touch
- Touch with gloves
- False touch

In each test, 1000 samples were taken while pressing a button (touch) and 1000 samples were taken without performing any action (untouched). The sampling was followed by a calculation of the SNR and crosstalk among the buttons.

The diagram in 图 14 can be used to show the results if considering a normal distribution for the touch event and untouched event:

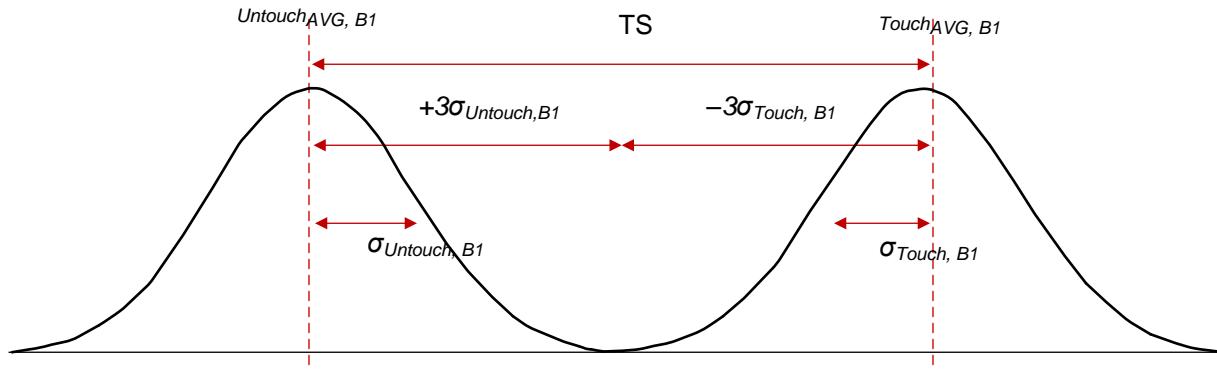


图 14. Event Distribution (SNR) With Touch and Untouched

Touched<sub>AVG\_B1</sub> is the average of 1000 sample while pressing button 1 (see 公式 2).

$$\text{Touched}_{\text{AVG}_B1} = \frac{\sum_{n=0}^{\text{Sample Size}} \text{Touched}_{B1}[n]}{\text{Sample Size}} \quad (2)$$

Untouched<sub>AVG\_B1</sub> is the average of 1000 samples without any button presses (see 公式 3).

$$\text{Untouched}_{\text{AVG}_B1} = \frac{\sum_{n=0}^{\text{Sample Size}} \text{Untouched}_{B1}[n]}{\text{Sample Size}} \quad (3)$$

表 5 shows the SNR and the probability of a false event as a function of the number of  $\sigma$ .

表 5. SNR and Probability of False Event in Function of Number of  $\sigma$

$z\sigma$	SNR	PROBABILITY OF FALSE EVENT
1 $\sigma$	0 dB	31.73%
2 $\sigma$	6 dB	4.55%
3 $\sigma$	9.5 dB	0.27%
4 $\sigma$	12 dB	60 ppm
5 $\sigma$	14 dB	0.57 ppm

To achieve a 0.27% probability of a false event, the user must ensure that the value for the Touched<sub>AVG\_B1</sub> is calculated as follows in 公式 4:

$$\text{T}_{\text{AVG}_B1} - 3\sigma_{\text{Touch}_B1} > \text{U}_{\text{AVG}_B1} + 3\sigma_{\text{Untouch}_B1} \quad (4)$$

where:

$$\sigma_{\text{Touch}_B1} = \sqrt{\left( \frac{\sum_{n=0}^{\text{Sample Size}} (\text{Touched}_{B1}[n] - \text{Touched}_{\text{AVG}_B1})^2}{\text{Sample Size}} \right)} \quad (5)$$

$$\sigma_{\text{Untouch}_B1} = \sqrt{\left( \frac{\sum_{n=0}^{\text{Sample Size}} (\text{Untouched}_{B1}[n] - \text{Untouched}_{\text{AVG}_B1})^2}{\text{Sample Size}} \right)} \quad (6)$$

The calculations from [公式 4](#) can be further simplified in [公式 7](#):

$$T_{AVG\_B1} - U_{AVG\_B1} > 3(\sigma_{Untouch\_B1} + \sigma_{Touch\_B1}) \rightarrow \frac{T_{AVG\_B1} - U_{AVG\_B1}}{\sigma_{Untouch\_B1} + \sigma_{Touch\_B1}} > 3 \quad (7)$$

Define the touch strength (TS) in [公式 8](#) using the previous calculations from [公式 7](#):


$$\text{Touch Strength (TS)} = \text{Untouched}_{AVG\_B1} - \text{Touched}_{AVG\_B1} \quad (8)$$

Calculate the SNR in dB in [公式 9](#):

$$\text{SNR (dB)} = 20 \times \log\left(\frac{\text{Touch Strength (TS)}}{\sigma_{Untouch\_B1} + \sigma_{Touch\_B1}}\right) > 9.5 \text{ dB} \quad (9)$$

To ensure that the probability of a button being touched is equal to 99.73%, the SNR must be greater than 9.5 dB (see [表 5](#)).

The method for calculating the crosstalk is similar to that of the SNR; however, this method considers the average of 1000 samples of a button while touching a nearby button (see [图 15](#)).

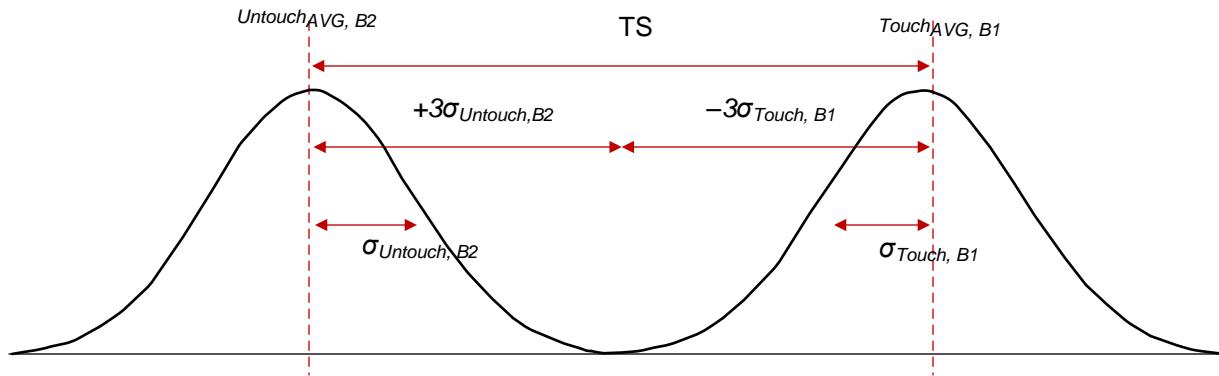

**图 15. Event Distribution (Crosstalk) With Touch and Untouched**

In [图 15](#),  $\text{Touch}_{AVG\_B1}$  is equal to the average of 1000 samples while button 1 is pressed and  $\text{Untouch}_{AVG\_B2}$  is equal to the average of 1000 samples of button 2 while button 1 is pressed.

[公式 10](#) shows how to calculate the crosstalk:

$$\text{Crosstalk}_{B1\_B2} (\text{dB}) = 20 \times \log\left(\frac{\text{Touch Strength (TS)}}{\sigma_{Untouch\_B2} + \sigma_{Touch\_B1}}\right) > 9.5 \text{ dB} \quad (10)$$

To ensure that the probability of an unintentional button touch is equal to 0.27%, the crosstalk must be greater than 9.5 dB (see [图 15](#)). Refer to [公式 5](#), [公式 6](#), and [公式 8](#) for calculating the touch strength,  $\sigma_{Untouch\_B2}$ , and  $\sigma_{Untouch\_B1}$ .

The air gap between the glass window and the buttons varies in each test from 1 mm to 2 mm and no air gap. Decrease the proximity and touch threshold in the *Tuning* tab of the *ButtonGroupSensor* properties as the air gap increases.

## 8 Test Data

### 8.1 Touch

This test measures the SNR and crosstalk for each button while using a human finger to press the button. The following 表 6 and 图 16 show how the SNR decreases as the air gap increases.

表 6. Touch—SNR

AIR GAP (mm)	SNR (dB)			
	B1	B2	B3	B4
0	33	36	38	33
1	23	22	24	20
2	20	19	20	17

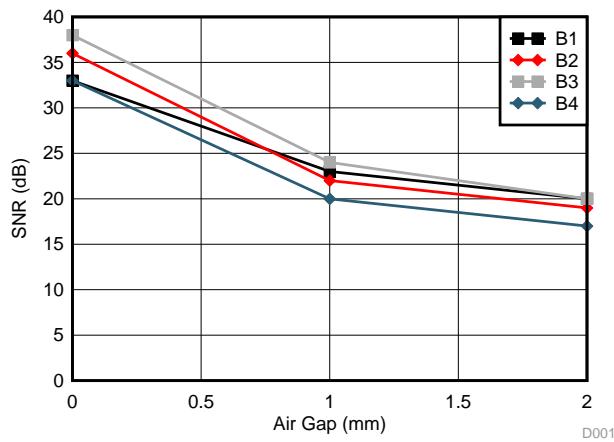


图 16. Touch—SNR


The SNR is still greater than 9.5 dB at a 2-mm air gap for all the buttons, which ensures that the application is robust. The crosstalk has a similar behavior to that of the SNR: the crosstalk decreases as the air gap increases. 表 7 shows the obtained results:

表 7. Touch—Crosstalk

AIR GAP (mm)	CROSSTALK (dB)				
	UNTOUCHED BUTTONS	B1	B2	B3	B4
0	B1	—	32	35	31
	B2	30	—	37	32
	B3	31	37	—	31
	B4	29	33	35	—
1	B1	—	25	24	23
	B2	21	—	25	22
	B3	24	26	—	23
	B4	22	23	23	—
2	B1	—	19	16	14
	B2	17	—	16	16
	B3	19	18	—	13
	B4	18	17	17	—

The crosstalk is measured for each button pressed. The best crosstalk results are obtained between button 3 and button 2 because they have the most distance between each other with respect to the other buttons (see [图 5](#)).

[图 17](#) shows the crosstalk results:

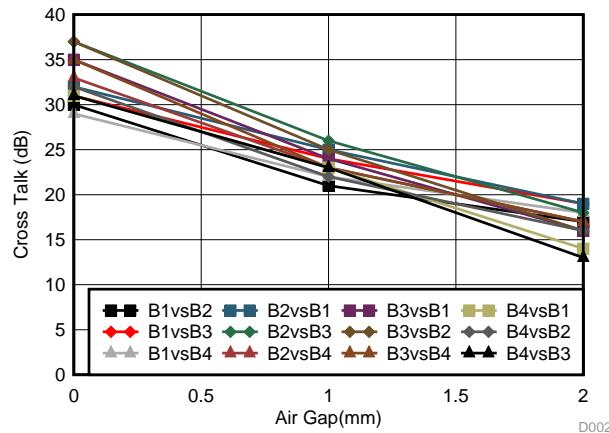

**图 17. Touch—Crosstalk**

## 8.2 Touch With Gloves

This test measures the SNR and crosstalk for each button while a human finger wearing a thick glove is used to press the button (see [图 18](#)).




**图 18. Example Firefighting Glove**

This test shows a significant decrease in the measured SNR and crosstalk in comparison to the test results without a glove, which is a result of the thick fabric of the glove and its resistance to harsh environments.

However, the SNR values are still fairly satisfactory, with only two cases of values below 9.5 dB (button 1 and button 3) and recognition of button touches 95.45% of the time (see [表 8](#)).

**表 8. Touch With Gloves—SNR**

AIR GAP (mm)	SNR (dB)			
	B1	B2	B3	B4
0	21	20	22	19
1	11	12	13	11
2	8	10	6	10

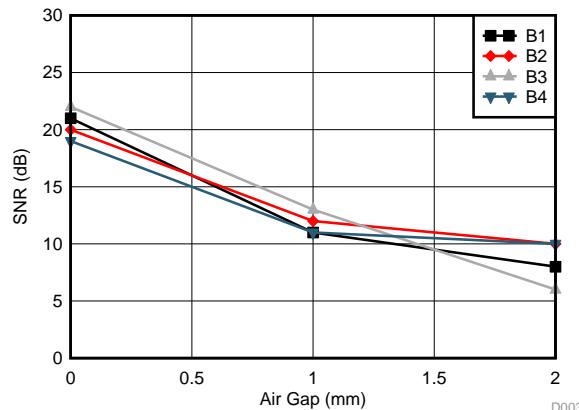

**图 19. Touch With Gloves—SNR**

表 9 shows the crosstalk values. Some of the resulting crosstalk values are less than 9.5 dB when measuring at the 2-mm air gap. These results indicate that a touch of the button while wearing gloves can influence nearby buttons.

However, the results can be improved by implementing a data processing algorithm. One such example is to increase the sample rate, which also effectively increases the sample averaging (see 图 20).

**表 9. Touch With Gloves—Crosstalk**

AIR GAP (mm)	CROSSTALK (dB)				
	UNTOUCHED BUTTONS	B1	B2	B3	B4
0	B1	—	24	22	23
	B2	20	—	23	20
	B3	23	22	—	23
	B4	20	21	20	—
1	B1	—	14	15	13
	B2	10	—	15	10
	B3	12	16	—	12
	B4	11	12	13	—
2	B1	—	8	6	9
	B2	4	—	7	5
	B3	5	11	—	8
	B4	3	6	6	—

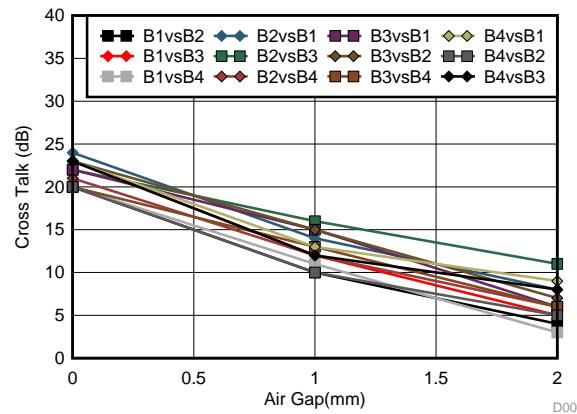


图 20. Touch With Gloves—Crosstalk

### 8.3 False Touch

This test measures the SNR of the two buttons that are the closest to the false touch position and is performed by touching the point between two buttons, as 图 21 shows.

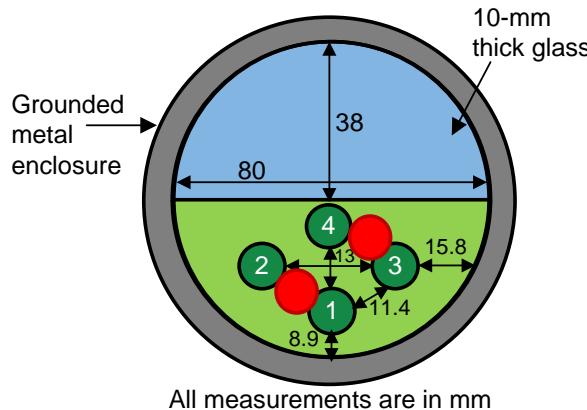


图 21. .False Touch Example

表 10 shows the results of the false touch test:

表 10. False Touch—SNR

AIR GAP (mm)	SNR (dB)				
	B1-B2	B2-B4	B4-B3	B3-B1	B3-B2
0	20–24	25–23	22–25	18–21	16–17
1	8–13	14–9	12–13	7–13	9–13
2	8–8	7–6	9–6	11–11	10–12

In the false touch example, the measured SNR on button 1 and button 2 is 8 dB and 13 dB, respectively, when measuring with a 1-mm air gap. These values show that the SNR of button 1 and button 2 is lower during a false-touch event in comparison to the values in 表 6 during a normal button touch event. The minimum SNR difference between a false and true event is 7 dB. This difference is enough to set a proper threshold to exclude the false touch event from the true event. Another way to address false touch events is to exclude them from the true events when the SNR of the two buttons is simultaneously high.

The same false touch test has been performed while wearing the firefighter glove, for which 表 11 shows the results.

表 11. False Touch With Gloves—SNR

AIR GAP (mm)	SNR (dB)				
	B1–B2	B2–B4	B4–B3	B3–B1	B3–B2
0	11–11	13–8	9–9	10–12	8–12
1	0–5	0–7	7–3	5–7	2–0
2	0–0	5–4	5–1	0–3	0–5

## 9 Design Files

### 9.1 Schematics

To download the schematics, see the design files at [TIDA-00464](#).


### 9.2 Bill of Materials

To download the bill of materials (BOM), see the design files at [TIDA-00464](#).

### 9.3 Layout Guidelines

#### 9.3.1 PCB Layout Recommendations

The use of a hatched ground plane on the bottom side reduces the parasitic capacitance associated with both trace and electrode capacitance, reducing the susceptibility of the traces to capacitive touch events (see [图 22](#)).

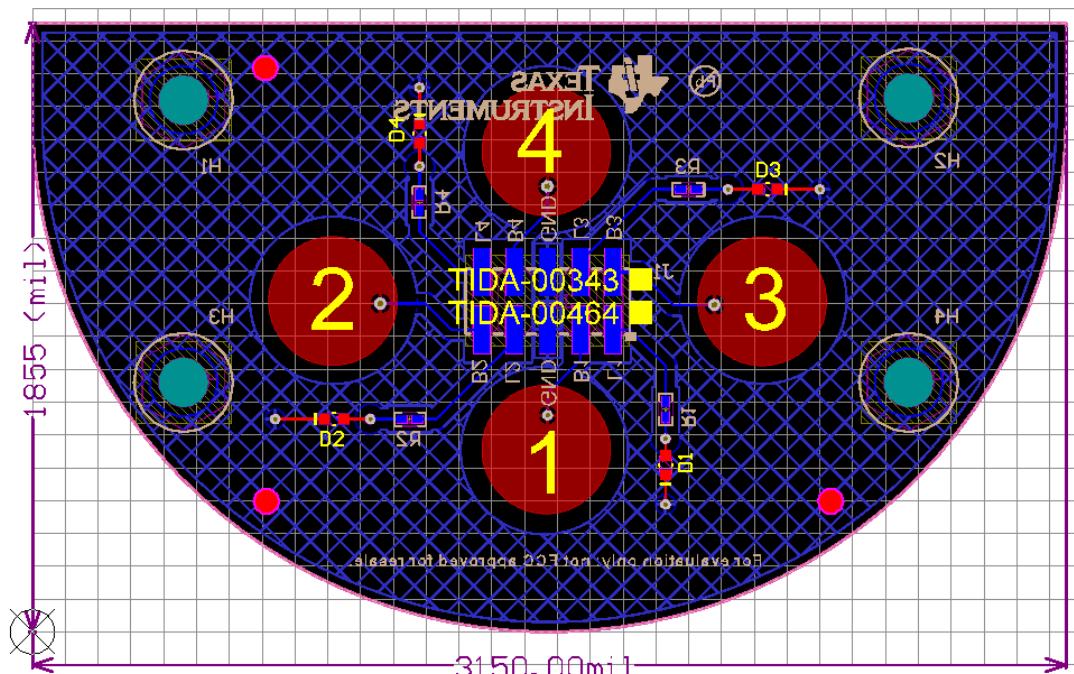

**图 22. TIDA-00464 Layout**

TI recommends to keep the traces as short as possible. Increasing the distance of the trace increases the parasitic capacitance associated with the trace. Increasing the trace length can also increase susceptibility to noise.

### 9.4 Layout Prints

To download the layer plots, see the design files at [TIDA-00464](#).

### 9.5 Altium Project

To download the Altium project files, see the design files at [TIDA-00464](#).

## 9.6 Gerber Files

To download the Gerber files, see the design files at [TIDA-00464](#).

## 9.7 Assembly Drawings

To download the assembly drawings, see the design files at [TIDA-00464](#).

## 10 Software Files

To download the software files, see the design files at [TIDA-00464](#).

## 11 References

1. Texas Instruments, *Noise-immune Capacitive Proximity Sensor System Reference Design*, TIDA-00466 Design Guide ([TIDUAF9](#))
2. Texas Instruments, *FDC2114 and FDC2214 EVM User's Guide*, ([SNOU138](#))

## 12 About the Author

**GIOVANNI CAMPANELLA** is an Industrial Systems Engineer with the Field Transmitter Team in the Factory Automation and Control organization. He earned his bachelor's degree in electronic and telecommunication engineering at the University of Bologna and his master's degree in electronic engineering at the Polytechnic of Turin in Italy. His design experience covers sensors and analog signal chain (with a focus on fluxgate and analytics sensing technologies) and mixed-signal control of DC brushed servo drives

## 有关 TI 设计信息和资源的重要通知

德州仪器 (TI) 公司提供的技术、应用或其他设计建议、服务或信息，包括但不限于与评估模块有关的参考设计和材料（总称“TI 资源”），旨在帮助设计人员开发整合了 TI 产品的应用；如果您（个人，或如果是代表贵公司，则为贵公司）以任何方式下载、访问或使用了任何特定的 TI 资源，即表示贵方同意仅为该等目标，按照本通知的条款进行使用。

TI 所提供的 TI 资源，并未扩大或以其他方式修改 TI 对 TI 产品的公开适用的质保及质保免责声明；也未导致 TI 承担任何额外的义务或责任。TI 有权对其 TI 资源进行纠正、增强、改进和其他修改。

您理解并同意，在设计应用时应自行实施独立的分析、评价和判断，且应全权负责并确保应用的安全性，以及您的应用（包括应用中使用的所有 TI 产品）应符合所有适用的法律法规及其他相关要求。你就您的应用声明，您具备制订和实施下列保障措施所需的一切必要专业知识，能够（1）预见故障的危险后果，（2）监视故障及其后果，以及（3）降低可能导致危险的故障几率并采取适当措施。您同意，在使用或分发包含 TI 产品的任何应用前，您将彻底测试该等应用和该等应用所用 TI 产品的功能。除特定 TI 资源的公开文档中明确列出的测试外，TI 未进行任何其他测试。

您只有在为开发包含该等 TI 资源所列 TI 产品的应用时，才被授权使用、复制和修改任何相关单项 TI 资源。但并未依据禁止反言原则或其他法理授予您任何 TI 知识产权的任何其他明示或默示的许可，也未授予您 TI 或第三方的任何技术或知识产权的许可，该等产权包括但不限于任何专利权、版权、屏蔽作品权或与使用 TI 产品或服务的任何整合、机器制作、流程相关的其他知识产权。涉及或参考了第三方产品或服务的信息不构成使用此类产品或服务的许可或与其相关的保证或认可。使用 TI 资源可能需要您向第三方获得对该等第三方专利或其他知识产权的许可。

TI 资源系“按原样”提供。TI 兹免除对 TI 资源及其使用作出所有其他明确或默认的保证或陈述，包括但不限于对准确性或完整性、产权保证、无屡发故障保证，以及适销性、适合特定用途和不侵犯任何第三方知识产权的任何默认保证。

TI 不负责任何申索，包括但不限于因组合产品所致或与之有关的申索，也不为您辩护或赔偿，即使该等产品组合已列于 TI 资源或其他地方。对因 TI 资源或其使用引起或与之有关的任何实际的、直接的、特殊的、附带的、间接的、惩罚性的、偶发的、从属或惩戒性损害赔偿，不管 TI 是否获悉可能会产生上述损害赔偿，TI 概不负责。

您同意向 TI 及其代表全额赔偿因您不遵守本通知条款和条件而引起的任何损害、费用、损失和/或责任。

本通知适用于 TI 资源。另有其他条款适用于某些类型的材料、TI 产品和服务的使用和采购。这些条款包括但不限于适用于 TI 的半导体产品 (<http://www.ti.com/sc/docs/stdterms.htm>)、评估模块和样品 (<http://www.ti.com/sc/docs/samptersms.htm>) 的标准条款。

邮寄地址：上海市浦东新区世纪大道 1568 号中建大厦 32 楼，邮政编码：200122  
Copyright © 2017 德州仪器半导体技术（上海）有限公司