







BQ79616-Q1, BQ79614-Q1, BQ79612-Q1

ZHCSR27D - AUGUST 2020 - REVISED SEPTEMBER 2022

BQ79616-Q1、BQ79614-Q1、BQ79612-Q1 功能安全合规型汽车类 16/14/12 节串 联电池监测器、平衡器和集成硬件保护器

1 特性

- 符合汽车应用要求
- 具有符合 AEC-Q100 标准的下列特性:
 - 器件温度等级 1: -40°C 至 +125°C 环境工作 温度范围
 - 器件 HBM ESD 分类等级 2
 - 器件 CDM ESD 分类等级 C4B
- 符合功能安全标准
 - 专为功能安全应用开发
 - 可帮助进行 ISO 26262 系统设计的文档
 - 系统可满足 ASIL D 级要求
 - 硬件可满足 ASIL D 要求
- +/- 1.5mV ADC 精度
- 兼容引脚/封装和软件的器件系列:
 - 可堆叠监测器 16S (BQ79616-Q1、BQ79656-Q1)、14S(BQ79614-Q1、BQ79654-Q1)和 12S (BQ79612-Q1, BQ79652-Q1)
 - 独立式监测器 48V 系统 (BQ75614-Q1)
- 用于电压、温度诊断的内置冗余路径
- 可以在 128µs 内对所有电池通道执行高度精确的电 池电压测量
- 集成式后 ADC 可配置数字低通滤波器
- 支持汇流条连接和测量
- 主机控制的内置硬件复位功能,可模拟类似于 POR 的器件复位
- 支持内部电池平衡
 - 240mA 的平衡电流
 - 内置平衡热管理,具有自动暂停和恢复控制功能
- 隔离式差分菊花链通信,采用可选的环形架构
- 通过通信线路传输的嵌入式故障信号和检测信号
- UART/SPI 主机接口/通信桥接器件 BQ79600-Q1
- 内置 SPI 主器件

2 应用

- 混合动力和电动动力总成系统中的电池管理系统
- 带有电池管理系统的储能电池组


3 说明

BQ79612-Q1、BQ79614-Q1 和 BQ79616-Q1 可在不 到 200 μs 的时间内为 HEV/EV 中高压电池管理系统中 的 12S、14S 和 16S 电池模块提供高精度电池电压测 量。该系列监控器在同一封装类型中提供不同的通道选 项,同时提供引脚对引脚兼容性,并支持在任何平台上 高度重复使用既有的软件和硬件。借助集成式前端滤波 器,可以在电池输入通道上使用简单、低额定电压的差 分 RC 滤波器来实施系统。集成式后 ADC 低通滤波器 可以执行经过滤波、类似于直流电的电压测量,以便更 好地计算荷电状态 (SOC)。此器件支持自主内部电池 平衡,并通过监测温度来自动暂停和恢复平衡,以免出 现过热条件。

器件信息

	20)) IO	
器件型号(1)	封装	封装尺寸(标称值)
BQ79612-Q1		
BQ79614-Q1	HTQFP(64 引脚)	10.00mm x 10.00mm
BQ79616-Q1		

如需了解所有可用封装,请参阅数据表末尾的可订购产品附 (1) 录。

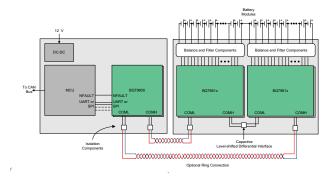

简化版系统图



Table of Contents

1 特性	1	9.4 Device Functional Modes	104
2 应用		9.5 Register Maps	
- <i>—, ·</i> ·· 3 说明		10 Application and Implementation	
4 Revision History		10.1 Application Information	192
5 说明(续)		10.2 Typical Applications	192
6 Device Comparison Table		11 Power Supply Recommendations	204
7 Pin Configuration and Functions		12 Layout	
8 Specifications		12.1 Layout Guidelines	205
8.1 Absolute Maximum Ratings		12.2 Layout Example	208
8.2 ESD Ratings		13 Device and Documentation Support	212
8.3 Recommended Operating Conditions		13.1 Device Support	212
8.4 Thermal Information		13.2 接收文档更新通知	212
8.5 Electrical Characteristics		13.3 支持资源	
8.6 Timing Requirements		13.4 Trademarks	212
8.7 Typical Characteristics		13.5 Electrostatic Discharge Caution	212
9 Detailed Description		13.6 术语表	212
9.1 Overview		14 Mechanical, Packaging, and Orderable	
9.2 Functional Block Diagram		Information	213
9.3 Feature Description			
•			

4 Revision History

注:以前版本的页码可能与当前版本的页码不同

C	nanges from Revision C (June 2021) to Revision D (September 2022)	Page
•	将"受限"更改为"公开"	1
•	Additional supply current when TSREF is enabled	12
•	DVDD output voltage	12
•	NEG5V pin voltage	1 <mark>2</mark>
•	Diagnostic measurements resolution	12
•	Added paragraph to # 9.3.1.2	
•	Changed 380 µ s to 1.35ms in 节 9.3.1.6	26
•	Added Note to 节 9.3.2.1.3.1	<mark>31</mark>
•	Deleted as in the Main ADC path and added Note to 节 9.3.2.2.1.1	33
•	Changed text in 节 9.3.2.3	37
•	Changed latch to load in † 9.3.3.3.3	43
•	Added text to 节 9.3.5	49
•	Changed above to below in 🗵 9-23	<mark>5</mark> 0
•	Changed 9-25 to show response frame start time is after TX_HOLF_OFF expiration time	52
•	Changed Read to Write in 表 9-9	
•	Changed 9-27 to the correct bit-width per byte	56
•	Added t _{prog_otp} = 100ms and During this time no data communications is allowed to step 4 in 表 9-26	
•	Changed BQ79606-Q1 to BQ7961X-Q1 in 节 9.3.6.4	82
•	Deleted Rcb resistor in 🛚 9-56	101
•	Multiple bits in 节 9.5.4.3.11 updated with Bit is self-cleared and added text	130
•	Changed bit setting 11 to Reserved in 节 9.5.4.5.1	
•	Changed bit 6 to Reserved and changed bit 5 to 0 = Dynamic Alignment in † 9.5.4.5.8	137
•	Added sourced from TSREF regulator voltage and Default Reset setting 4% to COOLOFF[2:0] and sourced from TSREF regulator voltage and Default Reset setting 4% to COOLOFF[2:0] and sourced from TSREF regulator voltage and Default Reset setting 4% to COOLOFF[2:0] and sourced from TSREF regulator voltage and Default Reset setting 4% to COOLOFF[2:0] and sourced from TSREF regulator voltage and Default Reset setting 4% to COOLOFF[2:0] and sourced from TSREF regulator voltage and Default Reset setting 4% to COOLOFF[2:0] and sourced from TSREF regulator voltage and Default Reset setting 4% to COOLOFF[2:0] and sourced from TSREF regulator voltage and Default Reset setting 4% to COOLOFF[2:0] and sourced from TSREF regulator voltage and Default Reset setting 4% to COOLOFF[2:0] and sourced from TSREF regulator voltage and Default Reset setting 4% to COOLOFF[2:0] and sourced from TSREF regulator voltage and Default Reset setting 4% to COOLOFF[2:0] and sourced from TSREF regulator voltage and Default Reset setting 4% to COOLOFF[2:0] and sourced from TSREF regulator voltage and Default Reset setting 4% to COOLOFF[2:0] and Sourced from TSREF regulator voltage and Default Reset setting 4% to COOLOFF[2:0] and Sourced from TSREF regulator voltage and Default Reset setting 4% to COOLOFF[2:0] and Sourced from TSREF regulator voltage and Default Reset setting 4% to COOLOFF[2:0] and Sourced from TSREF regulator voltage and Default Reset setting 4% to COOLOFF[2:0] and Sourced from TSREF regulator voltage and Default Reset setting 4% to COOLOFF[2:0] and Sourced from TSREF regulator voltage and Default Reset setting 4% to COOLOFF[2:0] and Sourced from TSREF regulator voltage and Default Reset setting 4% to COOLOFF[2:0] and Sourced from TSREF regulator voltage and Default Reset setting 4% to COOLOFF[2:0] and Sourced from TSREF regulator voltage and Default Reset setting 4% to COOLOFF[2:0] and Sourced from TSREF regulator voltage and Default Reset setting 4% to COOLOFF[2:0] and Sourced from TSREF regulator voltage and Default Reset setting	ırced
	from TSREF regulator voltage and Default Reset setting 24% to OTCB_THR[3:0] in 节 9.5.4.7.5	156
•	Added This bit is self clearing to BAL_TIME_GO in 节 9.5.4.7.8	157



www.ti.com.cn

•	Added sourced from TSREF regulator voltage. and Default Reset setting 80% to UT_THR[2:0]	
	from TSREF regulator voltage. and Default Reset setting 39% to OT_THR[4:0] in 节 9.5.4.8.5	
•	Updated correct register names in 节 9.5.4.13.3	
•	Added Note to UART_MIRROR_EN in 节 9.5.4.14.2	
•	Changed cap value to 2.2 µF and fixed isolator pinout in 🗵 10-1	192
•	Changed content, 图 10-7, 图 10-8, and 图 10-9 in 节 10.2.1.2.7.2	
•	Changed cap values to 2.2 μF in 图 10-11	201
•	Changed 图 12-3	207
CI	hanges from Revision B (April 2021) to Revision C (June 2021)	Page
•	将 BQ79614-Q1 和 BQ79612-Q1 从"产品预发布"更改为"量产数据"	1
CI	hanges from Revision A (December 2020) to Revision B (April 2021)	Page
	Added (2) (3)	11
	Added (2)	
	Added (3)	
	Added MAIN_ADC_CAL1, MAIN_ADC_CAL2 register to # 9.3.2.1.3.1	
•	Changed CUST_CRC_LO reset value from 0x73 to 0xF3 in 节 9.5.1	113
•	Added content to MAIN_MODE[1:0] description in 节 9.5.4.5.7	
	Added content to AUX_MODE[1:0] description in 节 9.5.4.5.9	
•	Changed From: This bit is set if [MSK_COMP] = 1 To: This bit is set if [MSK_COMP] = 0 for	
	FAULT_COMP_ADC = in 节 9.5.4.13.1	169
•	Added content to Common-mode choke and ESD diode (optional) descriptions in 表 10-4	198
•	Changed content for Transformer description and added content to ESD diode (optional) descri	
_	10-5	198
CI	hanges from Revision * (August 2020) to Revision A (December 2020)	Page
•	将"预告信息"更改为"量产数据"	1

ZHCSR27D - AUGUST 2020 - REVISED SEPTEMBER 2022



5 说明(续)

包含的隔离式双向菊花链端口支持通过电容器和变压器进行隔离,并允许使用最有效的组件实现 xEV 动力总成系统中常见的集中式或分布式架构。此器件还包含八个 GPIO 或辅助输入,可执行外部热敏电阻测量。

与 BQ7961x-Q1 系列器件的主机通信可通过以下方式进行连接:器件的专用 UART 接口或通信桥接器件 BQ79600。此外,隔离的差分菊花链通信接口允许主机通过单个接口与整个电池组进行通信。在通信线路中断的情况下,菊花链通信接口可配置为环形架构,允许主机与堆栈两端的设备通信。




6 Device Comparison Table

DEVICE	STATUS	DESCRIPTION
BQ79616-Q1	Production Data	Supports 6S to 16S battery modules
BQ79614-Q1	Production Data	Supports 6S to 14S battery modules
BQ79612-Q1	Production Data	Supports 6S to 12S battery modules



7 Pin Configuration and Functions

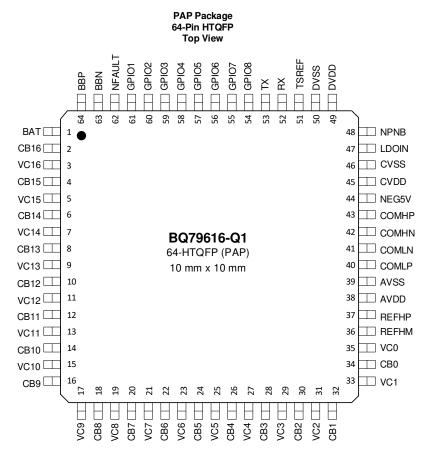



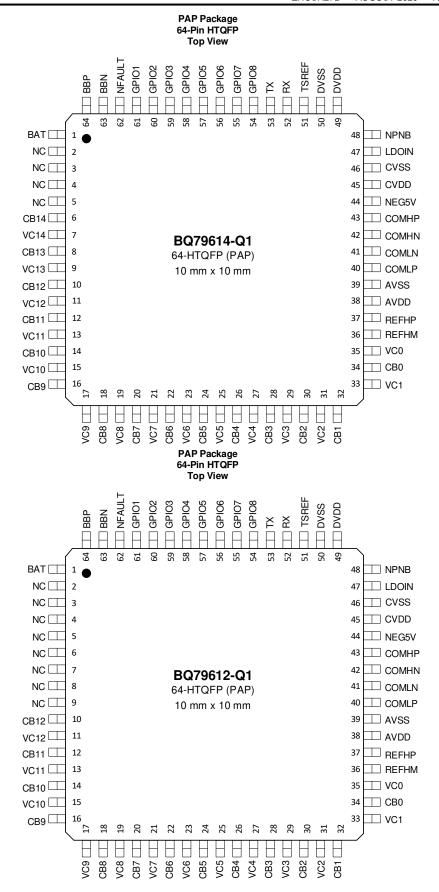




表 7-1. Pin Functions

PIN					₹ 7-1. Pin Functions		
NAME N.		TYPE	DESCRIPTION				
BQ79616	BQ79614	BQ79612	No.				
BAT	BAT	BAT	1	Р	Power supply input and top of module measurement input. Connect to the top cell of the battery module.		
NPNB	NPNB	NPNB	48	Р	Connect to the base of an external NPN transistor.		
LDOIN	LDOIN	LDOIN	47	Р	6-V preregulated analog power supply input/sense pin. Connect to the emitter of the externa NPN transistor and connect a 0.1-µF decoupling capacitor to CVSS.		
AVDD	AVDD	AVDD	38	Р	5-V regulated output. AVDD supplies the internal analog circuits. Bypass AVDD with a capacitor to AVSS.		
AVSS	AVSS	AVSS	39	GND	Analog ground. Ground connection for internal analog circuits. Connect DVSS, CVSS, REFHM, and AVSS externally.		
NEG5V	NEG5V	NEG5V	44	Р	Negative 5-V charge pump used for daisy chain and Main ADC. Connect with a capacitor to CVSS.		
DVDD	DVDD	DVDD	49	Р	1.8-V regulated output. DVDD supplies the internal digital circuits. Bypass DVDD with a capacitor to DVSS.		
DVSS	DVSS	DVSS	50	GND	Digital ground. Ground connection for internal digital logics. Connect DVSS, CVSS, REFHM, and AVSS externally.		
CVDD	CVDD	CVDD	45	Р	5-V daisy chain communication and I/Os power supply. CVDD supplies the stack daisy chain communication transceiver circuit and the I/O pins. This power supply also supports an additional 10-mA external load in ACTIVE and SLEEP.		
CVSS	cvss	CVSS	46	GND	Daisy chain communication ground. Ground connection for internal daisy chain transceivers. Connect DVSS, CVSS, REFHM, and AVSS externally.		
TSREF	TSREF	TSREF	51	Р	5-V bias voltage for NTC thermistor. Connect TSREF to the top of the NTC resistor divider network to the GPIOs when they are configured for NTC temperature monitoring. Bypass TSREF with a capacitor to CVSS.		
REFHP	REFHP	REFHP	37	Р	Precision reference output pin. Bypass with a capacitor to REFHM.		
REFHM	REFHM	REFHM	36	GND	Precision reference ground. Ground connection for the internal precision reference. Connect DVSS, CVSS, REFHM, and AVSS externally.		
VC16	NC	NC	3	I	Cell voltage sense input. Connect to the positive terminal of cell 16. Connect a differential RC filter to VC15. Tie unused NC pins in BQ79614 and BQ79612 to BAT pin as explained in Cell Connections.		
VC15	NC	NC	5	I	Cell voltage sense input. Connect to the positive terminal of cell 15. Connect a differential RC filter to VC14.Tie unused NC pins in BQ79614 and BQ79612 to BAT pin as explained in Cell Connections.		
VC14	VC14	NC	7	I	Cell voltage sense input. Connect to the positive terminal of cell 14. Connect a differential RC filter to VC13.Tie unused NC pins in BQ79612 to BAT pin as explained in Cell Connections.		
VC13	VC13	NC	9	I	Cell voltage sense input. Connect to the positive terminal of cell 13. Connect a differential RC filter to VC12. Tie unused NC pins in BQ79612 to BAT pin as explained in Cell Connections.		
VC12	VC12	VC12	11	I	Cell voltage sense input. Connect to the positive terminal of cell 12. Connect a differential RC filter to VC11.		
VC11	VC11	VC11	13	I	Cell voltage sense input. Connect to the positive terminal of cell 11. Connect a differential RC filter to VC10.		
VC10	VC10	VC10	15	I	Cell voltage sense input. Connect to the positive terminal of cell 10. Connect a differential RC filter to VC9.		
VC9	VC9	VC9	17	I	Cell voltage sense input. Connect to the positive terminal of cell 9. Connect a differential RC filter to VC8.		
VC8	VC8	VC8	19	I	Cell voltage sense input. Connect to the positive terminal of cell 8. Connect a differential RC filter to VC7.		
VC7	VC7	VC7	21	I	Cell voltage sense input. Connect to the positive terminal of cell 7. Connect a differential RC filter to VC6.		
VC6	VC6	VC6	23	-	Cell voltage sense input. Connect to the positive terminal of cell 6. Connect a differential RC filter to VC5.		
VC5	VC5	VC5	25	Ι	Cell voltage sense input. Connect to the positive terminal of cell 5. Connect a differential RC filter to VC4.		
VC4	VC4	VC4	27	I	Cell voltage sense input. Connect to the positive terminal of cell 4. Connect a differential RC filter to VC3.		
VC3	VC3	VC3	29	Ι	Cell voltage sense input. Connect to the positive terminal of cell 3. Connect a differential RC filter to VC2.		



表 7-1. Pin Functions (continued)

PIN		1,41				
	NAME		N1 -	TYPE	DESCRIPTION	
BQ79616	BQ79614	BQ79612	No.			
VC2	VC2	VC2	31	I	Cell voltage sense input. Connect to the positive terminal of cell 2. Connect a differential RC filter to VC1.	
VC1	VC1	VC1	33	I	Cell voltage sense input. Connect to the positive terminal of cell 1. Connect a differential RC filter to VC0.	
VC0	VC0	VC0	35	I	Cell voltage sense input. Connect to the negative terminal of cell 1. Connect a differential RC filter to AVSS.	
CB16	NC	NC	2	I/O	Cell balance connection. This pin is connected to the internal cell balancing FET. Connect this pin to the positive terminal of cell 16 with a differential RC filter to CB15. The filter resistor also sets the internal balance current. Tie unused CB16 pin via RC to BAT pin and tie unused NC pins in BQ79614 and BQ79612 to BAT pin as explained in Cell Connections.	
CB15	NC	NC	4	I/O	Cell balance connection. This pin is connected to the internal cell balancing FET. Connect this pin to the positive terminal of cell 15 with a differential RC filter to CB14. The filter resistor also sets the internal balance current. Tie unused NC pins in BQ79614 and BQ79612 to BAT pin as explained in Cell Connections.	
CB14	CB14	NC	6	I/O	Cell balance connection. This pin is connected to the internal cell balancing FET. Connect this pin to the positive terminal of cell 14 with a differential RC filter to CB13. The filter resistor also sets the internal balance current. Tie unused NC pins in BQ79612 to BAT pin as explained in Cell Connections.	
CB13	CB13	NC	8	I/O	Cell balance connection. This pin is connected to the internal cell balancing FET. Connect this pin to the positive terminal of cell 13 with a differential RC filter to CB12. The filter resistor also sets the internal balance current. Tie unused NC pins in BQ79612 to BAT pin as explained in Cell Connections.	
CB12	CB12	CB12	10	I/O	Cell balance connection. This pin is connected to the internal cell balancing FET. Connect this pin to the positive terminal of cell 12 with a differential RC filter to CB11. The filter resistor also sets the internal balance current.	
CB11	CB11	CB11	12	I/O	Cell balance connection. This pin is connected to the internal cell balancing FET. Connect this pin to the positive terminal of cell 11 with a differential RC filter to CB10. The filter resistor also sets the internal balance current.	
CB10	CB10	CB10	14	I/O	Cell balance connection. This pin is connected to the internal cell balancing FET. Connect this pin to the positive terminal of cell 10 with a differential RC filter to CB9. The filter resistor also sets the internal balance current.	
CB9	CB9	CB9	16	I/O	Cell balance connection. This pin is connected to the internal cell balancing FET. Connect this pin to the positive terminal of cell 9 with a differential RC filter to CB8. The filter resistor also sets the internal balance current.	
CB8	CB8	CB8	18	I/O	Cell balance connection. This pin is connected to the internal cell balancing FET. Connect this pin to the positive terminal of cell 8 with a differential RC filter to CB7. The filter resistor also sets the internal balance current.	
СВ7	СВ7	CB7	20	I/O	Cell balance connection. This pin is connected to the internal cell balancing FET. Connect this pin to the positive terminal of cell 7 with a differential RC filter to CB6. The filter resistor also sets the internal balance current.	
CB6	CB6	CB6	22	I/O	Cell balance connection. This pin is connected to the internal cell balancing FET. Connect this pin to the positive terminal of cell 6 with a differential RC filter to CB5. The filter resistor also sets the internal balance current.	
CB5	CB5	CB5	24	I/O	Cell balance connection. This pin is connected to the internal cell balancing FET. Connect this pin to the positive terminal of cell 5 with a differential RC filter to CB4. The filter resistor also sets the internal balance current.	
CB4	CB4	CB4	26	I/O	Cell balance connection. This pin is connected to the internal cell balancing FET. Connect this pin to the positive terminal of cell 4 with a differential RC filter to CB3. The filter resistor also sets the internal balance current.	
CB3	CB3	CB3	28	I/O	Cell balance connection. This pin is connected to the internal cell balancing FET. Connect this pin to the positive terminal of cell 3 with a differential RC filter to CB2. The filter resistor also sets the internal balance current.	
CB2	CB2	CB2	30	I/O	Cell balance connection. This pin is connected to the internal cell balancing FET. Connect this pin to the positive terminal of cell 2 with a differential RC filter to CB1. The filter resistor also sets the internal balance current.	
CB1	CB1	CB1	32	I/O	Cell balance connection. This pin is connected to the internal cell balancing FET. Connect this pin to the positive terminal of cell 1 with a differential RC filter to CB0. The filter resistor also sets the internal balance current.	
СВ0	CB0	CB0	34	I/O	Cell balance connection. This pin is connected to the internal cell balancing FET. Connect to the negative terminal of cell 1 with differential RC filter to AVSS. The filter resistor also sets the internal balance current.	



表 7-1. Pin Functions (continued)

PIN							
	NAME		No.	TYPE	DESCRIPTION		
BQ79616	BQ79614	BQ79612	NO.				
BBP	BBP	BBP	64	I	Bus bar connection. With BBP and BBN connecting to each end of a bus bar, this channel provides a differential input to the ADC measurement with a 5x gain.		
BBN	BBN	BBN	63	1	Bus bar connection. With BBP and BBN connecting to each end of a bus bar, this channel provides a differential input to the ADC measurement with a 5x gain.		
RX	RX	RX	52	Ι	UART receiver input. Pull up to CVDD with an external resistor and connect the device RX to the TX output of the host MCU. If unused (for example, for stack devices), connect RX to CVDD.		
TX	TX	TX	53	0	UART transmitter output. Connect device TX to RX input of the host MCU and will be pulled up from the host side. If unused (for example, for stack devices), leave it floating.		
СОМНР	СОМНР	COMHP	43	I/O	Vertical bidirectional communication interface for daisy chain connection. High side (north side) differential I/O. Will connect to the low side (south side) COMLP and COMLN of the lower adjacent device in the daisy chain configuration. If unused, connect COMHP and COMHN with a 1k Ω resistor.		
COMHN	COMHN	COMHN	42	I/O			
COMLP	COMLP	COMLP	40	I/O	Vertical bidirectional communication interface for daisy chain connection. Low side (south		
COMLN	COMLN	COMLN	41	I/O	side) differential I/O. Will connect to the high side (north side) COMHP and COMHN of the upper adjacent device in the daisy chain configuration. If unused, connect COMLP and COMLN with a $1k\Omega$ resistor.		
NFAULT	NFAULT	NFAULT	62	0	Fault indication output. Active low. If used on the base device, pull up NFAULT to CVDD with a pullup resistor and connect NFAULT to host MCU GPIO. If unused, leave it unconnected.		
GPIO1	GPIO1	GPIO1	61	I/O	General purpose input/output, configuration options are:		
GPIO2	GPIO2	GPIO2	60	I/O	For external NTC thermistor connection, connect NTC thermistor to the pin and pull up		
GPIO3	GPIO3	GPIO3	59	I/O	to TSREF. Used as input to ADC and OT and UT hardware comparators.		
GPIO4	GPIO4	GPIO4	58	I/O	For external DC voltage measurement, configured as input to ADC.		
GPIO5	GPIO5	GPIO5	57	I/O	Generic digital input/output.		
GPIO6	GPIO6	GPIO6	56	I/O	Use as I/O for SPI master.		
GPIO7	GPIO7	GPIO7	55	I/O			
GPIO8	GPIO8	GPIO8	54	I/O			

8 Specifications

8.1 Absolute Maximum Ratings

over operating free-air temperature range (unless otherwise noted)(1)

		MIN	MAX	UNIT
Input Voltage	BAT, VC* (except VC0), CB* (except CB0), NFAULT, BBP, BBN to AVSS (2) (3)	- 0.3	100	V
	CB0, VC0 to AVSS	- 0.3	5.5	V
	VCn to VCn-1, n = 1 to 16 (2)	- 80	80	V
	CBn to CBn-1, n = 1 to 16 (3)	- 0.3	16	V
	BBP to BBN	- 80	80	V
	LDOIN to AVSS	- 0.3	9	V
	NPNB to AVSS	- 0.3	10	V
	AVDD to AVSS	- 0.3	5.5	V
	DVDD to DVSS	- 0.3	1.98	V
	CVDD to CVSS	- 0.3	6	V
	TSREF to AVSS	- 0.3	5.5	V
	REFHP to REFHM	- 0.3	5.5	V
	NEG5V to AVSS	- 5.5	0	V
	TX, RX to AVSS	- 0.3	6	V
	COMHP, COMHN, COMLP, COMLN to CVSS	- 20	20	V
	COMHP to COMHN, COMLP to COMLN	- 5.5	5.5	V
	GPIO* to AVSS	- 0.3	5.5	V
CB* current	Max of 8 cell in balancing at 75°C ambient		240	mA
I/O current	GPIO*, RX, TX current		10	mA
T _{OTP_PROG}	Device will not start OTP programming above this temperature		55	°C
T _A	Ambient temperature	- 40	130	°C
T _J	Junction temperature	- 40	150	°C
T _{stg}	Storage temperature	- 65	150	°C

⁽¹⁾ Stresses beyond those listed under Absolute Maximum Rating may cause permanent damage to the device. These are stress ratings only, which do not imply functional operation of the device at these or any other conditions beyond those indicated under Recommended Operating Condition. Exposure to absolute-maximum-rated conditions for extended periods may affect device reliability.

8.2 ESD Ratings

				VALUE	UNIT
		Human body model (HBM), per AEC Q100	0-002 ⁽¹⁾	±2000	
V _(ESD)	Electrostatic discharge	Charged device model (CDM), per AEC	All Pins	±500	V
	J	Q100-011	Other pins (1, 16, 17, 32, 33, 48, 49, 64)	±750	

(1) AEC Q100-002 indicates that HBM stressing shall be in accordance with the ANSI/ESDA/JEDEC JS-001 specification.

⁽²⁾ VC pin voltage has to meet criteria of both VCn to AVSS as well as VCn to VCn-1.

⁽³⁾ CB pin voltage has to meet criteria of both CBn to AVSS as well as CBn to CBn-1.



8.3 Recommended Operating Conditions

over operating free-air temperature range (unless otherwise noted)

		MIN	NOM MAX	UNIT
V _{BAT_RANG}	Total module voltage, full functionality, no OTP programming	9	80	V
V _{BAT_OTP_R} ANGE	Total module voltage, full functionality, OTP programming allow	11	80	V
V _{CELL_RAN} GE	$VC_n - VC_{n-1}$, where n = 2 to 16	- 1	5	V
	VC1 - VC0	0	5	V
	VC0, CB0 to AVSS	-0.3	5	V
	VC1, VC2, CB1, CB2 to AVSS	-0.3	80	V
	VCn, CBn to AVSS, where n = 3 to 16	3	80	V
V _{BB_RANGE}	V _{BBP} - V _{BBN}	-600	800	mV
V _{CB_RANGE}	CB _n - CB _{n-1} , where n = 1 to 16	0	5	V
V _{IO_RANGE}	RX, TX, NFAULT	0	CVDD	V
V _{GPIO_RAN} GE	GPIO _n input, where n = 1 to 8	0.2	4.8	V
I _{IO}	GPIO _n , RX, TX, where n = 1 to 8		5	mA
T _A	Operation temperature	- 40	125	°C

8.4 Thermal Information

		BQ7961x-Q1	
	THERMAL METRIC	PAP (HTQFP)	UNIT
		64 PINS	
R _{θ JA}	Junction-to-ambient thermal resistance	21.6	°C/W
R _{θ JC(top)}	Junction-to-case (top) thermal resistance	8.7	°C/W
R _{θ JB}	Junction-to-board thermal resistance	7.9	°C/W
ψ JT	Junction-to-top characterization parameter	0.1	°C/W
ψ JB	Junction-to-board characterization parameter	7.8	°C/W
R _{θ JC(bot)}	Junction-to-case (bottom) thermal resistance	2.1	°C/W

8.5 Electrical Characteristics

	PARAMETER	TEST CONDITIONS	MIN	TYP	MAX	UNIT		
THERMAL SHU	THERMAL SHUTDOWN							
T _{SHUT}	Thermal shutdown (rising direction)		130	137	152	°C		
T _{SHUT_FALL}	Thermal shutdown (falling direction)		112		129	°C		
T _{SHUT_HYS}	Thermal shutdown (rising - falling direction)			20		°C		
T _{WARN_RANGE}	Thermal warning Threshold (rising direction)		85		115	°C		
T _{WARN_HYS}	Thermal warning hysteresis (falling direction)			10		°C		
T _{WARN_ACC}	Thermal warning accuracy (+/-)			5		°C		
SUPPLY CURRE	ENTS				'			
I _{SHDN}	Supply current in SHUTDOWN mode	Sum of both I _{BAT} and I _{LDOIN}		16	23	μA		



	PARAMETER	TEST CONDITIONS	MIN	TYP	MAX	UNIT
I	Baseline supply current in SLEEP mode. No fault, no protector	Sum of both I_{BAT} and I_{LDOIN} T_A = -20°C to 65°C		120	160	μΑ
I _{SLP} (IDLE)	comparator, no cell balancing	Sum of both I_{BAT} and I_{LDOIN} T_A = -40 $^{\circ}\mathrm{C}$ to 125 $^{\circ}\mathrm{C}$			220	μΑ
I _{ACT(IDLE)}	Baseline supply current in ACTIVE mode	Sum of both I _{BAT} and I _{LDOIN} No fault, no communication, no protector comparator, no cell balancing		10.4	11.6	mA
I _{CB_EN}	Additional supply current when cell balancing is on	At least 1 cell balancing FET is on, OT _{CB} is enabled. Other functions are inactive		1	1.5	mA
I _{PROTCOMP}	Additional supply current when protector comparator is on	Either OV/UV/OT/UT protector is enabled. Other functions are inactive		20	60	μΑ
I _{TSREF}		SLEEP Mode, no load on TSREF pin		100		μA
I _{ADC}	Additional supply current when ADC is	One ADC on, and conversion is in progress. Other functions are inactive		0.4	0.6	mA
IADC	enabled	2 ADCs on, and conversion is in progress. Other functions are inactive		0.6	0.9	mA
		ACTIVE Mode		150		μA
I _{BAT}	Supply current goes into BAT pin	SLEEP Mode		25		μA
		SHUTDOWN Mode		5		μΑ
I _{COMT}	Additional supply current during daisy- chain broadcast read of 128-byte data	Use transformer isolation for daisy-chain interface		10		mA
Ісомс	Additional supply current during daisy- chain broadcast read of 128-byte data	Use capacitor or capacitor and choke isolation for daisy-chain interface		10		mA
I _{OW_SINK}	Sink current for open wire test, applies to VC1 to VC16 and CB1 to CB 16		380	500	600	μΑ
I _{OW_SOURCE}	Source current for open wire test, applies to VC0 and CB0		380	500	600	μΑ
I _{LEAK}	Leakage current on VC, CB pins	VC, CB pins with ADC off.			0.1	μΑ
Supplies (LDOI	N)					
V	L DOIN voltage	No OTP programming	5.9	6	6.1	V
V_{LDOIN}	LDOIN voltage	OTP programming	7.9	8	8.1	V
Supplies (CVDI)					
		ACTIVE and SLEEP mode	4.9	5	5.1	V
V_{CVDD}	CVDD output voltage	SHUTDOWN mode, no external lload	3.95		6	V
0.00		SHUTDOWN mode, max external lload = 5mA	3.4		5.5	V
V_{CVDD_LDRG}	CVDD load regulation	ACTIVE/SLEEP mode, max external lload = 10mA	- 30		30	mV
V _{CVDD_OV}	CVDD OV threshold	ACTIVE/SLEEP mode, max external lload = 10mA	5.3	5.5	5.7	V
V _{CVDD_OVHYS}	CVDD OV Hystersis	ACTIVE/SLEEP mode, max external lload = 10mA	130	150	170	mV
		SHUTDOWN mode		3.5		V
V _{CVDD_UV}	CVDD UV threshold	ACTIVE/SLEEP mode, max external lload = 10mA	4.3	4.45	4.65	V
V _{CVDD_UVHYS}	CVDD UV Hystersis			260		mV

	PARAMETER	TEST CONDITIONS	MIN	TYP	MAX	UNIT
V _{AVDD}	AVDD output voltage	C _{SUPPLIES} = 1µF, ACTIVE mode	4.85	5	5.21	V
V _{AVDD_OV}	AVDD OV threshold	C _{SUPPLIES} = 1µF, ACTIVE mode	5.25	5.5	5.7	V
V _{AVDD_OVHYS}	AVDD OV Hystersis	C _{SUPPLIES} = 1µF, ACTIVE mode	135	155	165	mV
V _{AVDD_UV}	AVDD UV threshold	C _{SUPPLIES} = 1µF, ACTIVE mode	4.25	4.45	4.6	V
V _{AVDD_UVHYS}	AVDD UV Hystersis	C _{SUPPLIES} = 1µF, ACTIVE mode	235	340	430	mV
V _{AVDD} ILIMIT	AVDD current limit	C _{SUPPLIES} = 1µF	10	30	50	mA
Supplies (DVDD)						
V_{DVDD}		C _{SUPPLIES} = 1µF, ACTIVE mode	1.72	1.8	1.88	V
V_{DVDD_OV}	DVDD OV threshold	C _{SUPPLIES} = 1µF, ACTIVE mode	1.95	2.1	2.3	V
V _{DVDD_OVHYS}	DVDD OV Hystersis	C _{SUPPLIES} = 1µF, ACTIVE mode	40	65	120	mV
V _{DVDD_UV}	DVDD UV threshold	C _{SUPPLIES} = 1µF, ACTIVE mode	1.623	1.65	1.71	V
V _{DVDD_UVHYS}	DVDD UV Hystersis	C _{SUPPLIES} = 1µF, ACTIVE mode	15	50	73	mV
V _{DVDD_ILIMIT}	DVDD current limit	33.12.23	13	30	53	mA
Supplies (TSREF))					
V _{TSREF}	TSREF output voltage	C _{SUPPLIES} = 1µF, ACTIVE mode	4.975	5	5.025	V
V _{TSREF_LDRG}	TSREF load regulation	I _{load} = 4mA, C _{SUPPLIES} = 1μF, ACTIVE mode	- 30		30	mV
V _{TSREF_OV}	TSREF OV threshold	I _{load} = 4mA, C _{SUPPLIES} = 1μF, ACTIVE mode	5.2	5.6	5.8	V
V _{TSREF_OVHYS}	TSREF OV Hystersis	I _{load} = 4mA, C _{SUPPLIES} = 1μF, ACTIVE mode	98	110	120	mV
V _{TSREF_UV}	TSREF UV threshold	I _{load} = 4mA, C _{SUPPLIES} = 1μF, ACTIVE mode	4.0	4.2	4.4	V
V _{TSREF_UVHYS}	TSREF UV Hystersis	I _{load} = 4mA, C _{SUPPLIES} = 1μF, ACTIVE mode	300	350	400	mV
V _{TSREF_ILIMIT}	TSREF current limit	Device in ACTIVE Mode	15	30	52	mA
Negative Charge	Pump (NEG5V)					
V _{NEG5V}		C _{NEG5V} = 0.1μF	-5.0	-4.6	-4.5	V
V _{NEG5V_UV}	NEG5V UV threshold (rising)	C _{NEG5V} = 0.1µF	-4.1	-3.5	-3.0	V
V _{NEG5V_UVRECOV}	NEG5V UV Recovery	$C_{NEG5V} = 0.1 \mu F$	-4.3	-3.8	-3.3	V
CELL BALANCE					'	
R _{DSON}	Internal cell balance FET Rdson	VCn > 2.8V, where n = 1 to 16; -40°C <t<sub>A<125°C</t<sub>	1.45		4.6	Ω
V _{CB_DONE}	VCB_DONE detection threhsold setting range (not accuracy)	Step of 25mV	2.45		4	V
V _{MB_DONE}	VMB_DONE detection threhsold setting range (not accuracy)	Step of 1V	18		65	V
T _{OTCB}	OTCB threshold setting range (not accuracy)	Step of 2%	10		24	%
T _{COOLOFF}	COOLOFF threshold setting range (not accuracy)	Step of 2%	4		14	%
T _{CB_WARN}	CB TWARN threshold			105		°C
T _{CB WARN HYS}	CB TWARN Hysteresis			10		°C
ADC Resolution						
ENOB _{MAIN}	Main ADC Effective number of bits			16		bits
ENOB _{AUX}	AUX ADC Effective number of bits			14		bits



	PARAMETER	TEST CONDITIONS	MIN	TYP	MAX	UNIT
V _{LSB_ADC}	Main and AUX ADC Resolution for VCELL measurement		1	90.73		μV/LSB
V _{LSB_BB}	Main and AUX ADC Resolution for (BBP-BBN) measurement			30.52		μV/LSB
V _{LSB_MAIN_DIETEMP}	DieTemp1 resolution (Main ADC)	ADC measurement is centered with 0x000 = 0°C		0.025		°C/LSB
V _{LSB_AUX_DIETEMP2}	DieTemp2 resolution (AUX ADC)	ADC measurement is centered with 0x000 = 0°C		0.025		°C/LSB
V _{LSB_AUX_BAT}	BAT resolution (AUX ADC)	Applies to BAT voltage measurement from AUX ADC		3.05		mV/LSB
V _{LSB_GPIO}	GPIO resolution (Main & AUX ADC)		1	52.59		μV/LSB
V _{LSB_TSREF}	TSREF resolution (Main ADC)		1	69.54		μV/LSB
V _{LSB_DIAG}	Diagnostic measurements resolution	REFL, VBG2, LPBG5, VCM, AVAO_REF, AVDD_REF, HW protector DAC	1	52.59		μV/LSB
V _{LSB_DIAG}		OV_DAC, UV_DAC, VCBDONE_DAC	1	90.73		μV/LSB
ADC Accuracy						
. VCn to VCn	VCn to VCn-1 input current	T _A = -20°C to 65°C			1.8	μΑ
I _{VC_DELTA}	delta (when Main ADC is on)	T _A = -40°C to 105°C			2	μΑ
I _{VC}	VCn input current (when Main ADC is on)			8	12	μA
R _{CB_INPUT}	CB pin input impedance (when AUX ADC is on)			16		МΩ
	Total channel accuracy for main ADC VCELL measurement, LPF_VCELL[2:0] = 0x03 setting;	2V <v<sub>CELL<4.5V; T_A=25°C</v<sub>	-2.2		1.5	mV
		2V <v<sub>CELL<4.5V; -20°C<t<sub>A<65°C</t<sub></v<sub>	-3.0		2.4	mV
V _{ACC_MAIN_CELL}		2V <v<sub>CELL<4.5V; -40°C<t<sub>A<105°C</t<sub></v<sub>	-3.5		2.6	mV
VACC_MAIN_CELL		2V <v<sub>CELL<4.5V; -40°C<t<sub>A<125°C</t<sub></v<sub>	-3.5		2.6	mV
		1V <v<sub>CELL< 5V; -40°C<t<sub>A<125°C</t<sub></v<sub>	-3.7		2.8	mV
		-2V <v<sub>CELL< 5V; -40°C<t<sub>A<125°C</t<sub></v<sub>	-4.5		3.2	mV
		2V <v<sub>CELL<4.5V; T_A=25°C</v<sub>	-7.5		5.4	mV
		2V <v<sub>CELL<4.5V; -20°C<t<sub>A<65°C</t<sub></v<sub>	-8.0		6.3	mV
V	Total channel accuracy for AUX ADC measurement (excluding BAT and	2V <v<sub>CELL<4.5V; -40°C<t<sub>A<105°C</t<sub></v<sub>	-9.0		6.3	mV
V _{ACC_AUX_CELL}	GPIO accuracy);	2V <v<sub>CELL<4.5V; -40°C<t<sub>A<125°C</t<sub></v<sub>	-9.0		6.5	mV
		1V <v<sub>CELL< 5V; -40°C<t<sub>A<125°C</t<sub></v<sub>	-9.0		6.6	mV
		0V <v<sub>CELL< 5V; -40°C<t<sub>A<125°C</t<sub></v<sub>	-9.0		6.6	mV
V _(MAIN-AUX)		2V <v<sub>CELL<4.5V; T_A=25°C</v<sub>	-7.1		6.1	mV
	Main - AUX measurement during	2V <v<sub>CELL<4.5V; -20°C<t<sub>A<65°C</t<sub></v<sub>	-7.8		6.6	mV
	VCELL and OVDAC Reference	2V <v<sub>CELL<4.5V; -40°C<t<sub>A<105°C</t<sub></v<sub>	-7.8		6.6	mV
	diagnostic. Same input voltage to both ADC under same T _A ;	2V <v<sub>CELL<4.5V; -40°C<t<sub>A<125°C</t<sub></v<sub>	-7.8		6.7	mV
	Abo under same 1 _A ,	1V <v<sub>CELL< 5V; -40°C<t<sub>A<125°C</t<sub></v<sub>	-7.9		6.9	mV
		0V <v<sub>CELL< 5V; -40°C<t<sub>A<125°C</t<sub></v<sub>	-7.9		6.9	mV
	Magazirad CDIO frame Mair ADO/	0.08V <v<sub>IN<0.2V, 85°C<t<sub>A<125°C</t<sub></v<sub>	-0.20		0.20	%
VACC_MAIN_GPIO_RA	Measured GPIO from Main ADC/ measured TSREF from Main ADC;	0.2V <v<sub>IN<4.6V, -40°C<t<sub>A<105°C</t<sub></v<sub>	-0.20		0.20	%
HO	land the second	4.6V <v<sub>IN<4.8V, -40°C<t<sub>A<-20°C</t<sub></v<sub>	-0.30		0.30	%



	PARAMETER	TEST CONDITIONS	MIN	TYP	MAX	UNIT
,	L ODIO (0.08V <v<sub>IN<0.2V, 85°C<t<sub>A<125°C</t<sub></v<sub>	-0.20		0.20	%
VACC_AUX_GPIO_RA	Measured GPIO from AUX ADC/ measured TSREF from AUX ADC;	0.2V <v<sub>IN<4.6V, -40°C<t<sub>A<105°C</t<sub></v<sub>	-0.20		0.20	%
ΓΙΟ	measured Toker Holl Adx Abo,	4.6V <v<sub>IN<4.8V, -40°C<t<sub>A<-20°C</t<sub></v<sub>	-0.30		0.30	%
		0.08V <v<sub>IN<0.2V, 85°C<t<sub>A<125°C</t<sub></v<sub>	-4.00		4.00	mV
VACC_MAIN_GPIO_AB	Total channel accuracy for GPIO measurement (Main ADC);	0.2V <v<sub>IN<4.6V, -40°C<t<sub>A<105°C</t<sub></v<sub>	-5.00		3.00	mV
5	measurement (Main ADC),	4.6V <v<sub>IN<4.8V, -40°C<t<sub>A<-20°C</t<sub></v<sub>	-4.00		4.00	mV
		0.08V <v<sub>IN<0.2V, 85°C<t<sub>A<125°C</t<sub></v<sub>	-6.00		6.00	mV
V _{ACC_AUX_GPIO_AB}	Accuracy from AUX ADC on GPIO	0.2V <v<sub>IN<4.6V, -40°C<t<sub>A<105°C</t<sub></v<sub>	-6.00		6.00	mV
3	,	4.6V <v<sub>IN<4.8V, -40°C<t<sub>A<-20°C</t<sub></v<sub>	-6.00		6.00	mV
V _{ACC_MAIN_BB}	Total channel accuracy for (BBP-BBN) from Main ADC	LPF_BB[2:0] = 0x00	-1.1		1.1	mV
V _{ACC_AUX_BB}	Total channel accuracy for (BBP-BBN) from AUXADC		-4		4	mV
V _{ACC_AUX_BAT}	AUX ADC measurement accuracy for BAT pin	Vbat pack range: 32V to 72V, T _A = -40°C to 125°C	-225		135	mV
V _{ACC_AUX_REFL}	AUX ADC measurement result		1.092	1.1	1.106	V
V _{ACC_AUX_VBG2}	AUX ADC measurement result		1.092	1.1	1.106	V
V _{ACC_AUX_VCM}	AUX ADC measurement result		2.400	2.5	2.550	V
VACC_AUX_AVAO_RE	AUX ADC measurement result		2.400	2.47	2.550	V
ACC_AUX_AVDD_RE	AUX ADC measurement result		2.400	2.47	2.550	V
ACC_AUX_OVDAC	AUX ADC measurement result	Setting at 4.475V; T _A = -20°C to 65°C	4.450		4.500	V
V _{ACC_AUX_OVDAC}	AUX ADC measurement result	Setting at 4.475V; T _A = -40°C to 105°C	4.445		4.500	V
V _{ACC_AUX_OVDAC}	AUX ADC measurement result	Setting at 4.475V; T _A = -40°C to 125°C	4.445		4.500	V
VACC_AUX_OVDAC	AUX ADC measurement result	Setting at 3.8V	3.770		3.825	V
VACC_AUX_OVDAC	AUX ADC measurement result	Setting at 3V	2.970		3.030	V
V _{ACC_AUX_UVDAC}	AUX ADC measurement result	Setting at 3.1V	3.095	3.1	3.150	V
VACC_AUX_VCBDONE	AUX ADC measurement result	Setting at 4V	3.950	4	4.050	V
ACC_AUX_OTDAC	AUX ADC measurement result	Setting at 39%	1.900	1.95	2.000	V
V _{ACC_AUX_UTDAC}	AUX ADC measurement result	Setting at 80%	3.950	4	4.050	V
V _{ACC_MAIN_TSREF}	Main ADC measurement result		4.975	5	5.025	V
ACC_MAINDIETEM	Total channel accuracy for Die Temp1 measurement (+/-)			3		$^{\circ}\!\mathbb{C}$
ACC_AUX_DIETEMP	Total channel accuracy for Die Temp2 measurement (+/-)			6		$^{\circ}$ C
Reference Voltage	es					
/ _{REFH}	REFHP to REFHM voltage		4.975	5	5.025	V
HW Voltage Comp	arator/Protector (CELL OV/UV)					
	0.4	Step of 25mV	2700		3000	mV
	OV comparator detection threshold setting range (not accuracy)	Step of 25mV	3600		3800	mV
		Step of 25mV	4175		4500	mV
Vov_comp_hys	OV comparator hysteresis after detection			50		mV
,	OV comparets	T _A = -20°C to 65°C	-24		24	mV
VOV_COMP_ACC	OV comparator accuracy	T _A = -40°C to 105°C	-28		28	mV



over operating -40°C to 125°C free-air temperature range, VBAT = 9V to 80V (unless otherwise noted)

	PARAMETER	TEST CONDITIONS	MIN	TYP	MAX	UNIT
V _{UV_COMP_RANGE}	UV comparator detection threshold setting range (not accuracy)	Step of 50mV	1200		3100	mV
V _{UV_COMP_HYS}	UV comparator hysteresis after detection			50		mV
V	UV comparator accuracy	T _A = -20°C to 65°C	-35		35	mV
$V_{UV_COMP_ACC}$	OV comparator accuracy	T _A = -40°C to 105°C	-50		50	mV
HW Temperature	Comparator/Protector (NTC OT/UT)					
V _{OT_COMP_RANGE}	OT comparator detection threshold setting range (not accuracy)	Step of 1%, ratiometric with respect to TSREF	10		39	%
V _{OT_COMP_HYS}	OT comparator hysteresis after detection			2		%
V _{OT_COMP_ACC}	OT comparator accuracy		-0.5		0.5	%
V _{UT_COMP_RANGE}	UT comparator detection threshold range	Step of 2%, ratiometric with respect to TSREF	66		80	%
V _{UT_COMP_HYS}	UT comparator hysteresis after detection			2		%
V _{UT_COMP_ACC}	UT comparator accuracy		-0.5		0.5	%
Digital I/Os (TX, F	XX, GPIO, SPI master)					
V _{OH}	Output as logic level high (TX, GPIO as output)	GPIO is configured as output. I _{OUT} = 1mA	V _{CVDD} -0			V
V _{OL}	Output as logic level low (TX, NFAULT, GPIO as output)	GPIO is configured as output. I _{OUT} = 1mA			0.3	V
V _{IH}	Input as logic level high (RX, GPIO as fault input)	GPIO is configured as input. I _{OUT} = 1mA	0.75 x V _{CVDD}			V
V _{IL}	Input as logic level low (RX, GPIO as fault input)	GPIO is configured as input. I _{OUT} = 1mA			0.25 x V _{CVDD}	V
R _{WK_PU}	GPIO weak pull-up resistance		20	37	60	ΚΩ
R _{WK_PD}	GPIO weak pull-down resistance		20	40	60	ΚΩ
COML and COMP					'	
R _{DCTX}	Transmitter output impedance (COML and COMH)			18		Ω
R _{DCCM}	Common mode impedance (COML and COMH)			45		kΩ
V _{DCCM}	Common mode voltage (COML and COMH)		2.21	2.5	2.76	V
V _{COMM_DATA1}	Receiver threshold range (V _{COMP} -V _{COML}) form communication	CODE:0	0.4		1.2	V
V _{COMM_TONE1}	Receiver threshold range (V _{COMP} -V _{COML}) form Tone	CODE:0	0.4		1.2	V

8.6 Timing Requirements

PARAMETER	TEST CONDITIONS	MIN	NOM	MAX	UNIT		
POWER STATE TIMING							



	PARAMETER	TEST CONDITIONS	MIN	NOM	MAX	UNIT
tauaure e	Startup from SHUTDOWN to ACTIVE	Base device: From the end of WAKE ping to the start of a forwading WAKE tone		6	10	ms
^t su(wake_shut)	mode	Stack device: From the end of a recevied WAKE tone to the start of a forwading WAKE tone		6	10	ms
t	Startup from SLEEP to ACTIVE mode	Base device: From the end of SLEEP2ACTIVE ping to the start of the forwarding SLEEP2ACTIVE tone			230	μs
^t SU(SLP2ACT)	(with SLEEP2ACTIVE ping/tone)	Stack device: From the end of SLEEP2ACTIVE tone to the start of the forwarding SLEEP2ACTIVE tone			230	μs
Tarrante ar ar	Startup from SLEEP to ACTIVE mode	Base device: From the end of WAKE ping to the start of a forwading WAKE tone			1	ms
'SU(WAKE_SLP)	(with WAKE ping/tone)	Stack device: From the end of a recevied WAKE tone to the start of a forwading WAKE tone			1	ms
t _{SLP}	From ACTIVE to SLEEP mode	From receiving SLEEP entry condition to enter in SLEEP mode			100	μs
t _{SHTDN}	From ACTIVE to SHUTDOWN mode	From receiving SHUTDOWN entry condition to enter in SHUTDOWN mode (all LDOs in 10% of their norminal value)		20		ms
t _{RST}	Reset time during ACTIVE mode	CONTROL1[SOFT_RST] = 1 is sent to a completion of the digital reset			1	ms
t _{HWRST}	The time device will be in HW reset, after HW reset ping/tone issued				75	ms
SUPPLIES TIMIN	IG				'	
t _{TSREF_ON}	TSREF ramp up time (10%-90%)	C _{TSREF} = 1µF	6			ms
t _{TSREF_OFF}	TSREF ramp down time (90%-10%)	C _{TSREF} = 1µF			8	ms
PING SIGNAL TI	MING					
t _{HLD_WAKE}	WAKE ping low time on RX pin; no external load on CVDD		2		2.5	ms
t _{HLD_SD}	SHUTDOWN ping low time on RX pin; no external load on CVDD		7		10	ms
t _{UART(StA)}	SLEEPtoACTIVE ping low time on RX pin		250		300	μs
t _{HLD_HWRST}	HW_RESET ping low time on RX pin		36			ms
COML and COM	H (PULSE and TONE TIMING)				'	
t _{PW_DC}	COMM: Pulse width of data (half bit time) for communiction			250		ns
t _{RECLK_DC}	COMM: data reclocking delay per device from COMH to COML or viceversa			4	5	μs
t _{COMTONE}	Time between pulses of comm tones (HFO based). Comm Tones are WAKE, SLEEPtoACTIVE, SHUTDOWN, HWRST tones			11	15	μs
t _{COMMTONE_HI}	The HIGH time of each comms pulse (HFO base)		0.92	1	1.08	μs
t _{COMMTONE_LO}	The LOW time of each comms pulse (HFO base)		0.92	1	1.08	μs



	PARAMETER	TEST CONDITIONS	MIN	NOM	MAX	UNIT
t _{FLTTONE}	Time between pulses of FAULT Tone (LFO based). Applies to FAULT Tone and HEARTBEAT			11.5		μs
t _{FLTTONE_} HI	The HIGH time of each pulse of the tone couplete			1		μs
t _{FLTTONE_LO}	The LOW time of each pulse of the tone couplete			1		μs
n _{WAKEDET}	Number of pulses to detect as a WAKE tone			60		pulses
n _{WAKE}	Number of pulses to transit for a WAKE tone			90		pulses
n _{SHDNDET}	Number of pulses to detect as a SHUTDOWN tone			180		pulses
n _{SHDN}	Number of pulses to transit for a SHUTDOWN tone			270		pulses
n _{SLPtoACTDET}	Number of pulses to detect as a SLEEPtoACTIVE tone			20		pulses
n _{SLPtoACT}	Number of pulses to transit for a SLEEPtoACTIVE tone			30		pulses
n _{HWRSTDET}	Number of pulses to detect as a HW_RESET tone			540		pulses
n _{HWRST}	Number of pulses to transit for a HW_RESET tone			810		pulses
n _{HBDET}	HEARTBEAT: Number of pulses to detect as a valid tone			20		pulses
n _{HB}	HEARTBEAT: Number of pulses to transit for a tone			30		pulses
t _{HB_PERIOD}	HEARTBEAT: Period between HEARTBEAT Burst (from the beginning of a HEARTBEAT to the beginning of the next HEARTBEAT)		360	400	440	ms
t _{HB_TIMEOUT}	HEARTBEAT: Timeout to considered as not receving HEARTBEAT		0.9	1	1.1	s
t _{HB_FAST}	HEARTBEAT: If HEARTBEAT is received within this time, it is considered receving HEARTBEAT too fast			200		ms
n _{FTONEDET}	FAULT TONE: Number of pulses to detect as a valid tone			60		pulses
n _{FTONE}	FAULT TONE: Number of pulses to transit for a tone			90		pulses
^t FTONE_PERIOD	FAULT TONE: Period between FAULT TONE Burst (from the beginning of a FAULT TONE to the beginning of the next FAULT TONE)			50		ms
t _{FTS_LATENCY}	Fault Tone latency in Stack Device	From time a device receive the tone to the time the same device detects and generate its fault tone		48		μs
t _{FTB_LATENCY}	Fault Tone latency in Base Device	From the time a device receive the tone to the time the same device detects and asserts NFAULT		24		μs




	PARAMETER	TEST CONDITIONS	MIN	NOM	MAX	UNIT
t _{SAR_CONV}	Single conversion time (both Main and AUX ADCs)			8		μs
t _{MAIN_ADC_CYCLE}	Single round robin cycle (Main ADC)			192		μs
t _{AUX_ADC_CYCLE}	Single round robin cycle (AUX ADC)			192		μs
t _{AFE_} SETTLE	Analog front end (Level shifters) settling time whenever device enter ACTIVE mode from SLEEP or SHUTDOWN			4		ms
t _{ADC_ACC}	This includes mux round robin, ADC conversions, and digital filters.		-1.5		1.5	%
BALANCING TIMII	NG					
t _{BAL_ACC}	Balancing timer accuracy		-5		5	%
HW COMPARATO	RS/PROTECTORS TIMING					
t _{OV_CYCLE}	OV round robin cycle			8		ms
t _{UV_CYCLE}	UV round robin cycle			8		ms
t _{OVUV_BIST_CYCLE}	OV and UV BIST cycle		21.8	23	24.2	ms
t _{OT_CYCLE}	OT round robin cycle			4		ms
t _{UT_CYCLE}	UT round robin cycle			4		ms
t _{PWR_BIST_CYCLE}	Time needed for the power supply BIST to complete after the power BIST go command		10.9	11.5	12.1	ms
totut_bist_cycle	OT and UT BIST cycle		19	20	21	ms
t _{HW_COMP_ACC}	OV,UV,OT,UT comparators timing accuracy		-5		5	%
I/O TIMING (TX, R	X, GPIO, NFAULT)					
t _{RISE}	Rise Time	V_{CVDD} > MIN V_{CVDD} , C_{LOAD} = 150pF, GPIO in output mode		12		ns
t _{FALL}	Fall Time (exclude NFAULT)	V _{CVDD} > MIN V _{CVDD} , C _{LOAD} = 150pF, GPIO in output mode		7		ns
t _{FALL_NFAULT}	Fall Time on NFAULT	V_{CVDD} > MIN V_{CVDD} , C_{LOAD} = 150pF, R_{PULLUP} = 10k Ω		100		ns
UART TIMING						
UART _{BAUD}	UART TX/RX Baud Rate			1		Mbps
UART _{ERR_BAUD(RX)}	UART RX baud rate error - requirement on the external host		-1		1	%
UART _{ERR_BAUD(TX)}	UART TX baud rate error		-1.5		1.5	%
t _{UART(CLR)}	UART Clear low time		15		20	bit period
t _{UART(RX_HIGH)}	After COMM CLEAR, wait this time before sending new frame		1			bit period
OTP NVM TIMING					'	
t _{CRC_CUST}	Time to complet a single cycle of CRC check on the customer OTP space			175		μs
t _{CRC_FACT}	Time to complet a single cycle of CRC check on the factory OTP space			1.6		ms
SPI MASTER TIMI	NG					
f _{SCLK}	SCLK frequency		450	500	550	kHz
t _{HIGH} , t _{LOW}	SCLK duty cycle			50		%




over operating -40°C to 125°C free-air temperature range, VBAT = 9V to 80V (unless otherwise noted)

	PARAMETER	TEST CONDITIONS	MIN	NOM	MAX	UNIT
t _{SS(HIGH)}	SS HIGH latency time. Time from register write high to SS pin high			4		μs
t _{SS(LOW)}	SS LOW latency time. Time from register write low to SS pin low			4		μs
t _{SU(MISO)}	MISO input data setup time - requirement for slave device	MISO stable before SCLK transition	100			ns
t _{HD(MISO)}	MISO input dat hold time	MISO stable after SCLK transition		0		ns
OSCILLATOR						
f _{HFO}	High frequency oscillator		31.52	32	32.48	MHz
f _{LFO}	Low frequency oscillator		248.9	262	275.1	kHz

8.7 Typical Characteristics

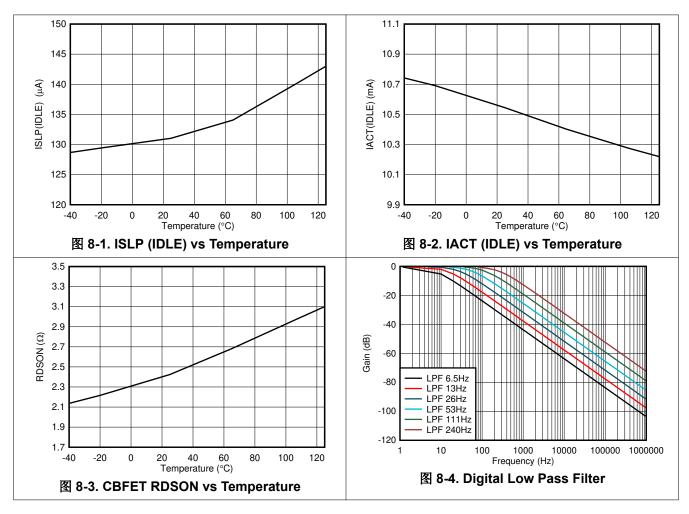



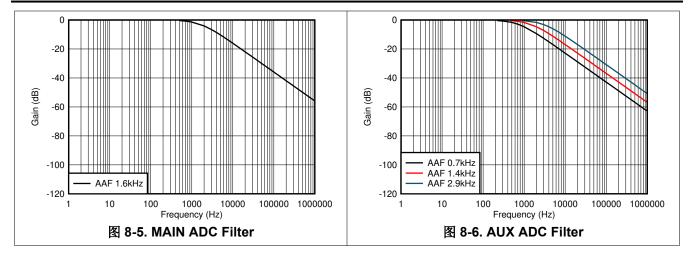



9 Detailed Description

9.1 Overview

The BQ7961x-Q1 device is a stackable battery monitor that measures cell voltages and temperature. The device supports 6 to 16 series-connected (6S to 16S) battery cells. It allows up to 3 bus bar connections and measurements using cell sensing input channels or a dedicated bus bar channel maximizing the device flexibility to support various battery module sizes.

Multiple devices can be connected in a daisy chain. Each device has a pair of high (north) and low (south) vertical differential communication ports, requiring only one twisted pair cable. The device supports either capacitive only, capacitive and choke, or transformer isolation. Communication is reclocked on each daisy-chained device, ensuring communication integrity for long distances. An optional RING connection is supported to reverse the daisy chain communication direction in case of cable failure. Each device includes a SPI master configured through the GPIOs.

The device is ASIL-D compliant on voltage and temperature measurements, and communication. The ADCs in the daisy-chained devices can be configured to align the start of cell voltage measurements and all cell voltages can be measured within 128 $\,\mu$ s. Each cell sensing channel includes with a post-ADC digital low-pass filter (LPF) for noise reduction as well as providing moving average measurement results. The device has 8 GPIOs, all of which are configurable for NTC thermistor connections or use as general purpose I/O. All 8 GPIOs can be measured within 1.6 ms.

The device supports passive balancing through an internal cell balancing MOSFET (CBFET) for each cell. The balancing function runs autonomously without microcontroller (MCU) interaction. It includes an option to pause and then resume balancing based on a programmable threshold detected by the external thermistor or if the die temperature is too high (greater than 105°C). Once balancing starts, the device tracks the balancing time on each cell. MCU can read out the remaining balancing time at any time.

The device includes a hardware OVUV comparator and an OTUT comparator with user configurable thresholds. These can be used as a second-level protector for cell over- and undervoltage and thermistor over- and undertemperature detections independent of ADC measurements.

The device provides an option to embed fault status information to the communication frame. When a device in the daisy chain detects a fault condition, this information is embedded and travels along the communication response frame to the bottom device which can be configured to trigger an NFAULT pin as an interrupt signal to the system. This provides a way to reduce communication overhead without adding an additional twisted pair cable and isolation for faster fault detection.


The device has SLEEP and SHUTDOWN modes for lower power consumption. All functions work in ACTIVE mode, balancing and hardware comparators for OVUV and OTUT also work in SLEEP mode. While in SHUTDOWN, all active functions are turned off. A HW reset function is available and can be activated by the host MCU. The HW reset provides a POR-like event to the device without actual battery removal. This provides a reliable, low cost, and recoverable option to improve overall system robustness.

9.2 Functional Block Diagram

The BQ79616 functional block diagram also applies to BQ79614 and BQ79612 but with fewer VC and CB input channels.

Copyright © 2022 Texas Instruments Incorporated



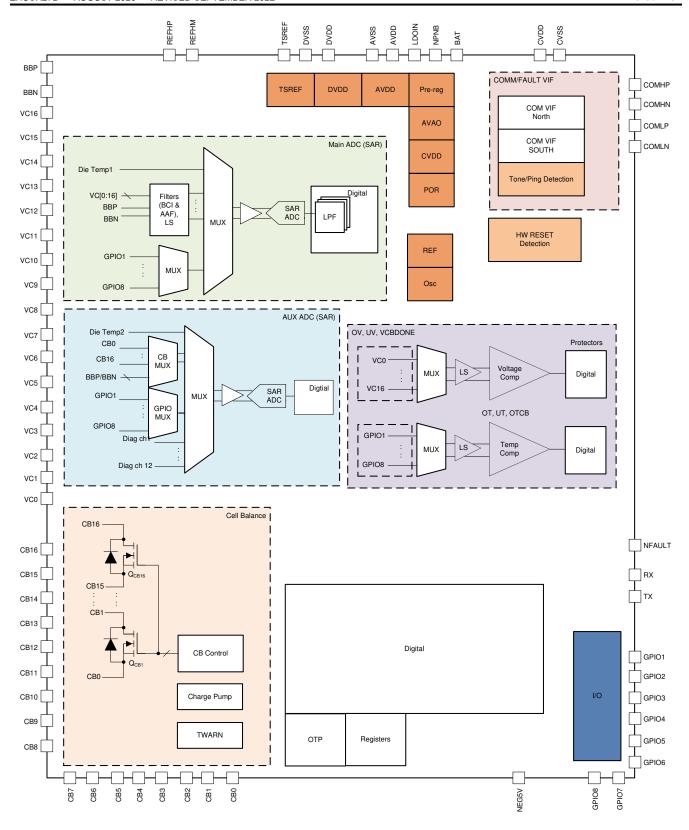



9.3 Feature Description

9.3.1 Power Supplies

The device generates directly from the battery stack all required supplies for its operation. The following subsections provide an overview of each internal supply block. See † 10 for recommended component connection. See † 9.3.6.4 for diagnostic control and fault detection on the power supplies block.

9.3.1.1 AVAO REF and AVDD REF

The AVAO_REF block (analog voltage always on) is powered from the BAT pin. It powers the always-on low-current circuits that are required for all power modes. This block also generates a preregulated reference, AVAO_REF. The AVAO_REF voltage passes through a load switch controlled by the SHUTDOWN mode. The reference voltage after the load switch is AVDD_REF.

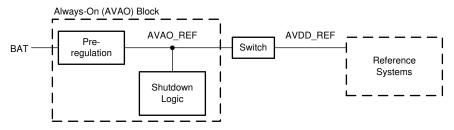


图 9-1. AVAO Block

9.3.1.2 LDOIN

The device is powered from the battery module in which the current draw for each cell is the same. From the top of the battery module, the device generates a 6-V regulated voltage (nominal) on the LDOIN pin through the internal linear regulator and an external NPN transistor.

The NPNB pin controls the external NPN transistor of the regulator and a maximum current of 1.15mA can be drawn from this pin.

The LDOIN output is the preregulated input to the rest of the internal low-dropout regulators (LDOs). During OTP (One-Time Programmable) memory programming, the LDOIN pin will be regulated to 8 V (nominal) to supply the programming voltage internally to the OTP programming. The LDOIN is turned off only during HW reset or a POR event.

9.3.1.3 AVDD

The AVDD LDO is the supply for the analog circuits. It takes the input voltage from LDOIN and generates a nominal 5 V. It will not be used to power any external circuit. This LDO is powered down in SHUTDOWN mode, during HW reset, or a POR event.

9.3.1.4 DVDD

The DVDD LDO is the supply for the digital circuits. It takes the input voltage from LDOIN and generates a nominal 1.8 V. It will not be used to power any external circuit. This LDO is powered down in SHUTDOWN mode, during HW reset, or a POR event.

9.3.1.5 CVDD and NEG5V

The CVDD LDO is the supply for the daisy chain interface (or vertical interface, VIF) and the I/O pins (RX, TX, NFAULT, and GPIOs). It takes the input voltage from LDOIN and generates a nominal 5V. Besides providing power for internal usage, this LDO can support an extra 10mA external load in ACTIVE and SLEEP mode, whereas extra 5mA external load in SHUTDOWN mode.

There is a - 5V charge pump used for the daisy chain interface (or vertical interface, VIF) and Main ADC blocks. The NEG5V pin has a - 4.6V output (nominal). It will be in a low-power burst mode when the device is in SLEEP or SHUTDOWN mode.

9.3.1.6 TSREF

The TSREF is a 5-V buffered reference that can bias the external thermistor circuits, allowing the ADCs to measure temperature and the OTUT protector to detect temperature faults. This reference is measurable by the Main ADC. Both TSREF and GPIO measured by the Main ADC give a ratiometric measurement for best temperature measurement.

The TSREF is capable of supplying up to I_{TSREF_ILMIT} and will not be used to power any external circuit other than the thermistor bias. The TSREF is off by default and can be enabled or disabled through the CONTROL2[TSREF_EN] bit. The startup time of TSREF is determined by the external capacitance. The MCU ensures TSREF is stable before making any GPIO measurement or OTUT protector detection. After enabling TSREF LDO, user shall wait 1.35ms before sending the next command.

9.3.2 Measurement System

There are two SAR ADCs in the device, a 16-bit Main ADC and a 14-bit AUX ADC; both use a precision reference (REFH) for high-accuracy measurement. Each ADC has its own independent control and can be enabled or disabled separately. The Main ADC is the main measurement for cell voltages (VCELL) and temperature through thermistors connecting to the GPIOs. It also provides TSREF and die temperature measurements. The AUX ADC is mainly used during diagnostic procedures such as providing measurements on internal reference voltages or DAC output of the OVUV and OTUT comparators. It serves as a redundancy measurement for cell voltage inputs and thermistor temperature input through the GPIOs.

The subsections below provide an overview of the Main and AUX ADCs measurement paths. See 节 10 for the recommended external component connection. See 节 9.3.6.4 for the diagnostic control function and status of this block.

9.3.2.1 Main ADC

There are total of 24 inputs (slots) multiplexed to the Main ADC (\boxtimes 9-2). All inputs are measured in round robin fashion (\boxtimes 9-3). Each input takes 8 μ s (nominal) to measure and a single round robin cycle completes in 192 μ s (nominal). The inputs to the Main ADC are:

- · Die temperature 1
- TSREF
- Cell1 to Cell16 voltages through differential VC_{n-1} to VC_n , where n = 1 to 16
- Bus bar input through differential BBP BBN pins
- Multiplexed GPIO1 through GPIO8
- Spares (RSVD)

All measurements are reported in 16-bit hexadecimal in 2s complement. Results are reported to the corresponding *_HI (high-byte) and *_LO (low-byte) registers. First, convert the hexadecimal results to decimal values. Follow the equations in $\frac{1}{8}$ 9-1 to translate the result to μ V or °C.

When the Main ADC is enabled, all Main ADC-related result registers shown in 表 9-1 are reset to the default value 0x8000. The measured result is populated to the result registers as the main ADC makes its conversion along the round robin cycle. When MCU reads the *_HI register, the device will pause the data refresh to the associated *_LO register until that *_LO register is read.

表 9-1. Main ADC Measurement Conversion Equations

Main ADC Inputs	Result Registers	Conversion Equations
Die Temperature 1	DIETEMP1_HI/LO	Result in °C = V _{LSB_MAIN_DIETEMP1} * Result in decimal 0x0000h is centered to 0°C.
TSREF	TSREF_HI/LO	Result in µV = V _{LSB_TSREF} * Result in decimal
Cell1 to Cell16	VCELL*_HI/LO, where * = 1 to 16	Result in $\mu V = V_{LSB_ADC} * Result in decimal$
Bus Bar	BUSBAR_HI/LO	Result in $\mu V = V_{LSB_BB} * Result in decimal$
GPIO1 to GPIO8	GPIO*_HI/LO, where * = 1 to 8	Result in $\mu V = V_{LSB_GPIO} * Result in decimal$

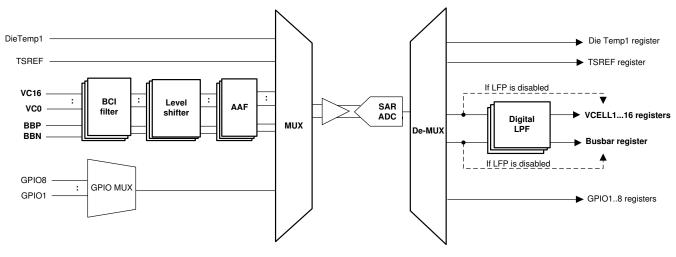


图 9-2. Main ADC Measurement Path

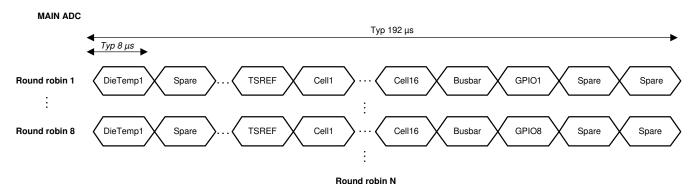


图 9-3. Main ADC Round Robin Measurements

9.3.2.1.1 Cell Voltage Measurements

9.3.2.1.1.1 Analog Front End

The cell voltage measurements of the Main ADC are taken from the VC0 through VC16 pins. The device allows a minimum of 6 cells to a maximum of 16 cells to be measured. The VC0 through VC16 pins are connected to the analog front end which consists of a BCI filter, level shifter, and an anti-aliasing filter (AAF) on each VC input channel. The BCI filter has a cutoff frequency (f_{cutoff}) of 100 kHz and the AAF has f_{cutoff} of 1.6 kHz. This filters out high-frequency noise on the VC input before going to the high-voltage multiplexer and measured by the Main ADC. The level shifter block is turned off to save power in SLEEP and SHUTDOWN modes.


9.3.2.1.1.2 VC Channel Measurements

The VC pins are the input channels for cell voltage measurements from the Main ADC measured in the Cell1 to Cell16 slots of the round robin. The round robin timing is always the same even if fewer than 16 cells are connected to the device (9-4). That is, for the inactive (or unused) VC channel, the device ignores the respective cell slot, but it does not remove the slot from the round robin cycle. This keeps a consistent measurement timing regardless of the cell number configuration. It also provides a consistent sampling time to the post-ADC digital LPF input.

To determine the number of active VCELL channels for ADC measurement, the ACTIVE_CELL[NUM_CELL3:0] parameter sets the highest active channel number. The device assumes any VC channel below the setting is also active. For example, when a 14S is connected to the device, the MCU sets the [NUM_CELL3:0] to 14S, the Main ADC ignores channel 15 and channel 16 measurements and takes measurements on channels 1 through 14.

The measurement results are reported in the corresponding *VCELL*_HI* (high-byte) and *VCELL*_LO* (low-byte) registers, where * = 1 to 16. If the digital LPFs are disabled, the result registers are reported with the single ADC conversion values; otherwise, the result registers are reported with filtered measurement values. For an inactive VC channel, the respective *_HI* and *_LO* registers remain with the default value 0x8000.

MAIN ADC



Inactive slots remain in the round robin, but device does not make the measurement

图 9-4. Same Round Robin Timing for 6S Through 16S

9.3.2.1.1.3 Post-ADC Digital LPF

Each differential VC channel measurement is equipped with a post-ADC LPF. The LPFs have much lower cutoff frequency (f_{cutoff}). There are 7 f_{cutoff} options: 6.5 Hz, 13 Hz, 26 Hz, 53 Hz, 111 Hz, 240 Hz, and 600 Hz, configurable through the $ADC_CONF1[LPF_VCELL2:0]$ setting. Once an f_{cutoff} value is selected and the LPFs are enabled by setting $ADC_CTRL1[LPF_VCELL_EN] = 1$, the same f_{cutoff} setting applies to all VC channel measurements.

The digital LPF is implemented as single-pole filter which responds very similarly as an analog RC circuit. This means the Main ADC will be running in continuous mode for the digital LPFs to produce effective filtered results.

The MCU should take into account the digital filter settling time when there is a step change in the input DC voltage level. Equation below gives a typical estimate of digital filter settling time to hit settling accuracy threshold for a step in VC voltage.

Digital Filter Settling Time \sim [($\{log10 (Settling Accuracy Threshold [mV] / Voltage Step in Input Voltage [mV])} / <math>\{log10(1 - Filter Coefficient)\}) - 1] \times 0.192 ms$

Fcutoff (Hz)	600	240	111	53	26	13	6.5
Filter Coefficient	0.5	0.25	0.125	0.0625	0.03125	0.015625	0.007813

For example: If VC step by 15mV, and user has to accommodate ~27ms settling time to within 1 LSB of input step for 26Hz LPF setting.

When the LPF starts, from disabled to enabled state, it jumps to its first input value and starts the filtering from that point. As compared to starting from 0 V or some mid-level voltage, this implementation allows a fast settling time for Main ADC and LFP is just starting.

9.3.2.1.1.4 BBP and BBN Measurements

The BBP and BBN pins are the inputs for bus bar measurement from the Main ADC. The intent of the BB channel is to enable the system to share a bus bar with a cell to a single VC channel, as the example shows in $\[\] 9-5$. Hence, similar to the VC inputs, the BBP/N inputs also have the BCI, Level-Shifters, and AAF filters in the front end. The differential BB channel measurement also has an option to pass-through a post-ADC digital LPF. With the same f_{cutoff} option as for the VC channel by using different configuration and enable control, $ADC_CONF1[LPF_BB2:0]$ and $ADC_CTRL1[LPF_BB_EN]$.

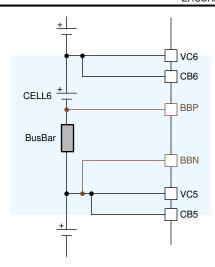


图 9-5. Simplified BBP and BBN Connections

The BB channel measurement is reported in the <code>BUSBAR_HI</code> (high-byte) and <code>BUSBAR_LO</code> (low-byte) registers. If the digital LPF is disabled, the result registers are reported with the single ADC conversion value; otherwise, the result is reported in the filtered measurement value. In <code>Section 9-5</code>, to obtain the actual Cell6 measurement, the MCU takes the difference of (<code>VCELL6_HI/LO</code> measurement - <code>BUSBAR_HI/LO</code> measurement). If the BBP and BBN pins are not used (floating), the <code>BUSBAR_HI/LO</code> register values are meaningless. The MCU will ignore these register values.

9.3.2.1.2 Temperature Measurements

9.3.2.1.2.1 DieTemp1 Measurement

There are 2 die temperature sensors, DieTemp1 and DieTemp2. The DieTemp1 is routed to the Main ADC and it is also used for the Main ADC gain and offset correction internally. The measurement is reported in the DIETEMP1_HI (high-byte) and DIETEMP1_LO (low-byte) registers. The 0°C measurement is centered to hex value 0x0000h, so a positive value represents a positive temperature and a negative value represents a negative temperature. The measurement is also capped off to +200°C and -100°C.

9.3.2.1.2.2 GPIOs and TSREF Measurements

There are eight GPIOs. All GPIO inputs are available to be used for thermistor connections for temperature measurements and be used as a simple, single-ended, voltage input measurement.

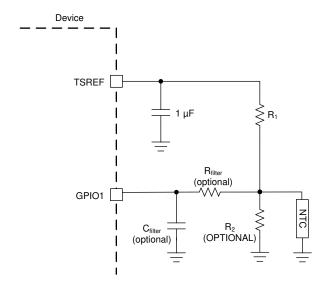


图 9-6. Thermistor Connection



图 9-6 shows the thermistor circuit when GPIO is enabled for thermistor measurements. MCU ensures TSREF is enabled by setting CONTROL2[TSREF_EN] = 1 and settled before taking the measurement value.

The GPIOs are multiplexed to one of the Main ADC MUX inputs. That is, in a single round robin cycle, only one GPIO is measured. To complete all eight GPIO measurements, it takes eight round robin cycles.

To enable the GPIO for ADC measurement, the corresponding $GPIO_CONFn[GPIO^*2:0]$ (where n = 1 to 4, * = 1 to 8 for the corresponding GPIO) register is configured to ADC input or ADC and OTUT input. For example, to enable GPIO1 for ADC measurement only, set $GPIO_CONF1[GPIO12:0]$ to ADC input. See \ddagger 9.3.5 for more details. If a GPIO is not configured for any ADC measurement, the device will ignore the corresponding GPIO slot but does not remove the slot from the round robin cycle. See \blacksquare 9-7 for an example when GPIO2 is configured for non-ADC measurement.

MAIN ADC

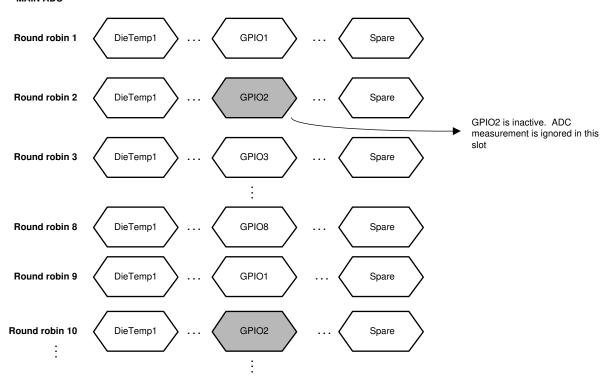


图 9-7. GPIO2 Not Configured for ADC Measurement

The measurements are reported in the corresponding $GPIO^*_HI$ (high-byte) and $GPIO^*_LO$ (low-byte) registers, where * = 1 to 8. The measurement result is in μ V. To achieve better temperature accuracy, the MCU can use a ratiometric measurement by using both TSREF and GPIO measurement with the following formula: (GPIO_ADC/TSREF_ADC) = RNTC/(RNTC + R1), where

- GPIO ADC = ADC measurement on GPIO
- TSREF_ADC = ADC measurement on TSREF
- RNTC = NTC thermistor resistance
- ACTIVE_CELL register: Determine the inactive VC channel(s) and keep the result registers to default value 0x8000.

For an inactive GPIO channel, the respective _HI and _LO registers remain with the default value 0x8000.

9.3.2.1.3 Main ADC Operation Control

9.3.2.1.3.1 Operation Modes and Status

To start the Main ADC, the host MCU sets ADC_CTRL1[MAIN_GO] = 1. When the device receives the GO command, it first samples the following settings to determine Main ADC configuration and then operates the Main ADC accordingly. Any change of the settings below requires the MCU to resend another GO command to implement the new settings.

- ADC_CTRL1[MAIN_MODE1:0]: three run modes. See 表 9-2 for details.
- ADC_CTRL1[LPF_VCELL_EN]: LPF for VC channels. Set to ADC_CONF1[LFP_VCELL2:0] f_{cutoff} if enabled.
- ADC CTRL1[LPF BB EN]: LPF for BB channel. Set to ADC CONF1[LFP BB2:0] fcutoff if enabled.
- ADC_CONF2[ADC_DLY5:0]: Delay the start of the Main ADC. Use to align the ADC start time among the daisy-chained devices.
- ACTIVE_CELL register: Determine the inactive VC channel(s) and keep the result registers to default value 0x8000.
- GPIO_CONF1 to GPIO_CONF4: Determine the inactive GPIO channel(s) and keep the result registers to default value 0x8000.
- MAIN_ADC_CAL1, MAIN_ADC_CAL2, CS_ADC_CAL1, CS_ADC_CAL2, ADC_CTRL1[CS_DR] register

备注

When using the MAIN ADC with the LPF Filter enabled and an ADC reset is desired, it is important that the LPF_VCELL_EN bit, LPF_BB_EN bit and MAIN_GO bit is set to 0 and again set to 1 before running the MAIN ADC again, due to needed re-initialization of the internal LPF buffer. If this procedure is ommitted then an LPF_FAIL status bit can occur on the following MAIN ADC activation.

There are two status bits to indicate the Main ADC status:

- DEV_STAT[MAIN_RUN]: indicates if the Main ADC is running or not.
- ADC_STAT1[DRDY_MAIN_ADC]: set when at least eight round robin cycles have completed indicating all
 active GPIO channels and all other Main ADC inputs have at least one measurement completed.

表 9-2. Summary of Main ADC Run Mod	表 9-2	2. Summary	of Main	ADC Run	Modes
------------------------------------	-------	------------	---------	---------	-------

[MAIN_MODE1:0]	Run Mode	Description
0b00	Stop Main ADC	Stop the Main ADC
0b01	8 RR Run (eight round robin cycles)	Main ADC runs for eight round robin cycles then stops. This gives a single measurement on all cell voltages and all GPIO inputs to the system. Filtered measurements are not effective under run mode. For example, use as a quick burst read when MCU is periodically awake during system idle state.
0b10	Continuous Run	Main ADC runs in continuous mode and stops if [MAIN_MODE1:0] = 0b00 and a GO is sent. For example, must use this mode if LPF is enabled. Also use in diagnostic operation.

The level shifter is enabled for the number of channels specified in the $ACTIVE_CELL[NUM_CELL3:0]$ when device enters ACTIVE mode. MCU shall wait for t_{AFE_SETTLE} time before starting the Main ADC whenever the device enters ACTIVE mode or when $[NUM_CELL3:0]$ setting is changed.

The Main ADC operates in ACTIVE mode only. If the ADC is running while the device goes into SLEEP, the Main ADC will be "frozen" (that is, ADC is stopped but device still remembers the operational state). When the device returns to ACTIVE mode without any digital reset event, the Main ADC will restart and continues from its "pre-frozen" state. In this condition, the cell voltage measurements are off during the t_{AFE_SETTLE} time because input voltage to the ADC is not settled yet. MCU can ignore these measurements or send a new GO command to restart the Main ADC after t_{AFE_SETTLE} .



9.3.2.2 AUX ADC

There are a total of 24 inputs (slots) multiplexed to the AUX ADC (\S 9-8). All inputs are measured in round robin fashion (\S 9-9). Each input takes 8 μ s (nominal) to measure and a single round robin cycle completes in 192 μ s (nominal). The inputs to AUX ADC are:

- Die temperature 2
- Multiplexed differential CB_{n-1} to CB_n (AUXCELL1 to AUXCELL16), where n = 1 to 16 and differential bus bar input through the BBP to BBN pins.
- MISC measurements:
 - BAT pin
 - REFL, internal reference
 - VBG2, internal bandgap
 - VCM, common voltage on Main ADC
 - AVAO_REF, always-on block reference
 - AVDD REF
 - OV DAC from OV protector
 - UV DAC from UV protector
 - VCBDONE DAC from UV protector
 - OT or OTCB DAC from OT protector
 - UT DAC from UT protector
- Multiplexed GPIO1 to GPIO8
- Spares (RSVD)

All measurements are reported in 16-bit hexadecimal in 2s complement. Results are reported to the corresponding *_HI (high-byte) and *_LO (low-byte) registers. It first converts the hexadecimal results to decimal values. Follow the equations in $\frac{1}{8}$ 9-3 to translate the result to μ V or °C.

When the AUX ADC is enabled, all AUX ADC related result registers shown in 表 9-3 are reset to the default value 0x8000. The measured result is populated to the result registers as the AUX ADC makes its conversion along the round robin cycle. When MCU reads the *_HI register, the device will pause the data refresh to the associated * LO register until that * LO register is read.

表 9-3. AUX ADC Measurement Conversion Equations

AUX ADC inputs	Result Registers	Conversion Equations
Die Temperature 2	DIETEMP2_HI/LO	Result in °C = V _{LSB_AUX_DIETEMP2} * Result in decimal Note: 0x0000h is centered to 0°C.
Multiplexed AUXCELL1 to AUXCELL16 and BB channel	AUX_CELL_HI/LO, when CB MUX is locked to a single channel	Result in μV = V _{LSB_ADC} * Result in decimal
BAT	AUX_BAT_HI/LO	Result in $\mu V = V_{LSB_AUX_BAT}$ * Result in decimal
REFL	AUX_REFL_HI/LO	
VBG2	AUX_VBG2_HI/LO	
VCM	AUX_VCM_HI/LO	
AVAO_REF	AUX_AVAO_REF_HI/LO	
AVDD_REF	AUX_AVDD_REF_HI/LO	Popult in 11 // = // * Popult in degimal
OV DAC	AUX_OV_DAC_HI/LO	Result in μV = V _{LSB_AUX_DIAG} * Result in decimal
UV_DAC	AUX_UV_DAC_HI/LO	
VCBDONE DAC	AUX_VCBDONE_DAC_HI/LO	
OT or OTCD DAC	AUX_OT_OTCD_DAC_HI/LO	
UT DAC	AUX_UT_DAC_HI/LO	
Multiplexed GPIO1 to GPIO8	AUX_GPIO_HI/LO	Result in μV = V _{LSB_GPIO} * Result in decimal
	1	



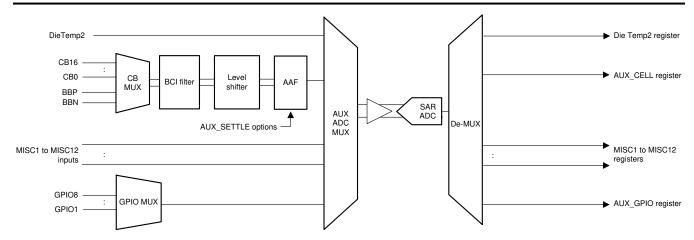


图 9-8. AUX ADC Measurement Path

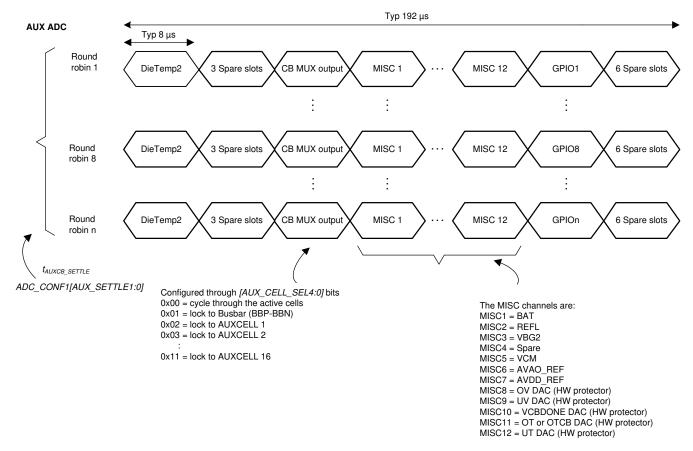


图 9-9. AUX ADC Round Robin Measurements

9.3.2.2.1 AUX Cell Voltage Measurements

9.3.2.2.1.1 AUX Analog Front End

The AUX ADC path serves as a redundancy path to the Main ADC measurement on cell voltage measurements and bus bar measurements. It also has the front end filters of a BCI filter and an AAF filter in the AUX ADC path. The AUXCELL channel and differential BB channel (taken from BBP and BBN pins) in the AUX path are multiplexed (shown as the CB MUX in $\boxed{\$}$ 9-8) to share a single BCI filter and AAF filter. The CB MUX output after the front end filters is then going into one of the AUX ADC MUX and to the AUX ADC for measurement.



Because the front end filters are shared, the device has to wait for the AAF filter to settle before making any valid CB channel (AUXCELL) or BBP and BBN channel measurement. The default AAF f_{cutoff} is 1.64 kHz which translates to additional 4.3ms settling time to complete a single CB or BB channel measurement. The device provides 3 AAF settling time options, 4.3ms (default), 2.3ms, and 1.3ms, configured by the ADC_CONF1[AUX_SETTLE1:0] bits. The BCI filter f_{cutoff} is 100 kHz as in the Main ADC path.

备注

In order to achieve best measurement accuracy through the AUX ADC it is recommended to reset the ADC every time a new CB channel is locked through the AUX_CELL_SEL bits. This will ensure that the common mode error calibration routine is re-run and the measured result is compensated for common mode error.

9.3.2.2.1.2 CB and BB Channel Measurements

One slot, the CB MUX output slot, is assigned in the AUX ADC round robin cycle for the CB channels (differential CB_{n-1} - CB_n , where n = 1 to 16) and BB (differential BBP - BBN)channel measurement because these channels are multiplexed to a single input to the AUX ADC multiplexer. For a single CB or BB channel measurement, it takes multiple round robin cycles because the device has to wait for the AAF settling time as well.

Because of the need to wait for the AAF to settle, the AUX ADC would only measure CB and BB channels that are active and are selected by the MCU; inactive or unselected channels are skipped.

Active CB channels are determined by the ACTIVE_CELL[NUM_CELL3:0] setting. These bits set the highest active channel number. For example, when a 14S is connected to the device, the MCU sets the ACTIVE_CELL[NUM_CELL3:0] to 14S, the device assumes CB channels 1 through 14 are active; CB channels 15 and 16 are inactive and will be skipped by the AUX ADC.


MCU can control which CB and BB channels to be measured through the AUX ADC. The ADC_CTRL2[AUX_CELL_SEL4:0] gives the options to run through all the active CB channel and BB channels or to lock to a single CB channels or lock to the BB channel. 图 9-10 shows the example of how the AUXCELL slot is implemented with different [AUX_CELL_SEL4:0] setting.

It is recommend to run AUX ADC in continuous mode and all AUX ADC to measure through all the active CB channel once. This enables the device to reduce the common mode error in AUX ADC measurement. MCU shall perform this procedure before running ADC comparison related diagnostic or locking to a single CB or BB channel measurement.

There is no post-ADC LPF in the AUX ADC path. When the AUX ADC measurements are used during diagnostics, the AUX CELL (CB channel) measurements are compared against the Main ADC prefiltered measurements. While the device performs VCELL (from Main ADC) to AUX CELL (from AUX ADC) measurement comparison internally, the AUX BB comparison is performed by the host instead. See † 9.3.6.4 for more details.

The device makes the CB or BB channel measurement available to read only when the [AUX_CELL_SEL4:0] bits are set to lock on a single CB (must be active) or BB channel. The measurement is reported in the AUX_CELL_HI (high-byte) and AUX_CELL_LO (low-byte) registers. The result registers will be updated after the AAF settling time is passed. For any other conditions, including lock to an inactive CB channel, the result registers remain with the default value 0x8000.

CB MUX stays at the selected channel for the AUX ADC AAF settling time, but the measurement during this time is discarded

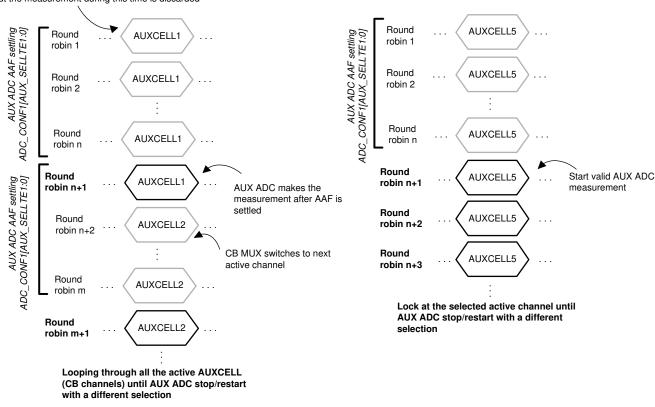

(a) $[AUX_CELL_SEL4:0] = loop through all active CB channels$

(b) [AUX_CELL_SEL4:0] = Lock to CB channel 5 (AUXCELL5)

图 9-10. CB MUX Output Slot with Different [AUX_CELL_SEL4:0] Setting

9.3.2.2.2 AUX Temperature Measurements

9.3.2.2.2.1 DieTemp2 Measurement

There are 2 die temperature sensors, DieTemp1 and DieTemp2. The DieTemp2 is routed to the AUX ADC and is also used for the AUX ADC gain and offset correction internally. The measurement is reported in the *DIETEMP2_HI* (high-byte) and *DIETEMP2_LO* (low-byte) registers. The 0°C measurement is centered to hex value 0x00, so a positive value represents positive temperature and a negative value represents negative temperature. The measurement is also capped off to +200°C and -100°C.

9.3.2.2.2.2 AUX GPIO Measurements


The AUX GPIO path is the same as the main GPIO path. All eight GPIOs are multiplexed to a single AUX ADC MUX input. There is only one GPIO slot in the AUX ADC round robin cycle. That is, in a single AUX ADC round robin cycle, only one GPIO will be measured. To complete all eight GPIO measurements, it takes eight round robin cycles. If GPIO is connected to the thermistor network, the MCU enables TSREF by setting CONTROL2[TSREF_EN] = 1 and ensures TSREF is stable before starting the AUX ADC measurement.

When AUX ADC is enabled, the GPIO slot in the 1st round robin cycle is GPIO1, 2nd round robin cycle is GPIO3, and so on. For the AUX ADC to make a measurement on a GPIO, the GPIO must be configured as ADC input or ADC and OTUT input in the corresponding *GPIO_CONFn[GPIO*2:0]* bits, where n = 1 to 4, * = 1 to 8 for the respective GPIO channel. See † 9.3.5 for more details. If the GPIO is inactive for the ADC measurement, the device ignores the corresponding GPIO slot but does not remove the slot from the AUX ADC round robin cycle.

By default, the AUX ADC loops through all GPIO channels and the measurements do not report out to the result registers. However, if MCU locks to a single GPIO channel, the locked GPIO measurement is reported to the AUX_GPIO*_HI (high-byte) and AUX_GPIO*_LO (low-byte) registers. This channel lock can be set by the



ADC_CTRL3[AUX_GPIO_SEL3:0] bits. The result registers will report a GPIO measurement if [AUX_GPIO_SEL3:0] is locked to single GPIO channel, any other condition will show default value 0x8000.

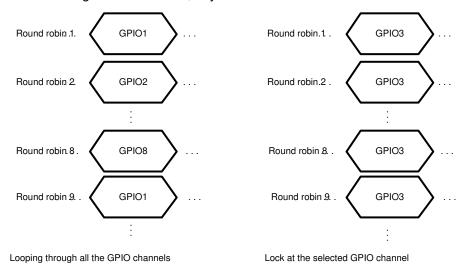

(a) [AUX GPIO SEL3:0] = loop through all GPIO channels

(b) [AUX GPIO SEL3:0] = Lock to GPIO3

图 9-11. GPIO Slot with Different [AUX_GPIO_SEL3:0] Setting

9.3.2.2.3 MISC Measurements

There are 12 MISC measurements listed at the beginning of the AUX ADC section. When the AUX ADC is enabled, these inputs are measured in every round robin cycle. 表 9-3 shows the corresponding result registers.

The DAC inputs of the OVUV and OTUT protectors reflect the real-time DAC values of the device which shows the OVUV and OTUT detection or recovery threshold currently in use in the protectors. It is normal to observe a change of the DAC measurements if there are unused channels or if any cell or GPIO channels detect a fault. See \ddagger 9.3.4 for description of the protector architecture and see \ddagger 9.3.6.4 for the protector DAC measurement configuration.

9.3.2.2.4 AUX ADC Operation Control

To start the AUX ADC, the host MCU sets $ADC_CTRL3[AUX_GO] = 1$. When the device receives the GO command, it first samples the following settings to determine the AUX ADC configuration, then operates the AUX ADC accordingly. Any change to the settings below requires the MCU to send another GO command to implement the new settings.

- ADC_CTRL3[AUX_MODE1:0]: Four run modes. See 表 9-4 for details.
- ADC_CTRL2[AUX_CELL_SEL4:0]: Selects which CB channels are measured by AUX ADC.
- ADC_CONF1[AUX_SETTLE1:0]: Configures the AUX ADC AAF settling time.
- ADC CTRL3[AUX GPIO SEL3:0]: Selects which GPIO channels are measured by AUX ADC.
- ACTIVE CELL register: Determines the inactive CB channel(s).
- GPIO CONF1 to GPIO CONF4: Determines the inactive GPIO channel(s).

There are four status bits to indicate the AUX ADC status:

- DEV STATIAUX RUNI: indicates if the AUX ADC is running or not.
- ADC STAT1[DRDY AUX MISC]: set when all MISC inputs are measured at least once.
- ADC_STAT1[DRDY_AUX_CELL]: set when the CB or BB channels selected by [AUX_CELL_SEL4:0] are
 measured at least once.
- ADC_STAT1[DRDY_AUX_GPIO]: set when all GPIO channels (active or inactive) have been measured once.
 Inactive channel measurements will be ignored by the device.

表 9-4. Summary of AUX ADC Run Modes

	The first of the f						
[AUX_MODE1:0]	Run Mode	Description					
0b00	Stop AUX ADC	Stop the AUX ADC					
0b01	Single Run (1 round robin cycle)	AUX ADC runs for one round robin cycle then stops. This gives a single measurement on all MISC inputs. For example, use as a quick burst read for just the MISC inputs without the need to issue a stop command to the AUX ADC.					
0b10	Continuous Run	AUX ADC runs in continuous mode and stops if [AUX_MODE1:0] = 0b00 and a GO command is sent. For example, must use this mode when ADC diagnostic comparison operation is used. See † 9.3.6.4 for details.					
0b11	8 RR Run (eight round robin cycles)	AUX ADC runs for eight round robin cycles then stops. This gives a single measurement on all active GPIO inputs.					


The AUX ADC operates in ACTIVE mode only. If the ADC is running while the device goes into SLEEP mode, the AUX ADC will be "freezed"; that is, the ADC stops but the device still remembers the operational state. When the device returns to ACTIVE mode without any digital reset event, the AUX ADC will restart and continue from its "prefreeze" state.

9.3.2.3 Synchronization between MAIN and AUX ADC Measurements


When AUX_CELL_ALIGN = 0x0 in ADC_CTRL2 register the device aligns AUX Cell Measurement (CB MUX - Slot 5) with the target VC channel slot on MAIN cell. DieTemp2 starts without any delay, and AUX cell CB MUX slot #5 moves dynamically accordingly to match the selected MAIN cell and the remaining AUX ADC slots adjust accordingly. This ensures that there is no time skew between MAIN VC and AUX CB ADCs sampling. This feature helps improve the ASIL-D accuracy significantly.

When AUX_CELL_ALIGN = 0x1, then the dynamic alignment is disabled and the AUX Cell Measurement (CB MUX Slot #5) is always aligned to Main ADC Cell 8 Measurement (MAIN ADC Slot #12).




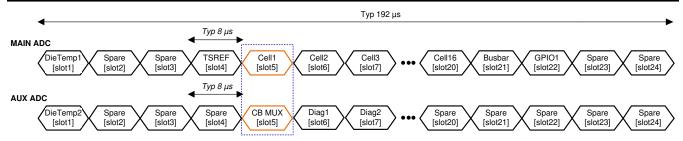

a) [AUX CELL SEL] = 00h - Running all active cell channels set by ACTIVE CELL CONF register. Ch1 conversion.

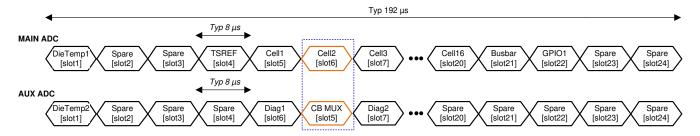

b) [AUX_CELL_SEL] = 00h - Running all active cell channels set by ACTIVE_CELL_CONF register. Ch2 conversion.

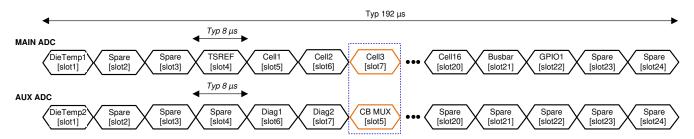

c) [AUX_CELL_SEL] = 04h - Lock to AUX CELL 3. Ch3 conversion.

图 9-12. Synchronization between MAIN and AUX ADC Sampling

9.3.3 Cell Balancing

The device integrates internal cell balancing MOSFET (CBFET) across each CB channel to enable passive cell balancing. The balancing current is determined by the cell voltage, the external resistor in series with the CB pin, and the internal CBFET Rdson, R_{DSON} parameter. The following equations calculate the effective balancing current with or without adjacent CBFETs being on. Cell balancing can run in ACTIVE or SLEEP mode.

- Balancing with no consecutive CBFET on (图 9-13 (a)): I_{CB} = VCell / ((2 × R_{CB}) + Rdson_{QCB})

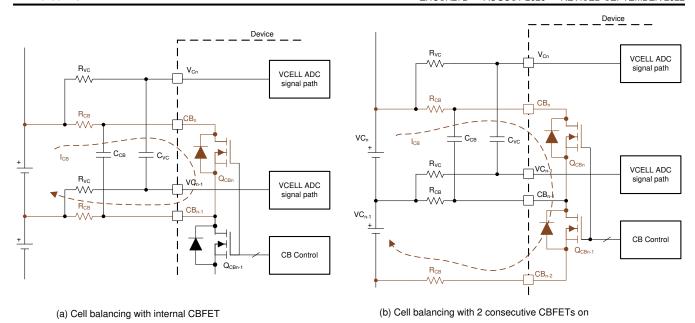


图 9-13. Internal Cell Balancing and the Flow of Balancing Current

9.3.3.1 Set Up Cell Balancing

There are three steps to set up cell balancing. Each step is described in detail in the following subsections. The host MCU follows the steps to configure the balancing control before starting cell balancing. Balancing starts by setting BAL_CTRL2[BAL_GO] = 1. The BAL_STAT[CB_RUN] = 1 indicates the cell balancing is actively running. Note that channels not selected by ACTIVE CELL[NUM CELL3:0] are bypassed during cell balancing.

- Determine which channel to enable for cell balancing.
- 2. Select the cell balancing control methods, auto or manual balancing control.
- 3. Decide the additional control configuration:
 - a. Will the thermal management based on thermistor measurement be enabled?
 - b. Is cell balancing stop based on cell voltage?
 - c. Will cell balancing terminate if any unmasked fault is detected?

9.3.3.1.1 Step 1: Determine Balancing Channels

The device provides an individual balancing timer for each channel. The balancing timer is the primary control setting to start and stop the cell balancing on a channel. The balancing timer is configured by $CB_CELL^*_CTRL$ registers, where * = 1 to 16 corresponding to CBFET 1 (CB channel 1) to CBFET 16 (CB channel 16). A non-zero value in these registers sets up the corresponding channels for balancing, but the CBFETs will not turn on until MCU issues the $BAL_CTRL2[BAL_GO]$ = 1. When a channel balancing timer expires, cell balancing on that channel stops. Cell balancing can also stop with other conditions, like cell voltage below a certain threshold, unmasked fault is detected, or a forced stop by the host. \ddagger 9.3.3.3 summarizes the cell balancing stop conditions.

9.3.3.1.2 Step 2: Select Balancing Control Methods

The cell balancing runs autonomously once it is configured. The cell balancing control can be configured in two ways using the BAL_CTRL2[AUTO_BAL] bit.

- Auto balancing control ([AUTO_BAL] = 1): With this method, host MCU can enable balancing on any channel.
 Once the host sends a [BAL_GO] = 1, balancing starts and the device will automatically duty cycle all
 enabled CBFETs in an odd and even manner. The duty cycle is configured by BAL_CTRL1[DUTY2:0] bits.
 - Example 1: MCU sets up all 16 channels for cell balancing.



Example: Both odd and even CB_CELL*_CTRL registers have non-zero setting

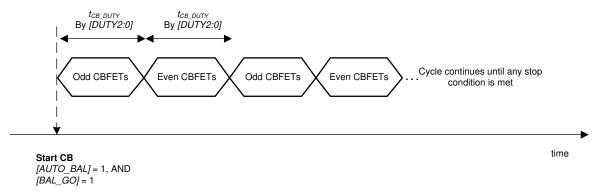


图 9-14. Auto Balancing Control, Example 1

Example 2: MCU sets up odd or even channels only for cell balancing. The BAL_CTRL1[DUTY2:0] bits setting is ineffective because the device is not switched between odd or even channels.

Example: Odd CB_CELL*_CTRL registers have non-zero value Even CB_CELL*_CTRL registers are all zero

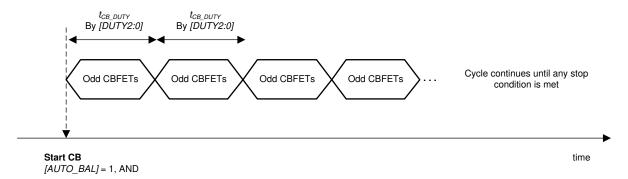


图 9-15. Auto Balancing Control, Example 2

- Manual balancing control ([AUTO_BAL] = 0): With this method, the device will turn on the CBFETs that have non-zero balancing timer settings once [BAL_GO] = 1 is received. There is no odd and even channel switching during the cell balancing and the BAL_CTRL1[DUTY2:0] setting does not apply under this control. Host MCU can enable two consecutive CBFETs with this method and a maximum of eight CBFETs can be enabled. When two consecutive CBFETs are enabled with both channels connected to battery cells, the balancing current is significantly different compared to no adjacent CBFET being on (图 9-13). The DEV_CONF[NO_ADJ_CB] bit is provided to avoid inadvertent enabling of an adjacent CBFET for a system that is not intended to have an adjacent channel on for balancing. In this control method, the device is relying on the MCU to enable the proper channels. If the MCU sends [BAL_GO] = 1 but the CBFETs are enabled with an invalid condition, the device will not start balancing and will set BAL_STAT[INVALID_CBCONF] = 1. Invalid configurations are either:
 - More than eight channels are enabled for balancing (that is, more than eight CB_CELL*_CTRL registers have non-zero settings),
 - DEV_CONF[NO_ADJ_CB] = 1, but adjacent channels are enabled for balancing,
 - DEV CONFINO ADJ CB] = 0, but more than two consecutive channels are enabled for balancing:
 - Example: Enabling CBFET 1, 2, 4, 5, 7, 10, 12, and 14 is valid.
 - Example: Enabling CBFET 1, 2, and 3 is invalid.

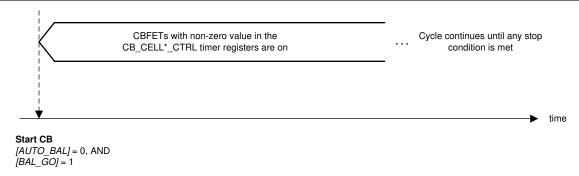


图 9-16. Manual Balancing Control

9.3.3.1.3 Step 3a: Balancing Thermal Management

With passive balancing, heat is generated through the internal CBFETs and the external balancing resistors. This creates 2 hotspots on the PCB, the device and the balancing resistors area. The device is designed to support up to 240mA at 75°C ambient. Higher balancing current can be supported with lower ambient temperature.

Nevertheless, the device provides two thermal management functions to avoid overheating the die as well as managing the PCB temperature. Both functions monitor temperature, either die temperature or thermistor temperature, to automatically pause balancing if temperature exceeds a pause threshold. When temperature falls below a recovery threshold, balancing will automatically resume. In the cell balancing pause state, all balancing timers and balancing settings are "freezed", balancing will resume with the same configuration when the device is out of the pause state.

- CB TWARN Balancing Pause: There are die temperature sensors built near the internal CBFETs. When [BAL_GO] = 1 is sent, these temperature sensors are enabled. If any of the sensors detect a die temperature > than the T_{CB_TWARN} threshold (105°C nominal), balancing on all channels is paused. The device sets the BAL_STAT[CB_INPAUSE] = 1 and BAL_STAT[OT_PAUSE_DET] = 1. When all sensors detect die temperature < (T_{CB_TWARN} T_{CB_HYS}), cell balancing will resume on the balancing enabled channels.
- Thermistor OTCB Balancing Pause: To manage thermal increases due to external balancing resistors, the device has an option to pause cell balancing on all channels if any of the active thermistors connected to GPIOs detects a temperature greater than a threshold set by OTCB_THRESH[OTCB_THR3:0]. Once a OTCB detection is triggered, the BAL_STAT[CB_INPAUSE] = 1 and BAL_STAT[OT_PAUSE_DET] = 1. The balancing on all enabled channels will resume once all active thermistors detect a temperature less than a recovery threshold set by (OTCB_THRESH[OTCB_THR3:0] + OTCB_THRESH[COOLOFF2:0]). The OTCB detection is performed through the integrated OT protector. The protector must be turned on and running in round robin mode before cell balancing starts. See † 9.3.4 for the protector control details. To use the OTCB function, MCU follows the setup sequence state below:
 - Before enabling OT protector:
 - · GPIO used for this function will be configured to ADC and OTUT inputs.
 - [OTCB_THR3:0] and [COOLOFF2:0] are configured.
 - Enable the OT protector in round robin mode.
 - Set [OTCB_EN] and [BAL_GO] to 1.

Failure to do so may result in no OTCB pausing action or pausing at the wrong temperature. If a different OTCB or COOLOFF threshold is needed, MCU configures the new threshold values and then re-starts the OT protector to latch in the new setting. It is not required to resend the [BAL_GO] = 1.



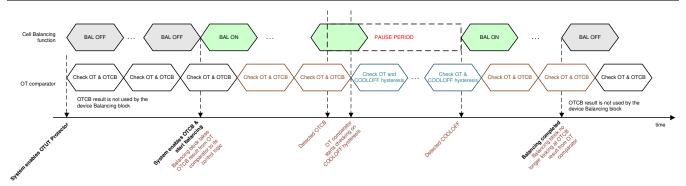


图 9-17. Cell Balancing Pause and Resume by OTCB Detection

9.3.3.1.4 Step 3b: Option to Stop On Cell Voltage Threshold

Besides the balancing timers, cell balancing can stop if the channel voltage is less than a threshold set by the *VCB_DONE_THRESH* register with a non-zero value. This stop voltage threshold applies to all channels. When this stop option is used, a channel will stop its balancing either if its balancing timer expires or its voltage level is less than *VCB_DONE_THRESH* setting.

The detection of the *VCB_DONE_THRESH* setting is performed by the integrated UV protector. The protector must be turned on and running in round robin mode before cell balancing starts. See † 9.3.4 for the protector control details.

When using the VCB DONE detection function, the MCU follows the setup sequence state below:

- Configure the VCB_DONE_THRESH register
- Enable the UV protector in round robin mode
- Send [BAL_GO] to 1

Failure to do so may result in no VCB DONE detection or cell balancing stops at a wrong channel voltage.

If different *VCB_DONE* thresholds are needed, MCU configures the new threshold values and then re-starts the UV protector to latch in the new setting. It is not required to resend the *[BAL_GO]* = 1.

9.3.3.1.5 Step 3c: Option to Stop at Fault

The device provides an option to abort cell balancing if an unmasked fault is detected. To enable this option, MCU sets *BAL_CTRL2[FLTSTOP_EN]* = 1 before starting cell balancing. If cell balancing is aborted under this condition, the *BAL_STAT[ABORTFLT]* = 1.

9.3.3.2 Cell Balancing in SLEEP Mode

Cell balancing can be operated in both ACTIVE and SLEEP modes. To run cell balancing in SLEEP mode, simply configure and start cell balancing in ACTIVE mode first. Once cell balancing is running, put the device in SLEEP mode. Cell balancing will continue autonomously in SLEEP mode. See † 9.4 for description of putting device in SLEEP mode.

When cell balancing is completed with <code>BAL_STAT[CB_DONE]</code> = 1, there is an option to put the device in a different power mode by using the <code>BAL_CTRL2[BAL_ACT1:0]</code>. For example, setting <code>[BAL_ACT1:0]</code> to 0b10 (SHUTDOWN mode) and start cell balancing, When cell balancing is completed in all balancing enabled channels, the device will automatically enter SHUTDOWN mode without MCU interaction. When multiple devices are connected in daisy chain structure, one device may complete its balancing but another may not. Using this option can result with devices in different power states for some period of time. See † 9.3.3.3 for details about the <code>BAL_STAT[CB_DONE]</code> bit set conditions.

9.3.3.3 Pause and Stop Cell Balancing

9.3.3.3.1 Cell Balancing Pause

Cell balancing can be paused by one of three methods:



www.ti.com.cn

- If die temperature during balancing > T_{CB TWARN}.
- If [OTCB EN] = 1 when any thermistor detects a temperature greater than OTCB THR.
- MCU sets BAL CTRL2[CB PAUSE] = 1.

The first two conditions are described in † 9.3.3.1.3. The third pause condition is a MCU-controlled pause action usually used during a diagnostic check that involves the CB path. MCU can pause cell balancing through the [CB PAUSE] bit at any given time once balancing starts.

When the cell balancing is paused due to any of the pause methods, the pause activity is the same:

- Turn off CBFETs on all channels.
- · All balancing timers are in hold or "freeze" state.
- BAL STAT[CB INPAUSE] = 1.
- Any unmasked fault detected during the pause state does not terminate cell balancing. This is because the pause event can be used during diagnostic and fault insertion can be part of the diagnostic.

Once the device exits the cell balancing pause state, the cell balancing resumes. Cell balancing timers will continue the count down. CB channels with non-zero values in their timers will continue with the balancing.

9.3.3.3.2 Cell Balancing Stop

Cell balancing stops in one of three conditions summarized in $\frac{1}{2}$ 9-5.

表 9-5.	Cell	Balancing	Stop	Conditions
--------	------	------------------	------	------------

Stop Condition	Apply to Individual Channel?	Set BAL_STAT[CB_DONE] = 1?
Cell balancing timer expires	Yes, this stop condition is monitored per channel	Yes, when all channels meet either stop condition 1 or stop
CB channel voltage < VCB_DONE_THRESH register value	Yes, this stop condition is monitored per channel	condition 2.
[FLTSTOP_EN] = 1 and unmasked fault is detected	No, this stops cell balancing on all channels	No, instead set BAL_STAT[ABORTFLT] = 1

Additionally, MCU can also force stop cell balancing on any particular channel or on all channels by either:

- Zeroing out the balancing timer setting and issuing [BAL GO] = 1.
- Setting a voltage greater than the CB channel voltage in the VCB DONE THRESH register and issuing [BAL GO] = 1.

Because the cell balancing timer is the primary control to start cell balancing, if the MCU resets all balancing timers to 0 with [BAL GO] = 1, the device does not start balancing and BAL STAT[CB DONE] remains 0.

On the other hand, if any of the cell balancing timers is non-zero but the VCB DONE THRESH register is set to a threshold greater than all CB channel voltages with [BAL_GO] = 1, the device starts cell balancing because of non-zero values on the balancing timers, but immediately stops because of the VCB DONE THRESH stop condition. The BAL_STAT[CB_DONE] is set to 1 for this condition.

9.3.3.3.3 Remaining CB Time

Each channel has a balancing timer, when balancing starts, the timers start counting down from the configured balancing time set by CB CELLn CTRL registers, where n= 1 to 16. When balancing is pause, these timers are paused.

To read the remaining CB time, MCU set [BAL TIME SEL3:0] to select a single channel, then issue [BAL TIME GO] = 1 which will load the remaining CB time of the selected channel to the BAL TIME register. Repeat the steps to read other remaining CB time on other channels. This timer information is only valid if CB is running, in pause state or in a valid CB stop condition.

If BAL TIME register reports 0x7F or 0xFF, which is not a valid value. This indicates the balancing configuration is keeping the balancing in a stop state, such as [BAL_GO] = 1 with all balancing timer set to 0, or MCU never issue [BAL_GO] = 1.



表 9-6. BAL_TIME Register Status

CB Stop Condition	BAL_TIME Register		
Cell balancing timer expires	The selected CB channel reports 0-s		
CB channel voltage < VCB_DONE_THRESH register value	The selected CB channel reports the remaining CB time		
[FLTSTOP_EN] = 1 and unmasked fault is detected			

9.3.3.4 Module Balancing

A small current can sink through GPIO as a way to balance the module voltage. The host can connect a loading resistor on the GPIO and configure the GPIO as digital output high which then loading current through CVDD that is regulated from the module stack. Such control can be turned on or off manually by the host.

Alternatively, the device can control this loading path through a function called module balancing (MB). The concept remains the same as depleting module voltage through a loading resistor connected to a GPIO (MB takes over GPIO3 for this function). However, host can set a module balancing timer and a stop threshold to automatically turn off the loading path through the module balancing function.

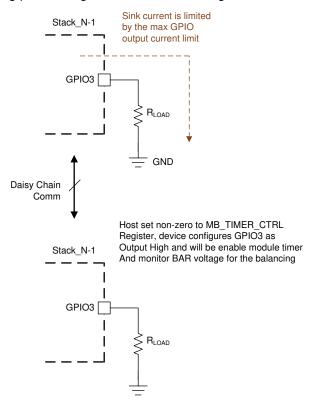


图 9-18. Module Balancing

9.3.3.4.1 Start Module Balancing

- 1. Set a non-zero value to the MB_TIMER_CTRL register.
- Configure the stop MB voltage threshold in the VMB_DONE_THRESH register.
- 3. The stack module monitoring is performed through AUX ADC. So host starts AUX ADC in continuous.
- 4. Send BAL_CTRL2[BAL_GO] = 1.
- 5. GPIO3 will be taken over for this function and is set to digital output port and starts sinking current through a loading resistor. BAL STAT[MB RUN] = 1

9.3.3.4.2 Stop Module Balancing

Once started, MB stops if one of the following occurs:

Balancing timer reaches MB_TIMER_CTRL setting, device will set BAL_STAT[MB_DONE] = 1.

- www.ti.com.cn
- BAT voltage is less than VMB DONE THRESH setting (AUX ADC must be on), device will set BAL STATIMB DONE] = 1.
- Host stops the balancing by setting MB_TIMER_CTRL = 0 and sends BAL_CTRL2[BAL_GO] = 1. BAL STATIMB DONE! = 0.
- If BAL CTRLIFLTSTOP EN] = 1 and an unmasked fault is detected. BAL STATIMB DONE] = 0

备注

- · There is no pause control (manual pause or thermal pause) to module balancing.
- If AUX ADC stops (either stopped by the host or device enters SLEEP mode) during module balancing, the device will not stop module balancing based on BAT voltage. Module balancing will stop by the MB timer expiration condition.
- BAL CTRL2[BAL ACT1:0] setting applies to the module balancing function as well. When the [MB_DONE] = 1 (and [CB_DONE] = 1 if CB is enabled), device can enter the power mode set by the [BAL_ACT1:0] setting.

9.3.4 Integrated Hardware Protectors

The device integrates cell OV and UV protectors and thermistor OT and UT protectors with programmable thresholds independent of the ADC functionality or the ADC measurements path. The OVUV and OTUT protectors can operate in ACTIVE or SLEEP mode. The subsections below provide an overview of the protectors. See † 9.3.6.4 for diagnostic control function and status of this block.

9.3.4.1 OVUV Protectors

A set window comparator provides cell voltage monitoring for all VC channels. This comparator function is entirely separate from the ADC function and as such, even if the ADC function fails, the analog comparators still flag the crossing of the overvoltage (OV) and undervoltage (UV) comparator thresholds. The programmed thresholds are translated through DACs to the comparators.

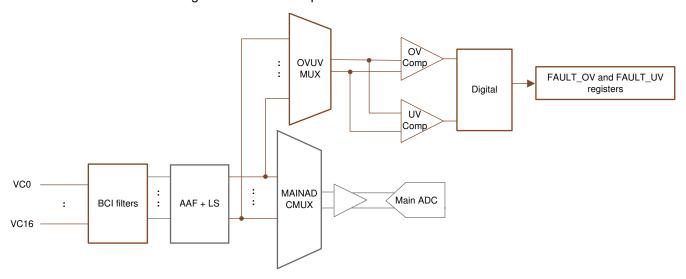


图 9-19. OV and UV Protectors

The OV and UV thresholds set by OV THRESH and UV THRESH registers are the same for all VC channels. The active channels are defined by the ACTIVE CELL[NUM CELL3:0] bits. These bits set the highest active channel number and the device assumes any lower channels are also active.

The UV DISABLE1 and UV DISABLE2 registers setting disable any individual channel for UV detection, such as channel is connected to bus bar.

Otherwise, the OV protector detects an OV fault on a particular channel if the VC channel voltage is greater than the OV_THRESH setting. The UV protector detects a UV fault on a particular channel if the VC channel voltage is less than the UV THRESH setting.

9.3.4.1.1 OVUV Operation Modes

The OV and UV protectors have several operation modes controlled by $OVUV_CTRL[OVUV_MODE1:0]$ and is summarized in $\frac{1}{8}$ 9-7. To start the OVUV protectors, MCU sets $OVUV_CTRL[OVUV_GO] = 1$.

表 9-7. OVUV Protector Operation Modes

[OVUV_MOD1:0]	Operation Mode	Description
0b00	Stop OV and UV protectors	Stop OV and UV protectors
0b01	Round robin run	The OV and UV protectors are looping through all VC inputs. The active channels are checked against the OV and UV thresholds (9-19). The round robin cycle timing is always the same regardless of the number of the active channels. For the inactive VC channels, the digital logic simply ignores the detection outcome. The UV protector detects both UV_THRESH and VCB_DONE_THRESH.
0b10	OV and UV BIST run (diagnostic use, see 节 9.3.6.4 for details)	A BIST (built-in self-test) cycle on the OV and UV comparators and the detection paths. VCELL (VC channels) ADC measurement from the Main ADC and the OV and UV detections through the OVUV protectors are not available during this run. MCU shall stop ADC measurement when performing OVUV BIST.
0b11	Single channel run (diagnostic use, see 节 9.3.6.4 for details)	Use for checking the OV and UV DACs. The OV and UV comparator is locked to a single VC input channel in this mode. Channel is locked by OVUV_CTRL[OVUV_LOCK3:0].

If OVUV BIST run is in progress, but MCU start ADC, the ADC result registers will be held at 0x8000. ADC measurements will resume once OVUV BIST is completed and after $t_{AFE\ SETTLE}$ time pass.

If ADC is running, but MCU start OVUV BIST, the ADC result registers will be held at its last measurement. ADC measurement update resumes once OVUV BIST is completed and after $t_{AFE\ SETTLE}$ time pass

Note: The round robin cycle time is always the same regardless the number of active channel Stop if [OVUV_MODE1:0] = 0b00, О۷ OV CELL1 Round robin CELL₁ CELL16 [OVUV_GO] = 1 t_{OV_CYCLE} UV and VCB_DONE Stop if [OVUV_MODE1:0] = 0b00, UV CELL16 VCB_DONE_THRESH CELL16 U۷ CELL1 AND CELL1 [OVUV GO] = 1 tuv cycle Time Set [OVUV_MODE1:0] = 0b01, AND Set [OVUV_GO] = 1

图 9-20. OV and UV Round Robin Mode

9.3.4.1.2 OVUV Control and Status

9.3.4.1.2.1 OVUV Control

To start the OV and UV protectors, MCU sets OVUV_CTRL[OVUV_GO] = 1. When the device receives the GO command, it samples the following register settings and then starts the OVUV protectors accordingly. Any change of the settings below requires the MCU to resend another GO command to implement the new settings.

- OV_THRESH register: Sets the OV threshold for all VC channels
- UV THRESH register: Sets the UV threshold for all VC channels
- VCB_DONE_THRESH register: Sets the VCB_DONE threshold for cell balancing stop condition (if enabled)
- OVUV_CTRL[OVUV_MODE1:0]: OVUV operation mode selection
- ACTIVE_CELL register: Determines the inactive VC channel(s) and ignores the detection result accordingly
- UV_DISABLE1 and UV_DISABLE2 registers: Determines the inactive VC channel(s) and ignores the
 detection result accordingly.

The OVUV protectors can also operate in SLEEP mode. MCU first starts the protector in ACTIVE mode, then puts the device in SLEEP mode. The OVUV protectors will continue the operation until the MCU commands to stop or if the device shuts down.

9.3.4.1.2.2 OVUV Status

The DEV_STAT[OVUV_RUN] = 1 indicates the OVUV protectors are running. The OV detection result is reflected in the FAULT_OV1 and FAULT_OV2 registers; the UV detection result is reflected in the FAULT_UV1 and FAULT_UV2 registers.

The VCB_DONE detection is not a fault but a cell balancing stop condition. The result is reflected in a particular channel stopping cell balancing. See † 9.3.3 for details.

9.3.4.2 OTUT Protector

A set window comparator provides temperature monitoring for all GPIO inputs with the external thermistor network pulled up to TSREF. This comparator function is entirely separate from the ADC function and, as such, even if the ADC function fails, the analog comparators still flag the crossing of the overtemperature (OT) and undertemperature (UT) comparator thresholds. The programmed thresholds are translated through DACs to the comparators.

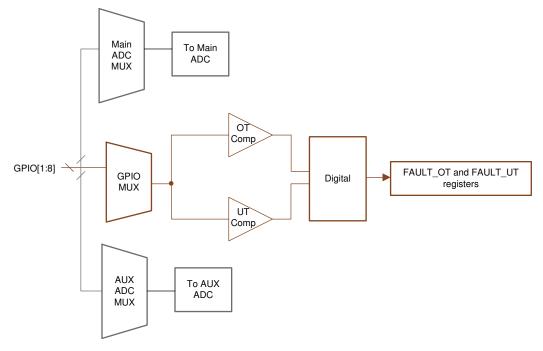


图 9-21. OT and UT Protectors

The OT and UT thresholds set by OTUT_THRESH[OT_THR4:0] and OTUT_THRESH[UT_THR2:0] bits are the same for all active GPIO inputs. The active GPIO inputs are defined by the GPIO_CONFn[GPIO*2:0] (where n = 1 to 4, * = 1 to 8 for the corresponding GPIO input). The GPIO has to be configured as ADC and OTUT inputs to be considered as active GPIO inputs for the OTUT protectors.

The OTUT comparators use TSREF as reference, and so the detection is in ratiometric form. The OT protector detects an OT fault on a particular GPIO if the (GPIO voltage/TSREF) is less than the OTUT_THRESH[OT_THR4:0] setting. The UT protector detects a UT fault on a particular GPIO if the (GPIO voltage/TSREF) is more than the OTUT_THRESH[UT_THR2:0] setting. The OTUT protectors assume the NTC thermistor is used for temperature monitoring.

MCU ensures TSREF is enabled before starting the OTUT protectors. Failing to do so, the OTUT protectors will flag all OT and UT faults on all GPIO inputs as an indication of abnormal detection.

9.3.4.2.1 OTUT Operation Modes

The OT and UT protectors have several operation modes controlled by OTUT_CTRL[OTUT_MODE1:0] and are summarized in 表 9-8. To start the OTUT protectors, the MCU sets OTUT_CTRL[OTUT_GO] = 1.

	表 9-6. OTOT Protector Operation Modes					
[OTUT_MOD1:0]	Operation Mode	Description				
0b00	Stop OT and UT protectors	Stop OT and UT protectors				
0b01	Round robin run	The OT and UT protectors are looping through all GPIO inputs. The active GPIO inputs are checked against the OT and UT thresholds (9-22). The round robin cycle timing is always the same regardless of the number of the active GPIOs. For the inactive GPIO inputs, the digital logic simply ignores the detection outcome. The OT protector detects both OT threshold and OTCB threshold.				
0b10	OT and UT BIST run (diagnostic use, see 节 9.3.6.4 for details)	A BIST (built-in self-test) cycle on the OT and UT comparators and the detection paths. Temperature (GPIO channels) ADC measurement from the main or AUX ADC and the OT and UT detections through the OTUT protectors are not available during this run.				
0b11	Single channel run (diagnostic use, see 节 9.3.6.4 for details)	Used for checking the OT and UT DACs. The OT and UT comparator is locked to a single GPIO input channel in this mode. Channel is locked by OTUT_CTRL[OTUT_LOCK2:0].				

表 9-8. OTUT Protector Operation Modes

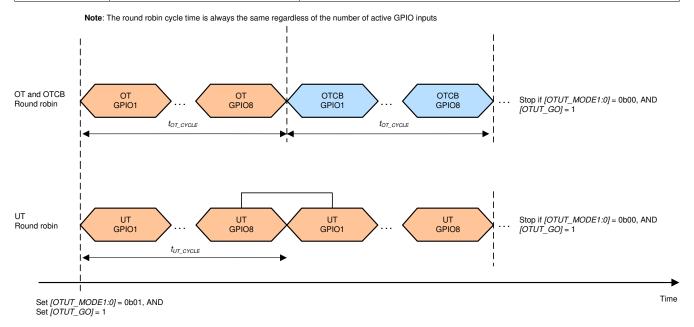


图 9-22. OT and UT Round Robin Modes



9.3.4.2.2 OTUT Control and Status

9.3.4.2.2.1 OTUT Control

Ensure TSREF is enabled. To start the OT and UT protectors, host MCU sets $OTUT_CTRL[OTUT_GO] = 1$. When the device receives the GO command, it samples the following register settings and then starts the OTUT protectors accordingly. Any change of the settings below requires the MCU to send another GO command to implement the new settings.

- OTUT THRESH[OT THR4:0]: Sets the OT threshold for all active GPIO inputs
- OTUT_THRESH[UT_THR2:0]: Sets the UT threshold for all active GPIO inputs
- OTCB_THRESH register: Sets the OTCB threshold and COOLOFF hysteresis (if enabled)
- OTUT CTRL[OTUT MODE1:0]: OTUT operation mode selection
- GPIO_CONF1 to GPIO_CONF4: Determines the inactive GPIO channel(s) and ignores the detection result.

The OTUT protectors can also operate in SLEEP mode. MCU first starts the protector in ACTIVE mode, then puts the device in SLEEP mode. The OTUT protectors will continue the operation until the MCU commands them to stop or if device shuts down.

9.3.4.2.2.2 OTUT Status

The *DEV_STAT[OTUT_RUN]* = 1 indicates the OTUT protectors are running. The OT detection result is reflected in the *FAULT_OT* register; the UT detection result is reflected in the *FAULT_UT* register.

The OTCB detection is not a fault but a cell balancing pause condition. The result is reflected in a particular channel pausing cell balancing. See 节 9.3.3 for details.

9.3.5 GPIO Configuration

The device has eight GPIOs. Each GPIO can be programmed to be one of the configurations below through the *GPIO_CONF1* to *GPIO_CONF4* registers. Note that when the device is in SHUTDOWN mode all GPIOs will exibit a weak pull-down behaviour.

	DISAB LE	INPUT			ОUТ	PUT	WEAK PULL-UP/ DOWN		SPECIAL		
GPIO	High-Z	Digita I	ADC & OTUT	ADC Only	High	Low	ADC & weak pull-up	ADC & weak pull-down	Module Balancing MB_TIMER_CTRL is not 0x00	SPI Master [SPI_EN] = 1	Fault Input [FAULT_IN_ EN] = 1
GPIO1	√	√	√	√	√	√	√	√			
GPIO2	√	√	√	1	√	√	√	√			
GPIO3	√	√	√	√	√	√	√	√	√ (output, HIGH)		
GPIO4	√	√	√	√	√	√	√	√		√ (SS)	
GPIO5	√	√	√	√	√	√	√	√		√ (MISO)	
GPIO6	√	√	√	√	√	√	√	√		√ (MOSI)	
GPI07	√	√	√	√	1	√	√	√		√ (SCLK)	
GPIO8	√	√	√	√	√	√	√	√			√ (input, active low)

GPIO Configuration		Description				
DISABLE	High-Z	This is the default GPIO configuration at reset if OTP is not programmed				
	Digital	When GPIO is configured as Digital Input, the device detects the input voltage level to determine a 1 or 0 with respect to its V_{IL} and V_{IH} levels. The result is shown in the $GPIO_STAT$ register.				
INPUT	ADC and OTUT	The GPIO is configured to be measurable by the ADC (both main and AUX ADCs) and also as the input to the OTUT protectors. Example: use this selection for GPIO used for thermistor connection.				
	ADC only	The GPIO is configured to be measurable by the ADC (both main and AUX ADCs) only. Example: use this selection to measurement voltage on GPIO.				
OUTPUT	High	The GPIO is configured as digital output high (internally pull up to CVDD). The logic state is also shown in the <i>GPIO_STAT</i> register.				
	Low	The GPIO is configured as digital output low. The logic state is also shown in the GPIO_STAT register.				



GPIO Coi	nfiguration	Description			
WEAK PULL- UP/DOWN	ADC and Weak Pull-up	The GPIO is pull up internally and is configured to measured by the ADC (both main and AUX ADCs)			
	ADC and Weak Pull-down	The GPIO is pull down internally and is configured to measured by the ADC (both main and AUX ADCs)			
SPECIAL	Module Balancing	When the <i>MB_TIMER_CTRL</i> register is non-zero, GPIO3 will be taken over to be used in the module balancing control. This configuration has higher priority over any of the INPUT/OUTPUT configurations on GPIO3.			
	SPI Master	When <i>GPIO_CONF1[SPI_EN]</i> = 1, GPIO4 to GPIO7 are taken over as the SPI master communication lines. This configuration has higher priority over any of the INPUT/OUTPUT configurations on GPIO4 to GPIO7.			
	Fault Input	When <i>GPIO_CONF1[FAULT_IN_EN]</i> = 1, GPIO8 is taken over as an input that if the GPIO was asserted (active low), will set <i>FAULT_SYS[GPIO]</i> = 1 and assert NFAULT (if enabled).			

9.3.6 Communication, OTP, Diagnostic Control

9.3.6.1 Communication

The device can operate as a standalone device in a multidrop configuration (*DEV_CONF[MULTIDROP_EN]* = 1) or as a base/stack device in a daisy chain configuration (*DEV_CONF[MULTIDROP_EN]* = 0). In multidrop configuration, the daisy chain communication is disabled and the host communicates only with a single device through UART interface. This document will focus on the daisy chain communication.

In daisy chain configuration, each device is identified by a 6-bit device address; hence, up to 64 devices can be connected in the daisy chain. In this configuration, a device is either defined to a base (interface with host through UART) or a stack (interface through the daisy chain ports COMH/COML to the base device). The base description in this document assumes the use of BQ7961x-Q1 as base device. If a communication extender (also known as bridge device) is used as a base, user must refer to the bridge device's datasheet for details.

9.3.6.1.1 Serial Interface

The device has a serial interface which uses UART protocol as the physical layer to communicate between base device and host. The communication is specified in a proprietary frame structure.

Submit Document Feedback

Copyright © 2022 Texas Instruments Incorporated

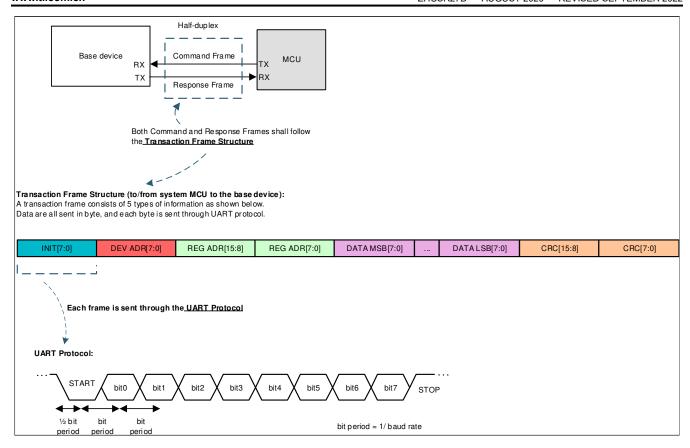


图 9-23. UART Communication to Host

9.3.6.1.1.1 UART Physical Layer

The UART interface follows the standard serial protocol of 8-N-1, where it sends information as a START bit, followed by eight data bits, and then one STOP bit. The STOP bit indicates the end of the byte. If a byte is received that does not have the STOP bit set, the *FAULT_COMM1[STOP_DET]* bit is set, indicating there may be a baud rate issue between the host and the device. The device supports 1-Mbps baud rate. Additionally, during development, a slower baud rate is needed to debug the communication, an optional 250-kbps baud rate can be enabled under communication debug mode.

The UART sends data on the TX pin and receives data on the RX pin. When idle, the TX and RX pins are high. The UART interface requires that RX is pulled up to CVDD through a resistor on the base device. The RX is pulled up on the device side. Do not leave RX unconnected. Ensure RX is connected directly to CVDD for stack devices.

The TX pin is disabled in stack devices, but must be pulled high through a resistor on the host side on base device to prevent triggering an invalid communications frame when the communication cable is not attached, or during power-off or SHUTDOWN state when TX is high impedance. TX is always pulled to CVDD internally while in ACTIVE or SLEEP mode, whether enabled or disabled. Leave TX unconnected if not used in stack devices.

The UART interface is strictly a half-duplex interface. While transmitting, any attempted communication on RX is ignored. The only exception is COMM CLEAR signal on RX pin, which immediately terminates the communication. See † 9.3.6.1.1.1.3 for details.

Using two STOP bits in UART:

The device can be set up with two stop bits (*DEV_CONF[TWO_STOP_EN]* = 1), the UART response frame transmits from device to host will always return with two STOP bits as shown below. Host is not required to send the command frame to the device with two STOP bits. The device is able to receive one or more stop bits with or without this function enabled.






图 9-24. UART Response Frame with Two STOP Bits

Potential use of the two stop bits may be to:

- The host to gain extra time to process the data before receiving next data frame.
- The clock tolerance between device and host might cause the data detection out of sync. Having two STOP bits allows re-synchronization of the communication; hence, improving communication robustness.

Although UART is only used by the base device, if the [TWO_STOP_EN] = 1, the stack devices also set the [TWO_STOP_EN] = 1 even though UART is not used in stacks. It is because the stack devices will use the bit setting to determine the proper gap applying between two communication frames.

9.3.6.1.1.1.1 UART Transmitter

The transmitter is configured to wait a specified number of bit periods after the last bit reception before starting transmissions using the *TX_HOLD_OFF* register. This provides time for the host to switch the bus direction at the end of its transmission. The UART transmitter is disabled by default in the stack devices.

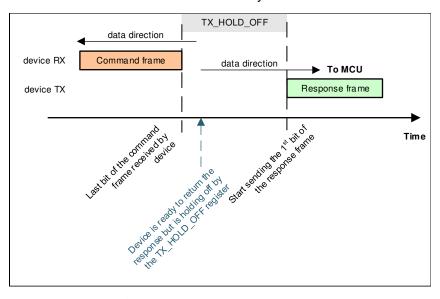


图 9-25. UART TX_HOLD_OFF

9.3.6.1.1.1.2 UART Receiver

While the device is transmitting data on TX, RX is ignored except when receiving a COMM CLEAR. To avoid collisions during data transmission up the daisy-chain interface, the host must wait until all bytes of a communication transmission are received from the device before attempting additional communication to the device. If the host starts a transmitting without waiting to receive the preceding transaction's response, the communication is not considered reliable and the host must send a COMM CLEAR to restore normal communications to the base device.

9.3.6.1.1.1.3 COMM CLEAR

A COMM CLEAR is sent on the RX pin of the base device. It does not send to the stack devices. RX cannot be disabled and a COMM CLEAR can be sent at any time regardless of the TX status. Ensure that the COMM

CLEAR does not exceed the maximum value of t_{UART(CLR)} bit periods, as this may result in recognition of other communication pings.

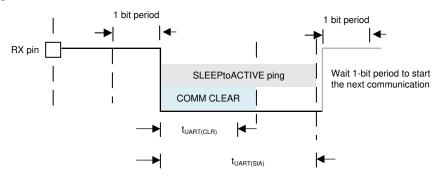


图 9-26. UART COMM CLEAR

Use the COMM CLEAR command to clear the receiver and instruct the UART engine to look for a new start of frame. The next byte following the COMM CLEAR is always considered a start-of-frame byte. When detected, a COMM CLEAR sets the FAULT COMM1[COMMCLR DET] flag. The host must wait at least tliart(RXMIN) after the COMM CLEAR to start sending a new frame. It should be noted that in addition to the [COMMCLR DET] flag, the FAULT COMM1[STOP DET] flag is also set because the COMM CLEAR timing violates the typical byte timing and the STOP bit is seen as 0.

A SLEEPtoACTIVE ping/tone also clears the UART receiver. This ping/tone sets the [COMMCLR_DET] flag when transiting from SLEEP to ACTIVE mode. If this ping/tone is sent during ACTIVE mode, the [COMMCLR_DET] and [STOP_DET] flags are set.

COMM CLEAR sent during daisy chain communication:

When a read command is sent, but the response has not yet completely returned to the host, if a COMM CLEAR is received in the base device at this condition, the device response is discarded. In addition, the stack devices do not see the COMM CLEAR and continue to send their responses which are forwarded to the host, resulting in host receiving unexpected response frames. Hence, host should avoid this condition by waiting until all responses are received from the stack before sending a COMM CLEAR.

device condition occurs, the base low-level communication debug (indicating DEBUG_UART_RR_TR[TR_WAIT] device is waiting transmit to response) DEBUG UART RR TRITR SOFI (indicating a COMM CLEAR is received while device is transmitting data) bits can be set depending on the timing in receiving the COMM CLEAR signal.

When using the multidrop configuration, a COMM CLEAR signal must be used before every frame to ensure consistent communication.

9.3.6.1.1.2 Command and Response Protocol

The host initiates every transaction between the host and device. The device never transmits data without first receiving a command frame from the host. A command frame is a communication frame sent from host to the device; a response frame is a response (to a read command) from device to host. After a command frame is transmitted, the host must wait for all expected responses to be returned (or a timeout in case of error) before initiating a new command frame. The commands supported by the device are listed in 表 9-9:

表 9-9. Commands

Command	Description
Single Device Read	To read a register(s) from a single device (base or stack)
Single Device Write	To write a register(s) to a single device (base or stack)
Stack Read	To read a register(s) from the stack devices only. The device must be configured as a stack device with COMM_CTRL[STACK_DEV] = 1 to respond to Stack Read commands
Stack Write	To write a register(s) for only the stack devices. The device must be configured as a stack device with COMM_CTRL[STACK_DEV] = 1 to respond to Stack Write commands.



表 9-9. Commands (continued)

Command	Description			
Broadcast Read	To read a register(s) for all of the devices in the daisy chain, including base device.			
Broadcast Write	To write a register(s) for all of the devices in the daisy chain, including base device.			
Broadcast Write Reverse Direction	To send a broadcast write in the reverse direction set by CONTROL1[DIR_SEL] bit. This command is intended to be used for switching the communication direction with the RING interface.			

9.3.6.1.1.2.1 Transaction Frame Structure

The protocol layer is made up of transaction frames. There are two basic types of transaction frames: command frames (transactions from host) and response frames (transactions from device). The transaction frames are made up of the following five field types:

- Frame initialization (INIT, 1-byte)
- Device address (DEV ADR, 1-byte)
- Register address (REG ADR, 2-byte)
- Data (DATA, various byte length)
- · Cyclic redundancy check (CRC, 2-byte)

9.3.6.1.1.2.1.1 Frame Initialization Byte

The frame initialization byte is used in both command and response frames. It is always the first byte of the frame. The frame initialization byte performs two functions. First, it defines the frame as either a command frame (host) or a response frame (device). Second, it defines the length of the frame that follows after the frame initialization byte. This provides the receiver an exact number of bytes to expect for a complete command or response.

表 9-10. Command Frame Initialization Byte Definition

		72.0	Command Frame	Response Frame		
			I .			
	Bit	Bit Name	Description	Bit Name	Description	
INIT	7	FRAME_TYPE	1 = Define Command Frame	FRAME_TYPE	0 = Defines Response Frame	
	6	REQ_TYPE	000 = Single Device Read	RESPONSE_BYTE	Number of the data bytes	
	5		001 = Single Device Write 010 = Stack Read		0x00 = 1 byte 0x01 = 2 bytes	
	4		011 = Stack Write 100 = Broadcast Read 101 = Broadcast Write 110 = Broadcast Write Reverse 111 = RSVD ⁽¹⁾		: 0x7F = 128 bytes	
	3	RSVD	Reserved. This bit is ignored			
	2	DATA_SIZE	Number of data bytes of the command			
	1	1	frame, excluding device address, register address or CRC			
	0		000 = 1 byte 001 = 2 bytes : 111 = 8 bytes			

⁽¹⁾ No function to this selection, however, selecting this setting will set the DEBUG_COMMH[RC_IERR] or DEBUG_COMMH[RC_IERR] flag depends on which daisy chain interface receives the command frame.

9.3.6.1.1.2.1.2 Device Address Byte

The device address byte identifies the device targeted by the single device read/write command. This byte is omitted for broadcast, stack, and broadcast reverse direction command frames. All response frames contain the device address byte. In single device read/write commands, the device that contains a matching value in the DIRO_ADDR (used for communication direction with CONTROL1[DIR_SEL] = 0) or in DIR1_ADDR (used for communication direction with CONTROL1[DIR_SEL] = 1) responds to the command. If multiple devices have matching values, all of those devices will respond and cause collision.

表 9-11. Device Address Byte Definition

		Command Frame		Response Frame		
	Bit	Bit Name	Description	Bit Name	Description	
DEV ADR	7	RSVD	Should always write 0	RSVD	Should always write 0	
	6	RSVD	Should always write 0	RSVD	Should always write 0	
	5 to 0	Device Address	Set the device address range from 0x00 to 0x3F	Device Address	Set the device address range from 0x00 to 0x3F	

9.3.6.1.1.2.1.3 Register Address Bytes

Register addresses are two bytes in length. Any write command to an invalid register address is ignored. Any read from an invalid register returns a 0x00 response. This is true for command frames sent to an individual register with invalid address, or as part of command sent to multiple registers with invalid addresses. When read/write addresses a block of registers with only some invalid addresses, the valid addresses respond as normal, while the invalid addresses respond as previously described.

表 9-12. Register Address Byte Definition

			Command Frame		Response Frame
	Bit Bit Name Description Bit Name		Description		
DEG ADD	7 to 0	Register Address (MSB)	Target or beginning of the register address	Register Address (MSB)	Target or beginning of the register address
REG_ADR	7 to 0	Register Address (LSB)	Target or beginning of the register address	Register Address (LSB)	Target or beginning of the register address

9.3.6.1.1.2.1.4 Data Bytes

The number of data bytes and the relevant information they convey is determined by the type of command frame sent and the target register specified in that command frame. When part of a command frame, the data bytes contain the values to be written to the registers. When part of a response frame, the data bytes contain the values returned from the registers.

表 9-13. Data Bytes Definition

			Command Frame		Response Frame	
	Bit	Bit Name	Description	Bit Name	Description	
	7	Data	For Write command:	Data	Data value return from the register(s) is	
	6	Byte[0]	Data value to be written to the register(s) is specified in the REG_ADR frame	Byte[0]	specified in the REG_ADR frame	
	5		For Read command:			
	4		Specify the number of bytes need to be returned by the read command.			
	3		0x00 = 1 byte			
	2		0x01 = 2 bytes			
	1		0x7F = 128 bytes			
	0					
DATA	•••					
			For Write command: Data Value to be written to the register(s) is specified in the REG_ADR frame Data B [n]		Data value return from the register(s) is specified in the REG_ADR frame	
		[n]				
	5					
	4					
	3					
	2					
	1					
	0					

9.3.6.1.1.2.1.5 CRC Bytes

The device uses a CRC (cyclic redundancy check) to protect data integrity during transmission. The CRC represents the remainder of a process analogous to polynomial long division, where the frame being checked is divided by the generator. The CRC appended to the frame is the remainder. Because of this process, when the device receives a frame, the CRC calculated by the receiver across the entire frame including the transmitted CRC will be zero, indicating a correct transmission and reception. A non-zero result indicates a communication error. Specifically, the device uses the CRC-16-IBM polynomial ($x^{16} + x^{15} + x^2 + 1$) with 0xFFFF initialization.

The CRC value is checked as the first step after receiving the communication frame. If the CRC is incorrect, the entire frame is discarded and not processed. Any additional frame errors are not checked and any errors are not indicated other than CRC error. The bytes are still transferred up or down the stack, thus every device that processed the frame will indicate a CRC error. This results in multiple devices indicating CRC faults on the same communication frame.

9.3.6.1.1.2.1.6 Calculating Frame CRC Value

The CRC calculation by the transmitter is in bit-stream order across the entire transmission frame (except for the CRC). When determining bit-stream order for implementing the CRC algorithm, it is important to note that protocol bytes transmit serially, least-significant bit first.

9-27 illustrates the bit-stream order concept.

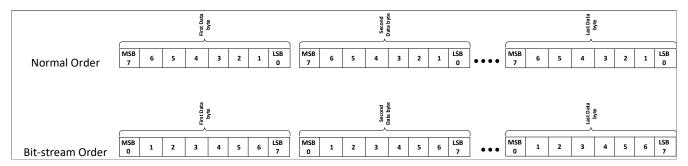


图 9-27. Bit-Stream Order Explanation

The CRC (0x0000) is appended to the end of the bit-stream. This bit-stream is then initialized by XOR'ing with 0xFFFF to catch any leading 0 errors. This new bit-stream is then divided by the polynomial (0xC002) until only the 2-byte CRC remains. During this process, the most significant 17 bits of the bit stream are XOR' d with the polynomial. The leading zeroes of the result are removed and that result is XOR' d with the polynomial once again. The process is repeated until only the 2-byte CRC remains. For example:

Example 1: CRC Calculation Using Polynomial Division

```
Command Frame = 0x80 00 02 0F 0B (0b1000 0000 0000 0000 0010 0000 1111 0000 1011)
Command Frame in bit stream order = 0x01 00 40 F0 D0 (0b0000 0001 0000 0100 0100 0000 1111 0000
1101 0000)
After Initialization (XOR with 0xFFFF) = 0b1111 1110 1111 1111 0100 0000 1111 0000 1101 0000
1111 1110 1111 1111 0100 0000 1111 0000 1101 0000 0000 0000 0000 #append 0x0000 for CRC
1100 0000 0000 0010 1 #XOR with polynomial 0011 1110 1111 1101 1100 0000 1111 0000 1101 0000 0000 0000 0000
11 1110 1111 1101 1100 0000 1111 0000 1101 0000 0000 0000 0000 #delete leading zeros from
previous result
11 0000 0000 0000 101 #XOR with polynomial
00 1110 1111 1101 0110 0000 1111 0000 1101 0000
.....
1100 0110 0000 0001 0000 0000
1100 0000 0000 0010 1 #XOR with polynomial
0000 0110 0000 0011 1000 0000
110 0000 0011 1000 0000
110 0000 0000 0001 01 #XOR with polynomial
000 0000 0011 1001 0100
0000 0011 1001 0100 #CRC result in bit stream order
```



1100 0000 0010 1001 #final CRC result in normal order CRC final 0xC029

9.3.6.1.1.2.1.7 Verifying Frame CRC

There are several methods for checking the CRC of a frame. One method is to simply calculate the CRC for the transmitted command except the last two bytes (CRC bytes) using the method described in the previous section, and then compare that result with the transmitted CRC bytes. A more simple option is to run the entire transmission through the CRC algorithm. If the CRC is correct, the result is 0000. In this case, the initial zero padding of the bit-stream with 16 zeroes is not necessary. Using the previous result and running through the algorithm produces the following results:

Example 1: CRC Verification Using Polynomial Division:

```
Command Frame = 0x80\ 00\ 02\ 0F\ 0B\ (0b1000\ 0000\ 0000\ 0000\ 0010\ 0000\ 1111\ 0000\ 1011)
CRC to Check = 0xC029
Command Frame w/ CRC in bit stream order = 0x80 00 02 0F 0B CO 29 (0b1000 0000 0000 0000 0010
0000 1111 0000 1011 0000 0011 1001 0100)
After Initialization (XOR with 0xFFFF) = 0b0 1111 1110 1111 1111 0100 0000 1111 0000 1101 0000 0000
0011 1001 0100
1111 1110 1111 1111 0100 0000 1111 0000 1101 0000 0000 0011 1001 010 #delete leading zeros from
previous result
.
1100 0000 0000 0010 1 #XOR with polynomial
0011 1110 1111 1101 1100 0000 1111 0000 1101 0000 0000 0011 1001 0100
11 1110 1111 1101 1100 0000 1111 0000 1101 0000 0000 0011 1001 0100 #delete leading zeros from
previous result
11 0000 0000 0000 101 #XOR with polynomial
00 1110 1111 1101 0110 0000 1111 0000 1101 0000 0000 0011 1001 0100
1100 0110 0000 0010 1001 0100
1100 0000 0000 0010 1 #XOR with polynomial
0000 0110 0000 0000 0001 0100
1 1000 0000 0000 0101 00
1 1000 0000 0000 0101 \#XOR with polynomial
0 0000 0000 0000 0000 00
0x0000 #verfiy that CRC checks out valid
```

备注

The result of '0b0000 0000 0000 0000' for the CRC indicates a successful check.

9.3.6.1.1.2.2 Transaction Frame Examples

Transaction frames are created using the frame structure discussed in the previous sections. This section outlines how the command and response frames are passing through the daisy chain. The CRC values in the examples are correct and can be used to verify the customer CRC algorithm. The CRC is verified by the device with every received command frame and the command is not executed unless the CRC is valid.

9.3.6.1.1.2.2.1 Single Device Read/Write

Single Device Read:

Device address must be set up before using this command. A single device read generates a response frame whose length depends on the requested number of register bytes read. The command frame send by host must contain the register address to start at (address field) and the number of bytes to return (number of registers to read). The DATA SIZE field in the initialization byte for the single device read command is always 0b000.

The command frame travels to all devices in the daisy chain, but only the device that matches the command frame's device address field will respond to the single device read command. The corresponding device will respond with returned data request by the single device read, following the response frame format.

Single Device Write:

Device address must be set up before using this command. A write command for a single device enables the customer to update up to eight consecutive registers with one command. The single device write command



frame must contain the register address to start at (address field) and the data bytes to write to the registers. The DATA_SIZE field in the initialization byte for the single device write command is the number of registers to update.

The command frame travels to all devices in the daisy chain, but only the device that matches the command frame's device address field will execute the single device write command.

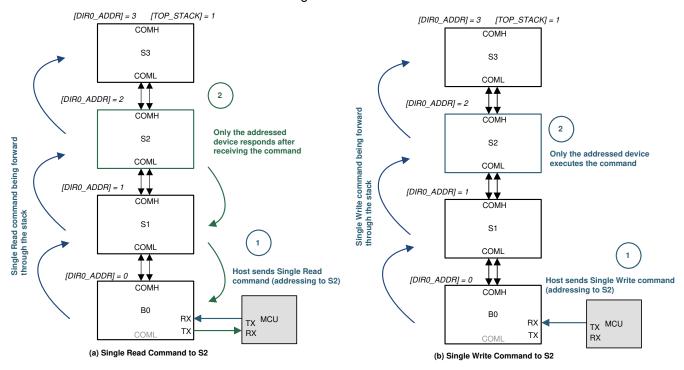


图 9-28. Single Device Read/Write

表 9-14. Single Device Read/Write

& 3-14. Single Device Read/Wille						
		Single Read Command Sent by Host	Sir	Single Write Command Sent by Host		
Example	Read 16 Cell Voltages from S2		Write OTP Unlock Code to OTP_PROG_UNLOCK1A to Registers			
Frame Field	Data Comments		Data	Comments		
Initialization Byte	0x80	Always 0x80 FRAME_TYPE = 1 REQ_TYPE = 0b000 = Single Read DATA_SIZE = 0b000	0x93	0x90 for 1 byte data write, 0x91 for 2 bytes data write, 0x92 for 3 bytes data write, and so on. For this example: FRAME_TYPE = 1 REQ_TYPE = 0b001= Single Write DATA_SIZE = 0b11 = 4 bytes		
Device Address	0x02	Device address 0x02 (S2) in this example	0x02	Device address 0x02 (S2) in this example		
Register Address	0x0568	Start address of the register block to read (address of VCELL16_HI in this example)	0x0300	Start address of the register block to write (address of OTP_PROG_UNLOCK1A in this example)		
Data	0x1F	Instruct the target device to return 32 bytes of data (that is, from address 0x0568 to 0x0587), assuming each VCELLn_HI = 0x80, VCELLn_LO = 0x00, where n = 1 to 16.	0x02B7 78BC	The unlock value to OTP_PROG_UNLOCK1A to OTP_PROG_UNLOCK1D		
CRC	0x5A6F		0xB8AE			

9.3.6.1.1.2.2.2 Stack Read/Write

Stack Read:

The device address, COMM_CTRL[STACK_DEV] bit and [TOP_STACK] bit must be configured before using this command. A stack read command generates a number of response frames depending on the number of devices in the stack (that is, device with COMM_CTRL[STACK_DEV] = 1), whose length depends on the requested number of register bytes read. The stack read command frame must contain the register address to start at (address field) and the number of bytes to return (number of registers to read). The DATA_SIZE field in the initialization byte for the read command is always 0b000.

The command frame travels to all devices in the daisy chain, but only the device with COMM_CTRL[STACK_DEV] = 1 will respond. During the response, the device with COMM_CTRL[TOP_STACK] = 1 will return the response frame first. Each device (address N) in the stack waits until the device above (address N+1) responds before appending its response frame. The CRC is validated while receiving the responses. If a CRC error occurs in the response frame from address N+1, device N does not append its message and an invalid CRC fault is generated.

Use \$\textsup 9-29\$ with the example of using reading 16 cell voltages from \$1 to \$3\$. The response to this command is 3 separate response frames (one response frame per device), each frame with a total length of 38 bytes (32 data bytes + 6 protocol bytes). Although the stack read command does not contain the device address field, each response frame will contain the corresponding device address field associating the data to a particular device. The host will receive a response frame from \$3 first (ToS), following with a response frame from \$2, and finally the response frame from \$1.

Stack Write:

The COMM_CTRL[STACK_DEV] must be configured before using this command. A stack write command enables the host to update up to eight consecutive registers for the stack devices (that is, device with COMM_CTRL[STACK_DEV] = 1) with one command. The command frame must contain the register address to start at (address field) and the data bytes to write to the registers. The DATA_SIZE field in the initialization frame is the number of registers to update.

The command frame travels to all devices in the daisy chain, but only the device with $COMM_CTRL[STACK_DEV] = 1$ will execute the command.

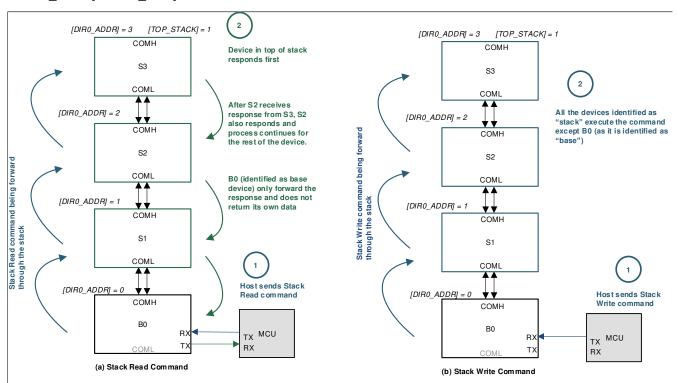


图 9-29. Stack Read/Write



表 9-15. Stack Read/Write

		Stack Read Command Sent by Host	Sta	ack Write Command Sent by Host
Example	Read 16 Cell Voltages from S1 to S3		Write OTP Unlock Code to OTP_PROG_UNLOCK1A Registers to S1, S2, and S3	
Frame Field	Data	Comments	Data	Comments
Initialization Byte	0xA0	Always 0xA0 FRAME_TYPE = 1 REQ_TYPE = 0b010 = Stack Read DATA_SIZE = 0b000	0xB3	0xB0 for 1 byte data write, 0xB1 for 2 bytes data write, 0xB2 for 3 bytes data write, and so on. For this example: FRAME_TYPE = 1 REQ_TYPE = 0b011= Stack Write
				DATA_SIZE = 0b011 = 4 bytes
Device Address	N/A	No need to include the device address byte in command frame	N/A	No need to include the device address byte in command frame
Register Address	0x0568	Start address of the register block to read (address of VCELL16_HI in this example)	0x0300	Start address of the register block to write (address of OTP_PROG_UNLOCK1A in this example)
Data	0x1F	Instruct each device to return 32 bytes of data (that is, from address 0x0568 to 0x0587), assuming each VCELLn_HI = 0x80, VCELLn_LO = 0x00, where n = 1 to 16.	0x02B7 78BC	The unlock value to OTP_PROG_UNLOCK1A to OTP_PROG_UNLOCK1D
CRC	0x5C2D		0x0BD7	

9.3.6.1.1.2.2.3 Broadcast Read/Write

Broadcast Read:

The device address and [TOP_STACK] bit must be configured before using this command. A broadcast read command generates a number of response frames depending on the number of devices in the daisy chain (both stack and base devices), whose length depends on the requested number of register bytes read. The broadcast read command frame must contain the register address to start at (address field) and the number of bytes to return (number of registers to read). The DATA_SIZE field in the initialization byte for the read command is always 0b000.

The command frame travels to all devices in the daisy chain, every device will respond. During the response, the device with *COMM_CTRL[TOP_STACK]* = 1 will return the response frame first, each device (address N) in the stack waits until the device above (address N+1) responds before appending its response frame. The CRC is validated while receiving the responses. If a CRC error occurs in the response frame from address N+1, device N does not append its message and an invalid CRC fault is generated.

Use 表 9-16 with the example of reading 16 cell voltages from B0 to S3. The response to this command is 4 separate response frames (one response frame per device), each frame with a total length of 38 bytes (32 data bytes + 6 protocol bytes). Although the broadcast read command does not contain the device address field, each response frame will contain the corresponding device address field, associated the data to a particular device. The host will receive the response frame from S3 first (ToS), following with the response frame from S2, then S1, and finally the response frame from B0.

Broadcast Write:

This command can be used without auto-addressing. A broadcast write command enables the host to update up to eight consecutive registers for all devices in the daisy chain with one command. The command frame must contain the register address to start at (address field) and the data bytes to write to the registers. The DATA_SIZE field in the initialization frame is the number of registers to update.

The command frame travels to all the devices in the daisy chain, and every devices in the daisy chain will execute the command.

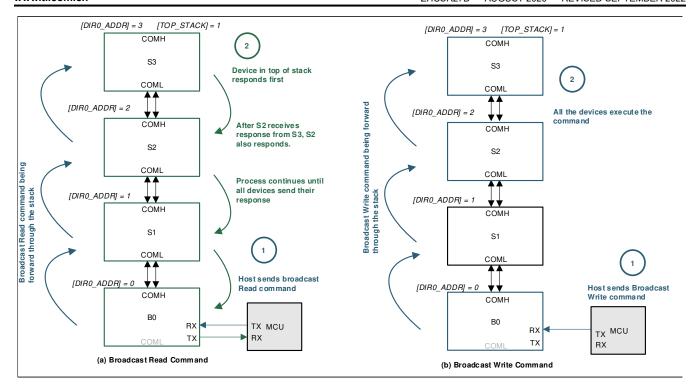


图 9-30. Broadcast Read/Write

表 9-16. Broadcast Re	ad/Write
----------------------	----------


	Bre	oadcast Read Command Sent by Host	Broa	dcast Write Command Sent by Host
Example	Read 16 Cell Voltages from B0 to S3			llock Code to OTP_PROG_UNLOCK1A to 1D Registers to B0, S1, S2, and S3
Frame Field	Data	Comments	Data	Comments
Initialization Byte	0xC0	Always 0xC0 FRAME_TYPE = 1 REQ_TYPE = 0b100 = Broadcast Read DATA_SIZE = 0b000	0xD3	0xD0 for 1 byte data write, 0xD1 for 2 bytes data write, 0xD2 for 3 bytes data write, and so on. For this example: FRAME_TYPE = 1 REQ_TYPE = 0b101= Broadcast Write DATA_SIZE = 0b011 = 4 bytes
Device Address	N/A	No need to include the device address byte in command frame	N/A	No need to include the device address byte in command frame
Register Address	0x0568	Start address of the register block to read (address of VCELL16_HI in this example)	0x0300	Start address of the register block to write (address of OTP_PROG_UNLOCK1A in this example)
Data	0x1F	Instruct each device to return 32-bytes of data (that is, from address 0x0568 to 0x0587), assuming each VCELLn_HI = 0x80, VCELLn_LO = 0x00, where n = 1 to 16.	0x02B7 78BC	The unlock value to OTP_PROG_UNLOCK1A to OTP_PROG_UNLOCK1D
CRC	0x422D		0x6BD1	

9.3.6.1.1.2.2.4 Broadcast Write Reverse Direction

Usually, device is expecting to receive communication based on the [DIR_SEL] setting. If a device receives communication frame opposite to the [DIR_SEL] setting, such as receiving command frame from COMH while [DIR_SEL] = 0, it will flag the communication as error. The broadcast write reverse direction is a command used to change flip the [DIR_SEL] setting when host needs to switch the daisy chain communication direction. This command is expected to receive from an opposite direction than the [DIR_SEL] setting during reverse communication direction procedure. See † 9.3.6.1.3.4 for details.



Although the broadcast write reverse direction is allowed to write any register value to the device, it is not recommended to write any other register setting other than the CONTROL1[DIR_SEL] to avoid communication collisions. Communication collisions are not detected and result in corrupted communication on the stack interface.

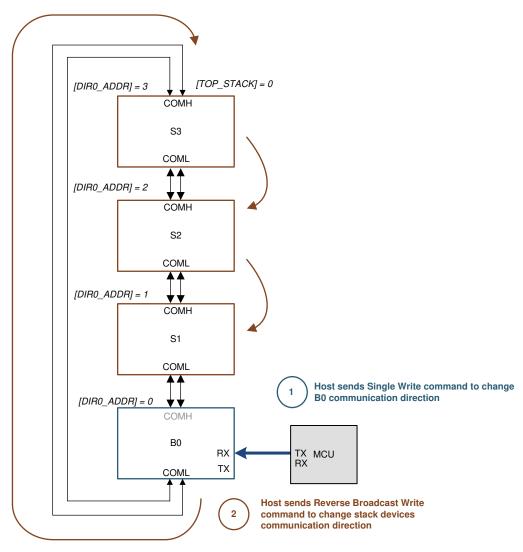

Reverse Broadcast Write Command

图 9-31. Broadcast Write Reverse Direction

表 9-17. Broadcast Write Reverse Direction

		Broadcast Write Reverse Direction Command Sent by Host		
Example		Set the [DIR_SEL] = 1 on All Devices in the Daisy Chain		
Frame Field	Data Comments			
Initialization Byte	0xE0	Always 0xE0 FRAME_TYPE = 1 REQ_TYPE = 0b110 = Broadcast Write Reverse Direction DATA_SIZE = 0b000		
Device Address	N/A	No need to include the device address byte in command frame		
Register Address	0x0309	Address of CONTROL1 register		
Data	0x80	Set CONTROL1[DIR_SEL] = 1		
CRC	0xC014			

9.3.6.1.2 Daisy Chain Interface

The daisy chain communication is created using differential signaling to minimize Electro-Magnetic Susceptibility (EMS) and Bulk Current Injection (BCI) immunity. The differential communication transmits true and complement data on the COM*P and COM*N pins, respectively. In a multiple device stack, there are configurations where the devices are physically located on the same board or located in entirely separate packs connected with twisted-pair wiring.

The device supports the use of transformers or capacitors to electrically isolate the signals between devices in the stack. For applications that have multiple devices on the same PCB, a single level-shifting capacitor is connected between the COMH/L pins of the devices. For extremely noisy environments, additional filtering may be necessary. For devices that are separated by cabling, additional isolation components are used. See 节 10 for specific details on selecting components.

9.3.6.1.2.1 Daisy Chain Transmitter and Receiver Functionality

The daisy chain is bi-directional and half duplex, and, therefore, has a transmitter (TX) and receiver (RX) on the COMH and COML interfaces. The TX and RX functions are controlled automatically by the hardware based on the device's base/stack detection. When a WAKE ping/tone is received, the communication direction is set by CONTROL1[DIR_SEL] and the COMM_CTRL[TOP_STACK] configurations. See † 9.3.6.1.3 for details. Additionally, a user overwrite to take over the complete control of the COMH and COML is available under communication debug mode using the DEBUG_CTRL_UNLOCK, DEBUG_COMM_CTRL1, and DEBUG_COMM_CTRL2 registers. See † 9.5.4.14 for details.

9.3.6.1.2.2 Daisy Chain Protocol

The differential daisy chain (vertical) interface uses an asynchronous 13-bit byte-transfer protocol. Data is transferred LSB first and every bit is duplicated (with a complement) to ensure the transmission has no DC content.



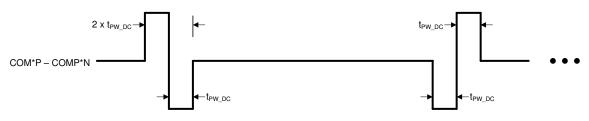


图 9-32. Daisy Chain Bit Definition

A byte starts with a Preamble, followed by two SYNC bits, a start-of-frame bit, eight data bits starting from the LSB D0 to MSB D7 (D0 is transmitted just after State-Of-Frame and D7 comes last before the Byte Error and Postamble).

The device extracts timing information using the Preamble and SYNC bits to decode the rest of the bit value in the byte. If any of the following errors is detected, the byte is not processed and register error bit is set.




- The Preamble and SYNC bits are known values, if the decoded value has error, the DEBUG_COMH/ L_BIT[SYNC1] = 1 depends on which COM port receives this data.
- If timing extracted from the Preamble and SYNC bits is outside of the expected range, the DEBUG_COMH/ L_BIT[SYNC2] = 1.

Once the two valid SYNC bits are received, the additional bits are decoded and sent to the command processor. The device continues to detect any error on this byte, and if error is detected, the Byte Error (BERR) bit will be set in this byte. The <code>DEBUG_COMH/L_BIT[PERR]</code> = 1 depends on which COM port detects the error. The following condition will set the BERR bit in the byte.

• Not sufficient samples to indicate the logic level of a bit. That is, a bit is decoded as not a strong 1 or strong 0. The DEBUG_COMH/L_BIT[BIT] = 1 depends on which COM port detects the error.

In the meantime, each bit is still being retransmitted to the next device. If the device is unable to decode a 1 or a 0 for the bit, it will retransmit with 0 with the BERR bit set in the byte. When the new device detects the BERR bit is set to 1 in the receiving byte, it will ignore the questionable byte and set the <code>DEBUG_COMH/L_BIT[BERR_TAG]</code> = 1, indicating a byte is received with BERR. The questionable byte being ignored is likely to cause other communication errors and is likely to trigger the <code>DEBUG_COMH/L_BIT[PERR]</code> = 1 being set in the new device as well. The questionable byte continues to be retransmitted up the daisy chain with BERR set and the process continues.

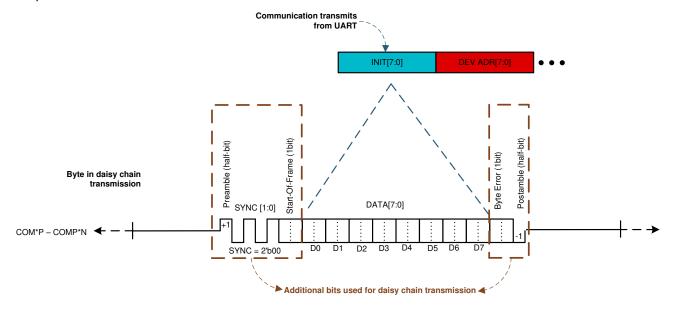

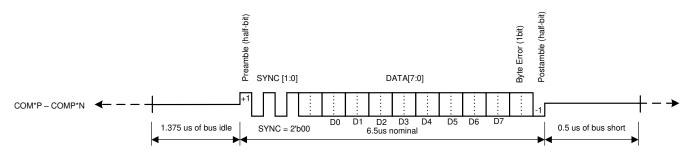


图 9-33. Daisy Chain Byte Definition

表 9-18. Daisy Chain Byte Definition

Bit Field	Description
Preamble (half-bit)	Indicates a start of transaction, signaling the receiver to start sampling. This half-bit and the following two SYNC bits are used to extra timing information.

表 9-18. Daisy Chain Byte Definition (continued)

Bit Field	Description
SYNC[1:0]	Always 0b00. The SYNC bits are used for the digital to assess the timing and noise level on the byte, improving the detection of a 1 and 0 in a noisy environment.
Start-Of-Frame (1-bit)	The Start-Of-Frame (SOF) bit indicates the follow-on data byte is the initialization byte, a start of a communication transaction frame. Stack device needs this information to process the communication. For command frame transaction, the base device is responsible to set the SOF bit as it translates the UART communication to the daisy chain communication. The initialization byte contains data size information. Based on the data size information, the base device would count the number of bytes received and set the next SOF bit accordingly. The UART COMM CLEAR signal resets the UART receiver which includes the frame handling of the logic. Hence, the next byte after COMM CLEAR must have SOF set to 1 because the COMM CLEAR indicates the system clears UART and re-starts the communication.
Data[7:0]	The actual byte of the communication transaction frame
Byte Error BERR (1-bit)	Indicates an error detected in this byte. When a device receives a byte with BERR set by the lower device, it will retransmit the byte also with <i>BERR</i> = 1. Because each data bit is re-clocked from one device to the next, the next device may not detect a communication error. However, the tag of the [BERR] bit would indicate this communication frame has an error during its previous transaction.
Postamble (half- bit)	Indicates the end of transaction

Each byte is transmitted at 2 MHz (250 ns per pulse or 500 ns per couplet). The time between each byte depends on the UART baud rate (1 Mbps in normal operation), but the byte time is always the same. The communication frame is defined with idle time between byte. In some rare cases, communication signal may not terminate cleanly, leaving ringing at the end of a byte. In such case, increasing the byte to byte gap can improve the communication robustness. The device allows additional byte gap insert between bytes in the response frame through STACK_RESPONSE register setting.

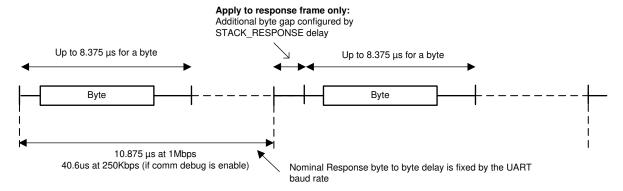


图 9-34. Daisy Chain Byte Transfer

9.3.6.1.3 Start Communication

From SHUTDOWN or after device reset, host follows the following steps to bring up the devices for communication.

- Host sends a WAKE ping to reset or bring the devices to ACTIVE mode. In this process, the devices in the
 daisy chain will configure their own COMH and COML ports based on their position in the daisy chain (base
 device or stack device)
 - After this step, the broadcast write is supported.
- Host performs auto-addressing to assign a device address to each device
 - After this step, the broadcast read/write and single device read/write are supported.
- Host configures the COMM_CTRL[STACK_DEV] and [TOP_STACK] bits. The Top of Stack (ToS) device will
 disable its transmitter of the COMH (or COML based on communication direction)
 - After this step, all commands, broadcast read/write, single device read/write, and stack read/write are supported.



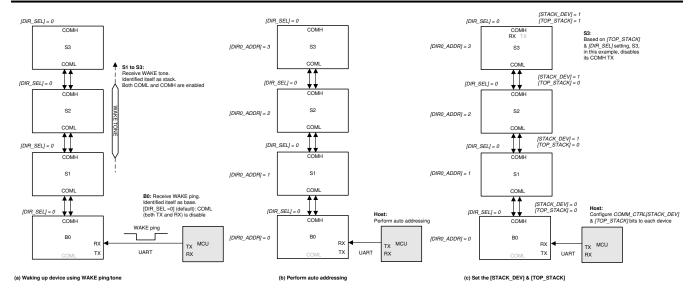


图 9-35. Configure Device for Communication

9.3.6.1.3.1 Identify Base and Stack

A WAKE ping/tone is used for the device to identify its position in the daisy chain.

- · Base device: a device interfaces with host through UART
- Stack device: a device interfaces with the base device through COMH and COML

A base device will be woke up by a WAKE ping through RX pin, while a stack device will be woke up by WAKE tone via the COMH/COML port. Hence, a device is using a WAKE ping or WAKE tone to identify itself as base or stack. This information is stored in the AVAO_REF block which is available in all power modes and is refreshed whenever a WAKE ping/tone is received.

Using the CONTROL1[DIR_SEL] setting, a base device will disable the unused daisy chain ports (transmitter and receiver). If host changes the CONTROL1[DIR_SEL] setting, the base device will reconfigure its COMH/COML.

备注

The host starts communication at least 100 µs after changing the [DIR_SEL] setting to ensure the device finishes the COMH/COML reconfiguration.

9.3.6.1.3.2 Auto-Addressing

Every device must have a unique device address for the read protocol to work. If, for any reason, two devices are assigned with the same device address, it is likely that broadcast and stack reads do not work. Additionally, single device read to the doubled address results in destroyed communication.

The default device address, assuming the device address in OTP is not programmed, is 0x00. For a host to talk to a standalone device (that is, a stack consisting with only one device), host can simply use the default 0x00 device address. Otherwise, device address follows the rules below:

- Base device address can start with any value, it is not necessary for it to be 0x00
- All device addresses must be sequential. That is, if base is 0x00, the next device must be 0x01, and next must be 0x02, and so on.

Before starting the auto-addressing procedure, all devices must be in ACTIVE mode. In this state, the device will only be able to process broadcast write command, which will be the command used for the auto-addressing procedure. Based on the *CONTROL1[DIR_SEL]* setting, the auto-addressing procedure sets up the device address to either *DIR0_ADDR* register (when [DIR_SEL] = 0) or *DIR1_ADDR* register (when [DIR_SEL] = 1).



9.3.6.1.3.2.1 Setting Up the Device Addresses

The CONTROL1[ADDR_WR] bit enables the auto-addressing mode. In this mode, the device turns off its COMH/COML (depends on the [DIR_SEL] setting) transmitter for one communication frame (following the auto-addressing procedure, that will be its own device's address), clear the CONTROL1[ADDR_WR] = 0. When the next communication is received (following the auto-addressing procedure, it will be the next device's address), the device will forward the communication to the next device.

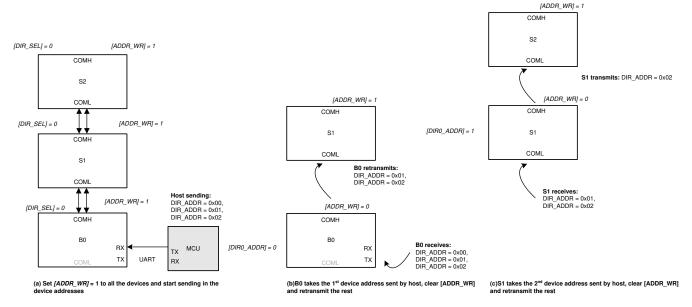


图 9-36. Auto-Addressing

9.3.6.1.3.2.2 Setting Up COMM CTRL[STACK DEV] and [TOP STACK]

The last procedure in the auto-addressing is to configure the COMM_CTRL[STACK_DEV] and [TOP_STACK] settings. These bits need to be configured for the broadcast read and stack read/write to work properly.

- Base device: [STACK DEV] = 0 and [TOP STACK] = 0
- Stack devices (except ToS device): [STACK_DEV] = 1 and [TOP_STACK] = 0
- ToS device: [STACK_DEV] = 1 and [TOP_STACK] = 1

表 9-19 shows the auto-addressing steps, assuming *CONTROL1[DIR_SEL]* = 0 (that is, each device will be set up to transmit command frame sent by host from its COML to COMH).

表 9-19. Auto-Addressing

Step	Procedure
1	This step is required if a device reset has occurred before performing the auto-addressing procedure. Dummy Write to synchronize all daisy chain devices DLL (delay-locked loop) ramp in write direction. Host sends broadcast write to write 0x00 to ECC_DATA1 to ECC_DATA8 registers.
2	Enable auto-addressing procedure. Host sends broadcast write to set CONTROL1[ADDR_WR] = 1.
3	Sending in the device addresses. Host sends broadcast write to set the consecutive addresses to DIRO_ADDR[ADDRESS5:0]. With an example of a total of three devices in a daisy chain:
	1. Send broadcast write to DIR0_ADDR register with data 0x00.
	2. Send broadcast write to DIR0_ADDR register with data 0x01.
	3. Send broadcast write to DIR0_ADDR register with data 0x02.



表 9-19. Auto-Addressing (continued)

Step	Procedure
4	Set up the COMM_CTRL[STACK_DEV] and [TOP_STACK] bits for each device. Option 1: Host sends single device write to each device to set the proper [STACK_DEV] and [TOP_STACK] values. Option 2 (less communication steps):
	1. Host sends broadcast write to set [STACK_DEV] = 1 and [TOP_STACK] = 0.
	2. Host sends single device write to base device (device address 0x00 in this example) with [STACK_DEV] = 0.
	3. Host send single device write to the ToS device address 0x02 in this example) with [TOP_STACK] = 1.
5	This step is required if a device reset has occurred before performing the auto-addressing procedure. Dummy read to synchronize all daisy chain devices DLL ramp in read direction. Host sends broadcast read to read ECC_DATA1 to ECC_DATA8registers. Host may not receive all of the data as this step synchronizes the DLL.
7	Recommended as good practice. Use broadcast read to read <i>DIRO_ADDR</i> registers to read back all device addresses to ensure all devices are addressed properly.
8	If the dummy write and dummy read steps are performed to synchronize the DLL, it is normal if communication fault is triggered. Clear the fault registers if that is the case.

9.3.6.1.3.2.3 Storing Device Address to OTP

The device uses *DIRO_ADDR* (used with *[DIR_SEL]* = 0) and *DIR1_ADDR* (used with *[DIR_SEL]* = 1) registers for its device address. In the auto-addressing procedure, device address is written to one of these registers and the new device address takes effect immediately.

The host has an option to program the device addresses for the [DIR_SEL] = 0 and 1 directions to the OTP, allowing the programmed addresses to be loaded whenever the device is reset. To program the device address to OTP, host writes the desired address to the OTP shadow registers, DIRO_ADDR_OTP (used when [DIR_SEL] = 0) and DIR1_ADDR_OTP (used when [DIR_SEL] = 1) and performs OTP programming. These two shadow registers only reflect the value programmed in OTP or use for the host to program the desired value to OTP. These two shadow registers are not the device address setting during communication. See † 9.3.6.3.2 for programming details.

9.3.6.1.3.3 Synchronize Daisy Chain DLL

When device is reset or enter ACTIVE from SLEEP. MCU should perform dummy write and read to synchronize the DLL on the daisy chain devices.

In the device reset case, if device address is not programmed in OTP. MCU must perform an auto-address. The DLL synchronization is part of the step. If device address is programmed in OTP, auto-address is not required after device reset. However, MCU should perform a dummy write and dummy read steps shown in 表 9-19, step1 and step5 to synchronize the DLL.

When device goes from SLEEP to ACTIVE using SLEEPtoACTIVE signal, the device is not reset. However, it is recommend to do a 1-data-byte dummy write and read to ensure robustness. Follow the similar dummy write and read steps in Table 21, but only write and read to OTP_ECC_DATAIN1.

9.3.6.1.3.4 Ring Communication

The daisy chain communication for the device uses a Ring architecture. In this architecture, a cable break between two devices does not prevent communication to all upstream devices as in a normal non-Ring scheme. When the host detects a broken communication, the device allows the host to switch the communication direction to communicate with devices on both sides of the break. This allows for safe operation until the break in the lines is repaired.

The CONTROL1[DIR_SEL] controls the communication direction. The devices will reconfigure the COMH and COML ports depending on the [DIR_SEL] and the [TOP_STACK] settings. Auto-addressing procedure is needed to re-address the device address for the reverse communication direction.

Example to change the communication direction to [DIR SEL] = 1 to the entire daisy chain:

1. Host sends Single Device Write to change the base device [DIR_SEL] = 1. The base device will disable its COMH and enable its COML.

www.ti.com.cn

- 2. Host sends Broadcast Write Reverse Direction to clear the COMM_CTRL register settings on all devices.
- 3. Host sends Broadcast Write Reverse Direction to change the rest of the devices' [DIR_SEL] = 1. In this step, the entire daisy chain set up to transmitting communication in the [DIR_SEL] = 1 direction (that is, each device set up to transmit command frames sent by host from its COMH to its COML).
- 4. Host performs auto-addressing procedure to set up device address in the *DIR1_ADDR* register. Unless the devices have been reset, host can skip the dummy read/write steps to synchronize the DLL in the auto-addressing procedure.
- 5. Host sets up the new Top of Stack device and the new ToS device will disable its COML transmitter.


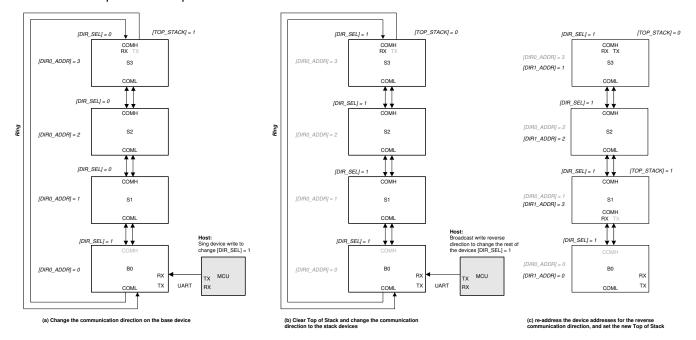


图 9-37. Example to Change Communication Direction in Daisy Chain

Once the device address in both communication directions is set up, host can skip auto-address step when switching communication direction.

In a broken cable case, host follows the same procedure to change the communication direction. To access all devices in the daisy chain, host will have to communicate with $[DIR_SEL] = 0$ on some devices and communicate with $[DIR_SEL] = 1$ on other devices in the daisy chain. The chain will also have two ToS devices, one for each communication direction.



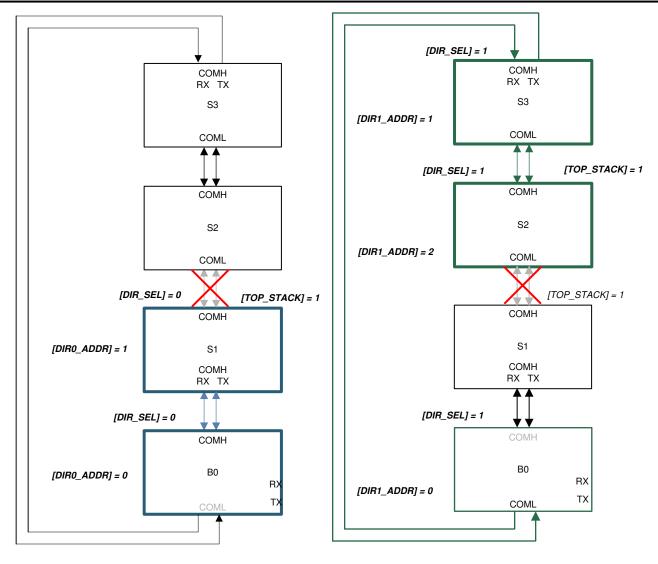

(a) Use [DIR_SEL] = 0 direction to communicate to S1

(a) Use [DIR SEL] = 1 direction to communicate to S3 and S2

图 9-38. Using Ring Architecture to Access All Devices in a Broken Cable Case

9.3.6.1.4 Communication Timeout

There are two programmable communication timeout thresholds, CTS timer and CTL timer, that monitor the absence of a valid frame from either UART or daisy chain communication. A valid frame is defined as any frame (response or command) that does NOT contain any errors that prevent the frame from being processed. The communication timeouts are only actively counting while in ACTIVE mode. The counters are disabled and reset during SHUTDOWN mode. In SLEEP mode, the last counter values are held frozen.

9.3.6.1.4.1 Short Communication Timeout

The short communication timeout acts like an alert to the host when triggered. The timeout period is programmable through the COMM_TIMEOUT_CONF[CTS_TIME2:0] bits. If enabled, the timer is reset every time a valid response or command frame is received. If the timer expires, the FAULT_SYS[CTS] bit is set.

9.3.6.1.4.2 Long Communication Timeout

The long communication timeout allows the host to put the device in SLEEP or SHUTDOWN mode for power saving. The timeout period is programmable through COMM_TIMEOUT_CONF[CTL_TIME2:0] bits. If enabled, the timer is reset every time a valid response or command frame is received. If the timer expires, host can choose one of the following actions through COMM_TIMEOUT_CONF[CTL_ACT] bit.

www.ti.com.cn

- Set FAULT SYS[CTL] = 1 and enter SLEEP mode.
- Enter SHUTDOWN mode.

9.3.6.1.5 Communication Debug Mode

The device provides a communication debug mode to ease the initial development phase. To enter this debug mode, host writes an unlock code 0xA5 to register DEBUG_CTRL_UNLOCK. Once the debug mode is unlocked, the settings in DEBUG COMM CTRL1 and DEBUG COMM CTRL2 become effective.

To exit the debug mode simply write any value but 0xA5 (for example, writing 0x00) to the DEBUG CTRL UNLOCK. The COMH, COML, and UART will return to their normal operation status regardless of the settings in the DEBUG COMM CTRL1 and DEBUG COMM CTRL2 registers.

Once the communication debug mode is entered, the host gains control of the following:

表 9-20. Communication Debug Mode Functions

Control Function	Enable Bit	Description
Full COMH/L transmitter and receiver control	[USER_DAISY_EN]	If [USER_DAISY_EN] = 1, device will enable or disable its COMH/L transmitter and receiver based on the DEBUG_COMM_CTRL2 register setting. If [USER_DAISY_EN] = 0, COMH/L will be in its normal operation status even under communication debug mode.
Mirror out the data in daisy chain onto UART	[USER_UART_EN]	If [USER_UART_EN] = 1, host can set [UART_MIRROR_EN] = 1 to instruct the device to translate the daisy chain onto the UART, allowing host to read the data being received or forwarded in the daisy chain from the UART interface. Data will be presented in UART communication frame format. For stack devices, the UART TX is disabled by default. To use this feature, host also sets [UART_TX_EN] = 1. If [USER_UART_EN] = 0, any UART related debug functions are disabled. The UART will be in its normal operation status regardless of the [UART_MIRROR_EN] and [UART_TX_EN] settings.
Slow down UART baud rate to 250 kbps	[USER_UART_EN]	If [USER_UART_EN] = 1, host can set [UART_BAUD] = 1 to change the UART baud rate to 250 kbps. This will result in slow throughput rate on the daisy chain. If [USER_UART_EN] = 0, UART baud rate will stay on 1 Mbps regardless of the [UART_BAUD] setting.

The DEBUG COMM STAT register has status bits indicating if UART and COMH/L are under user or hardware (device) control. The register also indicates the status of the COMH/L transmitter and receiver. This debug status register is updated per device status and is readable with or without the communication debug mode enabled.

In fact, the read-only debug registers are all readable in ACTIVE mode without communication debug mode enabled. Most of them are lower level communication fault status registers to provide extra information in a communication failure event like the DEBUG_UART*, DEBUG_COMH*, and DEBUG_COML* registers. See 🕆 9.3.6.2 and \ddagger 9.5.4 for more details.

9.3.6.1.6 Multidrop Configuration

A multidrop configuration is a configuration of multiple devices in a system communicating through UART to the host system. There is no daisy chain communication between devices. When [MULTIDROP] = 1, the device COMH and COML ports are disabled. All the communication protocols, single device read/write, broadcast read/ write, stack read/write, reverse broadcast write are still supported as in daisy chain configuration (that is, [MULTIDROP] = 0). However, in a multidrop configuration, it is unlikely to have a use of the stack and reverse broadcast commands. If broadcast command is used, it is still required to set up the devices with sequential device address and set the [TOP STACK] bit on the device with highest device address. The device with [TOP STACK] = 1 will initiate the data return when a broadcast read command is received, and the device with one lower device address will respond next, as in a daisy chain communication. Additionally, a COMM CLR must be used before every frame to ensure consistent communication in multidrop configuration.

9.3.6.1.7 SPI Master

The GPIO4 thru GPIO7 are configurable as a SPI master interface when GPIO_CONF1[SPI_EN] = 1. The SPI master includes four I/Os:

SCLK: SPI clock, generated by the device and is used for synchronization



- MOSI: Master data output, driven by the device to output data to slave
- MISO: Master data input, detecting data from slave
- SS: slave select, driven by the device during SPI communication.

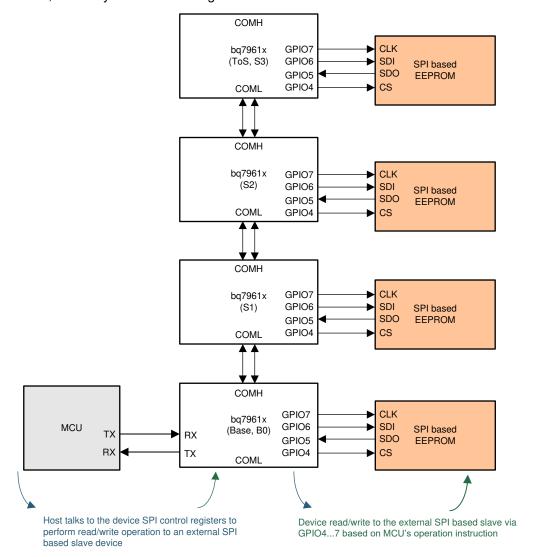


图 9-39. SPI Master Stack Configuration

The *SPI_CONF[CPOL]* (clock polarity) and *[CPHA]* (clock phase) define the SPI clock format. The *[CPOL]* is defined if the SPI clock is inverted or non-inverted. The *[CPHA]* is defined if the MISO and MOSI are sampled on the leading (first) clock edge or on the trailing (second) clock edge, regardless of whether that clock edge is rising or falling. The *SPI_CONF[NUMBIT4:0]* defines how many bits the transaction is (1-bit to 24-bit transaction).



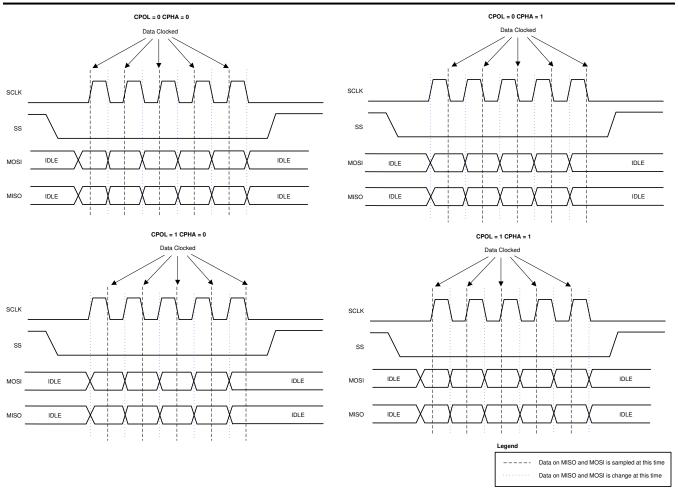


图 9-40. SPI Master CPOL and CPHA

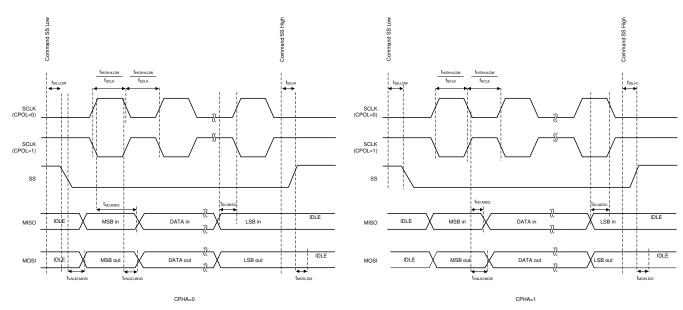


图 9-41. SPI Master Timing Diagram



表 9-21. Write to External SPI Slave

Step	Description
1	Configure the SPI clock polarity, clock phase, number of bit transactions: a. Write to SPI_CONF register to configure SPI communication
2	Write the data (from 1 to 24 bits, specified in the SPI_CONF[NUMBIT4:0] setting): a. Set up the data to send to SPI slave to the SPI_TX1 to SPI_TX3 registers b. SPI_TX1 is the LSByte and SPI_TX3 is MSByte
3	Select the slave (assuming active low) and execute the SPI write action: a. Send SPI_EXE register = 0x01 (that is, [SS_CTRL] = 0 and [SPI_GO] = 1)
4	Wait for the SPI communication to complete
5	Deselect the SS port (assuming active low, so deselecting means pull the SS pin high): a. Send SPI_EXE register = 0x02 (that is, [SS_CTRL] = 1 and [SPI_GO] = 0)

表 9-22. Read from External SPI Slave

Step	Description
1	Configure the SPI clock polarity, clock phase, number of bit transactions: a. Write to SPI_CONF register to configure SPI communication
2	Select the slave and execute the SPI communication: a. Send SPI_EXE register = 0x01 (that is, [SS_CTRL] = 0 and [SPI_GO] = 1)
3	Wait for the data transaction to complete
4	Read the data (from 1 to 24 bits, specified in the SPI_CONF[NUMBIT4:0] setting): a. Read data from SPI slave from the SPI_RX1 to SPI_RX3 registers b. SPI_TX1 is the LSByte and SPI_TX3 is MSByte
5	Deselect the SS port (assuming active low, so deselecting means pull the SS pin high): a. Send SPI_EXE register = 0x02 (that is, [SS_CTRL] = 1 and [SPI_GO] = 0)

9.3.6.1.8 SPI Loopback

The SPI master has a loopback function that is enabled using the <code>DIAG_COMM_CTRL[SPI_LOOPBACK]</code> bit. When enabled, the byte in the <code>SPI_TX*</code> registers are clocked directly to the MISO pin of the SPI master to verify the SPI master functionality. This is performed internally, so no external connection is needed to run this test. This verifies that the SPI function is working correctly. The <code>SPI_CFG</code>, <code>SPI_TX*</code>, and <code>SPI_EXE</code> registers are written as a normal SPI transaction, but the external pins do not toggle during this mode. That is, the external pins stay static in their last state and do not change state during the loopback operation.

The expected result of the test is that the byte in the SPI_TX* register is read into the SPI_RX* register. The SS pin is latched to the setting in SPI_EXE[SS_CTRL] that existed when the LOOPBACK mode was enabled. The CPHA and CPOL parameters must be set before entering LOOPBACK mode to ensure proper operation. Changing the CPOL or CPHA parameters while in LOOPBACK mode may result in errant pulses on the SPI outputs and is not recommended.

9.3.6.2 Fault Handling

9.3.6.2.1 Fault Status Hierarchy

The device monitors multiple types of faults such as:

- Battery cell monitoring through the hardware protector, like cell OV/UV, cell OT/UT, and so on
- · System operation driven like device reset, communication timeout, thermal warning, and so on
- Command-based diagnostic check related like the various comparison through the main and AUX ADCs, BIST run, and so on
- Automatic diagnostic check running in the background like the internal power supplies, OTP CRC, and so on
- · Communication fault.

Each bit in the FAULT_SUMMARY register represents a group of faults which are stored in one or more lower level fault registers. The FAULT_SUMMARY register represents the highest hierarchy level of fault status detected by the device. Host system can periodically poll the FAULT_SUMMARY register to check the fault status and only read the lower level fault registers if needed (for example, if FAULT_SUMMARY[FAULT_OVUV]

= 1, host can read FAULT_OV1/2 and FAULT_UV1/2 registers to determine which cell channel triggered the fault).

 \gtrsim 9-23 shows which lower level register corresponds to the *FAULT_SUMMARY* register bit. The description of the register is covered in the \dagger 9.5.

表 9	9-23.	Low-L	.evel	Fault	Registers
-----	-------	-------	-------	--------------	-----------

FAULT_SUMMA RY Bit Name	FAULT_PROT	FAULT_COMP_ADC	FAULT_OTP	FAULT_COMM	FAULT_OTUT	FAULT_OVUV	FAULT_SYS	FAULT_PWR
Lower level register name	FAULT_PROT 1	FAULT_COMP_GPIO	FAULT_OTP (1)	FAULT_COMM1	FAULT_OT	FAULT_OV1	FAULT_SYS	FAULT_PWR1
	FAULT_PROT	FAULT_COMP_VCCB1		FAULT_COMM2	FAULT_UT	FAULT_OV2		FAULT_PWR2
		FAULT_COMP_VCCB2		FAULT_ COMM3		FAULT_UV1		FAULT_PWR3
		FAULT_COMP_VCOW1				FAULT_UV2		
		FAULT_COMP_VCOW2						
		FAULT_COMP_CBOW1						
		FAULT_COMP_CBOW2						
		FAULT_COMP_CBFET1						
		FAULT_COMP_CBFET2						
		FAULT_COMP_MISC						

⁽¹⁾ Some of the bits in the FAULT_COMM1/2 and FAULT_OTP registers have a lower level of fault information than shown in the DEBUG_COMM* and DEBUG_OTP registers.

9.3.6.2.1.1 Debug Registers

The *DEBUG_COMM** and *DEBUG_OTP* registers are a form of fault status showing lower hierarchy level of fault information for some of the bits in *FAULT_COMM1*, *FAULT_COMM2*, and *FAULT_OTP*.

表 9-24 shows the hierarchy relationship. See 节 9.5 for the register description details.

表 9-24. Debug Registers

Low-level Fault Register		Low-level Register Bit	Associated DEBUG Registers
	[UART_RC]	Fault related to received command frame from UART	DEBUG_UART_RC
FAULT_COMM1	[UART_RR] [UART_TR]	Fault related to received or transmitted response frame from UART	DEBUG_UART_RR_TR
	[COMH_BIT]	Fault related to error in a byte from COMH	DEBUG_COMH_BIT
	[COMH_RC]	Fault related to received command frame from COMH	DEBUG_COMH_RC
FAULT COMM2	[COMH_RR] [COMH_TR]	Fault related to received or transmitted response frame from COMH	DEBUG_COMH_RR_TR
TAOLI_COMM2	[COML_BIT]	Fault related to error in a byte from COML	DEBUG_COML_BIT
	[COML_RC]	Fault related to received command frame from COML	DEBUG_COML_RC
	[COML_RR] [COML_TR]	Fault related to received or transmitted response frame from COML	DEBUG_COML_RR_TR
FAULT OTP	[SEC_DET]	Single error correction in OTP	DEBUG_OTP_SEC_BLK
TAULI_UTF	[DED_DET]	Double error correction in OTP	DEBUG_OTP_DED_BLK

9.3.6.2.2 Fault Masking and Reset

9.3.6.2.2.1 Fault Masking

When a device detects a fault, the corresponding low-level register bit, including the one in the related bit in the *DEBUG_** registers is set. Based on the fault hierarchy relationship, the fault will be reflected in the *FAULT SUMMARY* register.

A group of faults can be masked, which the related low-level register flag will still be set, but the fault will not be reflected to the corresponding *FAULT_SUMMARY* register. The faults can be masked through the *FAULT_MSK1* and *FAULT_MSK2* registers.

For example, to mask the FAULT_SUMMARY[FAULT_OTUT] being set, host sets FAULT_MSK1[MSK_OT] = 1 and [MSK_UT] = 1.

When fault is masked, it will also prevent the device from asserting the NFAULT pin when the masked fault occurs. See † 9.3.6.2.3 for details on NFAULT signal.

表 9-25. Fault Masking

	Masking Bit Name	Related Low-level Register(s) Affected	FAULT_SUMMARY Register Bit That Will Be Masked		
	[MSK_PROT]	FAULT_PROT*	[FAULT_PROT]		
	[MSK_UT]	FAULT_UT	[FAULT OTUT]		
	[MSK_OT]	FAULT_OT	[PAOLI_OTOT]		
FAULT_MSK1	[MSK_UV]	FAULT_UV*	[FAULT OVUV]		
	[MSK_OV]	FAULT_OV*	[PAOLI_OVOV]		
	[MSK_COMP]	FAULT_COMP_*	[FAULT_COMP]		
	[MSK_SYS]	FAULT_SYS	[FAULT_SYS]		
	[MSK_PWR]	FAULT_PWR*	[FAULT_PWR]		
	[MSK_OTP_CRC]	FAULT_OTP[CUST_CRC][FACT_CRC]			
	[MSK_OTP_DATA]	All non-CRC bits in FAULT_OTP, DEBUG_OTP_*	[FAULT_OTP]		
	[MSK_COMM3_FCOMM]	FAULT_COMM3[FCOMM_DET]			
FAULT_MSK2	[MSK_COMM3_FTONE]	FAULT_COMM3[FTONE_DET]	[FAULT_COMM3]		
	[MSK_COMM3_HB]	FAULT_COMM3[HB_FAIL][HB_FAST]			
	[MSK_COMM2]	FAULT_COMM2, DEBUG_COMH_*, DEBUG_COML_*	[FAULT_COMM2]		
	[MSK_COMM1]	FAULT_COMM1, DEBUG_UART_*	[FAULT_COMM1]		

9.3.6.2.2.2 Fault Reset

Once fault is detected, the fault status bit is latched until cleared using the reset bit. Similar to fault masking, when the specific fault reset bit is set, the associated low-level fault registers, including the *DEBUG_** registers are cleared. The corresponding bit in the *FAULT_SUMMARY* register will clear if all its associated low-level registers are cleared. If the fault condition persists and the reset bit is written, the fault status bit is not reset. The fault indicator cannot be reset until the underlying fault condition is eliminated.

The fault is reset through the *FAULT_RST1* and *FAULT_RST2* registers; the fault reset bits are structured in the same corresponding fault status registers as the fault masking bits.

9.3.6.2.3 Fault Signaling

Host can acquire the fault status with the following methods:

- Constantly polling the FAULT_SUMMARY status on each device in the daisy chain. If FAULT_SUMMARY is non-zero, read the low-level fault status registers to obtain more information.
- Enable fault status to pass down the daisy chain to the base device. Enable base device's NFAULT pin to be asserted when the *FAULT_SUMMARY* is non-zero in any of the devices in the daisy chain. Host monitors NFAULT. When NFAULT is triggered, host does a broadcast read on the *FAULT_SUMMARY* to determine which device(s) is at fault.

When using the NFAULT pin in the base device to signal the host under a fault detection, the stack devices have to transfer their fault status information to the base device. The information is transmitted through COMH/L through the same communication cables. In ACTIVE mode, each device embeds the fault status to the communication when a response frame is forwarded. In SLEEP mode, or using Heartbeat and Fault Tone in SLEEP mode.

The NFAULT pin can be masked by configuring *DEV_CONF[NFAULT_EN]* = 0. When NFAULT is disabled, the device will set the corresponding flag in *FAULT_SUMMARY* register but will not assert NFAULT.



9.3.6.2.3.1 Fault Status Transmitting in ACTIVE Mode

In ACTIVE mode, stack devices can embed their fault status before retransmitting a response frame if $DEV_CONF[FCOMM_EN] = 1$. When the $[FCOMM_EN] = 1$, the stack devices repurpose the SOF bit in the response frame's device address byte, register address bytes (both high and low address bytes) to a fault status bit instead. See 9-42. This will be referred to as fault status bits in the rest of this section.

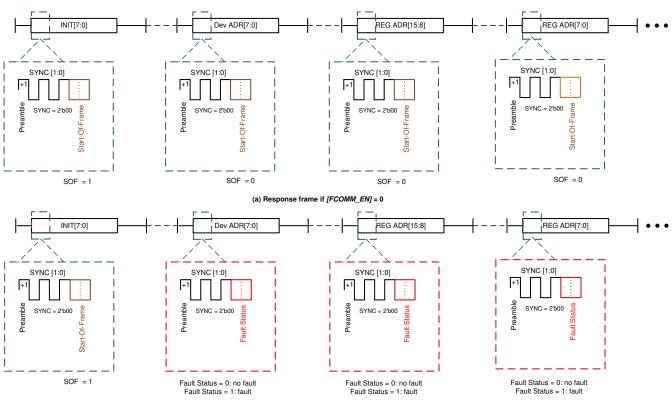


图 9-42. Embed Fault Status in Communication Response Frame

(b) Response frame if [FCOMM_EN] = 1

To pass on the fault status of the stack devices, the host sends a broadcast read or sends a single device read to the ToS device. Both types of reads will result in response frames passing through every device in the daisy chain, giving each device an opportunity to OR their fault status to the fault status bits in the response frame.

An example of a response frame going through a daisy chain from a single device read command to the top device is shown in 89-43.



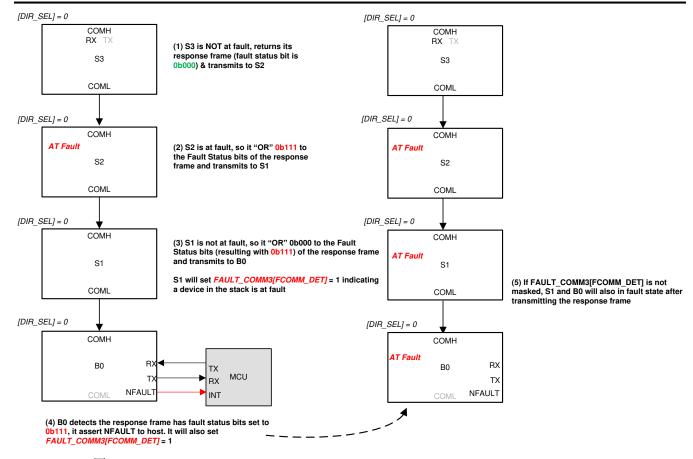


图 9-43. Transfer Fault Status in ACTIVE Mode (Respond to a Single Device Read)

When a device has no fault, it will OR the fault status bits with 0b000; otherwise, it will OR the fault status bits with 0b111. Hence, if a fault exists in any device in the daisy chain, the fault status bits will be 0b111. For the base device to assert the NFAULT pin, it requires at least two bits of the fault status bits to be 1.

Additionally, when a device detects a response frame with at least two of the fault status bits being 1, the device will also set the *FAULT_COMM3[FCOMM_DET]* = 1. If this fault is not masked, the device will be in fault state as well. Next time a response frame is transmitted, this device will OR the fault status bits with 0b111.

Host performs a broadcast read to detect which device in the daisy chain is at fault and what type of fault.


9.3.6.2.3.2 Fault Status Transmitting in SLEEP Mode

In SLEEP mode, the following fault detections are still active:

- Customer and Factory OTP shadow registers CRC check
- Device thermal warning
- · Power supplies OV, UV, and oscillation detection
- If OVUV protectors are enabled, cell OV and UV detection.
- If OTUT protectors are enabled, thermistors OT and UT detection.

Because communication is not available in SLEEP mode, the device provides an option to transmit the fault status through Heartbeat (device in no fault state) and Fault (device in fault state) Tones. These tones are transmitted in the same direction as a communication command frame, which is based on the CONTROL1[DIR_SEL] setting. For the tone signal to return back to the base device (so NFAULT can be triggered if needed), a Ring architecture must be used to support transmitting fault status in SLEEP mode.



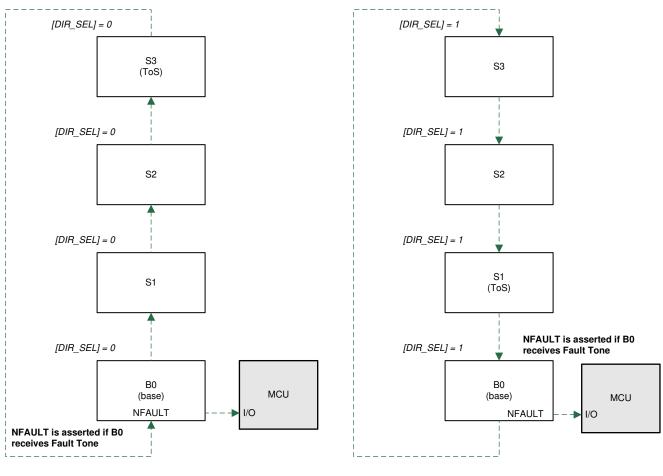

(a) Traveling direction with [DIR_SEL] = 0

(b) Traveling direction with [DIR SEL] = 1

图 9-44. Heartbeat or Fault Tone Traveling Direction


Both the Heartbeat and Fault Tones are a type of tone similar to the communication tone. One main difference is a communication tone only transmits with a single burst of couplets, but Heartbeat and Fault Tones are sent with a burst of couplets periodically. See † 9.3.6.2.3.3 for details.

9.3.6.2.3.3 Heartbeat and Fault Tone

The tones are enabled by setting DEV CONF[HB EN] = 1 and DEV CONF[FTONE EN] = 1 to enable the Heartbeat and Fault Tone transmitters, respectively. The Heartbeat and Fault Tone receivers are always on in SLEEP mode regardless of the [HB EN] and [FTONE EN] settings. To avoid fault detection (asserting NFAULT or FAULT SUMMARY register) by Heartbeat or Fault Tone fault, mask the fault by [MSK COMM3 HB] = 1 or [MSK COMM3 FTONE] = 1.

The Heartbeat and Fault Tone are formed with couplets with " - " polarity. They are differentiated by the number of couplets. Unlike communication tones, Heartbeat and Fault Tone are transmitted periodically. The period between tones is referring as Burst period. The number of couplets transmitted is always greater than the number of couplets needed for detection.



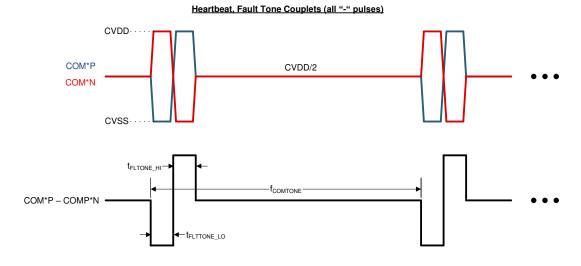

Heartbeat or Fault Tone Detection

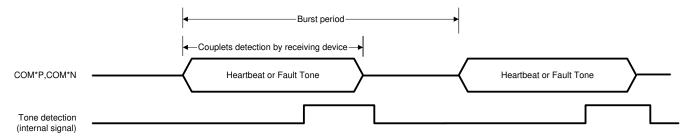


图 9-45. Heartbeat and Fault Tone

9.3.6.3 Nonvolatile Memory

There are memory locations that are programmable in nonvolatile memory (NVM) using OTP (One Time Programmable). The memory space is divided in two groups, factory space and customer space. The factory space stores the device configurations that are essential for normal operation. This space is not accessible by the host. The customer space contains the device default setting that host system can customize for their application configuration. This space is readable and programmable by the host.


When a device reset occurs, factory and customer OTP values are reloaded to their shadow registers. Error check and correction (ECC), single error correction (SEC) and double error detection (DED), are performed during the factory and customer space OTP load. The corresponding <code>FAULT_OTP[SEC_DET]</code> or <code>FAULT_OTP[DED_DET]</code> will be set if an error is detected.

Any load errors of the factory OTP space signal a fault using the FAULT_OTP[FACTLDERR]. Any load errors of the customer OTP space signal a fault using the FAULT_OTP[CUSTLDERR]. Additionally, the OTP space (factory and customer) are protected from data integrity problems using CRC. The corresponding FAULT_OTP[FACT_CRC] and [CUST_CRC] bits will be set if a CRC error is detected.

If any overvoltage error conditions exist in the OTP pages space (factory and customer) during programming, the OTP_FAULT[GBLOVERR] bit is set. Information received from the device with this error must not be considered reliable.

9.3.6.3.1 OTP Page Status

There are two unused pages of OTP memory available for the customer to program. Each page status is held in the *OTP_CUST1_STAT* and *OTP_CUST2_STAT* registers. The registers provide information on the current status of the page such as:



www.ti.com.cn

- Load status (if loaded, loaded with error, loaded but failed)
- Programmed successfully or available to be programmed
- Programmed status

When a reset occurs, the device evaluates the OTP page status and chooses the latest and valid OTP page to load. Page 2 has priority over Page 1. If both pages have not been written, the factory OTP default are loaded. 节 9.5.1 shows all customer programmable OTP parameters. The register summary also shows the default values when Customer OTP Page 1 and Page 2 are not programmed.

- A valid page is one where the OTP CUST* STAT[PROGOK] = 1.
- When the page is selected for loading, the OTP_CUST*_STAT1[LOADED] = 1.
- · If a single error occurs in the loading of the page, the page is loaded after the single error is corrected and the $OTP_CUST^*_STAT1[LOADWRN] = 1.$
 - Additionally, the DEBUG_OTP_SEC_BLK register is updated with the location of the error corrected block.
- · If a double error occurs, the loading of that block is terminated and the hardware defaults of that block are loaded (as indicated in † 9.5.1).
 - The overall page loading process is not terminated for a DED, only the affected block is terminated.
 - When a DED occurs, the OTP_CUST*_STAT1[LOADERR] = 1. Additionally, the DEBUG_OTP_DED_BLK register is updated with the block where the double error occurred.

9.3.6.3.2 OTP Programming

节 9.5.1 shows all parameters that can be programmed to the customer OTP page. There are two pages of OTP memory available for customer to use.

Before programming the OTP, host ensures:

- All OTP shadow registers have the correct settings
- A customer OTP page is valid to be programmed. A valid page is one with OTP_CUST*_STAT1[TRY] = 0 and $OTP_CUST^*_STAT1[FMTERR] = 0.$

表 9-26. Program the OTP

Step	Procedure
1	Unlock the OTP programming: a. Write the following data to OTP_PROG_UNLOCK1A to OTP_PROG_UNLOCK1D registers.
	OTP_PROG_UNLOCK1A <- data 0x02
	OTP_PROG_UNLOCK1B <- data 0xB7
	OTP_PROG_UNLOCK1C <- data 0x78
	OTP_PROG_UNLOCK1D <- data 0xBC
	b. Do another write with the following data to OTP_PROG_UNLOCK2A to OTP_PROG_UNLOCK2D registers.
	OTP_PROG_UNLOCK2A <- data 0x7E
	OTP_PROG_UNLOCK2B <- data 0x12
	OTP_PROG_UNLOCK2C <- data 0x08
	OTP_PROG_UNLOCK2D <- data 0x6F
	Each block of registers must be written in order (that is, A, B, C, then D) with no other writes or reads between. The best practice is to use the same Write command to update. Any attempt to update the registers out of sequence, or if another register is written or read between writes, the entire sequence must be redone.
2	Check to confirm the OTP unlock procedure is successful: a. Read to confirm OTP_PROG_STAT[UNLOCK] = 1 Issuing a Read command after step 1 is ok, but issuing the [PROG_GO] must be the next write command after the unlock procedures.
3	Select the proper OTP page and start the OTP programming: a. To program page1, set OTP_PROG_CTRL[PAGESEL][PROG_GO] = 0x01, or b. To program page2, set OTP_PROG_CTRL[PAGESEL][PROG_GO] = 0x03
4	Wait t _{PROG} = 100ms for the OTP programming to complete. During this time no data communication is allowed.



表 9-26. Program the OTP (continued)

Step	Procedure
5	Check to ensure there is no error during OTP programming. The following bits are expected to be 1 after a successful OTP programming: a. OTP_PROG_STAT[DONE] = 1, OTP programming is done. No other bit will be set in this register. b. If page 1 is programmed, OTP_CUST1_STAT[PROGOK], [TRY], [OVOK], and [UVOK] bits are 1. Other bits are 0. c. If page 2 is programmed, OTP_CUST2_STAT[LOADED], [PROGOK], [TRY], [OVOK], and [UVOK] bits are 1. Other bits are 0.
6	Issue a digital reset to reload the registers with the updated OTP values: a. CONTROL1[SOFT_RESET] = 1

During programming, if a programming voltage OV or UV event occurs, the OTP_CUST*_STAT[UVOK] or OTP_CUST_STAT2[OVOK] bit is 0 to indicate the programming voltage under- or overvoltage condition is detected during the programing attempts. In addition, the [UVERR], [OVERR], [SUVERR], and [SOVERR] bits in the OTP_PROG_STAT register indicate if there is programming voltage error during programming and stability test.

备注

- During the programming procedure, device performs a programming voltage stability test before
 actually programming the OTP. If a programming voltage fails the stability test, the device will not
 set the OTP_CUST*_STAT[TRY] bit, giving the customer another attempt to program the page
 again.
- If the host incorrectly selects a page for programming, the OTP_PROG_STAT[PROGERR] bit is set. This indicates that the selected page was not available to be programmed. Select the correct page and retry the programming.
- Device will not start OTP programming above 55°C temperature.
- OTP programming time (from [PROG_GO] = 1 to [DONE] =1) for LDOIN capacitor of 0.1 μ F is 100ms.

9.3.6.4 Diagnostic Control/Status

The device complies with applicable component level requirements for ASIL-D on voltage measurement, temperature measurement and communication. The following sub-sections describe the diagnostic control and fault status that can be used as part of the safety mechanisms.

The Safety Manual for BQ7961x-Q1 and the BQ7961x-Q1 FMEDA documents are available separately from Texas Instruments. Contact TI Sales Associate or Applications Engineer for further information.

9.3.6.4.1 Power Supplies Check

9.3.6.4.1.1 Power Supply Diagnostic Check

The internal power supply circuits have overvoltage, undervoltage, oscillation detection, and/or current limit checks. All these detections are continuously running in the background when the device is in ACTIVE or SLEEP mode. If a failure is detected, the corresponding flags in the *FAULT_PWR** registers will be set or in certain failure modes, the device will reset. 表 9-27 summarizes the diagnostics that apply for each power supply and the corresponding action when failure is detected.

表 9-27. Power Supply Diagnostic Checks

Supply/ Ground Pin	OV Check	UV Check	OSC Check	Current Limit	Pin Open
LDOIN					
AVDD	If this fails, set FAULT_PWR1[AVDD_ OV]	If this fails, disable DVDD and trigger a digital reset. After soft reset, device sets [AVDDUV_DRST] to indicate a reset is caused by AVDD UV.	If fails, set FAULT_PWR1[AVDD_ OSC]	Limit current to EC table current limit specification	

表 9-27. Power Supply Diagnostic Checks (continued)

2 7 27. 1 over cupply blughostic checks (continued)								
Supply/ Ground Pin	OV Check	UV Check	OSC Check	Current Limit	Pin Open			
DVDD	If this fails, set FAULT_PWR1[DVDD_ OV]	If this fails, trigger a digital reset		Limit current to EC table current limit specification				
CVDD	If this fails, set FAULT_PWR1[CVDD_ OV]	If this fails, set FAULT_PWR1[CVDD_ UV]		Limit current to EC table current limit specification				
TSREF	If this fails, set FAULT_PWR2[TSREF_ OV] and FAULT_OT and FAULT_UT registers to all 1s.	If this fails, set FAULT_PWR2[TSREF_ UV] and FAULT_OT and FAULT_UT registers to all 1s.	If fails, set FAULT_PWR2[TSREF_ OSC] and FAULT_OT and FAULT_UT registers to all 1s.	Limit current to EC table current limit specification				
NEG5V		If this fails, set FAULT_PWR2[NEG5V_ UV]						
REFHP/REFHM			If REFHP fails, set FAULT_PWR2[REFH_ OSC]		If REFHM opens, set the FAULT_PWR1 [REFHM_OPEN]			
DVSS					If this opens, set the FAULT_PWR1[DVSS_OPEN]			
CVSS					If this opens, set the FAULT_PWR1[CVSS_OPEN]			

备注

Due to the detection logic implemented, when AVDD OV or UV is detected, the AVDD OSC fault can also be triggered. Similarly, when TSREF OV or UV, the TSREF OSC fault can also be triggered.

9.3.6.4.1.2 Power Supply BIST

The device implements a power supply BIST (Built-In Self-Test) function to test the primary power supply failure diagnostic paths that cover the following detections:

- FAULT_PWR1[AVDD_OV], [AVDD_OSC], [DVDD_OV], [CVDD_OV], [CVDD_UV], [REFHM_OPEN], [DVSS_OPEN], and [CVSS_OPEN]
- FAULT_PWR2[TSREF_OV], [TSREF_UV], [TSREF_OSC], [NEG5V_UV], [REFHM_OSC], and [PWRBIST_FAIL]

The power supply BIST is essentially a check on the checker and it is a command base function initiated by host.

The power supply BIST, once started, will force a fault on failure detection path on each supply. Take AVDD OV diagnostic path as an example, when the BIST engine tests the AVDD OV path, the following occur:

- 1. The BIST engine forces a fail to the AVDD OV comparator
- 2. The BIST engine then checks to ensure the signal to trigger *FAULT* register is asserted, and the signal to trigger NFAULT is also asserted
- 3. The BIST engine resets the *FAULT* register and NFAULT signal (that is, clears the *FAULT_PWR1/2/3* registers and deasserts NFAULT)
- 4. The BIST engine repeats step 1 to step 3 on the next power supply diagnostic path check (for example, AVDD OSC) until all intended diagnostic paths covered by BIST are tested.

Copyright © 2022 Texas Instruments Incorporated



备注

- During the BIST run, the NFAULT pin will be toggled on and off. Host ignores the NFAULT pin status or can disable the NFAULT pin output by setting DEV_CONF[NFAULT_EN] = 0.
- Among all internal power supplies, TSREF is one that can be enabled or disabled by host. To
 ensure TSREF diagnostic paths are tested during BIST run, host enables TSREF before starting
 the power supply BIST. Otherwise, the BIST engine will ignore the TSREF diagnostic paths test
 result during the BIST run.
- Because other nonpower supply-related faults can also trigger NFAULT, it is recommended to
 mask all nonpower supply-related faults through FAULT_MSK1/2 registers before the power supply
 BIST run.
- · Host also ensures there are no power supply faults before starting the power supply BIST run.

Start power supply BIST by sending *DIAG_PWR_CTRL[PWR_BIST_GO]* = 1. The BIST run will not abort even if a failure is detected during the run. At the end of the BIST run, the result is indicated by the *FAULT_PWR2[PWRBIST_FAIL]* flag.

The power supply BIST forces a failure and ensures the diagnostic path triggers the fault accordingly. A failure on the BIST run indicates a diagnostic path is unable to trigger in a fault condition. To further examine which path is unable to indicate a failure, host can set the *DIAG_PWR_CTRL[BIST_NO_RST]* = 1. This bit disables the reset step during the BIST run. Re-start power supply BIST with this option enabled. At the end of the BIST run, examine the *FAULT_PWR1* and *FAULT_PWR2* registers. Any register flag that remains 0 indicates it is unable to flag a failure.

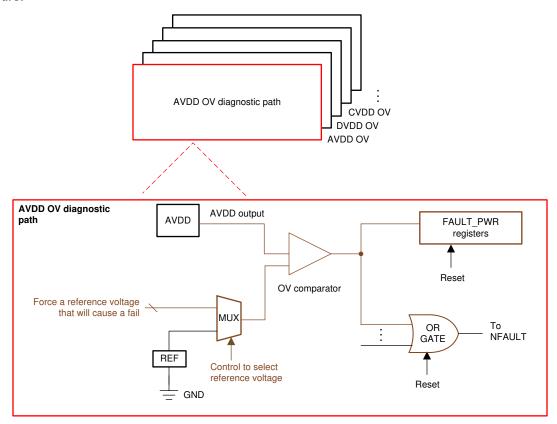


图 9-46. Power Supply BIST

9.3.6.4.2 Thermal Shutdown and Warning Check

9.3.6.4.2.1 Thermal Shutdown

Thermal shutdown occurs when the thermal shutdown sensor senses an overtemperature condition of the device. The sensor operates without interaction and is separated from the ADC measured die sensor. The thermal shutdown function has a register-status indicator flag (FAULT_SYS[TSHUT]) that is saved during the shutdown event and can be read after the device is awaken back up. When a TSHUT fault occurs, the part immediately enters the SHUTDOWN mode. Any pending transactions on UART or daisy chain are discarded. There is no fault signaling performed when a thermal shutdown event occurs as the device immediately shuts down.

To awaken the device, host ensures the ambient temperature is below T_{SHUT_FALL} and sends a WAKE ping to the base device. Host will not attempt to wake the device if the ambient temperature is still above T_{SHUT_FALL} .

Upon waking up, the *FAULT_SYS[TSHUT]* bit is set. See † 9.4.1.1 for more details. If the system faults are unmasked, *FAULT_MSK1[MSK_SYS]* = 0, the thermal shutdown will be reflected as a fault and will be indicated in the *FAULT_SUMMARY* register and the assertion of the NFAULT pin.

9.3.6.4.2.2 Thermal Warning

To warn the host of an impending thermal overload the device includes an overtemperature warning that signals a fault when the die temperature approaches thermal shutdown. The device detects the die temperature through the TWARN sensor against the thermal warning threshold. There are four threshold options configured by the *PWR TRANSIT CONFITWARN THR1:0]* setting.

When the system fault is unmasked, and the temperature warning fault occurs, the *FAULT_SYS[TWARN]* = 1. Host can take action to avoid a thermal shutdown.

9.3.6.4.3 Oscillators Watchdog

The oscillators are monitored by watchdog circuits. There are two oscillators in the device, the HFO and the LFO. If these oscillators are not functioning, the device does not operate. If the HFO or LFO does not transition within the expected time, the watchdog circuits causes a digital reset.

When this unexpected reset occurs, it is recommended that the host sends a SHUTDOWN ping/tone to the problem device and then send a WAKE ping to reset the daisy chain. If the oscillators are truly damaged, the device will not restart and must be replaced.

In addition to the watchdog, the LFO frequency is monitored to ensure it stays within acceptable limits. If the LFO frequency falls outside of the expected range, the FAULT_SYS_FAULT[LFO] bit is set.

9.3.6.4.4 OTP Error Check

9.3.6.4.4.1 OTP CRC Test and Faults

CRC Test:

The factory registers and customer OTP shadow registers are covered by a CRC check that constantly runs in the background. The CUST_CRC_RSLT_HI and CUST_CRC_RSLT_LO registers hold the current device's computed CRC value. This value is compared against the customer programmed value in the CRC registers, CUST_CRC_HI and CUST_CRC_LO. When updating any customer OTP shadow register covered in the CRC, the host must update a new CRC value to CUST_CRC_HI and CUST_CRC_LO registers. The CRC calculation is performed in the same manner (including the bit stream ordering) and with the same polynomial as described in † 9.3.6.1.1.2.1.6. The CRC check and comparison for factory and customer spaces is performed periodically and the DEV_STAT[CUST CRC_DONE] and [FACT_CRC_DONE] bits are set after the check is complete. If the bit is already set, it remains set until cleared with a read.

CRC Faults:

When CUST_CRC_HI/LO and CUST_CRC_RSLT_HI/LO do not match, the FAULT_OTP[CUST_CRC] flag is set until the condition is corrected. Continuous monitoring of the factory NVM space occurs in a similar fashion, concurrently with the monitoring of the customer space. When a factory register change is detected, the FAULT_OTP[FACT_CRC] flag is set. When this fault occurs, the host should reset the fault flag to see if the fault



persists. If the fault persists, the host must perform a reset of the part. If reset does not correct the issue, the device is corrupted and must not be used.

9.3.6.4.4.2 OTP Margin Read

The device provides OTP margin read test modes, with which host can set up to reload the OTP with margin 1 or margin 0. To start the margin read test, host selects the desired test mode through DIAG_OTP_CTRL[MARGIN_MODE2:0] and sets DIAG_OTP_CTRL[MARGIN_GO] = 1. The device will reload the OTP per the [MARGIN_MODE2:0] setting. Any OTP related error will be flagged to the FAULT_OTP register.

9.3.6.4.4.3 Error Check and Correct (ECC) OTP

ECC:

Register values for selected registers (0x0000 to 0x002F) are permanently stored in OTP. All registers also exist as volatile storage locations at the same addresses, referred to as shadow registers. The volatile registers are for reading, writing, and device control. For a list of registers included in the OTP, see \ddagger 9.5.1.

During wakeup, the device first loads all shadow registers with hardware default values listed in † 9.5.1. Then the device loads the registers conditionally with OTP contents from the results of the Error Check and Correct (ECC) evaluation of the OTP. The OTP is loaded to shadow registers in 64-bit blocks; each block has its own Error Check and Correct (ECC) value stored. The ECC detects a single-bit (Single-Error-Correction) or double-bit (Double-Error-Detection) changes in OTP stored data. The ECC is calculated for each block, individually.

Single-bit errors are corrected, double-bit errors are only detected, not corrected. A block with good ECC is loaded. A block with a single-bit error is corrected, and the <code>FAULT_OTP[SEC_DET]</code> bit is set to flag the corrected error event. Additionally, the <code>DEBUG_OTP_SEC_BLK</code> register is updated with the location of the error corrected block. This enables the host to keep track of potentially damaged memory. The block is loaded to shadow registers after the single-bit error correction. Because the evaluation is on a block-by-block basis, it is possible for multiple blocks to have a single-correctable error and still be loaded correctly. Multiple-bit errors can exist with full correction, as long as they are limited to a single error per block.

A block with a bad ECC comparison (two-bit errors in one block) is not loaded and the <code>FAULT_OTP[DED_DET]</code> bit is set to flag the failed bit-error event. Additionally, the <code>DEBUG_OTP_DED_BLK</code> register is updated with the block where the double error occurred. The hardware default value remains in the register. This allows some blocks to be loaded correctly (no fail or single-bit corrected value) and some blocks not to load. When the <code>FAULT_OTP[SEC_DET]</code> or <code>FAULT_OTP[DED_DET]</code> bit is set and the condition is not cleared by a device reset, the device is corrupted and must not be used.

The ECC engine uses the industry standard 72,64 SEC DEC ECC implementation. The OTP is protected by a (72, 64) Hamming code, providing single error correction, double error detection (SECDED). For each 64 bits of data stored in OTP, an additional 8 bits of parity information are stored. The parity bits are designated p0, p1, p2, p4, p8, p16, p32, and p64. Bit p0 covers the entire encoded 72-bit ECC block. The remaining seven parity bits are assigned according to the following rule:

- Parity bit p1 covers odd bit positions, that is, bit positions which have the least significant bit of the bit position equal to 1 (1, 3, 5, and so on), including the p1 bit itself (bit 1).
- Parity bit p2 covers bit positions which have the second least significant bit of the bit position equal to 1 (2, 3, 6, 7, 10, 11, and so on), including the p2 bit itself (bit 2).
- The pattern continues for p4, p8, p16, p32, and p64. 表 9-28 specifies the complete encoding.



www.ti.com.cn

表 9-28. (72, 64) Parity Encoding

Bit Posit	ion	71	70	69	68	67	9-28. 66	65	64	63	62	61	60	59	58	57	56	55	54
Encoded		d63	d62	d61	d60	d59	d58	d57	p64	d56	d55	d54	d53	d52	d51	d50	d49	d48	d47
Parity Bit	p0	X	X	X	x	X	X	X	у х	x	X	х	X	X	X	X	х	х	X
Coverage	р0 р1	×		×		×		×	^	x	^	x	^	x		x		X	
	p2	×	x			×	x			×	х	^		x	x			X	х
	р <u>2</u> р4	×	×	x	x	^	^			×	X	x	x	^	^			X	X
	р т р8	^								×	X	x	×	х	x	x	х	^	
	p16									×	X	X	×	X	x	X	x	х	Х
	p10									x	X	x	×	x	x	x	x	X	X
	p64	x	x	x	x	x	x	x	x	^		^	^						^
Bit Posit	•	53	52	51	50	49	48	47	46	45	44	43	42	41	40	39	38	37	36
Encoded		d46	d45	d44	d43	d42	d41	d40	d39	d38	d37	d36	d35	d34	d33	d32	d31	d30	d29
Parity Bit	p0	X	X	x	X	x	x	X	x	x	x	x	x	X	x	X	x	X	X
Coverage	p1	x		x		x		x		X	^	x		x		X		X	_ ^
	p2			x	x			X	х			X	х			X	x	-	
	p4	x	x					x	X	х	х					X	x	x	x
	p8							х	х	X	х	х	х	х	х				-
	p16	х	х	х	x	х	х												
	p32	x	X	x	x	x	x	х	х	х	Х	х	х	х	х	х	х	x	х
	p64																		
Bit Posit	ion	35	34	33	32	31	30	29	28	27	26	25	24	23	22	21	20	19	18
Encoded	Bits	d28	d27	d26	p32	d25	d24	d23	d22	d21	d20	d19	d18	d17	d16	d15	d14	d13	d12
Parity Bit	p0	х	х	х	х	х	х	х	х	х	х	х	х	х	х	х	х	х	х
Coverage	p1	х		х		х		х		х		х		х		х		х	
	p2	х	х			х	х			х	х			х	х			х	х
	p4					х	х	х	х					х	х	х	х		
	р8					х	х	х	х	х	х	х	х						
	p16					х	х	х	х	х	х	х	х	х	х	х	х	х	х
	p32	х	х	х	х														
	p64																		
Bit Posit	ion	17	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
Encoded	Bits	d11	p16	d10	d9	d8	d7	d6	d5	d4	р8	d36	d2	d1	p4	d0	p2	p1	p0
Parity Bit	p0	х	х	х	х	х	х	х	х	х	х	х	х	х	х	х	х	х	х
Coverage	p1	х		х		х		х		х		х		х		х		х	
	p2			х	х			х	х			х	х			х	х		
	p4			х	х	х	х					х	х	х	х				
	p8			х	х	х	х	х	х	х	х								
	p16	х	х																
	p32																		
	p64																		Ι



表 9-29. Encoder and Decoder Data IN and OUT Positioning

	ENCODER							
DATA IN	Encoded Bits	DATA OUT	Bit Positions					
OTP_ECC_DATAIN 1	d0 to d7	OTP_ECC_DATAOUT 1	0 to 7					
OTP_ECC_DATAIN 2	d8 to d15	OTP_ECC_ DATAOUT 2	8 to 15					
OTP_ECC_DATAIN 3	d16 to d23	OTP_ECC_ DATAOUT 3	16 to 23					
OTP_ECC_DATAIN 4	d24 to d31	OTP_ECC_ DATAOUT 4	24 to 31					
OTP_ECC_DATAIN 5	d32 to d39	OTP_ECC_ DATAOUT 5	32 to 39					
OTP_ECC_DATAIN 6	d40 to d47	OTP_ECC_ DATAOUT 6	40 to 47					
OTP_ECC_DATAIN 7	d48 to d55	OTP_ECC_ DATAOUT 7	48 to 55					
OTP_ECC_DATAIN 8	d56 to d63	OTP_ECC_ DATAOUT 8	56 to 63					
		OTP_ECC_ DATAOUT 9	64 to 71					
	DE	CODER						
DATA IN	Bit Positions	DATA IN	Encoded Bits					
OTP_ECC_DATAIN 1	0 to 7	OTP_ECC_DATAOUT 1	d0 to d7					
OTP_ECC_DATAIN 2	8 to 15	OTP_ECC_ DATAOUT 2	d8 to d15					
OTP_ECC_DATAIN 3	16 to 23	OTP_ECC_ DATAOUT 3	d16 to d23					
OTP_ECC_DATAIN 4	24 to 31	OTP_ECC_ DATAOUT 4	d24 to d31					
OTP_ECC_DATAIN 5	32 to 39	OTP_ECC_ DATAOUT 5	d32 to d39					
OTP_ECC_DATAIN 6	40 to 47	OTP_ECC_ DATAOUT 6	d40 to d47					
OTP_ECC_DATAIN 7	48 to 55	OTP_ECC_ DATAOUT 7	d48 to d55					
OTP_ECC_DATAIN 8	56 to 63	OTP_ECC_ DATAOUT 8	d56 to d63					
OTP_ECC_DATAIN 9	64 to 71							

ECC Diagnostic Test: The device provides a diagnostic tool to test the ECC function. There are two modes that are available to run the diagnostic. The first, auto mode ($OTP_ECC_TEST[MANUAL_AUTO] = 0$), uses internal data to run the tests. In auto mode, the $OTP_ECC_TEST[DED_SEC]$ bit selects the type of test that is to be performed and the $OTP_ECC_TEST[ENC_DEC]$ bit determines if the encoder or decoder function is to be tested. The result of the ECC test is provided in the $OTP_ECC_DATAOUT^*$ registers within 1 μ s delay. The test steps and expected results from each test are shown below.

Automatic Decoding steps:

- 1. Set ECC Test to automatic OTP_ECC_TEST[MANUAL_AUTO] = 0
- 2. Set decoder setting OTP_ECC_TEST[ENC_DEC] = 0
- 3. Set decoder to single or double encoding setting with OTP ECC TEST/DED SEC] (1 for DED or 0 for SEC)
- 4. Clear all SEC/DED faults by FAULT_RST2[RST_OTP_DATA] = 1
- 5. Enable ECC test OTP_ECC_TEST[ENABLE] = 1
- 6. Read FAULT_OTP[SEC_DET] flag for SEC or FAULT_OTP[DED_DET] flag for DED
- 7. Block read OTP_ECC_DATAOUT1 to OTP_ECC_DATAOUT8 to verify the decoder test results as in 表 9-30
- 8. Disable ECC test OTP_ECC_TEST[ENABLE] = 0

Automatic Encoding steps:

- 1. Set ECC TEST to automatic OTP_ECC_TEST[MANUAL_AUTO] = 0
- 2. Set the encoder setting using OTP_ECC_TEST[ENC_DEC] = 1
- 3. Enable the ECC test with OTP_ECC_TEST[ENABLE] = 1
- 4. Block read OTP_ECC_DATAOUT1 to OTP_ECC_DATAOUT9 to verify the encoder test results as in 表 9-30
- 5. Disable ECC test OTP_ECC_TEST[ENABLE] = 0

表 9-30. Decoder and Encoder Test Verification

[DED_SEC]	[ENC_DEC]	[SEC_DET]	[DED_DET]	OTP_DATAOUT*
0 (SEC test)	0 (Decoder test)	1	0	0x18C3 FF8A 68A9 8069
0 (SEC test)	1 (Encoder test)	N/A	N/A	0xCD 3968 C140 2EA5 ED6D

表 9-30. Decoder and Encoder Test Verification (continued)

[DED_SEC]	[ENC_DEC]	[SEC_DET]	[DED_DET]	OTP_DATAOUT*
1 (DED test)	0 (Decoder test)	0	1	0x0000 0000 0000 0000
1 (DED test)	1 (Encoder test)	N/A	N/A	0xCD 3968 C140 2EA5 ED6D

9.3.6.4.5 Integrated Hardware Protector Check

9.3.6.4.5.1 Parity Check

When the OVUV and OTUT protectors are enabled, the register settings related to the OVUV and OTUT configurations are latched to protector blocks. The device will check periodically in the background to ensure the latched configurations remain the same throughout the protector operation.

The parity check covers the following latched setting. If a parity fault in the OVUV protector is detected, the device will set the *FAULT_PROT1[VPARITY_FAIL]* = 1. If a parity fault in the OTUT protector is detected, the device will set the *FAULT_PROT1[TPARITY_FAIL]* = 1.

表 9-31. Protector Parity Check Settings

OVUV Protector	OTUT Protector	Note
OV threshold, UV threshold	OT threshold, UT threshold	Ensure threshold settings remains the same during the operation
OVUV_MODE setting	OTUT_MODE setting	Ensure the protector doesn't switch to a different operation mode
NUM_CELL setting		Ensure the active channel (either cell channels for OVUV or GPIO channel for OTUT) remains the same during operation

9.3.6.4.5.2 OVUV and OTUT DAC Check

The OV, UV, OT, and UT DAC values are multiplexed to the AUX ADC from which the host can read out the values as part of the diagnostic check on the protector threshold settings.

To measure the protector's DAC value, it is recommended to lock the OVUV or OTUT protectors to a single channel through *OVUV_CTRL[OVUV_LOCK3:0]* for OV and UV DAC measurement; and through *OTUT_CTRL[OTUT_LOCK2:0]* for OT and UT DAC measurement, and restart the OVUV protectors or OTUT protector to run in the single channel run mode. Host ensures the locked cell channel is not under OV or UV fault or the locked GPIO channel is not under OT or UT fault. Otherwise, the DAC measurement will not be reflecting the triggering threshold value. Note that the OV and UV DAC value is (0.8 x the threshold setting).

9.3.6.4.5.3 OVUV Protector BIST

The device implemented an OVUV BIST (Built-In-Self-Test) function to test the primary OVUV protector path. Host can start the BIST run by setting [OVUV MODE1:0] = 0b10 and [OVUV GO] = 1. The BIST run covers:

- 1. OV and UV comparators thresholds:
 - a. A higher and lower than the set threshold are checked to ensure the comparator is triggered correctly.
 - b. If failure is detected, the corresponding FAULT_PROT2[OVCOMP_FAIL] or [UVCOMP_FAIL] bit will be set.
- 2. The path from the OVUV MUX to UV fault status bit and NFAULT pin:
 - a. For each VC channel, a switch is open so that input to the OVUV MUX is open and will lead to a UV detection to the channel under test
 - b. The BIST engine then checks the logic to assert corresponding *FAULT_UV* register bit and the NFAULT is set properly.
 - c. The BIST engine resets the corresponding *FAULT_UV* bit and deasserts the NFAULT, then switches to test the next channel and repeats the process until all active channels are tested.
 - d. If failure is detected, the corresponding [VPATH_FAIL] bit is set.
- 3. OV fault bit and NFAULT path
 - a. The BIST engine forces 1 to the *FAULT_OV** register, one bit at time, to ensure each *FAULT_OV** register bit can be set and the NFAULT can be asserted, accordingly.
 - b. If failure is detected, the corresponding [VPATH_FAIL] bit will be set.



If NFAULT is enabled, host observes NFAULT toggling during the BIST run. Upon completion of the BIST run, the OVUV comparators will be turned off. Host starts the regular OVUV round robin mode by sending [OVUV_GO] = 1 with [OVUV_MODE1:0] = 0b01 (round robin mode).

备注

- If a [OVUV_GO] = 1 is sent during the OVUV BIST run, device will execute the new GO command based on the [OVUV_MODE1:0] setting.
- Before starting the OVUV Protector BIST, host masks out all the non-OVUV related faults, and
 ensures there are no OV and UV faults on any cell channels (recommended all cell voltages to be
 at least 100 mV apart from the OV or UV threshold during the BIST run). Otherwise, the BIST
 result is not invalid.
- After BIST starts, if pre-existing fault is detected before starting step 2, the BIST engine will be aborted and the FAULT PROT2[BIST ABORT] = 1.
- A no reset option, *DIAG_PROT_CTRL[PROT_BIST_NO_RST]* = 1, is available to command the BIST engine not to reset the fault status and NFAULT pin after testing each channel. If a BIST run fails, host can select this option and re-run BIST to detect which cell channel path is unable reflect a fault condition in the fault registers.

9.3.6.4.5.4 OTUT Protector BIST

The device implemented an OTUT BIST function to test the primary OTUT protector path. Host can start the BIST run by setting [OTUT_MODE1:0] = 0b10 and [OTUT_GO] = 1. The BIST run covers:

- 1. OT and UT comparator thresholds
 - a. A higher and lower than the set threshold are checked to ensure the comparator is triggering correctly.
 - b. If failure is detected, the corresponding FAULT_PROT2[OTCOMP_FAIL] or [UTCOMP_FAIL] bit will be set.
- 2. The path from GPIO MUX to UT fault bit and NFAULT path
 - a. For each GPIO channel, the GPIO is internally pulled up so the input to the OTUT MUX is high and will lead to a UT detection to the channel under test.
 - b. The BIST cycle then checks the logic to assert the corresponding *FAULT_UT* register bit and the NFAULT is set properly.
 - c. The BIST engine resets the corresponding FAULT_UT bit and deasserts the NFAULT, then switches to test the next channel.
 - d. If failure is detected, the corresponding [TPATH FAIL] bit will be set.
- 3. OV fault bit and NFAULT path
 - a. The BIST engine forces 1 to the *FAULT_OT* register, one bit at time, to ensure each *FAULT_OT* register bit can be set and the NFAULT can be asserted, accordingly.
 - b. If failure is detected, the corresponding [TPATH FAIL] bit will be set.

If NFAULT is enabled, host observes NFAULT toggling during the BIST run. Upon completion of the BIST run, the OTUT comparators will be turned off. Host starts the regular OTUT round robin mode by sending [OTUT_GO] = 1 with [OTUT_MODE1:0] = 0b01 (round robin mode).



备注

- If a [OTUT_GO] = 1 is sent during the OTUT BIST run, device will execute the new GO command based on the [OVUV_MODE1:0] setting.
- Before starting the OTUT Protector BIST, host masks out all non-OTUT related faults, and ensures
 there are no OT and UT faults on any GPIO during the BIST run). Otherwise, the BIST result is not
 invalid
- After BIST starts, if pre-existing fault is detected before starting step 2, the BIST engine will be aborted and the FAULT_PROT2[BIST_ABORT] = 1.
- A no reset option, DIAG_PROT_CTRL[PROT_BIST_NO_RST] = 1, is available to command the BIST engine not to reset the fault status and NFAULT pin after testing each channel. If a BIST run fails, host can select this option and re-run BIST to detect which GPIO channel path is unable reflect a fault condition in the fault registers.

9.3.6.4.6 Diagnostic Through ADC Comparison

9.3.6.4.6.1 Cell Voltage Measurement Check

Cell voltage measurement path comparison:

The cell voltage measurement check is performed by comparing the prefiltered measurement result from Main ADC versus measurement result from AUX ADC. To read the compared value measured by Main ADC and AUX ADC, MCU has to set up this diagnostic check to lock on a single channel using [AUX_CELL_SEL] setting and the start this diagnostic check. In this configuration, the compared values from Main ADC and AUX ADC are reported to DIAG_MAIN_HI/LO registers and DIAG_AUX_HI/LO registers respectively.

Both Main and AUX ADC has the same front end filters. This diagnostic time is mostly spend on waiting for the AAF on the AUX ADC path to settle. The [AUX_SETTLE] setting allows the MCU to make trade-off between diagnostic time and noise filter level. Additionally, when AUX ADC starts, by default, AUXCELL slot always align to the Main ADC Cell1 slot. The [AUX_CELL_ALIGN] setting allows MCU to change this alignment to Main ADC Cell8 slot, resulting with less sampling time delta between Main and AUX ADC on the higher channels.

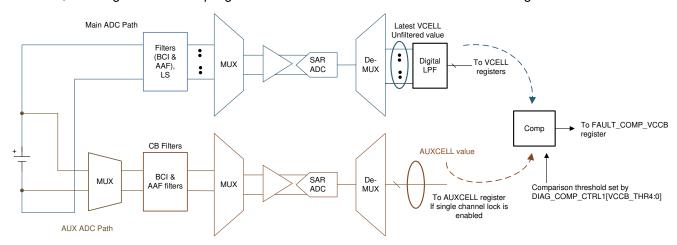


图 9-47. Cell Voltage Measurement Diagnostic

Before starting the cell voltage measurement comparison, host ensures:

- The desired AUXCELL channels to be tested are configured in the ADC_CTRL2[AUX_CELL_SEL4:0] setting and AUX ADC is enabled and in continuous mode.
- Allow AUX ADC to run through all AUXCELL channels for the device to compensate for common mode error before starting this diagnostic check.
- · Main ADC must be enabled and is in continuous mode.
- Select the (VCELL AUXCELL) comparison threshold through DIAG_COMP_CTRL1[VCCB_THR4:0] setting.



Select the desired settling time for the AUX CELL channel through ADC CONF1[AUX SETTLE1:0].

To start the cell voltage measurement comparison:

- 1. Set *DIAG_COMP_CTRL3[COMP_ADC_SEL2:0]* = cell voltage measurement check (that is, 0b001) and set *[COMP_ADC_GO]* = 1.
- 2. For each channel enabled by [AUX_CELL_SEL4:0], the device will compare abs[(VCELL AUXCELL)] < [VCCB_THR4:0].
- 3. Wait for the comparison to be accomplished, roughly [(number of channel) * (AUXCELL settling time + one round robin cycle time)].
- 4. The cell voltage measurement comparison is completed when ADC_STAT2[DRDY_VCCB] = 1.

Host checks the FAULT COMP VCCB1 and FAULT COMP VCCB2 registers for the comparison result.

ADC comparison abort conditions:

The device will not start the cell voltage measurement comparison under the invalid conditions listed below. When the comparison is aborted, the FAULT_COMP_MISC[COMP_ADC_ABORT] = 1, [DRDY_AUX_CEL] = 1, [DRDY_VCCB] = 1, and FAULT_COMP_VCCB1/2 registers = 0xFF. If [AUX_CELL_SEL4:0] is set to locked at a single channel, the AUX_CELL_HI/LO registers will be reset to default value 0x8000 if the comparison run is aborted.

Invalid conditions or settings which will prevent the start of the cell voltage measurement comparison:

- Invalid [AUX_CELL_SEL] setting: results in no AUX ADC measurement on the selected channel. The AUX_CELL_HI/LO registers are kept in default value.
- · Channel higher than the NUM_CELL configuration is selected.
- Invalid BBVC_POSN setting:
 - Adjacent channels are enabled in the BBVC_POSN1/2 registers.
 - BBVC POSN2[CELL1] is enabled.
 - More than two channels are selected in BBVC POSN1/2.
 - [AUX_CELL_SEL] is locked to any of the selected channels in BBVC_POSN1/2.
- · Main or AUX ADCs are off or not set in continuous mode.

Post-ADC digital LPF check:

The digital LPF is checked continuous whenever the Main ADC is running. A duplicate diagnostic LPF is implemented to check against each LPF for each VC channel and the BBP/N channel. The check is performed with one LPF at a time.

Example, to test LPF1 for cell channel 1, the input (that is, ADC measurement result from cell 1) is fed to the LPF1 and the diagnostic LPF for a period of time. The output of the LPF1 and the diagnostic LPF are compared against each other. Several outputs from LPF1 and diagnostic LPF will be compared to ensure the operation of the LFP1 before moving to check the next LFP. If any of the LPFs fail the diagnostic check, FAULT_COMP_MISC[LPF_FAIL] = 1.

When the LPF for each active cell channels is tested once, *ADC_STAT2[DRDY_LPF]* = 1. This diagnostic check of the LPFs will continuously run in the background as long as the Main ADC is running.



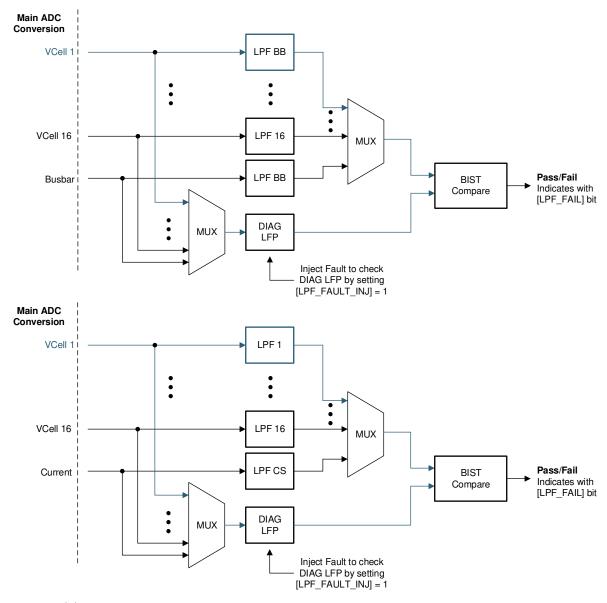


图 9-48. Post-ADC LPF Diagnostic (Blue Path as Example of Checking LPF1)

Furthermore, the device also implements a check to verify the functionality of the diagnostic LPF itself. By setting $DIAG_COMP_CTRL4[LPF_FAULT_INJ] = 1$ and restarting the Main ADC, the device will inject a fault into the diagnostic LPF, forcing a failure during the LPF diagnostic check which then sets the $[LPF_FAIL] = 1$. When the test is completed, simply set the $[LPF_FAULT_INJ] = 0$.

9.3.6.4.6.2 Temperature Measurement Check

Similar to the cell voltage measurement check, the device checks the thermistor temperature measurement by comparing the Main ADC measurement to the AUX ADC measurement. To read the compared value measured by Main ADC and AUX ADC, MCU has lock on a single channel using [AUX_GPIO_SEL] setting and the start this diagnostic check. In this configuration, the compared values from Main ADC and AUX ADC are reported to DIAG_MAIN_HI/LO registers and DIAG_AUX_HI/LO registers respectively.



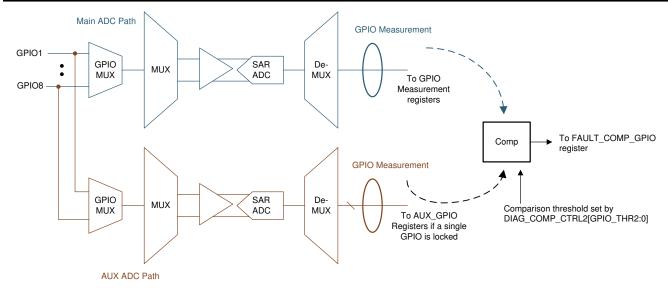


图 9-49. Thermistor Temperature (GPIO) Measurement Diagnostic

Before starting the temperature measurement comparison, host ensures:

- Main ADC must be enabled and is in continuous mode.
- The desired GPIO channels to be tested are configured in the ADC_CTRL3[AUX_GPIO_SEL3:0] setting and AUX ADC is enabled and in continuous mode.
- Select the comparison threshold through DIAG_COMP_CTRL2[GPIO_THR2:0] setting.

To start the cell voltage measurement comparison:

- 1. Set DIAG_COMP_CTRL3[COMP_ADC_SEL2:0] = GPIO measurement check (that is, 0b101) and set [COMP_ADC_GO] = 1.
- 2. For each channel enabled by [AUX_GPIO_SEL4:0], the device will compare abs[(GPIO from Main GPIO from AUX)] < [GPIO THR2:0].
- 3. Wait for the comparison to be accomplished which can take up to 64 ADC round robin times.
- 4. The GPIO measurement comparison is completed when ADC STAT2[DRDY GPIO] = 1.

Host checks the FAULT COMP GPIO register for the comparison result.

ADC comparison abort conditions:

The device will not start the temperature measurement comparison under the invalid conditions listed below. When the comparison is aborted, the *FAULT_COMP_MISC[COMP_ADC_ABORT]* = 1, *[DRDY_GPIO]* = 1, and *FAULT_COMP_GPIO* = 0xFF. If *[AUX_GPIO_SEL3:0]* is set to locked at a single channel, the *AUX_GPIO_HI/LO* registers will be reset to default value 0x8000 if the comparison run is aborted.

Invalid conditions or settings which will prevent the start of the temperature measurement comparison:

- Invalid [AUX_GPIO_SEL] setting which the selected GPIO isn't configured for ADC measurement. The
 AUX_GPIO_HI/LO registers are kept in default value. This also applies to the case if [AUX_GPIO_SEL] is
 selected for all GPIOs but none of the GPIOs are configured for ADC measurement.
- Main or AUX ADCs are off or not set in continuous mode.

9.3.6.4.6.3 Cell Balancing FETs Check

The cell balancing FET check is performed by turning on the balancing FET and comparing the voltage across the FET (through the AUX ADC path) versus the cell voltage (through the Main ADC path). To read the AUXCELL measurement used for the check, MCU has to set up this diagnostic check to lock on a single channel using [AUX_CELL_SEL] setting and the start this diagnostic check. The AUXCELL compared value will be reported to DIAG_AUX_HI/LO registers.



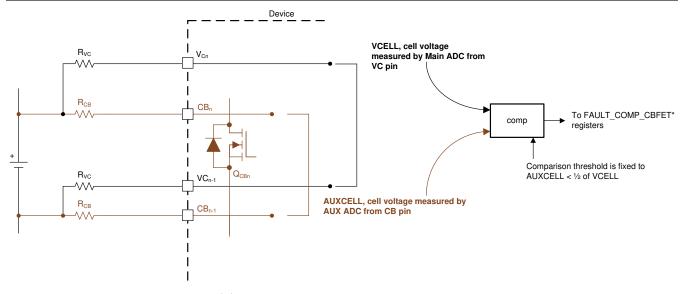


图 9-50. Cell Balancing FET Diagnostic

Before starting the cell balancing FET comparison, host ensures:

- · Main ADC is running in continuous mode.
- Configured in the ADC_CTRL2[AUX_CELL_SEL4:0] to select the AUXCELL channels which the CB FETs are tested.
- Select the desired settling time for the AUX CELL channel through ADC_CONF1[AUX_SETTLE1:0].
- · Pause CB if balancing is running.
- Configured which CBFET to be tested through DIAG_CBFET_CTRL1 and DIAG_CBFET_CTRL2 registers.
 - The rules of maximum of eight CBFETs to be on and turn on no more than two consecutive CBFETs still apply.
 - Recommended to test in odd and even manner.

To start the CBFET comparison:

- 1. Start AUX ADC in continuous mode.
- 2. Turn on the selected CBFET by setting *DIAG_COMP_CTRL3[CBFET_CTRL_GO]* = 1 and wait for appropriate dv/dt time.
- Set DIAG_COMP_CTRL3[COMP_ADC_SEL2:0] = CBFET check (that is, 0b100) and set [COMP_ADC_GO] = 1.
- 4. The device turns on the CBFET configured in the above step and compares the AUXCELL measurement (through CB channel) < half of the VCELL measurement (through VC channel). Only the CBFETs that are enabled are checked.
- 5. The CBFET comparison is completed when ADC STAT2[DRDY CBFET] = 1.
- 6. Repeat this procedure for other set of CBFET test. To turn off the CBFET enabled for this test, MCU clear the *DIAG_CBFET1* and *DIAG_CBFET2* registers then set the *[CBFET_CTRL_GO]* = 1. Otherwise, exiting from the CB pause state by sending *[CB_PAUSE]* = 0 will resume the regular balancing which turns off the CBFETs enabled for this test and resume on the CBFETs that are set for balancing.

Host checks the FAULT_COMP_CBFET1 and FAULT_COMP_CBFET2 registers for the comparison result. Repeat the steps to compare the remaining CBFETs.

ADC comparison abort conditions:

The device will not start the CBFET comparison under the invalid conditions listed below. When the comparison is aborted, the FAULT_COMP_MISC[COMP_ADC_ABORT] = 1, [DRDY_AUX_CEL] = 1, [DRDY_CBFET] = 1, and FAULT_COMP_CBFET1/2 = 0xFF. If [AUX_CELL_SEL4:0] is set to locked at a single channel, the AUX CELL HI/LO registers will be reset to default value 0x8000 if the comparison run is aborted.

Invalid conditions or settings which will prevent the start of the cell voltage measurement comparison:

- Invalid [AUX_CELL_SEL] setting which results in no AUX ADC measurement on the selected channel. The AUX CELL HI/LO registers are kept in default value.
- · Channel higher than the NUM CELL configuration is selected.
- Invalid BBVC_POSN setting:
 - Adjacent channels are enabled in the BBVC_POSN1/2 registers.
 - BBVC_POSN2[CELL1] is enabled.
 - More than two channels are selected in BBVC_POSN1/2.
 - [AUX_CELL_SEL] is locked to any of the selected channels in BBVC_POSN1/2.
- Main or AUX ADCs are off or not set in continuous mode.
- CB is running and it is not in pause mode.
- More than eight CBFETs are enabled, or more than two consecutive CBFETs are enabled in DIAG_CBFET_CTRL1/2 registers.

9.3.6.4.6.4 VC and CB Open Wire Check

The device can detect an open wire connection on the VC and CB pins. A current sink is connected to each VC and CB pin, except VC0 and CB0 pins which are connected with a current source.

When the current sink (or current source) is enabled and if there is an open wire connection, the external differential capacitor will be depleted and the cell voltage measurement will drop to an abnormal level over time. Similar detection concept applies to the VC0 and CB0 pins with a current source. If there is an open wire connection, the VC0 or CB0 will be pulled up by the current source, resulting in a reduced cell voltage measurement over time.

When the diagnostic comparison is enabled, the device will compare the cell voltage measurement from Main ADC (for VC pins open wire detection) against a host-programmed threshold; or comparing the AUX CELL measurement from the AUX ADC (for CB pins open wire detection) against a host-programmed threshold.

If MCU lock to a single CB channel though [AUX_CELL_SEL] before starting the CB open wire check. The device will report the AUXCELL measurement used for the check comparison. The value is reported in DIAG_AUX_HI/LO registers. Since there is no single channel lock mechanism in Main ADC, VC channel measurement used for VC open wire will not be reported in DIAG_MAIN_HI/LO registers.

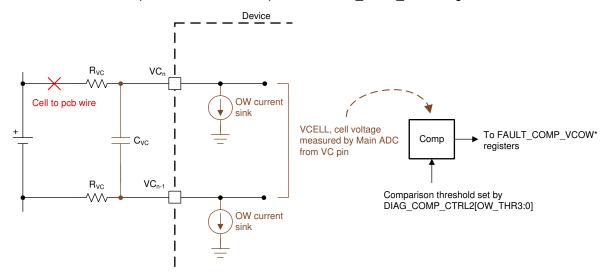


图 9-51. Open Wire Detection

Before starting the open wire comparison, host ensures:

- For VC open wire detection, Main ADC is running in continuous mode.
- For CB open wire detection, AUX ADC is running in continuous mode
 - Configured in the ADC_CTRL2[AUX_CELL_SEL4:0] to select the AUXCELL channels
 - Select the desired settling time for the AUX CELL channel through ADC_CONF1[AUX_SETTLE1:0].



Configure the open wire detection threshold through DIAG COMP CTRL2[OW THR3:0].

To start the open wire comparison:

- 1. Turn on the VC pins (or CB pins) current sink or source through DIAG_COMP_CTRL3[OW_SNK1:0].
- 2. Wait for dV/dt time of the external capacitor to deplete to the detection threshold if there is an open wire fault.
- 3. For VC open wire detection, select DIAG COMP CTRL3[COMP ADC SEL2:0] = OW VC check (that is, 0b010) and set [COMP ADC GO] = 1. Or for CB open wire detection, [COMP ADC SEL2:0] = OW CB check (that is, 0b011).
- 4. The device compares all active VCELL measurement (for VC open wire) or AUX CELL measurement (for CB open wire) against the [OW THR3:0] threshold setting.
- 5. When the comparison is completed, ADC_STAT2[DRDY_VCOW] = 1 for VC open wire (or [DRDY_CBOW] = 1 for CB open wire).
- 6. Host then turns off all current sinks and sources through DIAG_COMP_CTRL3[OW_SNK1:0].

Host checks the FAULT_COMP_VCOW1/2 or FAULT_COMP_CBOW1/2 registers for the comparison result.

9.3.7 Bus Bar Support

Host requires to adjust cell

measurement adjustment

Cell balancing limitation

The device supports bus bar measurement in two types of connections:

Bus bar connected to a dedicated bus bar channel through BBP and BBN pins

Yes, a cell + bus bar are sharing a single VC

channel using this method. Host needs to separate

No CB limitation, but host turns on adjacent CBFETs

when balancing a cell above the bus bar connected

out the bus bar measurement to obtain the actual cell measurement on the shared channel.

Bus bar connected to a VC channel

A total of three bus bars can be connected to a single device, one through BBP/N pins and two through VC channels. 表 9-32 shows the difference between the two connection methods. Details are described in the later subsections.

Supporting Feature/ Limitation	Bus Bar Connected Across BBP/BBN Pins	Bus Bar Connected Individually Across VC Pins
Number of bus bar can be connected per device	1	2
Connection channel	Can be connected to any channel but the bottom one	Can be connected to any channel but the bottom one
Bus bar measurement	Yes, result is output to BUSBAR_HI/LO registers	Yes, result is output to VCELLx_HI/LO registers, where x is the VC channel the bus bar is connected to
Integrated filters to bus bar measurement	Yes, same front end filters as the regular cell channels and post ADC digital LPF. BBP/N channel is x5 gain with ±1-V input range. Dedicated digital LPF setting separated from the LPF setting used for cell voltage measurements.	Yes, same front end filters as the regular cell channels and post ADC digital LPF. Use the same cell voltage LPF setting for bus bar measurement.

表 9-32. Bus Bar Connection Methods

The device supports bus bar measurement in a connection when a bus bar is connected to a VC channel. A total of two bus bars can be connected to a single device through the VC channels. 表 9-33 shows the details as described in the later subsections.

表 9-33. Bus Bar Connection Methods

Supporting Feature/ Limitation	Bus Bar Connected Individually Across VC Pins
Number of bus bar can be connected per device	2
Connection channel	Can be connected to any channel but the bottom one

No, cell and bus bar are connected to their own VC

No CB limitation but require to float the upper CB pin

channels and measurements are reported

on the bus bar connected channel



表 9-33. Bus Bar Connection Methods (continued)

Supporting Feature/ Limitation	Bus Bar Connected Individually Across VC Pins		
Bus bar measurement	Yes, result is output to VCELLx_HI/LO registers, where x is the VC channel the bus bar is connected to		
Integrated filters to bus bar measurement	Yes, same front end filters as the regular cell channels and post ADC digital LPF. Use the same cell voltage LPF setting for bus bar measurement.		
Host requires to adjust cell measurement adjustment	No, cell and bus bar are connected to their own VC channels and measurements are reported separately		
Cell balancing limitation	No CB limitation but require to float the upper CB pin on the bus bar connected channel		

9.3.7.1 Bus Bar on BBP/BBN Pins

The device provides an dedicated bus bar channel through BBP/BBN pins for bus bar connection and measurement. It is a floating channel allowing bus bar to be connected to any cell except the bottom cell of a module. Using the bus bar channel maximizes the use of cell channels in the device across different module sizes.

9.3.7.1.1 Typical Connection

With bus bar connected to BBP/BBN pins, it is intended to allow a single cell channel (VC channel) to be shared with a cell + a bus bar (see

9-52 (a) connection). Usually, such connection introduced additional IR error to the cell measurement to the system. The dedicated bus bar channel through BBP/BBN pins supported in the device allows the host to measure the bus bar voltage to obtain the actual cell measurement.

 $\[\]$ 9-52 (a) connection applies to bus bar connecting to any middle VC channel. That is, in a single device, there is a cell connected above and below the BBP/BBN channel. To support hotplug on the bus bar channel, the device only requires a 400- Ω filter resistor each on the BBP/N pins and a 0.47- μ F/16-V differential capacitor across the BBP/N pins.

If the bus bar connected to BBP/N is placed at the top of a module (see 🖺 9-52 (b) connection), such connection is the exception in the BBP/N case that a cell channel is not being shared. In this connection, actual cell measurements are made through the VC channels and host does not require additional calculations.

ા 9-52 (b) connection applies to bus bar connected to top of the module, where in a single device, no cell is connected above the bus bar. To support hotplug on the bus bar channel, besides the 400-Ω filter resistor each on BBP/N pins and a 0.47-μF/16-V differential capacitor across BBP/N pins, and additional 0.47-μF/16-V differential capacitor is needed to connect from BBN to the top CB pins. This additional capacitor forms a complete capacitor ladder from all cells in the module to the bus bar, allowing high spike voltage during hotplug to distributor across the capacitor ladder.



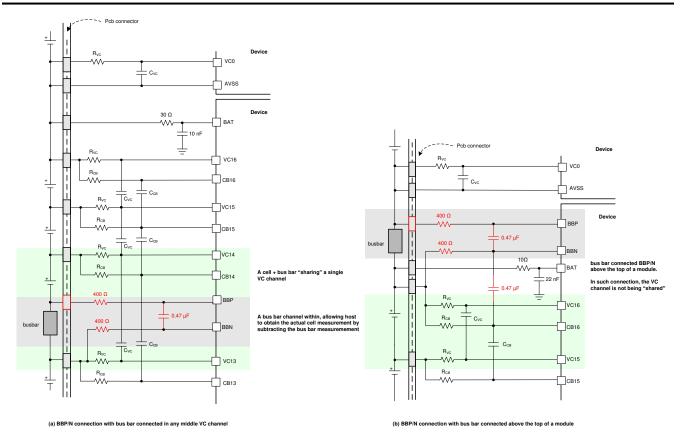


图 9-52. Bus Bar Connected Across BBP and BBN Pins

9.3.7.1.2 Bus Bar Measurement

The differential measurement across (BBP - BBN) is measured by the Main ADC and AUX ADC. See 节 9.3.2.1.1 and 节 9.3.2.2.1 for details. Use the BBP_LOC register to indicate which VC channel is shared with the BBP/N connection. This information enables the device to have better common mode correction for the final ADC measurement. Host will be aware that additional IR error is introduced to the shared VC channel. If OVUV protector is enabled, this shared channel may trigger earlier OV or UV detection due to the additional IR increase (during charge) or decrease (during discharge) to the shared channel measurement.

9.3.7.1.3 Cell Balancing Handling

Because the bus bar is shared with a cell to a cell channel, there is no special handling on the cell balancing control. Host will be aware that additional IR error is introduced to the VCB_DONE detection (through VC channel) on the shared channel.



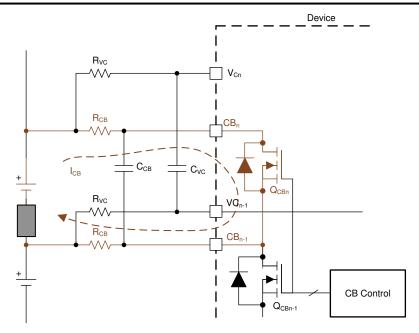


图 9-53. Cell Balancing with Bus Bar (Through BBP/N) Sharing a Cell Channel

9.3.7.1.4 Cell Voltage Diagnostic Control

The device still supports VC channel versus CB channel by looking at the sum of (cell + bus bar measurement) comparison check on the shared channel. See 节 9.3.6.4.6.1. Additionally, bus bar measurement can be checked by comparing bus bar channel measurement from Main ADC and AUX ADC.

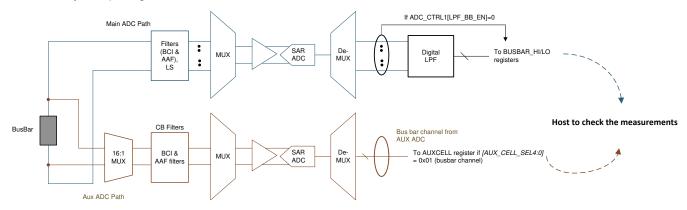


图 9-54. Bus Bar Through BBP/N Measurement Check

The BBP/N pins have built-in current sink for open wire detection. The current sink is turned on when DIAG_COMP_CTRL3[OW_SNK1:0] = 0b11. When there is a current flow through the bus bar, the (BBP - BBN) measurement is non-zero. If there is an open wire on the BBP or BBN pin, the current sink changes the (BBP - BBN) measurement to an abnormal value.

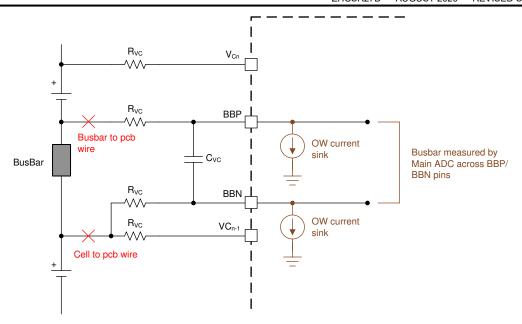


图 9-55. Current Sink for BBP/N Open Wire Detection

9.3.7.2 Bus Bar on Individual VC Channel

Besides connecting bus bar through BBP/N, the device also supports bus bar connection to an individual VC channel. All VC channels, except the bottom channel (VC1-VC0), support – 2V to 5V measurement.

The device supports bus bar connection to an individual VC channel. All VC channels, except the bottom channel (VC1-VC0), support – 2V to 5V measurement.

When bus bar is connected to an individual VC channel, host indicates the bus bar position in the BBVC_POSN1 and BBVC_POSN2 registers. The following configuration is not supported for bus bar connection through individual VC channel. Configuring BBVC_POSN1 register with such configuration can cause error in balancing, OVUV detection and cell voltage measurement comparison check.

- Bottom channel does not support bus bar connection. That is, BBVC POSN1[CELL1] must be 0.
- Maximum of two bus bars can be connected through this connection. That is, only two bits are set to 1 in the BBVC POSN1 registers.
- Bus bar cannot be connected to the adjacent channels.

9.3.7.2.1 Typical Connection

With bus bar connected to a VC channel individually, the upper CB pin on that channel is left floating to avoid forward biasing the internal CBFET (see 9-56 (a) connection). This connection applies to bus bar connecting to any middle VC channel individually. That is, in a single device, there is a cell connected above and below the VC channel with bus bar connected. To ensure hotplug performance, the CB channel where the bus bar is connected will still have the differential capacitor even if the upper CB pin is floating. This capacitor forms a complete capacitor ladder from all cells and the bus bar connected to the device, allowing high-voltage spike during hotplug to distribute across the capacitor ladder.

If bus bar is connected to above the top of a module to an individual VC channel (see

9-56 (b) connection), the upper CB pin on that channel is left floating but the CB differential capacitor will still be connected. Additionally, an additional RC filter is connected from the top CB pin to the BAT pin. This additional RC filter (using the same RC values as the other RC filter on the CB pins) is to ensure a complete capacitor ladder is formed for the device to distribute the high voltage spike with the same RC constant as the reset of the CB pins during hotplug event.



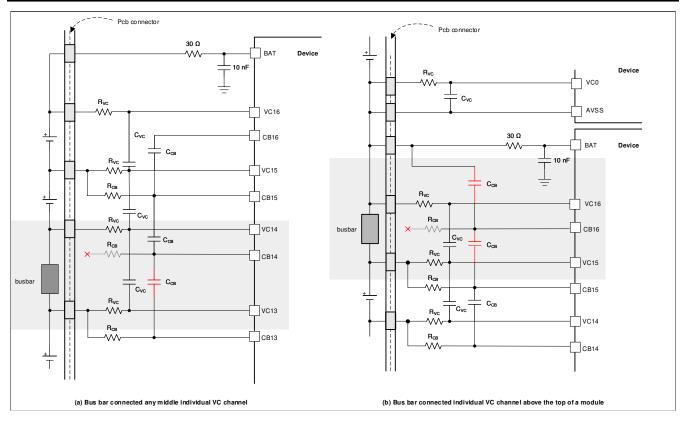


图 9-56. Bus Bar Connected to Individual VC Channel

9.3.7.2.2 Bus Bar Measurement

Bus bar measurement is performed through Main ADC measurement as one of the VC channels. The result is reported to VCELLx HI/LO register, where x is the channel connected with the bus bar. Digital LPF is enabled and applied as the rest of the VC channel measurement configuration.

The VC channel indicated for bus bar connection (through BBVC_POSN1/2 registers) will be skipped for VCB DONE check during cell balancing, OV and UV detection when OVUV protectors are enabled, and will have special handling during cell voltage measurement comparison check.

9.3.7.2.3 Cell Balancing Handling

Because the upper CB pin is open on the channel where bus bar is connected, to balance the cell connected above bus bar, host turns on the adjacent CBFET and configures with the same timer setting.

Host configures BBVC POSN1/2 register to indicate the bus bar connection. This information is used to avoid the channel connected with bus bar to trigger a VCB DONE detection and turn off its CBFET, which disconnects the balancing path for the cell above the bus bar.

The balancing of the cell above the bus bar is still terminated based on the timer and cell voltage threshold, which its CBFET will be turned off when one of the stop conditions is met. The balancing path is disconnected even if the CBFET on the bus bar connected channel remains on.

备注

The CBFET on the bus bar connected channel will be on until the timer expired. This may lead to a delayed flagging of the [CB DONE] = 1 even if the actual cell balancing is completed.

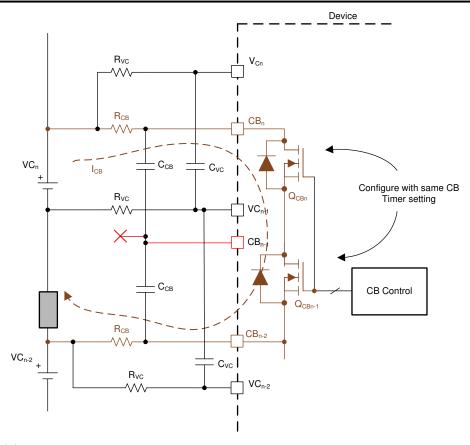


图 9-57. Cell Balancing with Bus Bar Connected to Individual VC Channel

9.3.7.2.4 Cell Voltage Diagnostic Control

The cell voltage comparison check is still performed by checking the Main ADC measurement versus the AUX ADC measurement. Because the upper CB pin of the CB channel, where a bus bar is connected, is open, the device handles the comparison check by comparing a sum of (cell + bus bar) from Main ADC versus sum of (cell + bus bar) from AUX ADC instead.



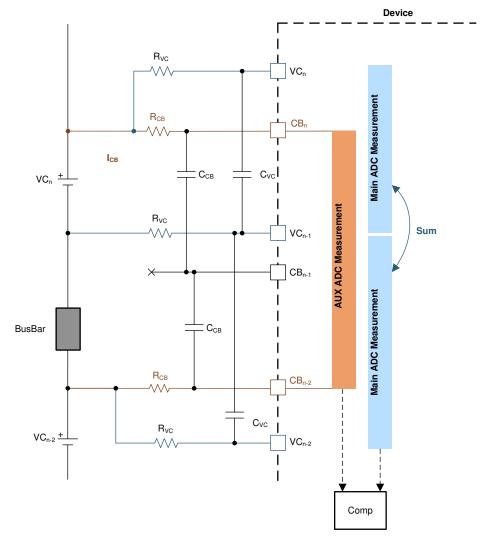


图 9-58. Cell Measurement Check with Bus Bar Connected to Individual VC Channel

9.4 Device Functional Modes

The device has three power modes plus an POR state.

- POR: This is not a power mode. This is a condition in which the voltage at the BAT pin is less than VBAT min, and all circuits including the AVAO REF block in the device are powered off.
- SHUTDOWN: This is the lowest power mode. AVDD, DVDD and CVDD supplies are off. Only a gross regulation at LDOIN pin is maintained. CVDD pin is will have a similar voltage as the LDOIN pin through internal circuit in order to support WAKE detection.
- SLEEP: This is the low power operation mode. Only limited functions are available.
- · ACTIVE: This is the full power operation mode. All functions are supported under this state.

The various functions supported under different power modes are summarized in $\frac{1}{8}$ 9-34 and the power state diagram is shown in $\frac{1}{8}$ 9-59.



表 9-34. Active Functions Summary

Functional Block	SHUTDOWN	SLEEP	ACTIVE	POR
Main ADC			√	This is not a power state. All circuits
AUX ADC			√	are off. A sufficient voltage on VBAT will POR the device and put it to
OV/UV protector		√ (1)	√	SHUTDOWN mode
OT/UT protector		√ (1)	√	
Cell Balancing		√(1)	√	
OTCB Detection		√(1)	√	
Module Balancing (via control through MB_TIMER_CTRL)			√	
UART			√	
Comm Vertical Communication			√	
Fault Status and NFAULT Communication		~	√	
Comm timeout			√	
SLEEP timeout		√		
Thermal Shutdown Detection		√	√	
SPI Master			√	
OTP programming			√	
Always-on block to detect POR of the device	√	~	√	

⁽¹⁾ To enable cell balancing, OV/UV or OT/UT protector(s) in SLEEP mode, host must enable the function(s) in ACTIVE mode first, then put the device to SLEEP.



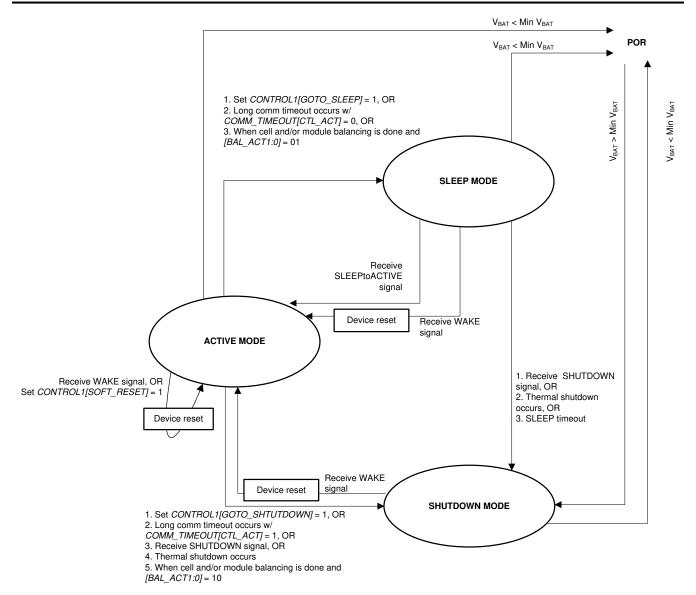


图 9-59. Power State Diagram

9.4.1 Power Modes

9.4.1.1 SHUTDOWN Mode

This is the lowest power mode. In SHUTDOWN mode, most of the functions are off. The device remains idle to simply monitor the WAKE ping/tone (see † 9.4.3 for details) to wake up from this state. Only a gross regulation on LDOIN and CVDD pins are maintain for WAKE ping/tone detection.

9.4.1.1.1 Exit SHUTDOWN Mode

Communication is not supported in SHUTDOWN mode, host must send a WAKE ping or WAKE tone to enter ACTIVE mode. Once device transitions from SHUTDOWN mode to ACTIVE mode, the following table indicates the expected fault bits being set under such transition has occurred.



表 9-35. Expected Fault Bit After Device Wake From SHUTDOWN

Device Position In The Daisy Chain	Expected Fault Bits After Waking Up From SHUTDOWN		
Base device	FAULT_SYS[DRST] = 1	Digital reset by the wake ping	
	FAULT_COMM3[FCOMM_DET] = 1	[DRST] = 1 from the upper device	
	FAULT_COMM1[COMMCLR_D ET] = 1	UART engine is reset	
Stack device (except top of stack)	FAULT_SYS[DRST] = 1	Digital reset by the wake tone	
	FAULT_COMM3[FCOMM_DET] = 1	[DRST] = 1 from the upper device	
Top of stack device	FAULT_SYS[DRST] = 1	Digital reset by the wake tone	

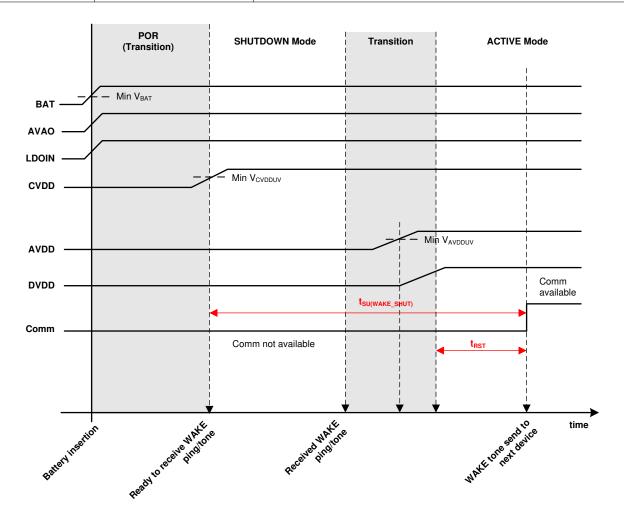


图 9-60. SHUTDOWN to ACTIVE Mode Transition

9.4.1.1.2 Enter SHUTDOWN Mode

During normal operation, host puts the device in SHUTDOWN mode through communication by sending CONTROL1[GOTO_SHUTDOWN] = 1. In a daisy chain configuration, using broadcast write to send this command will put all devices in the daisy chain in SHUTDOWN mode.

The device can also enter SHUTDOWN mode by one of the following conditions:



- Communication timeout: automatically transitions from ACTIVE mode to SHUTDOWN mode if there is no valid communication for the configured time. Host can enable this option through the COMM TIMEOUT CONF register.
- SLEEP mode timeout: automatically transitions from SLEEP mode to SHUTDOWN mode if device is in SLEEP mode for the configured time. Host can enable this option through PWR TRANSIT CONFISLP TIME2:0].
- · Upon balancing completion: automatically enter SHUTDOWN mode when all balancing of the devices is completed. See † 9.3.3 for details. This option can result with devices in different power modes for a period of time in a daisy chain configuration.
- Thermal shutdown: shuts down the device when the internal die temperature is greater than T_{SHUT}
- SHUTDOWN or HW RESET ping/tone: These pings/tones are used as a recovery attempt on a loss communication situation. A SHUTDOWN ping/tone puts the device into SHUTDOWN mode without using communication, forcing most of the circuits to be off. A more aggressive recovery attempt uses HW RESET ping/tone which turns off all circuits except a bandgap and restarts the device in SHUTDOWN mode.

9.4.1.2 SLEEP Mode

This is the low power operation mode. In SLEEP mode, all internal power supplies are still on, but functions are limited to cell balancing, OVUV and OTUT protectors, Heartbeat/Fault Tone/NFAULT transmission and detection.

9.4.1.2.1 Exit SLEEP Mode

Because host cannot communicate to the device, to exit SLEEP mode, host must send either a WAKE ping/tone or SLEEPtoACTIVE ping/tone to transition to ACTIVE mode. A WAKE wakes up and resets the device, which host will need to reconfigure the device setting; a SLEEPtoACTIVE only wakes up the device.

9.4.1.2.2 Enter SLEEP Mode

The device can enter SLEEP mode from ACTIVE mode only. During normal operation, host puts the device to SLEEP mode through communication by sending CONTROL1[GOTO SLEEP] = 1. In a daisy chain configuration, using broadcast write to send this command will put all devices into SLEEP mode.

The device can also enter SLEEP mode in the following condition:

Communication timeout: automatically transitions from ACTIVE mode to SLEEP mode if there is no valid communication for the configured time. Host can enable this option through the COMM TIMEOUT CONF register.

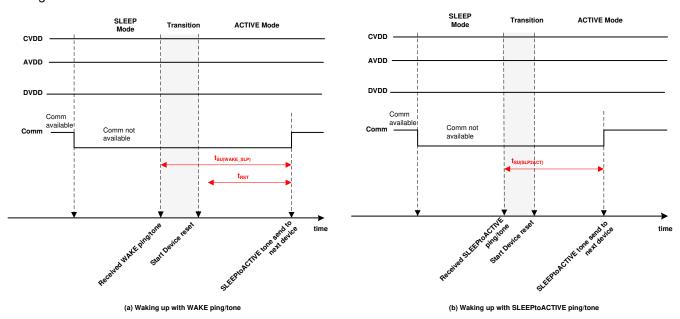


图 9-61. SLEEP to ACTIVE Mode Transition



9.4.1.3 ACTIVE Mode

This is the operation mode with full functionality support. Host can communicate to the device with full control on various features as well as performance diagnostic in this mode.

9.4.1.3.1 Exit ACTIVE Mode

From ACTIVE mode, device can enter SLEEP mode or SHUTDOWN mode through command, ping/tone, timer, or specific event. See $\ ^{\ddagger}$ 9.4.1.1 and $\ ^{\ddagger}$ 9.4.1.2 for details.

9.4.1.3.2 Enter ACTIVE Mode From SHUTDOWN Mode

Device can transition to ACTIVE mode from SHUTDOWN mode only through a WAKE ping/tone. Once in ACTIVE mode, host clears some of the reset-related faults which are expected faults (see † 9.4.1.1 for details) indicating a POR on certain blocks due to the transition from SHUTDOWN mode to ACTIVE mode. Registers are reset to default; the OTP shadow registers are reloaded with the OTP programmed values.

9.4.1.3.3 Enter ACTIVE Mode From SLEEP Mode

From SLEEP mode, either a WAKE or SLEEPtoACTIVE ping/tone can put the device in ACTIVE mode. A WAKE ping/tone will generate a digital reset to the device. Because the LDO supplies remain on during SLEEP mode, only the *FAULT_SYS[DRST]* = 1 is set, indicating a digital reset has occurred. Certain expected faults related to being reset are set. See SHUTDOWN mode for detail. Registers are reset to default, the OTP shadow registers are reloaded with the OTP programmed values.

If a SLEEPtoACTIVE ping/tone is used to wake up the device from SLEEP mode to ACTIVE mode, device will simply enter ACTIVE mode without digital resetting but the UART engine will be reset. Hence, in the base device, the FAULT_COMM1[COMMCLR_DET] = 1 and host clears it after entering ACTIVE mode.

9.4.2 Device Reset

There are several conditions which the device will go through: a digital reset, putting the registers to their default settings and reloading the OTP.

- A WAKE ping/tone is sent to transition from SHUTDOWN mode or SLEEP mode to ACTIVE mode.
- A WAKE ping/tone is received in ACTIVE mode.
- The CONTROL1[SOFT_RESET] = 1 command is sent in ACTIVE mode.
- A HW_RESET ping/tone is sent under any power mode. This generates a POR-like event to the device.
 Upon the detection of a HW_RESET ping/tone, the device will turn off all internal blocks except a bandgap for t_{HWRST} duration. Afterward, the device will restart in SHUTDOWN mode.
- Internal power supply faults. See 节 9.3.6.4 for details.
 - AVDD UV, DVDD UV is detected.
- A HFO or LFP watchdog fault will reset the digital.

Apart from the full reset cases, the following conditions will only reset the UART engine. These conditions mainly affect the base device because UART is used to talk to the host MCU. In the base device, the FAULT_COMM1[COMMCLR_DET] = 1 will be set. These conditions do not affect the stack devices because UART is inactive in those devices.

- A SLEEPtoACTIVE ping is sent to transition from SLEEP mode to ACTIVE mode.
- The following conditions not only clear the UART engine and set the [COMMCLR_DET] = 1, they also set FAULT_COMM1[STOP_DET] = 1 as an indication that an unexpected UART STOP is detected.
 - A SLEEPtoACTIVE ping is sent in ACTIVE mode.
 - A COMM CLEAR signal is sent. This is a dedicated signal to clear the UART engine and instruct the engine to look for a new start of communication frame. See 节 9.3.6.1.1.1 for more details.

9.4.3 Ping and Tone

In the noncommunicable conditions such as in SHUTDOWN or SLEEP mode, or in the loss of communication situations when host would like to instruct for a reset or power down as a communication recovery attempt, a Ping or Tone is used as a form of communication to the device for a specific action.



表 9-36. Su	pported F	Ping/Tone in	Different	Power Modes

Ping/Tone Detection	Detected Pin(s)	SHUTDOWN	SLEEP	ACTIVE
SHUTDOWN ping	RX		√	√
SLEEPtoACTIVE ping	RX		√	√
WAKE ping	RX	√	√	√
HW_RESET ping	RX		√	√
SHUTDOWN tone	COMH/L		√	√
SLEEPtoACTIVE tone	COMH/L		√	√
WAKE tone	COMH/L	√	√	√
HW_RESET tone	COMH/L		√	√
Fault tone	COMH/L		√	Only fault tone detection is available
HEARTBEAT	COMH/L		√	

9.4.3.1 Ping

A ping is a specific high-low-high signal to the RX pin of the device. Ping is used on the base device as only the base device is connected to the host which the UART RX is accessible. The device detects different low times of the ping signal to differentiate the different ping signals.

The communication pings are referring to the WAKE ping, SLEEPtoACTIVE ping, SHUTDOWN ping, and HW_RESET ping. These pings instruct the device to a specific power mode when normal communication is not available. By definition, a COMM CLEAR signal on the RX pin is a form of a ping. Because a COMM_CLR is to clear the UART engine, this signal is covered in † 9.3.6.1.1.1.

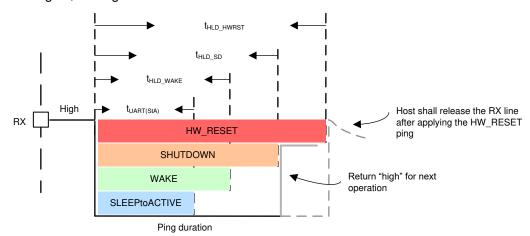


图 9-62. Communication Pings

9.4.3.2 Tone

A tone is a fixed number of couplets (pulses) with a specified polarity (all "+" or all "-") sent through the differential vertical interface COMH and COML ports. Tone is used on stack devices as only the COMH/L ports are accessible. The number of couplets for transmission is always greater than the number of couplets needed for detection.

There are four communication tones corresponding to the four communication pings. They are WAKE tone, SLEEPtoACTIVE tone, SHUTDOWN tone, and HW_RESET tone. In addition to the communication tones, there are two extra tones related to device fault status: Heartbeat tone and Fault tone. These two fault status tones are only available in SLEEP mode. See † 9.3.6.2.3.3 for details.

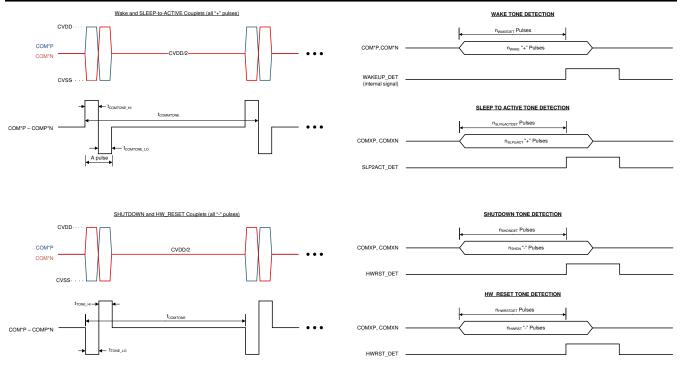


图 9-63. Communication Tones

9.4.3.3 Ping and Tone Propagation

Propagates:

The WAKE and SLEEPtoACTIVE pings/tones are part of the normal operation to wake up the device; hence, these two pings/tones can propagate to the next device in a daisy chain configuration. That is, when a device receives a WAKE ping/tone, it generates a WAKE tone and forwards it to the next device. Similar action applies to SLEEPtoACTIVE ping/tone.

The direction of the tone forwarding follows the communication direction, which is set by the CONTROL1[DIR_SEL] bit. See † 9.3.6.1 for more details. The detection of the tone is supported from the COMH and COML ports on stack devices regardless of the [DIR_SEL] setting. This does not apply to base device because base device detects pings instead.

During normal operation, host can simply send a WAKE or SLEEPtoACTIVE ping to the base device and the corresponding tone will be generated to the rest of the stack devices. During system development, if there is a need to send WAKE or SLEEPtoACTIVE to only some of the devices in the daisy chain, host can use the CONTROL1[SEND_WAKE] or CONTROL1[SEND_SLPTOACT] bit. Device that receives this command will send the corresponding tone to the next device in the daisy chain. Because the WAKE and SLEEPtoACTIVE tones propagate, the rest of the daisy chain connected above also receives the corresponding tone.

Does Not Propagate:

The SHUTDOWN and HW_RESET pings/tones are mostly used as a communication recovery attempt. Hence these pings/tones do not propagate. That is, when a device receives a SHUTDOWN ping/tone, it starts the shutdown process but the device does not generate another SHUTDOWN tone to the next device. Similar action applies to HW_RESET ping/tone.

For a base device, as RX pin is connected to the host, SHUTDOWN or HW_RESET ping can be used on the base device. For stack devices, it is required at least one stack device is connected to the problem device is communicable. Host has to talk to the neighboring device and sets the CONTROL1[SEND_SHUTDOWN] = 1 or CONTROL2[SEND_HW_RESET] = 1 to instruct the neighboring device to issue the corresponding tone to the problem device. The detection of the tone is supported from the COMH and COML ports on stack devices

Copyright © 2022 Texas Instruments Incorporated



regardless of the [DIR_SEL] setting. This does not apply to a base device because a base device detects pings instead.

表 9-37. Ping and Tone Propagation Summary

Ping/Tone	Propagable	Non-Propagable
WAKE	Receiving device will generate a WAKE tone to the next device	
SLEEPtoACTIVE	Receiving device will generate a SLEEPtoACTIVE tone to the next device	
SHUTDOWN		Receiving device will initialize the shutdown process
HW_RESET		Receiving device will initialize the HW reset process



9.5 Register Maps

This section has three register map summary tables with registers listed per the order of the register address:

- The NVM (OTP) shadow registers. These read/write-able shadow registers are reset with OTP values programmed in the customer OTP space. To program the custom OTP space, host writes the desired values to these OTP shadow registers and follows the programming procedure. These registers are included in the OTP CRC check. If customer OTP space is not programmed. The shadow registers are loaded with factory configuration default value. If the OTP (either factory configuration default or value programmed in customer OTP space) is failing to load after a device reset, the shadow registers will be loaded with the hardware reset default value instead. The hardware reset default value and the factory configuration default values are the same for the majority of the OTP shadow registers. Only the DIRO_ADDR_OTP, DIR1_ADD_OTP, PWR_TRANSIT_CONF, CUST_CRC_HI/LO registers have a reset value versus factory default, and are specified in † 9.5.1 and their register field descriptions.
- The Read/Write registers. These are registers that the host can read/write to during runtime. A device reset will put these registers back to their reset value.
- The Read registers. These are registers that the host only has read access. A device reset will put these registers back to their reset value.

The register summary tables use the following key:

- Addr = Register address
- · Hex = Hexidecimal value
- NVM = Non-volatile memory (OTP) shadow registers
- RSVD = Reserved. Reserved register addresses or bits are not implemented in the device. Any write to these bits is ignored. Reads to these bits always return 0.
- OTP_SPARE: These are spare OTP and shadow register bits that are implemented in the device. These
 spare bits are included as part of the CRC calculation. These bits are read/write as normal, but do not
 perform any function or influence any device behaviors.
- OTP_RSVDn = OTP and shadowed registers that are implemented but are reserved for device internal usage, where n refers to the register address. MCU must keep these registers in their default value
- HW Reset default is the value loaded when digital resets (POR like event) whereas Factory Configuration
 Default is the default value loaded into the OTP cell if customer doesn't program it themselves. Customer
 cannot read the HW Reset value.

† 9.5.4 describes the definition of each bit in the registers. The registers in this section are grouped per functional blocks.

9.5.1 OTP Shadow Register Summary

Register	Addr	RW	Reset				D	ata			
Name	Hex	Type	Value	Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0
DIRO_ADDR _OTP	0	NVM	HW Reset Default = 0x00 Factory Configurati on Default = 0x01	SPARE[1:0]			ADDF	RESS[5:0]		
DIR1_ADDR _OTP	1	NVM	HW Reset Default = 0x00 Factory Configurati on Default = 0x01	SPARE[1:0]			ADDF	RESS[5:0]		
DEV_CONF	2	NVM	0x54	RSVD	NO_ADJ _CB	MULTI DROP _EN	FCOMM _EN	TWO_ STOP _EN	NFAULT _EN	FTONE _EN	HB_EN



Register	Addr	RW	Reset	Data								
Name	Hex	Туре	Value	Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0	
ACTIVE_CE LL	3	NVM	HW Reset Default = 0x00 Factory Configurati on Default = 0x0A		SPARE	[3:0]			NUM_C	CELL[3:0]		
OTP_SPARE 15	4	NVM	0x00				SPA	RE[7:0]				
BBVC_POS N1	5	NVM	0x00	CELL16	CELL15	CELL14	CELL13	CELL12	CELL11	CELL10	CELL9	
BBVC_POS N2	6	NVM	0x00	CELL8	CELL7	CELL6	CELL5	CELL4	CELL3	CELL2	CELL1	
ADC_CONF 1	7	NVM	0x00	AUX_SETT	LE[1:0]		LPF_BB[2:0)]	L	PF_VCELL	[2:0]	
ADC_CONF 2	8	NVM	0x00	SPARE	[1:0]			ADC_	DLY[5:0]			
OV_THRES H	9	NVM	0x3F	SPARE	SPARE			OV_	THR[5:0]			
UV_THRES H	Α	NVM	0x00	SPARE	SPARE			UV_	THR[5:0]			
OTUT_THR ESH	В	NVM	0xE0	UT_THR[2:0] OT_THR[4:0]								
UV_DISABL E1	С	NVM	0x00	CELL16	16 CELL15 CELL14 CELL13 CELL12 CELL11 CELL10					CELL9		
UV_DISABL E2	D	NVM	0x00	CELL8 CELL7 CELL6 CELL5 CELL4 CELL3					CELL3	CELL2	CELL1	
GPIO_CONF 1	E	NVM	0x00	FAULT_ IN_EN	SPI_EN		GPIO2[2:0]			GPIO1[2:0)]	
GPIO_CONF 2	F	NVM	0x00	SPARE	SPARE		GPIO4[2:0]			GPIO3[2:0	2:0]	
GPIO_CONF 3	10	NVM	0x00	SPARE	[1:0]		GPIO6[2:0]			GPIO5[2:0)]	
GPIO_CONF 4	11	NVM	0x00	SPARE	[1:0]		GPIO8[2:0]			GPIO7[2:0)]	
OTP_SPARE 14	12	NVM	0x00				SPA	RE[7:0]				
OTP_SPARE 13	13	NVM	0x00				SPA	RE[7:0]				
OTP_SPARE 12	14	NVM	0x00				SPA	RE[7:0]				
OTP_SPARE 11	15	NVM	0x00				SPA	RE[7:0]				
FAULT_MSK 1	16	NVM	0x00	MSK_PROT	MSK_UT	MSK_OT	MSK_UV	MSK_OV	MSK_ COMP	MSK_ SYS	MSK_PWR	
FAULT_MSK 2	17	NVM	0x00	SPARE[1]	MSK_ OTP_ CRC	MSK_ OTP_ DATA	MSK_ COMM3 _FCOMM	MSK_ COMM3 _FTONE	MSK_ COMM3 _HB	MSK_ COMM2	MSK_ COMM1	
PWR_TRAN SIT_CONF	18	NVM	HW Reset Default = 0x18 Factory Configurati on Default = 0x10	SF	PARE[2:0]		TWARN	_THR[1:0]		SLP_TIME[2:0]	



Register	Addr	RW	Reset				-	Data Data						
Name	Hex	Туре	Value	Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0			
COMM_TIM	19	NVM	0x00	SPARE		 CTS_TIME[2		CTL_ACT	2.(2	CTL_TIME[2:				
EOUT_CON							,			<u>-</u> - · · · · - <u>,</u> - ·	-,			
F TX_HOLD_	1A	NVM	0x00				DI	 .Y[7:0]						
OFF	IA	INVIVI	0000				DL	.1[7.0]						
MAIN_ADC_ CAL1	1B	NVM	0x00				GAI	NL[7:0]						
MAIN_ADC_ CAL2	1C	NVM	0x00	GAINH				OFFSET[6	5:0]					
AUX_ADC_ CAL1	1D	NVM	0x00				GAI	NL[7:0]						
AUX_ADC_ CAL2	1E	NVM	0x00	GAINH				OFFSET[6	5:0]					
OTP_RSVD 1F	1F	NVM	0x00		IN ⁻	TERNAL US	E. DO NO	WRITE TO	THIS ADD	RESS				
OTP_RSVD 20	20	NVM	0x00		IN ⁻	TERNAL US	E. DO NO	WRITE TO	THIS ADD	RESS				
	21	NVM	0x00				DA	TA[7:0]						
	22	NVM	0x00		DATA[7:0]									
OUOT MOS	23	NVM	0x00					TA[7:0]						
CUST_MISC 1 through	24	NVM	0x00				DA	TA[7:0]						
CUST_MISC	25	NVM	0x00				DA	TA[7:0]						
8	26	NVM	0x00				DA	TA[7:0]						
	27	NVM	0x00					TA[7:0]						
	28	NVM	0x00				DA	TA[7:0]						
STACK_RES PONSE	29	NVM	0x00	SPARE	[1:0]			DEL	AY[5:0]					
BBP_LOC	2A	NVM	0x00	SF	PARE[2:0]				LOC[4:	0]				
OTP_RSVD 2B	2B	NVM	0x00		IN ⁻	TERNAL US	E. DO NO	WRITE TO	THIS ADD	RESS				
OTP_SPARE 10	2C	NVM	0x00				SPA	RE[7:0]						
OTP_SPARE 9	2D	NVM	0x00				SPA	RE[7:0]						
OTP_SPARE 8	2E	NVM	0x00				SPA	RE[7:0]						
OTP_SPARE 7	2F	NVM	0x00				SPA	RE[7:0]						
OTP_SPARE 6	30	NVM	0x00				SPA	RE[7:0]						
OTP_SPARE 5	31	NVM	0x00				SPA	RE[7:0]						
OTP_SPARE 4	32	NVM	0x00				SPA	RE[7:0]						
OTP_SPARE	33	NVM	0x00				SPA	RE[7:0]						
OTP_SPARE 2	34	NVM	0x00				SPA	RE[7:0]						
OTP_SPARE	35	NVM	0x00				SPA	RE[7:0]						



Register	Addr	RW	Reset				D	ata			
Name	Hex	Type	Value	Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0
CUST_CRC _HI	36	NVM	HW Reset Default = 0x57 Factory Configurati on Default = 0x31				CR	C[7:0]			
CUST_CRC _LO	37	NVM	HW Reset Default = 0x89 Factory Configurati on Default = 0xF3				CR	C[7:0]			



9.5.2 Read/Write Register Summary

5	Addr	RW	Reset	Data Data								
Register Name	Hex	Туре	Value	Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0	
OTP_PROG_UNL	300	RW	0x00				COD	E[7:0]				
OCK1A through OTP_PROG_UNL	301	RW	0x00				COD	E[7:0]				
OCK1D	302	RW	0x00				COD	E[7:0]				
	303	RW	0x00				COD	E[7:0]				
DIR0_ADDR	306	RW	0x00	RS	VD			ADDRI	ESS[5:0]			
DIR1_ADDR	307	RW	0x00	RS	VD			ADDRI	ESS[5:0]			
COMM_CTRL	308	RW	0x00			RS	VD			STACK_ DEV	TOP_ STACK	
CONTROL1	309	RW	0x00	DIR_SEL	SEND_ SHUT DOWN	SEND_ WAKE	SEND_ SLPTO ACT	GOTO_ SHUT DOWN	GOTO_ SLEEP	SOFT_ RESET	ADDR_ WR	
CONTROL2	30A	RW	0x00			RS	VD			SEND_ HW_ RESET	TSREF _EN	
OTP_PROG_CTR L	30B	RW	0x00			RS	VD			PAGE SEL	PROG _GO	
ADC_CTRL1	30D	RW	0x00	RSVD	RS	VD	LPF_BB _EN	LPF_ VCELL_ EN	MAIN_GO	MAIN_M	ODE[1:0]	
ADC_CTRL2	30E	RW	0x00	L_ALIGN				ΑU	JX_CELL_SEL[4:0]			
ADC_CTRL3	30F	RW	0x00	RSVD		AUX_GPIO	D_SEL[3:0]		AUX_GO	AUX_M	DDE[1:0]	
REG_INT_RSVD	310	RW	0x00		INT	ERNAL USE	E. DO NOT	WRITE TO	THIS ADDRE	SS		
CB_CELL16_CTR	318	RW	0x00		RSVD				TIME[4:0]			
L through CB_CELL1_CTRL	319	RW	0x00		RSVD		TIME[4:0]					
	31A	RW	0x00		RSVD				TIME[4:0]			
	31B	RW	0x00		RSVD				TIME[4:0]			
	31C	RW	0x00		RSVD				TIME[4:0]			
	31D	RW	0x00		RSVD				TIME[4:0]			
	31E	RW	0x00		RSVD				TIME[4:0]			
	31F	RW	0x00		RSVD				TIME[4:0]			
	320	RW	0x00		RSVD				TIME[4:0]			
	321	RW	0x00		RSVD				TIME[4:0]			
	322	RW	0x00		RSVD				TIME[4:0]			
	323	RW	0x00		RSVD				TIME[4:0]			
	324	RW	0x00		RSVD				TIME[4:0]			
	325	RW	0x00		RSVD				TIME[4:0]			
	326	RW	0x00		RSVD				TIME[4:0]			
	327	RW	0x00	RSVD			TIME[4:0]					
VMB_DONE_THR ESH	328	RW	0x3F	RSVD			MB_THR[5:0]					
MB_TIMER_CTRL	329	RW	0x00	RSVD			TIME[4:0]					
VCB_DONE_THR ESH	32A	RW	0x00	RS	VD		CB_THR[5:0]					
OTCB_THRESH	32B	RW	0x0F	RSVD	С	OOLOFF[2:	0]		OTCB_1	THR[3:0]		



Do wieten Neme	Addr	RW	Reset				Da	ata			
Register Name	Hex	Type	Value	Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0
OVUV_CTRL	32C	RW	0x00	VCB DONE _THR _LOCK		OVUV_L	.OCK[3:0]		OVUV _GO	OVUV_M	IODE[1:0]
OTUT_CTRL	32D	RW	0x00	RSVD	OTCB_ THR_ LOCK	ОТ	TUT_LOCK[2	2:0]	OTUT _GO	OTUT_M	ODE[1:0]
BAL_CTRL1	32E	RW	0x00			RSVD				DUTY[2:0]	
BAL_CTRL2	32F	RW	0x00	RSVD	CB_ PAUSE	FLTSTOP _EN	OTCB_ EN	BAL_A	CT[1:0]	BAL_GO	AUTO_ BAL
BAL_CTRL3	330	RW	0x00		RSVD			BAL_TIME	E_SEL[3:0]		BAL_TIM E_GO
FAULT_RST1	331	RW	0x00	RST_ PROT	RST_UT	RST_OT	RST_UV	RST_OV	RST_ COMP	RST_SYS	RST_ PWR
FAULT_RST2	332	RW	0x00	RSVD	RST_OTP _CRC	RST_OTP _DATA	RST_ COMM3_ FCOMM	RST_ COMM3_ FTONE	RST_ COMM3_ HB	RST_ COMM2	RST_ COMM1
DIAG_OTP_CTRL	335	RW	0x00		RSVD		FLIP_ FACT_ CRC	MAF	RGIN_MODE	[2:0]	MARGIN _GO
DIAG_COMM_CT RL	336	RW	0x00			RS	SVD			SPI_ LOOP BACK	FLIP_TR _CRC
DIAG_PWR_CTRL	337	RW	0x00			RSVD				BIST_ NO_RST	PWR_ BIST_GO
DIAG_CBFET_CT RL1	338	RW	0x00	CBFET16	CBFET15	CBFET14	CBFET13	CBFET12	CBFET11	CBFET10	CBFET9
DIAG_CBFET_CT RL2	339	RW	0x00	CBFET8	CBFET7	CBFET6	CBFET5	CBFET4	CBFET3	CBFET2	CBFET1
DIAG_COMP_CT RL1	33A	RW	0x00		V	CCB_THR[4	:0]	•	BB_THR[2:0]		
DIAG_COMP_CT RL2	33B	RW	0x00	RSVD	G	PIO_THR[2:	:0]		OW_T	HR[3:0]	
DIAG_COMP_CT RL3	33C	RW	0x00	RSVD	CBFET_C TRL_GO	ow_s	NK[1:0]	COM	P_ADC_SE		COMP_ ADC_GO
DIAG_COMP_CT RL4	33D	RW	0x00			RS	SVD			COMP_ FAULT _INJ	LPF_ FAULT _INJ
DIAG_PROT_CTR L	33E	RW	0x00				RSVD				PROT_ BIST_ NO_RST
OTP_ECC_DATAI	343	RW	0x00				DATA	\ [7:0]			1
N1 through OTP_ECC_DATAI	344	RW	0x00				DATA	\ [7:0]			
N9	345	RW	0x00				DATA	A[7:0]			
	346	RW	0x00				DATA	\ [7:0]			
	347	RW	0x00					\ [7:0]			
	348	RW	0x00					\ [7:0]			
	349	RW	0x00					A[7:0]			
	34A	RW	0x00					A[7:0]			
OTP_ECC_TEST	34B 34C	RW	0x00 0x00	RSVD DED_ MANUAL ENC_				ENABLE			
SPI_CONF	34D	RW	0x00	RSVD	CPOL	СРНА			AUTO NUMBIT[4:0		



Di. t N	Addr	RW	Reset				D	ata				
Register Name	Hex	Туре	Value	Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0	
SPI_TX3,	34E	RW	0x00				DATA	A[7:0]				
SPI_TX2, and SPI_TX1	34F	RW	0x00				DATA	A[7:0]				
OF I_TXT	350	RW	0x00				DATA	A[7:0]				
SPI_EXE	351	RW	0x02			RS	SVD			SS_CTRL	SPI_GO	
OTP_PROG_UNL	352	RW	0x00		CODE[7:0] CODE[7:0]							
OCK2A through OTP PROG UNL	353	RW	0x00		CODE[7:0]							
OCK2D	354	RW	0x00		CODE[7:0] CODE[7:0]							
	355	RW	0x00				COD	E[7:0]				
DEBUG_CTRL_U NLOCK	700	RW	0x00				COD	E[7:0]				
DEBUG_COMM_ CTRL1	701	RW	0x04	BAUD MIRROR TX_EN UART_ DA						USER_ DAISY _EN		
DEBUG_COMM_ CTRL2	702	RW	0x0F	RSVD COML_ COML_ COMH_ TX_EN TX_EN TX_EN						COMH_ RX_EN		

9.5.3 Read-Only Register Summary

Danista - Nama	Addr	RW	Reset				Da	ata						
Register Name	Hex	Туре	Value	Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0			
PARTID	500	R	0x00				REV	/[7:0]						
DEV_REVID	E00	R	0x00				DEV_RE	EVID[7:0]						
	501	R	0x00				ID[7:0]						
	502	R	0x00				ID[7:0]						
	503	R	0x00				ID[7:0]						
	504	R	0x00				ID[7:0]						
DIE_ID1 through DIE ID9	505	R	0x00				ID[7:0]						
	506	R	0x00				ID[7:0]						
	507	R	0x00				ID[7:0]						
	508	R	0x00				ID[7:0]						
	509	R	0x00		ID[7:0]									
CUST_CRC_RSLT _HI	50C	R	0x31		CRC[7:0]									
CUST_CRC_RSLT _LO	50D	R	0xF3		CRC[7:0]									
OTP_ECC_DATA	510	R	0x00				DATA	A[7:0]						
OUT1 through OTP ECC DATA	511	R	0x00				DATA	A[7:0]						
OUT9	512	R	0x00				DATA	A[7:0]						
	513	R	0x00				DATA	A[7:0]						
	514	R	0x00				DATA	A[7:0]						
	515	R	0x00				DATA	A[7:0]						
	516	R	0x00				DATA	A[7:0]						
	517	R	0x00				DATA	A[7:0]						
	518	R	0x00	DATA[7:0]										
OTP_PROG_STA T	519	R	0x00	UNLOCK	OTERR	UVERR	OVERR	SUVERR	SOVERR	PROG ERR	DONE			
OTP_CUST1_STA T	51A	R	0x00	LOADED LOAD LOAD FMTERR PROGOK UVOK OVOK TRY										



	Addr	RW	Reset				Da	ata			
Register Name	Hex	Туре	Value	Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0
OTP_CUST2_STA T	51B	R	0x00	LOADED	LOAD WRN	LOAD ERR	FMTERR	PROGOK	UVOK	OVOK	TRY
SPI_RX3,	520	R	0x00				DATA	\ \[7:0]			
SPI_RX2, and SPI_RX1	521	R	0x00				DATA	\[7:0]			
	522	R	0x00				DATA	A[7:0]			
DIAG_STAT	526	R	0x00		RSVD		DRDY_ OTUT	DRDY_ OVUV	DRDY_ BIST_ OTUT	DRDY_ BIST_ OVUV	DRDY_ BIST_ PWR
ADC_STAT1	527	R	0x00		RSVD		RSVD	DRDY_ AUX_ GPIO	DRDY_ AUX_ CELL	DRDY_ AUX_ MISC	DRDY_ MAIN_ ADC
ADC_STAT2	528	R	0x00	RS	VD	DRDY_ LPF	DRDY_ GPIO	DRDY_ VCOW	DRDY_ CBOW	DRDY_ CBFET	DRDY_ VCCB
GPIO_STAT	52A	R	0x00	GPIO8	GPIO7	GPIO6	GPIO5	GPIO4	GPIO3	GPIO2	GPIO1
BAL_STAT	52B	R	0x00	INVALID_ CBCONF	OT_ PAUSE_ DET	CB_ INPAUSE	MB_RUN	CB_RUN	ABORT FLT	MB_ DONE	CB_ DONE
DEV_STAT	52C	R	0x00	RSVD	FACT_ CRC_ DONE	CUST_ CRC_ DONE	OTUT_ RUN	OVUV_ RUN	RSVD	AUX_ RUN	MAIN_ RUN
FAULT_SUMMAR Y	52D	R	0x00	FAULT_ PROT	FAULT_ COMP_ ADC	FAULT_ OTP	FAULT_ COMM	FAULT_ OTUT	FAULT_ OVUV	FAULT_ SYS	FAULT_ PWR
FAULT_COMM1	530	R	0x00		RSVD		UART_TR	UART_ RR	UART_ RC	COMM CLR_ DET	STOP_ DET
FAULT_COMM2	531	R	0x00	COML_ TR	COML_ RR	COML_ RC	COML_ BIT	COMH_ TR	COMH_ RR	COMH_ RC	COMH_ BIT
FAULT_COMM3	532	R	0x00		RS	VD		FCOMM _DET	FTONE _DET	HB_FAIL	HB_FAST
FAULT_OTP	535	R	0x00	RSVD	DED_ DET	SEC_DET	CUST_ CRC	FACT_ CRC	CUSTLD ERR	FACTLD ERR	GBLOV ERR
FAULT_SYS	536	R	0x00	LFO	RSVD	GPIO	DRST	CTL	CTS	TSHUT	TWARN
FAULT_PROT1	53A	R	0x00			RS	SVD			TPARITY _FAIL	VPARITY _FAIL
FAULT_PROT2	53B	R	0x00	RSVD	BIST_ ABORT	TPATH _FAIL	VPATH _FAIL	UTCOMP _FAIL	OTCOMP _FAIL	OVCOMP _FAIL	UVCOMP _FAIL
FAULT_OV1	53C	R	0x00	OV16_ DET	OV15_ DET	OV14_ DET	OV13_ DET	OV12_ DET	OV11_ DET	OV10_ DET	OV9_DET
FAULT_OV2	53D	R	0x00	OV8_DET	OV7_DET	OV6_DET	OV5_DET	OV4_DET	OV3_DET	OV2_DET	OV1_DET
FAULT_UV1	53E	R	0x00	UV16_ DET	UV15_ DET	UV14_ DET	UV13_ DET	UV12_ DET	UV11_ DET	UV10_ DET	UV9_DET
FAULT_UV2	53F	R	0x00	UV8_DET	UV7_DET	UV6_DET		UV4_DET	UV3_DET	UV2_DET	
FAULT_OT	540	R	0x00	OT8_DET	OT7_DET	OT6_DET	OT5_DET	OT4_DET	OT3_DET	OT2_DET	OT1_DET
FAULT_UT	541	R	0x00	UT8_DET	UT7_DET	UT6_DET		UT4_DET	UT3_DET	UT2_DET	UT1_DET
FAULT_COMP_G PIO	543	R	0x00	GPIO8_ FAIL	GPIO7_ FAIL	GPIO6_ FAIL	GPIO5_ FAIL	GPIO4_ FAIL	GPIO3_ FAIL	GPIO2_ FAIL	GPIO1_ FAIL
FAULT_COMP_V CCB1	545	R	0x00	CELL16_ FAIL	CELL15_ FAIL	CELL14_ FAIL	CELL13_ FAIL	CELL12_ FAIL	CELL11_ FAIL	CELL10_ FAIL	CELL9_ FAIL
FAULT_COMP_V CCB2	546	R	0x00	CELL8_ FAIL	CELL7_ FAIL	CELL6_ FAIL	CELL5_ FAIL	CELL4_ FAIL	CELL3_ FAIL	CELL2_ FAIL	CELL1_ FAIL
FAULT_COMP_V COW1	548	R	0x00	VCOW16 _FAIL	VCOW15 _FAIL	VCOW14 _FAIL	VCOW13 _FAIL	VCOW12 _FAIL	VCOW11 _FAIL	VCOW10 _FAIL	VCOW9 _FAIL



Registry Name		Addr	RW	Reset				D:	ata			
FAULT_COMP_V	Register Name				Bit7	Bit6	Bit5		1	Bit2	Bit1	Bit0
FAULT_COMP_VB S4B R	FAULT_COMP_V COW2	549			VCOW8	VCOW7	VCOW6	VCOW5	VCOW4	VCOW3	VCOW2	VCOW1
FAULT_COMP_VB S4C	FAULT_COMP_VB	54B	R	0x00	CBOW16	CBOW15	CBOW14	CBOW13	CBOW12	CBOW11	CBOW10	CBOW9
FAULT_COMP_C S4E	FAULT_COMP_VB OW2	54C	R	0x00	CBOW8	CBOW7	CBOW6	CBOW5	CBOW4	CBOW3	CBOW2	CBOW1
FAULT_COMP_C S4F	FAULT_COMP_C BFET1	54E	R	0x00	CBFET16	CBFET15	CBFET14	CBFET13	CBFET12	CBFET11	CBFET10	CBFET9
SC	FAULT_COMP_C BFET2	54F	R	0x00	CBFET8	CBFET7	CBFET6	CBFET5	CBFET4	CBFET3	CBFET2	CBFET1
OPEN OPEN OPEN OPEN OPEN OPEN OV OV OV OV OV OV OV O	FAULT_COMP_MI SC	550	R	0x00			RS	SVD			ADC_	LPF_FAIL
FAULT_PWR3	FAULT_PWR1	552	R	0x00				_		_	_	_
CB_COMPLETE1 556	FAULT_PWR2	553	R	0x00	RSVD		RSVD		_	_		_
CB_COMPLETE2 557	FAULT_PWR3	554	R	RSVD			RSVD			RSVD	RSVD	l
DONE DONE	CB_COMPLETE1	556	R	0x00			1					
VCELL16_HI/LO	CB_COMPLETE2	557	R	0x00			1					l
S69 R 0x00 RESULT[7:0]	BAL_TIME	558	R	0x00					TIME[6:0]			
VCELL15_HI/LO 56A R 0x80 RESULT[7:0] 56B R 0x00 RESULT[7:0] VCELL14_HI/LO 56C R 0x80 RESULT[7:0] VCELL13_HI/LO 56E R 0x80 RESULT[7:0] VCELL12_HI/LO 570 R 0x80 RESULT[7:0] VCELL12_HI/LO 570 R 0x80 RESULT[7:0] VCELL11_HI/LO 572 R 0x80 RESULT[7:0] VCELL11_HI/LO 572 R 0x80 RESULT[7:0] VCELL10_HI/LO 574 R 0x80 RESULT[7:0] VCELL9_HI/LO 576 R 0x80 RESULT[7:0] VCELL9_HI/LO 576 R 0x80 RESULT[7:0] VCELL8_HI/LO 578 R 0x00 RESULT[7:0] VCELL1_HI/LO 57A R 0x80 RESULT[7:0] VCELL6_HI/LO 57A R 0x80 RESULT[7:0] VCELL6_HI/LO 57C R 0x80	VCELL16_HI/LO	568	R	0x80		I		RESU	LT[7:0]			
S6B R 0x00 RESULT[7:0]		569	R	0x00				RESU	LT[7:0]			
VCELL14_HI/LO 56C R 0x80 RESULT[7:0] 56D R 0x00 RESULT[7:0] VCELL13_HI/LO 56E R 0x80 RESULT[7:0] VCELL12_HI/LO 570 R 0x80 RESULT[7:0] VCELL11_HI/LO 571 R 0x00 RESULT[7:0] VCELL11_HI/LO 572 R 0x80 RESULT[7:0] VCELL10_HI/LO 574 R 0x80 RESULT[7:0] VCELL9_HI/LO 576 R 0x80 RESULT[7:0] VCELL9_HI/LO 576 R 0x80 RESULT[7:0] VCELL8_HI/LO 578 R 0x80 RESULT[7:0] VCELL8_HI/LO 57A R 0x80 RESULT[7:0] VCELL6_HI/LO 57A R 0x80 RESULT[7:0] VCELL6_HI/LO 57C R 0x80 RESULT[7:0] VCELL6_HI/LO 57C R 0x80 RESULT[7:0] VCELL5_HI/LO 57E R 0x80	VCELL15_HI/LO	56A	R	0x80				RESU	LT[7:0]			
S6D R 0x00 RESULT[7:0]				0x00								
VCELL13_HI/LO 56E R 0x80 RESULT[7:0] 56F R 0x00 RESULT[7:0] VCELL12_HI/LO 570 R 0x80 RESULT[7:0] 571 R 0x00 RESULT[7:0] VCELL11_HI/LO 572 R 0x80 RESULT[7:0] VCELL10_HI/LO 574 R 0x80 RESULT[7:0] VCELL9_HI/LO 576 R 0x80 RESULT[7:0] VCELL9_HI/LO 576 R 0x80 RESULT[7:0] VCELL8_HI/LO 578 R 0x80 RESULT[7:0] VCELL8_HI/LO 578 R 0x80 RESULT[7:0] VCELL7_HI/LO 57A R 0x80 RESULT[7:0] VCELL6_HI/LO 57C R 0x80 RESULT[7:0] VCELL6_HI/LO 57C R 0x80 RESULT[7:0] VCELL5_HI/LO 57E R 0x80 RESULT[7:0]	VCELL14_HI/LO											
S6F R 0x00 RESULT[7:0]												
VCELL12_HI/LO 570 R 0x80 RESULT[7:0] 571 R 0x00 RESULT[7:0] VCELL11_HI/LO 572 R 0x80 RESULT[7:0] 573 R 0x00 RESULT[7:0] VCELL10_HI/LO 574 R 0x80 RESULT[7:0] VCELL9_HI/LO 576 R 0x80 RESULT[7:0] VCELL8_HI/LO 578 R 0x80 RESULT[7:0] VCELL8_HI/LO 578 R 0x80 RESULT[7:0] VCELL7_HI/LO 57A R 0x80 RESULT[7:0] VCELL6_HI/LO 57C R 0x80 RESULT[7:0] VCELL6_HI/LO 57C R 0x80 RESULT[7:0] VCELL5_HI/LO 57E R 0x80 RESULT[7:0]	VCELL13_HI/LO											
S71	VOEL 40 11/1/0											
VCELL11_HI/LO 572 R 0x80 RESULT[7:0] 573 R 0x00 RESULT[7:0] VCELL10_HI/LO 574 R 0x80 RESULT[7:0] 575 R 0x00 RESULT[7:0] VCELL9_HI/LO 576 R 0x80 RESULT[7:0] 577 R 0x00 RESULT[7:0] VCELL8_HI/LO 578 R 0x80 RESULT[7:0] VCELL7_HI/LO 57A R 0x80 RESULT[7:0] VCELL6_HI/LO 57C R 0x80 RESULT[7:0] VCELL6_HI/LO 57E R 0x80 RESULT[7:0]	VCELL12_HI/LO											
S73 R 0x00 RESULT[7:0]	VCELL11 HI/LO											
VCELL10_HI/LO 574 R 0x80 RESULT[7:0] 575 R 0x00 RESULT[7:0] VCELL9_HI/LO 576 R 0x80 RESULT[7:0] 577 R 0x00 RESULT[7:0] VCELL8_HI/LO 578 R 0x80 RESULT[7:0] 579 R 0x00 RESULT[7:0] VCELL7_HI/LO 57A R 0x80 RESULT[7:0] VCELL6_HI/LO 57C R 0x80 RESULT[7:0] VCELL6_HI/LO 57C R 0x80 RESULT[7:0] VCELL5_HI/LO 57E R 0x80 RESULT[7:0]	VOLLETT_TIMEO											
S75 R 0x00 RESULT[7:0]	VCELL10 HI/LO											
VCELL9_HI/LO 576 R 0x80 RESULT[7:0] 577 R 0x00 RESULT[7:0] VCELL8_HI/LO 578 R 0x80 RESULT[7:0] 579 R 0x00 RESULT[7:0] VCELL7_HI/LO 57A R 0x80 RESULT[7:0] 57B R 0x00 RESULT[7:0] VCELL6_HI/LO 57C R 0x80 RESULT[7:0] VCELL5_HI/LO 57E R 0x80 RESULT[7:0]	1022210_111120											
S77 R 0x00 RESULT[7:0]	VCELL9 HI/LO											
VCELL8_HI/LO 578 R 0x80 RESULT[7:0] 579 R 0x00 RESULT[7:0] VCELL7_HI/LO 57A R 0x80 RESULT[7:0] 57B R 0x00 RESULT[7:0] VCELL6_HI/LO 57C R 0x80 RESULT[7:0] 57D R 0x00 RESULT[7:0] VCELL5_HI/LO 57E R 0x80 RESULT[7:0]												
S79 R 0x00 RESULT[7:0]	VCELL8 HI/LO											
VCELL7_HI/LO 57A R 0x80 RESULT[7:0] 57B R 0x00 RESULT[7:0] VCELL6_HI/LO 57C R 0x80 RESULT[7:0] 57D R 0x00 RESULT[7:0] VCELL5_HI/LO 57E R 0x80 RESULT[7:0]	_		R	0x00								
57B R 0x00 RESULT[7:0] VCELL6_HI/LO 57C R 0x80 RESULT[7:0] 57D R 0x00 RESULT[7:0] VCELL5_HI/LO 57E R 0x80 RESULT[7:0]	VCELL7_HI/LO											
VCELL6_HI/LO 57C R 0x80 RESULT[7:0] 57D R 0x00 RESULT[7:0] VCELL5_HI/LO 57E R 0x80 RESULT[7:0]												
57D R 0x00 RESULT[7:0] VCELL5_HI/LO 57E R 0x80 RESULT[7:0]	VCELL6 HI/LO		R	0x80								
VCELL5_HI/LO 57E R 0x80 RESULT[7:0]												
	VCELL5 HI/LO											
57F R 0x00 RESULT[7:0]		57F	R	0x00								



Do wieten Neme	Addr	RW	Reset								
Register Name	Hex	Type	Value	Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0
VCELL4_HI/LO	580	R	0x80				RESU	JLT[7:0]			
	581	R	0x00				RESU	JLT[7:0]			
VCELL3_HI/LO	582	R	0x80					JLT[7:0]			
	583	R	0x00					JLT[7:0]			
VCELL2_HI/LO	584	R	0x80					JLT[7:0]			
	585	R	0x00					JLT[7:0]			
VCELL1_HI/LO	586	R	0x80					JLT[7:0]			
	587	R	0x00					JLT[7:0]			
BUSBAR_HI/LO	588	R	0x80					JLT[7:0]			
	589	R	0x00					JLT[7:0]			
TSREF_HI/LO	58C	R	0x80					JLT[7:0]			
	58D	R	0x00					JLT[7:0]			
GPIO1_HI/LO	58E	R	0x80					JLT[7:0]			
	58F	R	0x00					JLT[7:0]			
GPIO2_HI/LO	590	R	0x80				RESU	JLT[7:0]			
	591	R	0x00				RESU	JLT[7:0]			
GPIO3_HI/LO	592	R	0x80				RESU	JLT[7:0]			
	593	R	0x00				RESU	JLT[7:0]			
GPIO4_HI/LO	594	R	0x80				RESU	JLT[7:0]			
	595	R	0x00				RESU	JLT[7:0]			
GPIO5_HI/LO	596	R	0x80				RESU	JLT[7:0]			
	597	R	0x00				RESU	JLT[7:0]			
GPIO6_HI/LO	598	R	0x80				RESU	JLT[7:0]			
	599	R	0x00				RESU	JLT[7:0]			
GPIO7_HI/LO	59A	R	0x80				RESU	JLT[7:0]			
	59B	R	0x00				RESU	JLT[7:0]			
GPIO8_HI/LO	59C	R	0x80				RESU	JLT[7:0]			
	59D	R	0x00				RESU	JLT[7:0]			
DIETEMP1_HI/LO	5AE	R	0x80				RESU	JLT[7:0]			
	5AF	R	0x00				RESU	JLT[7:0]			
DIETEMP2_HI/LO	5B0	R	0x80				RESU	JLT[7:0]			
	5B1	R	0x00				RESU	JLT[7:0]			
AUX_CELL_HI/LO	5B2	R	0x80				RESU	JLT[7:0]			
	5B3	R	0x00				RESU	JLT[7:0]			
AUX_GPIO_HI/LO	5B4	R	0x80				RESU	JLT[7:0]			
	5B5	R	0x00				RESU	JLT[7:0]			
AUX_BAT_HI/LO	5B6	R	0x80				RESU	JLT[7:0]			
	5B7	R	0x00				RESU	JLT[7:0]			
AUX_REFL_HI/LO	5B8	R	0x80				RESU	JLT[7:0]			
	5B9	R	0x00				RESU	JLT[7:0]			
AUX_VBG2_HI/LO	5BA	R	0x80				RESU	JLT[7:0]			
	5BB	R	0x00				RESU	JLT[7:0]			
AUX_AVAO_REF_	5BE	R	0x80				RESU	JLT[7:0]			
HI/LO	5BF	R	0x00				RESU	JLT[7:0]			



	Addr	RW	Reset				Da	ata			
Register Name	Hex	Туре	Value	Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0
AUX_AVDD_REF_	5C0	R	0x80				RESU	LT[7:0]			
HI/LO	5C1	R	0x00				RESU	LT[7:0]			
AUX_OV_DAC_HI	5C2	R	0x80				RESU	LT[7:0]			
/LO	5C3	R	0x00					LT[7:0]			
AUX_UV_DAC_HI/LO	5C4	R	0x80					LT[7:0]			
	5C5	R	0x00					LT[7:0]			
AUX_OT_OTCB_ DAC_HI/LO	5C6	R	0x80					LT[7:0]			
	5C7	R	0x00					LT[7:0]			
AUX_UT_DAC_HI/ LO	5C8	R	0x80					LT[7:0]			
	5C9	R	0x00					LT[7:0]			
AUX_VCBDONE_ DAC_HI/LO	5CA	R	0x80					LT[7:0]			
	5CB	R	0x00					LT[7:0]			
AUX_VCM_HI/LO	5CC	R	0x80					LT[7:0]			
DEEOVDAC III/I	5CD 5D0	R	0x00					LT[7:0]			
REFOVDAC_HI/L O	5D0	R R	0x00 0x00					LT[7:0] LT[7:0]			
DIAG MAIN HI/L	5D1	R	0x00					LT[7:0] LT[7:0]			
O O	5D2	R	0x00					LT[7:0]			
DIAG AUX HI/LO	5D3	R	0x00					LT[7:0]			
DIAO_AOX_III/EO	5D5	R	0x00					LT[7:0]			
DEBUG COMM S	780	R	0x33	R9	SVD	HW	HW	COML	COML	COMH	СОМН
TAT			for base 0x3F for stack			UART_ DRV	DAISY_ DRV	TX_ON	RX_ON	TX_ON	RX_ON
DEBUG_UART_R C	781	R	0x00	RS	SVD	RC_IERR	RC_ TXDIS	RC_SOF	RC_ BYTE_ ERR	RC_ UNEXP	RC_CRC
DEBUG_UART_R R_TR	782	R	0x00		RSVD		TR_SOF	TR_WAIT	RR_SOF	RR_ BYTE_ ERR	RR_CRC
Т	783	R	0x00		RSVD		PERR	BERR_ TAG	SYNC2	SYNC1	BIT
DEBUG_COMH_R C	784	R	0x00	RS	SVD	RC_IERR	RC_ TXDIS	RC_SOF	RC_ BYTE_ ERR	RC_ UNEXP	RC_CRC
DEBUG_COMH_R R_TR	785	R	0x00	RS	SVD	TR_WAIT	RR_ TXDIS	RR_SOF	RR_ BYTE_ ERR	RR_ UNEXP	RR_CRC
DEBUG_COML_BI T	786	R	0x00		RSVD		PERR	BERR_ TAG	SYNC2	SYNC1	BIT
DEBUG_COML_R C	787	R	0x00	RS	SVD	RC_IERR	RC_ TXDIS	RC_SOF	RC_ BYTE_ ERR	RC_ UNEXP	RC_CRC
DEBUG_COML_R R_TR	788	R	0x00	RS	SVD	TR_WAIT	RR_ TXDIS	RR_SOF	RR_ BYTE_ ERR	RR_ UNEXP	RR_CRC
DEBUG_UART_DI SCARD	789	R	0x00			1	COUN	NT[7:0]	1	ı	1
DEBUG_COMH_D ISCARD	78A	R	0x00				COUN	NT[7:0]			



Register Name	Addr	RW	Reset				Da	ıta			
Register Name	Hex	Type	Value	Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0
DEBUG_COML_D ISCARD	78B	R	0x00				COUN	IT[7:0]			
DEBUG_UART_V	78C	R	0x00		COUNT[7:0]						
ALID_HI/LO	78D	R	0x00		COUNT[7:0]						
DEBUG_COMH_V	78E	R	0x00		COUNT[7:0]						
ALID_HI/LO	78F	R	0x00		COUNT[7:0]						
DEBUG_COML_V	790	R	0x00				COUN	IT[7:0]			
ALID_HI/LO	791	R	0x00				COUN	IT[7:0]			
DEBUG_OTP_SE C_BLK	7A0	R	0x00		BLOCK[7:0]						
DEBUG_OTP_DE D_BLK	7A1	R	0x00	BLOCK[7:0]							



9.5.4 Register Field Descriptions

9.5.4.1 Device Addressing Setup

9.5.4.1.1 DIR0_ADDR_OTP

Address	0x0000								
NVM	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0	
Name	SPAF	RE[1:0]		ADDRESS[5:0]					
Reset	0	0	0	0	0	0	0	0	

SPARE[1:0] = Spare

ADDRESS[5:0] = This register shows the default device address used when [DIR_SEL] = 0 and programmed in the OTP. Writing to this register won't change the device address actively in use.

This register is used for the system to program the device address to OTP, which will be loaded to the *DIRO ADDR* register at POR. For programming, follow the OTP programming procedure.

9.5.4.1.2 DIR1_ADDR_OTP

Address	0x0001							
NVM	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
Name	SPAF	RE[1:0]			ADDRE	SS[5:0]		
Reset	0	0	0	0	0	0	0	0
	SPARE[1:0] =	Spare						

ADDRESS[5:0] = This register shows the default device address used when [DIR_SEL] = 1 and programmed in the OTP. Writing to this register won't change the device address actively in use.

This register is used for the system to program the device address to OTP, which will be loaded to the *DIR1_ADDR* register at POR. For programming, follow the OTP programming procedure.

9.5.4.1.3 CUST MISC1 through CUST MISC8

Address	0x0021 to 0x0028											
NVM	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0				
Name		DATA[7:0]										
Reset	0	0	0	0	0	0	0	0				
	DATA[7:0] =	Customer scrate	ch pad									

9.5.4.1.4 DIR0_ADDR

Address	0x0306								
RW	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0	
Name	R	SVD		ADDRESS[5:0]					
Reset	0	0	0	0	0	0	0	0	

RSVD = Reserved

ADDRESS[5:0] = Always shows the current device address used by the device when [DIR_SEL] = 0. At POR, this register is loaded from the device address value in the OTP (same OTP device address loaded to DIR0_ADDR_OTP register). Host can re-address the device by writing a different device address to this register, and the device will take on the new address immediately.

Note: $CONTROL1[ADDR_WR]$ = 1 is required to write to this register. See $\mbox{‡}$ 9.5.4.3.11 for details.

9.5.4.1.5 DIR1_ADDR

Address	0x0307							
RW	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
Name	RS	SVD			ADDRE	SS[5:0]		
Reset	0	0	0	0	0	0	0	0
	RSVD =	Reserved						



ADDRESS[5:0] = Always shows the current device address used by the device when [DIR_SEL] = 1. At POR, this register is loaded from the device address value in the OTP (same OTP device address loaded to DIR1_ADDR_OTP register). Host can re-address the device by writing a different device address to this register, and the device will take on the new address immediately.

Note: CONTROL1[ADDR_WR] = 1 is required to write to this register. See # 9.5.4.3.11 for details.

9.5.4.2 Device ID and Scratch Pad

9.5.4.2.1 PARTID

Address	0x0500							
Read Only	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
Name				PART	ID[7:0]			
Reset	0	0	0	0	0	0	0	0

PARTID[7:0] Device Identification:

= 0x21 = BQ79616

0x01 = BQ79614

0x02 = BQ79612

0x03 = BQ75614

0x04 = BQ79656

0x05 = BQ79654

0x06 = BQ79652

0x0A = BQ756506

All other codes = Reserved

9.5.4.2.2 DEV_REVID

Address	0xE00									
Read Only	Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0		
Reset	0	0	0	0	0	0	0	0		
	A value of 0x00	value of 0x00 indicates that the device is in normal operating mode. If a fault activates the Factory Testmode Detection.								

A value of 0x00 indicates that the device is in normal operating mode. If a fault activates the Factory Testmode Detection, the value will be non-zero. Refer Safety Manual for details on SM426: Fact Testmode Detection.

9.5.4.2.3 DIE_ID1 through DIE_ID9

Address	0x0501							
Read Only	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
Name				ID	[7:0]			
Reset	0	0	0	0	0	0	0	0

ID[7:0] = Device Revision

0x10 = Revision A0

0x11 = Revision A1

0x20 = Revision B0

0x21 = Revision B1

0x22 = Revision B2

All other codes = Reserved

Address	0x0502 to 0x0509									
Read Only	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0		
Name	ID[7:0]									
Reset	0	0	0	0	0	0	0	0		
	ID[7:0] = Die ID for TI factory use									



9.5.4.3 General Configuration and Control

9.5.4.3.1 DEV_CONF

Address	0x0002							
NVM	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
Name	RSVD	NO_ADJ_CB	MULTIDROP _EN	FCOMM_EN	TWO_STOP _EN	NFAULT_EN	FTONE_EN	HB_EN
Reset	0	1	0	1	0	1	0	0
	D 61 /D							

RSVD = Reserved

- NO_ADJ_CB = Indicates the device will not allow an adjacent CB FET to be turned on in manual CB control. If MCU has enabled an adjacent CB FET, device will not start CB even if host sends [BAL_GO] = 1.
 - 0 = Device will allow two adjacent CB FETs to be enabled.
 - 1 = Device will not allow adjacent CB FET to be enabled.
- MULTIDROP_EN = Defines if the device is used in a multidrop or daisy chain configuration. The TX and RX for COML and COMH will be enabled or disabled based on the configuration.
 - 0 = Daisy chain of base device
 - 1 = Multidrop
 - FCOMM EN = Enables the fault state detection through communication in ACTIVE mode.
 - 0 = Disable
 - 1 = Enable
- TWO STOP EN = Enables two stop bits for the UART in case of severe oscillator error in the host and device.
 - 0 = One STOP bit
 - 1 = Two STOP bits
 - NFAULT EN = Enables the NFAULT function.
 - 0 = NFAULT always pulled up
 - 1 = NFAULT pulled low to indicate an unmasked fault is detected.
 - Note: This bit setting does not affect the FAULT_SUMMARY register.
 - FTONE EN = Enables FAULT TONE transmitter when device is in SLEEP mode.
 - 0 = Disable
 - 1 = Enable
 - HB_EN = Enables HEARTBEAT transmitter when device is in SLEEP mode.
 - 0 = Disable
 - 1 = Enable

9.5.4.3.2 ACTIVE_CELL

Address	0x0003							
NVM	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
Name		SPAI	RE[3:0]			NUM_C	ELL[3:0]	
Reset	0	0	0	0	0	0	0	0
Factory OTP Reset	0	0	0	0	1	0	1	0

SPARE[3:0] = Spare

NUM CELL[3:0] = Configures the number of cells in series.

0x0 = 6S

0x0 - 0S0x1 = 7S

0x2 = 8S

:

0xA = 16S

Unused code defaults to CHIP_TYPE[MAX_CH1:0] setting (in factory trim). If the NUM_CELL setting has more channels than the device offers, it would be capped to higest number of channel the device offers.

9.5.4.3.3 BBVC_POSN1

Address	0x0005							
NVM	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
Name	CELL16	CELL15	CELL14	CELL13	CELL12	CELL11	CELL10	CELL9



Reset	0	0	0	0	0	0	0	0
CE	LL9 to CELL16 =	comparison will 0 = No special h	handle those cha andling			ŭ	e measurement c	liagnostic

9.5.4.3.4 BBVC_POSN2

Address	0x0006							
NVM	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
Name	CELL8	CELL7	CELL6	CELL5	CELL4	CELL3	CELL2	CELL1
Reset	0	0	0	0	0	0	0	0

CELL1 to CELL8 = Among the active cells specified by the ACT/VE_CELL register, this register indicates which active channel is excluded from the OV, UV and VCB_DONE monitoring. This register information is also used for cell voltage measurement diagnostic comparison.

0 = No special handling of the functions mentioned above.

1 = Special handling of the functions mentioned above. See # 9.3.7 for details.

9.5.4.3.5 PWR_TRANSIT_CONF

Address	0x0018							
NVM	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
Name		SPARE[2:0]		TWARN_	THR[1:0]		SLP_TIME[2:0]	
Reset	0	0	0	1	1	0	0	0
Factory Configura tion default	0	0	0	1	0	0	0	0

SPARE[2:0] = Spare

TWARN_THR[1:0] = Sets the TWARN threshold.

 $00 = 85^{\circ}C$

01 = 95°C

10 = 105°C (default)

11 = 115°C

SLP TIME[2:0] = A timeout in SLEEP mode. This timer starts counting when device enters SLEEP mode. When the timer expires, the device enters SHUTDOWN mode. The timer resets if device wakes up to ACTIVE mode.

000 = No timeout. Device remains in SLEEP mode (default at reset)

001 = 5 s

010 = 10 s

 $011 = 1 \min$

100 = 10 min

101 = 30 min

110 = 1 hour

111 = 2 hour

9.5.4.3.6 COMM_TIMEOUT_CONF

Address	0x0019							
NVM	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
Name	SPARE		CTS_TIME[2:0]		CTL_ACT			
Reset	0	0	0	0	0	0	0	0
SPARE = Spare								

CTS_TIME[2:0] = Sets the short communication timeout. When this timer expires, the device sets the FAULT_SYS[CTL] bit. This can be used as an alert to the system to prevent a long communication timeout.

000 = Disables short communication timeout (default at reset)

001 = 100 ms

010 = 2 s

011 = 10 s

 $100 = 1 \min$ 101 = 10 min

110 = 30 min 111 = 1 hr

CTL ACT = Configures the device action when long communication timeout timer expires.

0 = Sets FAULT_SYS[CTL] and sends device to SLEEP mode (default at reset)

1 = Sends the device to SHUTDOWN. FAULT_SYS[CTL] bit will not be set.

CTL TIME[2:0] = Sets the long communication timeout. When this timer expires, the device takes the action configured by the [CTL_ACT] bit.

000 = Disables long communication timeout (default at reset)

001 = 100 ms

010 = 2 s

011 = 10 s

 $100 = 1 \min$

101 = 10 min

110 = 30 min

111 = 1 hr

9.5.4.3.7 TX_HOLD_OFF

0x001A							
Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
			DL	7[7:0]			
0	0	0	0	0	0	0	0
				Bit 7 Bit 6 Bit 5 Bit 4		Bit 7 Bit 6 Bit 5 Bit 4 Bit 3 Bit 2	Bit 7 Bit 6 Bit 5 Bit 4 Bit 3 Bit 2 Bit 1

DLY[7:0] = Sets the number of bit periods from 0 to 255 to delay after receiving the STOP bit of a command frame and before transmitting the 1st bit of response frame.

9.5.4.3.8 STACK_RESPONSE

Address	0x0029								
NVM	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0	
Name	SPAF	RE[1:0]		DELAY[5:0]					
Reset	0	0	0	0	0	0	0	0	

DELAY[5:0] Add additional byte delay gap in daisy chain data response frame

 $= 0x00 = 0-\mu s$

 $0x01 \text{ to } 0x3F = 0.25\text{-}\mu\text{s to } 15.75\text{-}\mu\text{s in } 0.25\text{us step}$

9.5.4.3.9 BBP_LOC

Address	0x002A								
NVM	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0	
Name		SPARE[3:0]			LOC[4:0]				
Reset	0	0	0	0	0	0	0	0	

LOC[4:0] = Indicate the BBP pin location and show which VC channel the BB channel is sharing with. This information is used for correcting the common mode error during BB channel ADC measurement

0x00 = BBP/N not in used

0x01 = BBP to negative side of Cell2, BBN to VC1

0x02 = BBP to negative side of Cell3, BBN to VC2

0x03 = BBP to negative side of Cell4, BBN to VC3

0x0F = BBP to negative side of Cell16, BBN to VC15

0x10= BBP to VC16, BBN to positive side of Cell16

1 = Is the ToS device



9.5.4.3.10 COMM_CTRL

Address	0x0308									
RW	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0		
Name		•	R	SVD			STACK_DEV	TOP_STACK		
Reset	0	0	0	0	0	0	0	0		
	RSVD = Reserved									
S	STACK_DEV = Defines device as a base or stack device in daisy chain configuration. 0 = Base device 1 = Stack device									
Т	TOP_STACK = Defines device as highest addressed device in the stack. 0 = Not the ToS device									

9.5.4.3.11 CONTROL1

Address	0x0309							
RW	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
Name	DIR_SEL	SEND_ SHUTDOWN	SEND_WAKE	SEND_ SLPTOACT	GOTO_ SHUTDOWN	GOTO_ SLEEP	SOFT_RESET	ADDR_WR
Reset	0	0	0	0	0	0	0	0
	DIR_SEL =	of the next device	vices connected ce. vices connected	in daisy chain, c			OMH of the lower d	
SEND_S	HUTDOWN =	cleared. 0 = Ready	OWN tone to nex		stack. The device	receiving this	bit set is unaffecte	d. Bit is self-
SE	END_WAKE =	0 = Ready	ne to next device		Bit is self-cleared.			
SEND_	SLPTOACT =	Sends SLEEPto 0 = Ready 1 = Send SLEE	ACTIVE tone up		self-cleared.			
GOTO_S	HUTDOWN =	Transitions devi 0 = Ready 1 = Enter SHUT		/N mode. Bit is s	self-cleared.			
GO	TO_SLEEP =	Transitions devi 0 = Ready 1 = Enter SLEE		de. Bit is self-cle	eared.			
SO	FT_RESET =	Resets the digit to the upper sta 0 = Ready 1 = Reset device	ck devices.	t. Bit is self-clear	red. Setting this b	it will cause the	e device to genera	te WAKE tone
	ADDR_WR =	allowing the dev 0 = Not perform	rice address to b ing auto-address	e written to a sin s. Device forward	ngle device. See ⁻ ds communication	节 9.3.6.1.3.2 for transaction as		

Host should not write multiple bits at the same to CONTROL1 register. The following shows the priority behavior if multiple bits are written at the same write command to CONTROL1

· Power States:

- [SOFT_RESET] : Priority 1 - [GOTO_SHUTDOWN]: Priority 2 - [GOTO_SLEEP]: Priority 3

• SEND tone:

- [SEND_WAKE]: Priority 1

- [SEND_SLPTOACT]: Priority 2

- [SEND_SD_HW_RST]: Priority 3

• Between the Power State bits and SEND tone bits:

Power Stat bits: Priority 1SEND tone bits: Priority 2

9.5.4.3.12 CONTROL2

Address	0x030A									
RW	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0		
Name	RSVD SEND_HW_ RESET									
Reset	0	0 0 0 0 0 0								
	RSVD = Reserved									
SEND_H	SEND_HW_RESET = Sends HW_RESET tone up the stack. Bit is cleared on read. 0 = Ready 1 = Send HW_RESET tone to next stack device up									
TSREF_EN = Enables TSREF LDO output. Used to bias NTC thermistor. 0 = Disabled 1 = Enabled										

9.5.4.3.13 CUST_CRC_HI

Address	0x0036									
NVM	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0		
Name		CRC[7:0]								
Reset	0	1	0	1	0	1	1	1		
Factory Configura tion Reset	0	0	1	1	0	0	0	1		
	CRC[7:0] = High-byte of the host-calculated CRC for customer OTP space.									

9.5.4.3.14 CUST_CRC_LO

Address	0x0037								
NVM	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0	
Name				CR	C[7:0]				
Reset	1	0	0	0	1	0	0	1	
Factory Configura tion Reset	1	1	1	1	0	0	1	1	
	CRC[7:0] = Low-byte of the host-calculated CRC for customer OTP space.								

9.5.4.3.15 CUST_CRC_RSLT_HI

Address	0x050C									
Read Only	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0		
Name	CRC[7:0]									
Reset	0	0 0 1 1 0 0 1								
	CRC[7:0] = High-byte of the device-calculated CRC for customer OTP space.									



9.5.4.3.16 CUST_CRC_RSLT_LO

Address	0x050D									
Read Only	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0		
Name		CRC[7:0]								
Reset	1	1 1 1 0 0 1 1								
	CRC[7:0] = Low-byte of the device-calculated CRC for customer OTP space.									

9.5.4.4 Operation Status

9.5.4.4.1 DIAG_STAT

Address	0x0526							
Read Only	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
Name		RSVD		DRDY_OTUT	DRDY_OVUV	DRDY_BIST _OTUT	DRDY_BIST _OVUV	DRDY_BIST _PWR
Reset	0	0	0	0	0	0	0	0
	RSVD =	Reserved						
D	RDY_OTUT =	[OTUT_MODE: completed. 0 = OTUT has recompleted.	1:0] = 01 (start the start of the started or fire	n has run at least ne OTUT round ro st round robin has bin has completed	obin run) and set s not completed y	when at least 1		
DI	RDY_OVUV =	[OVUV_MODE completed. 0 = OVUV has a	1:0] = 01 (start the content of the	n has at least run he OVUV round r st round robin ha bin has completed	obin run) and sets	when at least 1		
DRDY_I	3IST_OTUT =		1:0] = 10 (start the or still running.	T protector diagn ne BIST run) and				th
DRDY_E	BIST_OVUV =		<i>1:0]</i> = 10 (start tl or still running.	V protector diagn he BIST run) and				ith
DRDY_	BIST_PWR =		et when the BIS or still running.	er supplies diagno ST cycle is comple		leared when <i>[PV</i>	VR_BIST_GO] =	1 (start the

9.5.4.4.2 ADC_STAT1

Address	0x0527							
Read Only	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
Name	RSVD			RSVD	DRDY_AUX _GPIO	DRDY_AUX _CELL	DRDY_AUX _MISC	DRDY_MAIN _ADC
Reset	0	0	0	0	0	0	0	0

RSVD = Reserved

DRDY_AUX_GPIO = AUX ADC has completed at least a single measurement on all active GPIO channels configured for ADC measurement. This bit is cleared when [AUX_GO] is changed from 0 to 1.

0 = Not ready

1 = All GPIO inputs have completed at least a single measurement by the AUX ADC

Instruments www.ti.com.cn

DRDY_AUX_CELL = Device has completed at least a single measurement on all AUXCELL channel(s) set by [AUX_CELL_SEL4:0]. This bit is cleared when [AUX_GO] is changed from 0 to 1.

1 = All [AUX_CELL_SEL4:0] configured channels have completed at least a single measurement

DRDY_AUX_MISC = Device has completed at least a single measurement on all AUX ADC MISC input channels (that is, completed a single round robin run). This bit is cleared when [AUX_GO] is changed from 0 to 1.

0 = Not ready

1 = All AUX ADC MISC inputs have completed at least a single measurement

DRDY MAIN ADC = Device has completed at least a single measurement on all Main ADC input channels, including all GPIOs (that is, completed a single round robin run). This bit is cleared when [MAIN_GO] is changed from 0 to 1.

1 = All Main ADC inputs have completed at least a single measurement

9.5.4.4.3 ADC STAT2

Address	0x0528							
Read Only	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
Name	RSVD		DRDY_LPF	DRDY_GPIO	DRDY_VCOW	DRDY_CBOW	DRDY_ CBFET	DRDY_VCCB
Reset	0	0	0	0	0	0	0	0
'	RSVD =	Reserved						
	DRDY_LPF =	background as	long as the Main	ADC is running.	This bit is cleared	ell channels. The ed when <i>[MAIN_</i> 0 DIAG_LPF engi	90] = 1.	ontinues in the PF_FLT_INJ] bit.

checks from the beginning using the fault inject [DIAG_LPF]. Once all channel LPFs are checked, the [DRDY LPF] = 1. 0 = Not ready 1 = Diagnostic comparison finished

DRDY_GPIO = Device has finished the GPIO Main and AUX ADC diagnostic comparisons on all active channels and the comparisons are stopped. This bit is cleared when [COMP ADC GO] = 1.

0 = Not ready

1 = Diagnostic comparison finished

DRDY VCOW = Device has finished VC OW diagnostic comparison on all active channels and the comparison is stopped. This bit is cleared when [COMP_ADC_GO] = 1.

When [LPF_FLT_INJ] = 1, this bit is cleared to 0 and the device will restart the VC and BB and BB channel LPF

0 = Not ready

1 = Diagnostic comparison finished

DRDY CBOW = Device has finished CB OW diagnostic comparison on all active channels and the comparison is stopped. This bit is cleared when [COMP_ADC_GO] = 1.

0 = Not ready

1 = Diagnostic comparison finished

DRDY CBFET = Device has finished CB FET diagnostic comparison on all active channels and the comparison is stopped. This bit is cleared when [COMP_ADC_GO] = 1.

0 = Not ready

1 = Diagnostic comparison finished

DRDY VCCB = Device has finished VCELL vs. AUXCELL diagnostic comparison on all active channels. This bit is cleared when [COMP ADC GOI = 1.

0 = Not ready

1 = Diagnostic comparison finished

9.5.4.4.4 GPIO_STAT

Address	0x052A							
Read Only	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
Name	GPIO8	GPIO7	GPIO6	GPIO5	GPIO4	GPIO3	GPIO2	GPIO1
Reset	0	0	0	0	0	0	0	0

Copyright © 2022 Texas Instruments Incorporated



GPIO1 through GPIO8 = When GPIO is configured as digital input or output, this register shows the GPIO status.

0 = Low

1 = High

9.5.4.4.5 BAL_STAT

Address	0x052B							
Read Only	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
Name	INVALID_ CBCONF	OT_PAUSE _DET	CB_INPAUSE	MB_RUN	CB_RUN	ABORTFLT	MB_DONE	CB_DONE
Reset	0	0	0	0	0	0	0	0
	R	R	R	R	R	R	R	R

INVALID_CBCONF = Indicates CB is unable to start (after [BAL_GO] = 1) due to improper CB control settings. Incorrect settings include:

- · More than eight cells are enabled for CB.
- More than two adjacent cells are enabled for CB if DEVICE_CONF[NO_ADJ_CB] = 0.
- Any adjacent cells are enabled for CB if DEVICE CONFINO ADJ CB] = 1.

This bit is updated every time [BAL GO] = 1.

0 = Valid CB setting

1 = Invalid CB setting

OT_PAUSE_DET = Indicates the OTCB is detected if [OTCB_EN] = 1. The bit is also set if CB TWARN is detected, which will also pause CB. Valid only after [BAL GO] = 1

0 = No OTCB or CB TWARN is detected

1 = Any NTC thermistor measurement is greater than OTCB_THR[3:0] setting, or die (CBFET) temperature is greater than CB TWARN

CB_INPAUSE = Indicates the cell balancing pause status.

0 = CB is running or not started

1 = Paused (can be caused by OTCB detection, or host sets [CB_PAUSE] = 1)

MB_RUN = Indicates module balancing, controlled by the device, is running. Only valid if MB_TIMER_CTRL is not 0x00 and after [BAL_GO] = 1. Does not indicate the cell balancing status.

0 = Completed or not started

1 = Module balancing, controlled by the device, is running

CB_RUN = Indicates cell balancing is running. Only valid after [BAL_GO] = 1. Does not indicate the module balancing status.

This bit remains as 1 even if CB is in pause state.

0 = Completed or not started

1 = At least 1 cell is in active cell balancing

ABORTFLT = Indicates cell balancing is aborted due to detection of unmasked fault. Cleared when BAL_CTRL1[BAL_GO] = 1.

CB abort does not trigger if CB is in pause ([CB_INPAUSE] = 1) even if an unmasked fault is detected. The abort at fault function will resume if CB is no longer in pause state.

0 = Not aborted or cell balancing not running

1 = Aborted

MB_DONE = Indicates module balancing is completed. Cleared when BAL_CTRL1[BAL_GO] = 1.

0 = Module balancing is still running or has not started

1 = Module balancing completed

CB_DONE = Indicates all cell balancing is completed. Cleared when BAL_CTRL1[BAL_GO] = 1.

0 = Cell balancing is still running or has not started

1 = All cell balancing is completed

9.5.4.4.6 DEV_STAT

Address	0x052C								
Read Only	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0	
Name	RSVD	FACT_CRC _DONE	CUST_CRC _DONE	OTUT_RUN	OVUV_RUN	RSVD	AUX_RUN	MAIN_RUN	
Reset	0	0	0	0	0	0	0	0	
	RSVD = Reserved								



TEXAS INSTRUMENTS
www.ti.com.cn

FACT_CRC_DONE =	Indicates the status of the factory CRC state machine. This bit is set when the factory CRC is calculated and verified internally at least once. A read from this register will clear this bit. 0 = Not complete 1 = Complete (cleared on read)
CUST_CRC_DONE =	Indicates the status of the customer CRC state machine. This bit is set when the CRC is calculated and compared to the CUST_CRC* registers at least once. A read from this register will clear this bit. 0 = Not complete 1 = Complete (cleared on read)
OTUT_RUN =	Shows the status of the OTUT protector comparators. This bit is set when OTUT BIST starts. When BIST is completed or aborted, the device will turn off the OT and UT comparators automatically, and then this bit will be cleared). 0 = off (that is, OTUT is not started or when [OTUT_GO] = 1 and [OTUT_MODE1:0] = 0) 1 = on (that is, when [OTUT_GO] = 1 and [OTUT_MODE1:0] is non-zero)
OVUV_RUN =	Shows the status of the OVUV protector comparators. This bit is set when OVUV BIST starts. When BIST is completed or aborted, the device will turn off the OV and UV comparators automatically, and then this bit will be cleared). 0 = off (that is, OVUV is not started or when [OVUV_GO] = 1 and [OVUV_MODE1:0] = 0) 1 = on (that is, when [OVUV_GO] = 1 and [OVUV_MODE1:0] is non-zero)
AUX_RUN =	Shows the status of the AUX ADC. 0 = off 1 = on
MAIN_RUN =	Shows the status of the Main ADC. 0 = off 1 = on

9.5.4.5 ADC Configuration and Control

9.5.4.5.1 ADC_CONF1

Address	0x0007							
NVM	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
Name	AUX_SI	ETTLE[1:0]		LPF_BB[2:0]		LPF_VCELL[2:0]		
Reset	0	0	0	0	0	0	0	0
AUX_SETTLE[1:0] = The AUXCELL configures the AUX CELL settling time. Each AUXCELL has to wait for the anti-aliasing filter (AA settling time in order to consider as a valid measurement. These bits provide the option to use different AAF or bypass an AAF to trade for a fast measurement. 00 = 4.3 ms 01 = 2.3 ms 10 = 1.3 ms 11 = Reserved							• • •	
L	PF_BB[2:0] =	Configures the the LPF_VCELL		ADC low-pass filt	er cut-off frequen	ncy for BBP/N m	easurement. Sar	ne options as
LPF_VCELL[2:0] = Configures the post ADC low-pass filter cut-off frequency for VCELL measurement. 0x0 = 6.5 Hz (154 ms average) 0x1 = 13 Hz (77 ms average) 0x2 = 26 Hz (38 ms average) 0x3 = 53 Hz (19 ms average) 0x4 = 111 Hz (9 ms average) 0x5 = 240 Hz (4 ms average) 0x6 = 600 Hz (1.6 ms average) 0x7 = 240 Hz								

9.5.4.5.2 ADC_CONF2

Address	8000x0								
NVM	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0	
Name	SPARE[1:0]		ADC_DLY[5:0]						
Reset	0	0	0	0	0	0	0	0	
	SPARE[1:0] = Spare								

Copyright © 2022 Texas Instruments Incorporated



ADC_DLY[5:0] = If [MAIN_GO] bit is written to 1, bit Main ADC is delayed for this setting time before being enabled to start the conversion. This setting synchronizes the start of Main ADC throughout the daisy-chained stack.

The option ranges from 0 μs (no delay) to 200 μs in 5-μs steps.

Undefined code = 0 μs (no delay)

9.5.4.5.3 MAIN_ADC_CAL1

Address	0x001B							
NVM	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
Name	GAINL[7:0]							
Reset	0	0	0	0	0	0	0	0

GAINL[7:0] = Main ADC 25°C gain calibration result (lower 8-bit). If customer performs gain calibration during production flow, the gain result can be programmed to OTP and will be sent to this gain register at device reset. The device automatically applies this data during ADC correction step.

Range from -0.78125% to 0.7782% in 0.0031% steps.

9.5.4.5.4 MAIN ADC CAL2

Address	0x001C							
NVM	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
Name	GAINH	OFFSET[6:0]						
Reset	0	0	0	0	0	0	0	0

GAINH Main ADC 25°C gain calibration result (MS bit). If customer performs gain calibration during production flow, the gain result can be programmed to OTP and will be sent to this gain register at device reset. The device automatically applies this data during ADC correction step.

Range from -0.78125% to 0.7782% in 0.0031% steps.

OFFSET[6:0] = Main ADC 25°C offset calibration result. If customer performs offset calibration during production flow, the offset result can be programmed to OTP and will be sent to this offset register at device reset. The device automatically applies this data during ADC correction step.

Range from -12.20703-mV to 12.01630-mV in 0.19073-mV steps

9.5.4.5.5 AUX_ADC_CAL1

Address	0x001D							
NVM	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
Name	GAINL[7:0]							
Reset	0	0	0	0	0	0	0	0

GAINL[7:0] = AUX ADC 25°C gain calibration result (lower 8-bit). If customer performs gain calibration during production flow, the gain result can be programmed to OTP and will be sent to this gain register at device reset. The device automatically applies this data during ADC correction step.

Range from -0.78125% to 0.7782% in 0.0031% steps.

9.5.4.5.6 AUX_ADC_CAL2

Address	0x001E							
NVM	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
Name	GAINH	OFFSET[6:0]						
Reset	0	0	0	0	0	0	0	0

GAINH AUX ADC 25°C gain calibration result (MS bit). If customer performs gain calibration during production flow, the gain result can be programmed to OTP and will be sent to this gain register at device reset. The device automatically applies this data during ADC correction step.

Range from -0.78125% to 0.7782% in 0.0031% steps.

OFFSET[6:0] = AUX ADC 25°C offset calibration result. If customer performs offset calibration during production flow, the offset result can be programmed to OTP and will be sent to this offset register at device reset. The device automatically applies this data during ADC correction step.

Range from -12.20703-mV to 12.01630-mV in 0.19073-mV steps



9.5.4.5.7 ADC_CTRL1

Address	0x030D							
RW	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
Name	RSVD	RSVD		LPF_BB_EN	LPF_VCELL _EN	MAIN_GO	MAIN_M	ODE[1:0]
Reset	0	0	0	0	0	0	0	0

RSVD = Reserved

LPF_BB_EN = Enables digital low-pass filter post-ADC conversion. LPF applies to BBP/N measurements only. The cut-off frequency is configured by ADC_CONFIG1[LPF_BB[2:0].

LPF_VCELL_EN = Enables digital low-pass filter post-ADC conversion. LPF applies to VCELL measurements only. The cut-off frequency is configured by ADC_CONFIG1[LPF_VCELL[2:0].

MAIN_GO = Starts main ADC conversion. When this bit is written to 1, all Main ADC inputs are sampled. Once the Main ADC is started, any change to the Main ADC control setting has no effect until this bit is written to 1 again. This bit is cleared to 0 in read.

0 = Ready. Writing 0 has no effect

1 = Start Main ADC

MAIN_MODE[1:0] = Sets the Main ADC run mode. In continuous run, if user would like to stop ADC, user must read all the ADC conversion results, then stop it. ADC results are not valid before ADC is reenabled next time.

00 = Main ADC not running

01 = Single run. Run the main ADC round robin 8 times and then stop

10 = Continuous run. Continuous running the Main ADC round robin until host sends command to stop

11 = Reserved

9.5.4.5.8 ADC_CTRL2

Address	0x030E							
RW	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
Name	RSVD	RSVD	AUX_CELL_A LIGN	AUX_CELL_SEL[4:0]				
Reset	0	0	0	0	0	0	0	0

RSVD = Reserved

AUX_CELL_ALIGN = Align the AUX ADC AUXCELL measurement to Main ADC CELL1 or CELL8

0 = Dynamic Alignment

1 = Align to Main ADC CELL8

AUX CELL SEL[4:0] = Selects which AUXCELL channel(s) will be multiplexed through the AUX ADC.

0x00 = Run all active cell channels set by ACTIVE_CELL_CONF register

0x01 = Lock to AUX Busbar (BBP-BBN)

0x02 = Lock to AUXCELL1

0x03 = Lock to AUXCELL2

0x04 = Lock to AUXCELL3

:

0x11 = Lock to AUXCELL16

0x12 to 0x1F = RSVD

NOTE: If inactive channel or RSVD code is selected, device will not perform AUX ADC conversion on the

AUXCELL slot and the AUX_CELL_HI/LO registers will be kept in reset value.

9.5.4.5.9 ADC_CTRL3

Address	0x030F							
RW	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
Name	RSVD	AUX_GPIO_SEL[3:0]				AUX_GO	AUX_MODE[1:0]	
Reset	0	0	0	0	0	0	0	0
	RSVD = Reserved							



AUX_GPIO_SEL[3:0] =	= Selects which GPIO channel(s) will be multiplexed through the AUX ADC to use for temperature measurement diagnostic. If this selection is not set to 0x00, the AUX ADC will lock onto a single GPIO channel and the measurement result is output to the AUX_GPIO_HI/LO registers. 0x00 = AUX ADC cycles through all GPIO channel(s) that are configured as ADC only or ADC and OTUT. 0x01 = Lock to GPIO1 0x02 = Lock to GPIO2
	0x08 = Lock to GPIO8 All other codes are RSVD. NOTE: If GPIO is not configured for ADC measurement or RSVD codes are selected, device will not perform AUX ADC conversion on the GPIO slot and the AUX_GPIO_HI/LO registers will be kept in reset value.
AUX_GO =	 Starts AUX ADC conversion. When this bit is written to 1, all AUX ADC inputs are sampled. Once the AUX ADC is started, any change to the AUX ADC control setting has no effect until this bit is written to 1 again. This bit is cleared to 0 in read. 0 = Ready. Writing 0 has no effect. 1 = Start AUX ADC
AUX_MODE[1:0] =	 Sets the Main ADC run mode. In continuous run, if user would like to stop ADC, user must read all the ADC conversion results, then stop it. ADC results are not valid before ADC is reenabled next time. 00 = AUX ADC not running 01 = Single run. Run the AUX ADC round robin once and then stop. 10 = Continuous run. Continually run the AUX ADC round robin until host sends command to stop. 11 = 8-round-robin run to measure all eight GPIOs once.

9.5.4.6 ADC Measurement Results

9.5.4.6.1 VCELL16_HI/LO

VCELL16_HI

Address	0x0568							
Read Only	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
Name				RES	SULT[7:0]			
Reset	1	0	0	0	0	0	0	0

RESULT[7:0] = The ADC measurement result of the high-byte of the Cell16 voltage in 2s complement. When host reads this register, the device locks the Cell16 voltage low-byte from updating until the high-byte and low-byte registers are read.

VCELL16_LO

Address	0x0569								
Read Only	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0	
Name				RES	ULT[7:0]			•	
Reset	0	0	0	0	0	0	0	0	
RE	RESULT[7:0] = The ADC measurement result of the low-byte of the Cell16 voltage in 2s complement.								

9.5.4.6.2 VCELL15_HI/LO

VCELL15_HI

Address	0x056A							
Read Only	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
Name				RES	SULT[7:0]			
Reset	1	0	0	0	0	0	0	0

RESULT[7:0] = The ADC measurement result of the high-byte of the Cell15 voltage in 2s complement. When host reads this register, the device locks the Cell15 voltage low-byte from updating until the high-byte and low-byte registers are read.

VCELL15_LO

Address	0x056B									
Read Only	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0		
Name		RESULT[7:0]								
Reset	0	0	0	0	0	0	0	0		
RE	RESULT[7:0] = The ADC measurement result of the low-byte of the Cell15 voltage in 2s complement.									

9.5.4.6.3 VCELL14_HI/LO

VCELL14_HI

Address	0x056C							
Read Only	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
Name				RES	SULT[7:0]			
Reset	1	0	0	0	0	0	0	0



RESULT[7:0] = The ADC measurement result of the high-byte of the Cell14 voltage in 2s complement. When host reads this register, the device locks the Cell14 voltage low-byte from updating until the high-byte and low-byte registers are read

VCELL14_LO

Address	0x056D									
Read Only	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0		
Name	RESULT[7:0]									
Reset	0	0	0	0	0	0	0	0		
RE	RESULT[7:0] = The ADC measurement result of the low-byte of the Cell14 voltage in 2s complement.									

9.5.4.6.4 VCELL13_HI/LO

VCELL13_HI

Address	0x056E							
Read Only	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
Name				RES	SULT[7:0]			
Reset	1	0	0	0	0	0	0	0

RESULT[7:0] = The ADC measurement result of the high-byte of the Cell13 voltage in 2s complement. When host reads this register, the device locks the Cell13 voltage low-byte from updating until the high-byte and low-byte registers are read.

VCELL13_LO

Address	0x056F									
Read Only	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0		
Name		RESULT[7:0]								
Reset	0	0	0	0	0	0	0	0		
RE	RESULT[7:0] = The ADC measurement result of the low-byte of the Cell13 voltage in 2s complement.									

9.5.4.6.5 VCELL12_HI/LO

VCELL12_HI

Address Read Only	0x0570 Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
Name				RES	SULT[7:0]			
Reset	1	0	0	0	0	0	0	0

RESULT[7:0] = The ADC measurement result of the high-byte of the Cell12 voltage in 2s complement. When host reads this register, the device locks the Cell12 voltage low-byte from updating until the high-byte and low-byte registers are read.

VCELL12_LO

Address	0x0571							
Read Only	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
Name				RES	ULT[7:0]			
Reset	0	0	0	0	0	0	0	0

Instruments

RESULT[7:0] = The ADC measurement result of the low-byte of the Cell12 voltage in 2s complement.

9.5.4.6.6 VCELL11_HI/LO

VCELL11_HI

Address	0x0572							
Read Only	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
Name				RES	SULT[7:0]			
Reset	1	0	0	0	0	0	0	0

RESULT[7:0] = The ADC measurement result of the high-byte of the Cell11 voltage in 2s complement. When host reads this register, the device locks the Cell11 voltage low-byte from updating until the high-byte and low-byte registers are

VCELL11_LO

Address	0x0573								
Read Only	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0	
Name				RES	ULT[7:0]				
Reset	0	0	0	0	0	0	0	0	
RE	RESULT[7:0] = The ADC measurement result of the low-byte of the Cell11 voltage in 2s complement.								

9.5.4.6.7 VCELL10_HI/LO

VCELL10_HI

Address	0x0574							
Read Only	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
Name				RES	SULT[7:0]			
Reset	1	0	0	0	0	0	0	0

RESULT[7:0] = The ADC measurement result of the high-byte of the Cell10 voltage in 2s complement. When host reads this register, the device locks the Cell10 voltage low-byte from updating until the high-byte and low-byte registers are read.

VCELL10_LO

Address	0x0575									
Read Only	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0		
Name		RESULT[7:0]								
Reset	0	0 0 0 0 0 0 0								
RE	RESULT[7:0] = The ADC measurement result of the low-byte of the Cell10 voltage in 2s complement.									

9.5.4.6.8 VCELL9_HI/LO

VCELL9_HI

Address	0x0576							
Read Only	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
Name				RES	SULT[7:0]			
Reset	1	0	0	0	0	0	0	0



RESULT[7:0] = The ADC measurement result of the high-byte of the Cell9 voltage in 2s complement. When host reads this register, the device locks the Cell9 voltage low-byte from updating until the high-byte and low-byte registers are read.

VCELL9_LO

Address	0x0577									
Read Only	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0		
Name		RESULT[7:0]								
Reset	0	0 0 0 0 0 0 0								
RE	RESULT[7:0] = The ADC measurement result of the low-byte of the Cell9 voltage in 2s complement.									

9.5.4.6.9 VCELL8_HI/LO

VCELL8_HI

Address	0x0578							
Read Only	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
Name				RES	SULT[7:0]			
Reset	1	0	0	0	0	0	0	0

RESULT[7:0] = The ADC measurement result of the high-byte of the Cell8 voltage in 2s complement. When host reads this register, the device locks the Cell8 voltage low-byte from updating until the high-byte and low-byte registers are read.

VCELL8_LO

Address	0x0579									
Read Only	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0		
Name		RESULT[7:0]								
Reset	0	0 0 0 0 0 0 0								
RE	RESULT[7:0] = The ADC measurement result of the low-byte of the Cell8 voltage in 2s complement.									

9.5.4.6.10 VCELL7_HI/LO

VCELL7_HI

Address	0x057A							
Read Only	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
Name				RES	SULT[7:0]			
Reset	1	0	0	0	0	0	0	0

RESULT[7:0] = The ADC measurement result of the high-byte of the Cell7 voltage in 2s complement. When host reads this register, the device locks the Cell7 voltage low-byte from updating until the high-byte and low-byte registers are read.

VCELL7_LO

Address	0x057B									
Read Only	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0		
Name		RESULT[7:0]								
Reset	0	0 0 0 0 0 0 0								
RE	RESULT[7:0] = The ADC measurement result of the low-byte of the Cell7 voltage in 2s complement.									



9.5.4.6.11 VCELL6_HI/LO

VCELL6_HI

Address	0x057C							
Read Only	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
Name				RES	SULT[7:0]			
Reset	1	0	0	0	0	0	0	0

RESULT[7:0] = The ADC measurement result of the high-byte of the Cell6 voltage in 2s complement. When host reads this register, the device locks the Cell6 voltage low-byte from updating until the high-byte and low-byte registers are read.

VCELL6_LO

Address	0x057D									
Read Only	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0		
Name		RESULT[7:0]								
Reset	0	0 0 0 0 0 0 0								
RE	RESULT[7:0] = The ADC measurement result of the low-byte of the Cell6 voltage in 2s complement.									

9.5.4.6.12 VCELL5_HI/LO

VCELL5_HI

Address	0x057E							
Read Only	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
Name				RES	SULT[7:0]			
Reset	1	0	0	0	0	0	0	0

RESULT[7:0] = The ADC measurement result of the high-byte of the Cell5 voltage in 2s complement. When host reads this register, the device locks the Cell5 voltage low-byte from updating until the high-byte and low-byte registers are read.

VCELL5_LO

Address	0x057F									
Read Only	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0		
Name		RESULT[7:0]								
Reset	0	0 0 0 0 0 0 0								
RE	RESULT[7:0] = The ADC measurement result of the low-byte of the Cell5 voltage in 2s complement.									

9.5.4.6.13 VCELL4_HI/LO

VCELL4_HI

Address	0x0580										
Read Only	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0			
Name	RESULT[7:0]										
Reset	1	0	0	0	0	0	0	0			

RESULT[7:0] = The ADC measurement result of the high-byte of the Cell4 voltage in 2s complement. When host reads this register, the device locks the Cell4 voltage low-byte from updating until the high-byte and low-byte registers are read.

VCELL4_LO

Address	0x0581				



Read Only	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0			
Name	RESULT[7:0]										
Reset	0	0	0	0	0	0	0	0			
RE	RESULT[7:0] = The ADC measurement result of the low-byte of the Cell4 voltage in 2s complement.										

9.5.4.6.14 VCELL3_HI/LO

VCELL3_HI

Address	0x0582										
Read Only	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0			
Name	RESULT[7:0]										
Reset	1	0	0	0	0	0	0	0			

RESULT[7:0] = The ADC measurement result of the high-byte of the Cell3 voltage in 2s complement. When host reads this register, the device locks the Cell3 voltage low-byte from updating until the high-byte and low-byte registers are read.

VCELL3_LO

Address	0x0583											
Read Only	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0				
Name		RESULT[7:0]										
Reset	0	0	0	0	0	0	0	0				
RE	RESULT[7:0] = The ADC measurement result of the low-byte of the Cell3 voltage in 2s complement.											

9.5.4.6.15 VCELL2_HI/LO

VCELL2_HI

Address	0x0584										
Read Only	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0			
Name	RESULT[7:0]										
Reset	1	0	0	0	0	0	0	0			

RESULT[7:0] = The ADC measurement result of the high-byte of the Cell2 voltage in 2s complement. When host reads this register, the device locks the Cell2 voltage low-byte from updating until the high-byte and low-byte registers are read.

VCELL2_LO

Address	0x0585											
Read Only	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0				
Name		RESULT[7:0]										
Reset	0	0	0	0	0	0	0	0				
RE	RESULT[7:0] = The ADC measurement result of the low-byte of the Cell2 voltage in 2s complement.											

9.5.4.6.16 VCELL1_HI/LO

VCELL1_HI

Address	0x0586											
Read Only	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0				
Name		RESULT[7:0]										



Reset	1	0	0	0	0	0	0	0
								,

RESULT[7:0] = The ADC measurement result of the high-byte of the Cell1 voltage in 2s complement. When host reads this register, the device locks the Cell1 voltage low-byte from updating until the high-byte and low-byte registers are read.

VCELL1_LO

Address	0x0587									
Read Only	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0		
Name		RESULT[7:0]								
Reset	0	0	0	0	0	0	0	0		
R	RESULT[7:0] = The ADC measurement result of the low-byte of the Cell1 Voltage in 2s complement.									

9.5.4.6.17 BUSBAR_HI/LO

BUSBAR_HI

Address	0x0588								
Read Only	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0	
Name		RESULT[7:0]							
Reset	1	0	0	0	0	0	0	0	

RESULT[7:0] = The ADC measurement result of the high-byte of the differential bus bar pins (BBP - BBN) in 2s complement. When host reads this register, the device locks the low-byte from updating until the high-byte and low-byte registers are read.

BUSBAR_LO

Address	0x0589								
Read Only	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0	
Name	RESULT[7:0]								
Reset	0	0	0	0	0	0	0	0	
R	RESULT[7:0] = The ADC measurement result of the low-byte of the differential bus bar pins (BBP - BBN) in 2s complement.								

9.5.4.6.18 TSREF_HI/LO

TSREF_HI

Address	0x058C								
Read Only	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0	
Name		RESULT[7:0]							
Reset	1	0	0	0	0	0	0	0	

RESULT[7:0] = The TSREF high-byte result from Main ADC. When host reads this register, the device locks the TSREF low-byte from updating until the high-byte and low-byte registers are read.

TSREF_LO

Address	0x058D									
Read Only	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0		
Name		RESULT[7:0]								
Reset	0	0	0	0	0	0	0	0		
R	RESULT[7:0] = The TSREF low-byte result from Main ADC									

Copyright © 2022 Texas Instruments Incorporated



9.5.4.6.19 GPIO1_HI/LO

GPIO1_HI

Address	0x058E								
Read Only	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0	
Name		RESULT[7:0]							
Reset	1	0	0	0	0	0	0	0	

RESULT[7:0] = The ADC measurement high-byte result of the GPIO1. When host reads this register, the device locks the GPIO1 low-byte from updating until the high-byte and low-byte registers are read.

GPIO1_LO

Address	0x058F								
Read Only	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0	
Name	RESULT[7:0]								
Reset	0	0	0	0	0	0	0	0	
R	RESULT[7:0] = The ADC measurement low-byte result of the GPIO1.								

9.5.4.6.20 GPIO2_HI/LO

GPIO2_HI

Address	0x0590								
Read Only	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0	
Name		RESULT[7:0]							
Reset	1	0	0	0	0	0	0	0	

RESULT[7:0] = The ADC measurement high-byte result of the GPIO2. When host reads this register, the device locks the GPIO2 low-byte from updating until the high-byte and low-byte registers are read.

GPIO2_LO

Address	0x0591								
Read Only	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0	
Name	RESULT[7:0]								
Reset	0	0	0	0	0	0	0	0	
R	RESULT[7:0] = The ADC measurement low-byte result of the GPIO2.								

9.5.4.6.21 GPIO3_HI/LO

GPIO3_HI

Address	0x0592							
Read Only	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
Name		RESULT[7:0]						
Reset	1	0	0	0	0	0	0	0

RESULT[7:0] = The ADC measurement high-byte result of the GPIO3. When host reads this register, the device locks the GPIO3 low-byte from updating until the high-byte and low-byte registers are read.

GPIO3_LO



Address	0x0593								
Read Only	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0	
Name	RESULT[7:0]								
Reset	0	0	0	0	0	0	0	0	
R	RESULT[7:0] = The ADC measurement low-byte result of the GPIO3.								

9.5.4.6.22 GPIO4_HI/LO

GPIO4_HI

Address	0x0594							
Read Only	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
Name				RESU	JLT[7:0]			
Reset	1	0	0	0	0	0	0	0

RESULT[7:0] = The ADC measurement high-byte result of the GPIO4. When host reads this register, the device locks the GPIO4 low-byte from updating until the high-byte and low-byte registers are read.

GPIO4_LO

Address	0x0595								
Read Only	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0	
Name	RESULT[7:0]								
Reset	0 0 0 0 0 0 0								
R	RESULT[7:0] = The ADC measurement low-byte result of the GPIO4.								

9.5.4.6.23 GPIO5_HI/LO

GPIO5_HI

Address	0x0596								
Read Only	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0	
Name		RESULT[7:0]							
Reset	1	0	0	0	0	0	0	0	

RESULT[7:0] = The ADC measurement high-byte result of the GPIO5. When host reads this register, the device locks the GPIO5 low-byte from updating until the high-byte and low-byte registers are read.

GPIO5_LO

Address	0x0597									
Read Only	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0		
Name	RESULT[7:0]									
Reset	0	0 0 0 0 0 0 0								
R	RESULT[7:0] = The ADC measurement low-byte result of the GPIO5.									

9.5.4.6.24 GPIO6_HI/LO

GPIO6_HI

Address	0x0598							
Read Only	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
Name		RESULT[7:0]						



Reset	1	0	0	0	0	0	0	0
R				e result of the G high-byte and lov		•	ster, the device lo	ocks the GPIO6

GPIO6_LO

Address	0x0599								
Read Only	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0	
Name	RESULT[7:0]								
Reset	0	0	0	0	0	0	0	0	
R	RESULT[7:0] = The ADC measurement low-byte result of the GPIO6.								

9.5.4.6.25 GPIO7_HI/LO

GPIO7_HI

Address	0x059A							
Read Only	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
Name				RESU	JLT[7:0]			
Reset	1	0	0	0	0	0	0	0

RESULT[7:0] = The ADC measurement high-byte result of the GPIO7. When host reads this register, the device locks the GPIO7 low-byte from updating until the high-byte and low-byte registers are read.

GPIO7_LO

Address	0x059B									
Read Only	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0		
Name	RESULT[7:0]									
Reset	0 0 0 0 0 0 0									
R	RESULT[7:0] = The ADC measurement low-byte result of the GPIO7.									

9.5.4.6.26 GPIO8_HI/LO

GPIO8_HI

Address Read Only	0x059C Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
Name				RESU	JLT[7:0]			
Reset	1	0	0	0	0	0	0	0

RESULT[7:0] = The ADC measurement high-byte result of the GPIO8. When host reads this register, the device locks the GPIO8 low-byte from updating until the high-byte and low-byte registers are read.

GPIO8_LO

Address	0x059D								
Read Only	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0	
Name	RESULT[7:0]								
Reset	0 0 0 0 0 0 0								
F	RESULT[7:0] = The ADC measurement low-byte result of the GPIO8.								



9.5.4.6.27 DIETEMP1_HI/LO

DIETEMP1_HI

Address	0x05AE							
Read Only	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
Name				RESU	JLT[7:0]			
Reset	1	0	0	0	0	0	0	0

RESULT[7:0] = The DieTemp1 high-byte result from Main ADC. When host reads this register, the device locks the DIETEMP1 low-byte from updating until the high-byte and low-byte registers are read.

DIETEMP1_LO

Address	0x05AF									
Read Only	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0		
Name	RESULT[7:0]									
Reset	0 0 0 0 0 0 0									
RESULT[7:0] = The DieTemp1 low-byte (temperature used for ADC correction) result from Main ADC.										

9.5.4.6.28 DIETEMP2_HI/LO

DIETEMP2_HI

Address	0x05B0									
Read Only	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0		
Name		RESULT[7:0]								
Reset	1	0	0	0	0	0	0	0		

RESULT[7:0] = The DieTemp2 high-byte result from AUX ADC. When host reads this register, the device locks the DIETEMP2 low-byte from updating until the high-byte and low-byte registers are read.

DIETEMP2_LO

Address	0x05B1								
Read Only	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0	
Name	RESULT[7:0]								
Reset	0 0 0 0 0 0 0								
F	RESULT[7:0] = The DieTemp2 low-byte (temperature used for ADC correction) result from AUX ADC								

9.5.4.6.29 AUX_CELL_HI/LO

AUX_CELL_HI

Address	0x05B2							
Read Only	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
Name				RESU	JLT[7:0]			
Reset	1	0	0	0	0	0	0	0

RESULT[7:0] = The ADC measurement result of the high-byte of the AUXCELL voltage in 2s complement. These

AUX_CELL_HI/LO registers will only report AUXCELL voltage measurement if host configures

[AUX_CELL_SEL4:0] to lock to a single AUXCELL channel.

When host reads this register, the device locks the AUXCELL voltage low-byte from updating until the high-byte and low-byte registers are read.



AUX_CELL_LO

Address	0x05B3								
Read Only	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0	
Name		RESULT[7:0]							
Reset	0	0	0	0	0	0	0	0	

RESULT[7:0] = The ADC measurement result of the low-byte of the AUX cell voltage in 2s complement. These AUX_CELL_HI/LO registers will only report AUXCELL voltage measurement if host configures [AUX_CELL_SEL4:0] to lock to a single AUXCELL channel.

9.5.4.6.30 AUX_GPIO_HI/LO

AUX_GPIO_HI

Address	0x05B4								
Read Only	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0	
Name	RESULT[7:0]								
Reset	1	0	0	0	0	0	0	0	

RESULT[7:0] = The AUX ADC measurement high-byte result of the GPIO that is locked by the [AUXGPIO_SEL3:0] bits. When host reads this register, the device locks the AUX_GPIO low-byte from updating until the high-byte and low-byte registers are read.

AUX_GPIO_LO

Address	0x05B5									
Read Only	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0		
Name	RESULT[7:0]									
Reset	0 0 0 0 0 0 0									
R	RESULT[7:0] = The AUX ADC measurement low-byte result of the GPIO that is locked by the [AUXGPIO_SEL3:0] bits.									

9.5.4.6.31 AUX_BAT_HI/LO

AUX_BAT_HI

Address	0x05B6									
Read Only	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0		
Name		RESULT[7:0]								
Reset	1	0	0	0	0	0	0	0		

RESULT[7:0] = The high-byte result of the BAT pin measurement from AUX ADC. When host reads this register, the device locks the AUX_BAT low-byte from updating until the high-byte and low-byte registers are read.

AUX_BAT_LO

Address	0x05B7									
Read Only	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0		
Name	RESULT[7:0]									
Reset	0	0	0	0	0	0	0	0		
R	RESULT[7:0] = The low-byte result of the BAT pin measurement from AUX ADC.									

9.5.4.6.32 AUX_REFL_HI/LO

AUX_REFL_HI



Address	0x05B8								
Read Only	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0	
Name		RESULT[7:0]							
Reset	1	0	0	0	0	0	0	0	

RESULT[7:0] = The high-byte result of the internal reference, REFL, measurement from AUX ADC. When host reads this register, the device locks the AUX_REL low-byte from updating until the high-byte and low-byte registers are read.

AUX_REFL_LO

Address	0x05B9									
Read Only	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0		
Name	RESULT[7:0]									
Reset	0	0 0 0 0 0 0 0								
RE	RESULT[7:0] = The low-byte result of the internal reference, REFL, measurement from AUX ADC.									

9.5.4.6.33 AUX_VBG2_HI/LO

AUX_VBG2_HI

Address	0x05BA								
Read Only	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0	
Name		RESULT[7:0]							
Reset	1	0	0	0	0	0	0	0	

RESULT[7:0] = The high-byte result of the internal reference, VBG2, measurement from AUX ADC. When host reads this register, the device locks the AUX_VBG2 low-byte from updating until the high-byte and low-byte registers are read.

AUX_VBG2_LO

Address	0x05BB										
Read Only	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0			
Name	RESULT[7:0]										
Reset	0	0 0 0 0 0 0 0									
RESULT[7:0] = The low-byte result of the internal reference, VBG2, measurement from AUX ADC.											

9.5.4.6.34 AUX_AVAO_REF_HI/LO

AUX_AVAO_REF_HI

Address	0x05BE								
Read Only	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0	
Name		RESULT[7:0]							
Reset	1	0	0	0	0	0	0	0	

RESULT[7:0] = The high-byte result of the AVAO_REF measurement from AUX ADC. When host reads this register, the device locks the AUX_AVAO_REF low-byte from updating until the high-byte and low-byte registers are read.

AUX_AVAO_REF_LO

Address	0x05BF									
Read Only	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0		
Name		RESULT[7:0]								



Reset	0	0	0	0	0	0	0	0
RESULT[7:0] = The low-byte result of the AVAO_REF measurement from AUX ADC.								

9.5.4.6.35 AUX_AVDD_REF_HI/LO

AUX_AVDD_REF_HI

Address	0x05C0								
Read Only	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0	
Name		RESULT[7:0]							
Reset	1	0	0	0	0	0	0	0	

RESULT[7:0] = The high-byte result of the AVDD_REF measurement from AUX ADC. When host reads this register, the device locks the AUX_AVDD_REF low-byte from updating until the high-byte and low-byte registers are read.

AUX_AVDD_REF_LO

Address	0x05C1										
Read Only	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0			
Name	RESULT[7:0]										
Reset	teset 0 0 0 0 0 0 0 0										
R	RESULT[7:0] = The low-byte result of the AVDD_REF measurement from AUX ADC.										

9.5.4.6.36 AUX_OV_DAC_HI/LO

AUX_OV_DAC_HI

Address	0x05C2										
Read Only	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0			
Name		RESULT[7:0]									
Reset	1	0	0	0	0	0	0	0			

RESULT[7:0] = The high-byte result of the OV comparator DAC measurement, which is (0.8 x OV threshold), from AUX ADC.

When host reads this register, the device locks the AUX_OV_DAC low-byte from updating until the high-byte and low-byte registers are read.

AUX_OV_DAC_LO

Address	0x05C3										
Read Only	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0			
Name	RESULT[7:0]										
Reset	0	0 0 0 0 0 0 0									
RESULT[7:0] = The low-byte result of the OV comparator DAC measurement, which is (0.8 x OV threshold), from AUX ADC.											

9.5.4.6.37 AUX_UV_DAC_HI/LO

AUX_UV_DAC_HI

Address	0x05C4									
Read Only	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0		
Name		RESULT[7:0]								
Reset	1	0	0	0	0	0	0	0		

RESULT[7:0] = The high-byte result of the UV comparator DAC measurement, which is (0.8 x UV threshold), from AUX ADC.

When host reads this register, the device locks the AUX_UV_DAC low-byte from updating until the high-byte and low-byte registers are read.



AUX_UV_DAC_LO

Address	0x05C5									
Read Only	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0		
Name	RESULT[7:0]									
Reset 0 0 0 0 0 0 0 0										
RESULT[7:0] = The low-byte result of the UV comparator DAC measurement, which is (0.8 x UV threshold), from AUX ADC.										

9.5.4.6.38 AUX_OT_OTCB_DAC_HI/LO

AUX_OT_OTCB_DAC_HI

Address	0x05C6									
Read Only	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0		
Name		RESULT[7:0]								
Reset	1	0	0	0	0	0	0	0		

RESULT[7:0] = The high-byte result of the OT comparator (either OT or OTCB threshold based on [OTCB_THR_LOCK] setting)

DAC measurement from AUX ADC. When host reads this register, the device locks the AUX_OT_OTCB_DAC low-byte from updating until the high-byte and low-byte registers are read.

AUX_OT_OTCB_DAC_LO

Address	0x05C7										
Read Only	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0			
Name		RESULT[7:0]									
Reset	0	0	0	0	0	0	0	0			

RESULT[7:0] = The low-byte result of the OT comparator (either OT or OTCB threshold based on [OTCB_THR_LOCK] setting)

DAC measurement from AUX ADC.

9.5.4.6.39 AUX_UT_DAC_HI/LO

AUX_UT_DAC_HI

Address	0x05C8							
Read Only	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
Name				RESI	JLT[7:0]			
Reset	1	0	0	0	0	0	0	0

RESULT[7:0] = The high-byte result of the UT comparator DAC measurement from AUX ADC. When host reads this register, the device locks the AUX_UT_DAC low-byte from updating until the high-byte and low-byte registers are read.

AUX_UT_DAC_LO

Address	0x05C9									
Read Only	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0		
Name				RESI	JLT[7:0]					
Reset	0	0 0 0 0 0 0 0								
RE	RESULT[7:0] = The low-byte result of the UT comparator DAC measurement from AUX ADC.									

9.5.4.6.40 AUX_VCBDONE_DAC_HI/LO

AUX_VCBDONE_DAC_HI

Address	0x05CA							
Read Only	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
Name				RES	ULT[7:0]			



Reset	1	0	0	0	0	0	0	0					
RE		host reads this r	egister, the devi	ce locks the AUX	RESULT[7:0] = The high-byte result of the UV comparator (VCBDONE Threshold) DAC measurement from AUX ADC. When host reads this register, the device locks the AUX_VCBDONE_DAC low-byte from updating until the high-byte and low-byte registers are read.								

AUX_VCBDONE_DAC_LO

Address	0x05CB									
Read Only	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0		
Name				RESU	JLT[7:0]					
Reset	0	0 0 0 0 0 0 0								
R	ESULT[7:0] = The low-byte result of the UV comparator (VCBDONE Threshold) DAC measurement from AUX ADC.									

9.5.4.6.41 AUX_VCM_HI/LO

AUX_VCM_HI

Address	0x05CC	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
Name				RES	ULT[7:0]			
Reset	1	0	0	0	0	0	0	0

RESULT[7:0] = The high-byte result of the VCM (common mode voltage on Main ADC) measurement from AUX ADC. When host reads this register, the device locks the AUX_VCM low-byte from updating until the high-byte and low-byte registers are read.

AUX_VCM_LO

Address	0x05CD									
Read Only	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0		
Name		RESULT[7:0]								
Reset	0 0 0 0 0 0 0									
RE	RESULT[7:0] = The low-byte result of the VCM (common mode voltage on Main ADC) measurement from AUX ADC.									

9.5.4.6.42 REFOVDAC_HI/LO

REFOVDAC_HI

Address	0x05D0										
Read Only	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0			
Name		RESULT[7:0]									
Reset	1	1 0 0 0 0 0 0									
RES	RESULT[7:0] = The high-byte result of the recorded OVDAC reference voltage trimmed at factory.										

REFOVDAC_LO

Address	0x05D1									
Read Only	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0		
Name		RESULT[7:0]								
Reset	0	0 0 0 0 0 0 0								
RE	RESULT[7:0] = The low-byte result of the recorded OVDAC reference voltage trimmed at factory.									

9.5.4.6.43 DIAG_MAIN_HI/LO

DIAG_MAIN_HI

7.00.000

Read Only	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
Name				RES	SULT[7:0]			
Reset	1	0	0	0	0	0	0	0

RESULT[7:0] = The high-byte result of reported Main ADC comparison value used in the diagnostic ADC comparison. Valid if the diagnostic ADC comparison is run when a single channel is locked

DIAG_MAIN_LO

Address	0x05D3							
Read Only	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
Name		RESULT[7:0]						
Reset	0	0	0	0	0	0	0	0

RESULT[7:0] = The low-byte result of reported Main ADC comparison value used in the diagnostic ADC comparison. Valid if the diagnostic ADC comparison is run when a single channel is locked

9.5.4.6.44 DIAG_AUX_HI/LO

DIAG_AUX_HI

Address	0x05D4								
Read Only	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0	
Name		RESULT[7:0]							
Reset	1	0	0	0	0	0	0	0	

RESULT[7:0] = The high-byte result of reported AUX ADC comparison value used in the diagnostic ADC comparison. Valid if the diagnostic ADC comparison is run when a single channel is locked

DIAG_AUX_LO

Address	0x05D5								
Read Only	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0	
Name		RESULT[7:0]							
Reset	0	0	0	0	0	0	0	0	

RESULT[7:0] = The low-byte result of reported AUX ADC comparison value used in the diagnostic ADC comparison. Valid if the diagnostic ADC comparison is run when a single channel is locked

9.5.4.7 Balancing Configuration, Control and Status

9.5.4.7.1 CB_CELL16_CTRL through CB_CELL1_CTRL

Address	0x0318 to 0x0327							
RW	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
Name	'	RSVD				TIME[4:0]		
Reset	0	0	0	0	0	0	0	0
	RSVD = F	Reserved			•			•

TIME[4:0] = Sets the timer for cell* balancing. The selection is sampled whenever [BAL GO] = 1 is set by the host MCU.

0x00 = 0 s = stop balancing

0x01 = 10 s

0x02 = 30 s

0x03 = 60 s

0x04 = 300 s

0x05 to 0x10 = range from 10 min to 120 min in 10-min steps

0x11 to 0x1F = range from 150 min to 540 min in 30-min steps and 600 min

9.5.4.7.2 VMB_DONE_THRESH

Address	0x0328				



RW	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0	
Name	R	SVD	MB_THR[5:0]						
Reset	0	0	1 1 1 1 1 1						

RSVD = Reserved

MB_THR[5:0] = If MB_TIMER_CTRL is not 0x00 and BAT voltage is less than this threshold, the module balancing through GPIO3 stops. The selection is sampled whenever [AUX_GO] = 1 is set by the host MCU.

Note: To use this option, MCU enables the AUX ADC first before sending [BAL_GO] = 1. A new threshold setting will take effect if MCU resends [AUX_GO] = 1. It is not necessary to resend [BAL_GO] = 1 as balancing is already running.

Range from 18 V to 65 V with 1-V steps. Unused codes default to 65 V.

9.5.4.7.3 MB TIMER CTRL

Address	0x0329							
RW	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
Name		RSVD		TIME[4:0]				
Reset	0	0	0	0	0	0	0	0

RSVD = Reserved

TIME[4:0] = Sets the timer for module balancing. The selection is sampled whenever [BAL_GO] = 1 is set by the host MCU.

0x00 = 0 s = stop balancing

0x01 = 10 s

0x02 = 30 s

0x03 = 60 s

0x04 = 300 s

0x05 to 0x10 = range from 10 min to 120 min in 10-min steps

0x11 to 0x1F = range from 150 min to 540 min in 30-min steps and 600 min

9.5.4.7.4 VCB_DONE_THRESH

Address	0x032A								
RW	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0	
Name	R	SVD		CB_THR[5:0]					
Reset	0	0	0	0	0	0	0	0	

RSVD = Reserved

CB_THR[5:0] = If a cell voltage is less than this threshold, the cell balancing on that cell stops. This threshold setting applies to all cells. The selection is sampled whenever [OVUV_GO] = 1 is set by the host MCU.

Note: To use the VCB_DONE detection feature, host sets this threshold, then issues [OVUV_GO] = 1 before starting CB (that is, sending [BAL_GO] = 1).

To change the VCB_DONE threshold detection, set a new threshold then re-issue [OVUV_GO] = 1 for the new threshold to take effect. It is not necessary to re-issue [BAL_GO] = 1 to restart balancing in this case.

Range from 2.45-V to 4-V with 25-mV steps, where

0x00 = Disables voltage based on CB_DONE comparison

0x01 =threshold of 2.45-V

0x3F = threshold of 4-V

9.5.4.7.5 OTCB_THRESH

Address	0x032B							
RW	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
Name	RSVD		COOLOFF[2:0]			OTCB_	THR[3:0]	
Reset	0	0	0	0	1	1	1	1

RSVD = Reserved

COOLOFF[2:0] = Sets the COOLOFF hysteresis (resume temperature = OTCB_THR - COOLOFF hysteresis) to resume CB when BAL_CTRL1[OTCB_EN] = 1 and OTCB is detected. The MCU configures the corresponding GPIO(s) to the ADC and OTUT option.

Range from 4% to 14% in steps of 2% sourced from TSREF regulator voltage..

Unused code is set to 14%.

Default Reset setting 4%.

OTCB_THR[3:0] = Sets the OTCB threshold when BAL_CTRL1[OTCB_EN] = 1. The MCU configures the corresponding GPIO(s) to the ADC and OTUT option.

Range from 10% to 24% in steps of 2% sourced from TSREF regulator voltage..

Unused code is set to 24%.

Default Reset setting 24%.

9.5.4.7.6 BAL_CTRL1

Address	0x032E							
RW	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
Name		RSVD DUTY[2:0]						
Reset	0	0	0	0	0	0	0	0
RSVD = Reserved								

DUTY[2:0] = Selection is sampled whenever [BAL_GO] = 1 is set by the host MCU.

0x0 = 5 s

0x1 = 10 s

0x2 = 30 s

0x3 = 60 s

0x4 = 5 min

0x5 = 10 min

0x6 = 20 min

0x7 = 30 min

9.5.4.7.7 BAL_CTRL2

Address	0x032F								
RW	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0	
Name	RSVD	CB_PAUSE	FLTSTOP_EN	OTCB_EN	BAL_A	CT[1:0]	BAL_GO	AUTO_BAL	
Reset	0	0	0	0	0	0	0	0	
	RSVD = Reserved								
(CB_PAUSE = Pauses cell balancing on all cells to allow diagnostics to run								

es cell balancing on all cells to allow diagnostics to run.

0 = Normal cell balancing operation

1 = Pause all cell balancing

FLTSTOP EN = Stops cell or module balancing if unmasked fault occurs. The selection is sampled whenever [BAL_GO] = 1 is set by the host MCU.

0 = Balancing is continuous regardless of fault condition (excluding thermal shutdown)

1 = All CB balancing stops when any unmasked fault occurs

OTCB EN = Enables the OTCB detection during cell balancing. The selection is sampled whenever [BAL_GO] = 1 is set by the host MCU.

0 = Disable OTCB detection

1 = Enable OTCB detection

BAL_ACT[1:0] = Controls the device action when the MB and CB are completed. These bits are samples whenever [BAL_GO] = 1 is set by the host MCU. The action is valid.

00 = No action

01 = Enters SLEEP

10 = Enters SHUTDOWN

11 = Reserved

BAL_GO = Starts cell or module balancing. When written to 1, all balancing configuration registers are sampled. Any change to the configuration registers has no effect until this bit is written to 1 again. The bit is self-clearing.

0 = Readv

1 = Start balancing

AUTO BAL = Selects between auto or manual cell balance control. The selection is sampled whenever [BAL GO] = 1 is set by the host MCU.

0 = Manual cell balancing

1 = Auto cell balancing

9.5.4.7.8 BAL_CTRL3

Address	0x0330							
RW	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0



Name		RSVD			BAL_TIME_SEL[3:0]					
Reset	0	0	0	0	0	0	0	0		
	RSVD =	Reserved								
BA	BAL_TIME_GO Instruct the device to report the selected CB channel (set by [BAL_TIME_SEL3:0]) remaining balancing time to BAL_TIME register. This bit is self clearing.									

BAL_TIME_SEL[3:0] = Select a single CB channel to report its remaining balancing time 0x0 = CB Channel 1

0x1 = CB Channel 2 :

0xF = CB Channel 16

9.5.4.7.9 CB_COMPLETE1

Address	0x0556							
Read Only	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
Name	CELL16_ DONE	CELL15_ DONE	CELL14_ DONE	CELL13_ DONE	CELL12_ DONE	CELL11_ DONE	CELL10_ DONE	CELL9_ DONE
Reset	0	0	0	0	0	0	0	0

CELL9_DONE to Cell balance completion for cell9 to cell16. This register is cleared when MCU sets [BAL_GO] = 1.

CELL16_DONE = 0 = Balancing on the particular cell is still running or has not started

1 = Balancing completed on the particular cell

9.5.4.7.10 CB_COMPLETE2

Address	0x0557							
Read Only	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
Name	CELL8_DO NE	CELL7_DONE	CELL6_DONE	CELL5_DONE	CELL4_DONE	CELL3_DONE	CELL2_DONE	CELL1_DONE
Reset	0	0	0	0	0	0	0	0

CELL1_DONE to Cell balance completion for cell1 to cell8. This register is cleared when MCU sets [BAL_GO] = 1.

CELL8_DONE = 0 = Balancing on the particular cell is still running or has not started

1 = Balancing completed on the particular cell

9.5.4.7.11 BAL_TIME

Address	0x0558							
Read Only	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
Name	TIME_UNIT				TIME[6:0]	•		
Reset	0	0	0	0	0	0	0	0

TIME_UNIT = Indicates the unit reported by[TIME6:0]

 $0 = \sec 1$

TIME[6:0] = Report the selected CB channel remaining balancing time

If [TIME_UNIT] = 0. Time report in sec with 5sec step

If [TIME_UNIT] = 1. Time report in min with 5min step

9.5.4.8 Protector Configuration and Control

9.5.4.8.1 OV_THRESH

Address	0x0009								
NVM	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0	
Name	SPARE	SPARE		OV_THR[5:0]					
Reset	0	0	1	1	1	1	1	1	
	SPARE =	Spare		•		•			

OV_THR[5:0] = Sets the overvoltage threshold for the OV comparator. Changes on these bits require host to send another

[OVUV_GO] = 1 command.

All settings are at 25-mV steps.

0x02 to 0x0E: range from 2700 mV to 3000 mV 0x12 to 0x1E: range from 3500 mV to 3800 mV 0x22 to 0x2E: range from 4175 mV to 4475 mV All other settings will default to 2700 mV.

9.5.4.8.2 UV_THRESH

Address	0x000A								
NVM	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0	
Name	SPARE	SPARE		UV_THR[5:0]					
Reset	0	0	0 0 0 0 0						
	SPARE =	Snare							

UV THR[5:0] = Sets the undervoltage threshold for the UV comparator. Changes on these bits require host to send another [OVUV_GO] = 1 command.

All settings are at 50-mV steps.

0x00 to 0x26: range from 1200 mV to 3100 mV All other settings will default to 3100 mV.

9.5.4.8.3 UV_DISABLE1

Address	0x000C							
NVM	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
Name	CELL16	CELL15	CELL14	CELL13	CELL12	CELL11	CELL10	CELL9
Reset	0	0	0	0	0	0	0	0

CELL9 to Indicate which channels shall be excluded from UV and VCB_DONE detection

CELL16 = 0 = UV and VCB_DONE monitoring apply to the channel

1 = UV and VCB DONE monitoring are excluded from the channel

9.5.4.8.4 UV_DISABLE2

Address	0x000D							
NVM	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
Name	CELL8	CELL7	CELL6	CELL5	CELL4	CELL3	CELL2	CELL1
Reset	0	0	0	0	0	0	0	0

CELL8 to Indicate which channels shall be excluded from UV and VCB DONE detection

CELL1 = 0 = UV and VCB_DONE monitoring apply to the channel

1 = UV and VCB_DOME monitoring are excluded from the channel

9.5.4.8.5 OTUT_THRESH

Address	0x000B							
NVM	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
Name		UT_THR[2:0] OT_THR[4:0]						
Reset	1	1	1	0	0	0	0	0

UT THR[2:0] = Sets the UT threshold for the UT comparator. Changes on these bits require host to send another [OTUT GO] =

1 command. The MCU configures the corresponding GPIO(s) to ADC and OTUT input.

Range from 66% to 80% in steps of 2% sourced from TSREF regulator voltage.

Default Reset setting 80%.

OT THR[4:0] = Sets the OT threshold for the OT comparator. Changes on these bits require host to send another [OTUT GO] =

1 command. The MCU configures the corresponding GPIO(s) to ADC and OTUT input.

Range from 10% to 39% in steps of 1% sourced from TSREF regulator voltage.

Unused code defaults to 39%.

Default Reset setting 39%.



9.5.4.8.6 OVUV_CTRL

Address	0x032C										
RW	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0			
Name	VCBDONE_ THR_LOCK		OVUV_LOCK[3:0] OVUV_GO OVUV_MODE[1:0								
Reset	0	0	0	0	0	0	0	0			
	VCBDONE_THR_LOCK = As the UV comparator is switching between UV threshold and VCBDONE threshold to measure the UV DAC or the VCBDONE DAC result for diagnostics, the UV comparator has to lock onto only one threshold before starting the AUX ADC measurement. This bit selects which threshold is locked to the UV comparator. The bit is sampled when OVUV_MODE[1:0] is 0b11 which is locked to a single channel mode. 0 = UV threshold is selected 1 = VCBDONE threshold is selected OVUV_LOCK[3:0] = Configures a particular single channel as the OV and UV comparators input when [OVUV_MOD1:0] = 0b11. Changes on these bits require host to send another [OVUV_GO] = 1 command. 0x0 = Lock to Cell1 0x1 = Lock to Cell2 0x2 = Lock to Cell3 :										
	OVUV_GO =	Starts the OV as	nd UV comparate	ors. When written	to 1, all OVUV	configuration setti	ings are sample	ed. This bit is			
		0 = Ready 1 = Start OV and	d UV comparato	rs							

00 -

OVUV_MODE[1:0] = Sets the OV and UV comparators operation mode when [OVUV_GO] = 1. Changes on these bits require host to send another [OVUV_GO] = 1 command.

00 = Do not run OV and UV comparators

01 = Run the OV and UV round robin with all active cells

10 = Run the OV and UV BIST cycle.

11 = Lock OV and UV comparators to a single channel configured by [OVUV_LOCK3:0]

Note: Active cells are defined by the ACTIVE_CELL[NUM_CELL3:0] register.

9.5.4.8.7 OTUT_CTRL

Address	0x032D								
RW	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0	
Name	RSVD	OTCB_THR_ LOCK	OTUT_LOCK[2:0]			OTUT_GO	OTUT_M	1ODE[1:0]	
Reset	0	0	0	0	0	0	0	0	
	RSVD =	Reserved							
		ADC measurem	ent. This bit sele <i>:0]</i> = 0b11 which d is selected	ects which threst		nto only one thres the OT comparate ode.		•	
OTUT_LOCK[2:0] = Configures a particular single channel as the OT and UT comparators input when [OTUT_MOD1:0] = 0b11. Changes on these bits require host to send another [OTUT_GO] = 1 command. 0x0 = Lock to GPIO1A 0x1 = Lock to GPIO2A : 0x7 = Lock to GPIO8A									
OTUT_GO = Starts the OT and UT comparators. When written to 1, all OTUT configuration settings are sampled. This self-clearing. 0 = Ready 1 = Start OT and UT comparators							ed. This bit is		

OTUT_MODE[1:0] = Sets the OT and UT comparators operation mode when [OTUT_GO] = 1. Changes on these bits require host to send another [OTUT_GO] = 1 command.

00 = Do not run OT and UT comparators

01 = Run the OT and UT round robin with all active cells

10 = Run the OT and UT BIST cycle.

11 = Lock OT and UT comparators to a single channel configured by [OTUT_LOCK3:0]

9.5.4.9 GPIO Configuration

9.5.4.9.1 GPIO_CONF1

Address	0x000E								
NVM	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0	
Name	FAULT_IN_ EN	SPI_EN	GPIO2[2:0] GPIO1[2:0]						
Reset	0	0	0	0	0	0	0	0	
FAI	FAULT_IN_EN = Enables GPIO8 as an active-low input to trigger the NFAULT pin when the input signal is low. 0 = No fault input function. GPIO8 is configured based on [GPIO8_CONF2:0] setting. 1 = GPIO8 is set as active-low input to trigger NFAULT pin, [GPIO8_CONF2:0] setting is ignored.								

SPI EN = Enables SPI master on GPIO4, GPIO5 and GPIO6, GPIO7.

0 = SPI master disabled.

1 = SPI master enabled. Overwrite the [GPIO4_CONF2:0], [GPIO5_CONF2:0], [GPIO6_CONF2:0], and [GPIO7_CONF2:0] settings.

GPIO2[2:0] = Configures GPIO2.

000 = As disabled, high-Z

001 = As ADC and OTUT inputs

010 = As ADC only input 011 = As digital input

100 = As output high

101 = As output low

110 = As ADC input and weak pull-up enabled

111 = As ADC input and weak pull-down enabled

GPIO1[2:0] = Configures GPIO1.

000 = As disabled, high-Z

001 = As ADC and OTUT inputs

010 = As ADC only input

011 = As digital input

100 = As output high

101 = As output low

110 = As ADC input and weak pull-up enabled

111 = As ADC input and weak pull-down enabled

9.5.4.9.2 GPIO_CONF2

Address	0x000F							
NVM	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
Name	SPARE	RSVD		GPIO4[2:0] GPIO3[2:0]				
Reset	0	0	0	0	0	0	0	0

SPARE = Spare

GPIO4[2:0] = Configures GPIO4. If [SPI_EN] = 1, these configuration bits are ignored and the pin is used as SS for SPI master.

See 节 9.3.6.1.7 for details.

000 = As disabled, high-Z

001 = As ADC and OTUT inputs

010 = As ADC only input

011 = As digital input

100 = As output high

101 = As output low

110 = As ADC input and weak pull-up enabled

111 = As ADC input and weak pull-down enabled

Copyright © 2022 Texas Instruments Incorporated

Submit Document Feedback



GPIO3[2:0] = Configures GPIO3. If MB_TIMER_CTRL is not 0x00, this configuration is ignored and the pin is configured for

module balancing.

000 = As disabled, high-Z

001 = As ADC and OTUT inputs

010 = As ADC only input

011 = As digital input

100 = As output high 101 = As output low

110 = As ADC input and weak pull-up enabled

111 = As ADC input and weak pull-down enabled

9.5.4.9.3 GPIO_CONF3

Address	0x0010							
NVM	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
Name	SPA	RE[1:0]		GPIO6[2:0]		GPIO5[2:0]		
Reset	0	0	0	0	0	0	0	0

SPARE[1:0] = Spare

GPIO6[2:0] = Configures GPIO6. If [SPI_EN] = 1, these configuration bits are ignored and the pin is used as MOSI for SPI master. See 节 9.3.6.1.7 for details.

000 = As disabled, high-Z

001 = As ADC and OTUT inputs

010 = As ADC only input

011 = As digital input

100 = As output high

101 = As output low

110 = As ADC input and weak pull-up enabled

111 = As ADC input and weak pull-down enabled

GPIO5[2:0] = Configures GPIO5. If [SPI_EN] = 1, these configuration bits are ignored and the pin is used as MISO for SPI

master. See † 9.3.6.1.7 for details.

000 = As disabled, high-Z

001 = As ADC and OTUT inputs

010 = As ADC only input

011 = As digital input 100 = As output high

101 = As output low

110 = As ADC input and weak pull-up enabled

111 = As ADC input and weak pull-down enabled

9.5.4.9.4 GPIO_CONF4

Address	0x0011							
NVM	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
Name	SPA	RE[1:0]		GPIO8[2:0]		GPIO7[2:0]		
Reset	0	0	0	0	0	0	0	0

SPARE[1:0] = Spare

GPIO8[2:0] = Configures GPIO8. If [FAULT_IN_EN] = 1, these configuration bits are ignored and the pin is used as an input such that an active low will trigger NFAULT.

000 = As disabled, high-Z

001 = As ADC and OTUT inputs

010 = As ADC only input

011 = As digital input

100 = As output high

101 = As output low

110 = As ADC input and weak pull-up enabled

111 = As ADC input and weak pull-down enabled

GPIO7[2:0] = Configures GPIO7. If [SPI_EN] = 1, these configuration bits are ignored and the pin is used as SCLK for SPI master. See # 9.3.6.1.7 for details.

000 = As disabled, high-Z

001 = As ADC and OTUT inputs

010 = As ADC only input

011 = As digital input

100 = As output high

101 = As output low

110 = As ADC input and weak pull-up enabled

111 = As ADC input and weak pull-down enabled

9.5.4.10 SPI Master 9.5.4.10.1 SPI CONF

Address	0x034D							
RW	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
Name	RSVD	CPOL	СРНА	NUMBIT[4:0]				
Reset	0	0	0	0	0	0	0	0

RSVD = Reserved

CPOL = Sets the SCLK polarity.

0 = Idles low and clocks high

1 = Idles high and clocks low

CPHA = Sets the edge of SCLK where data is sampled on MISO.

0 = Leading clock transition

1 = Trailing clock transition

NUMBIT[4:0] = SPI transaction length. Set the number of SPI bits to read/write.

00000 = 24-bit

00001 = 1-bit

00010 = 2-bit

10111 = 23-bit

All others = 23-bit

9.5.4.10.2 SPI_EXE

Address	0x0351							
RW	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
Name			SS_CTRL	SPI_GO				
Reset	0	0	0	1	0			
RSVD = Reserved								

SS CTRL = Programs the state of SS.

0 = Output low

1 = Output high

SPI GO = Executes the SPI transaction. This bit is self-clearing.

0 = Idle

1 = Execute the SPI

9.5.4.10.3 SPI_TX3, SPI_TX2, and SPI_TX1

Address	0x034E to 0x0350							
RW	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
Name		DATA[7:0]						
Reset	0	0	0	0	0	0	0	0

DATA[7:0] = Data to be used to write to SPI slave device. The bits are programmed by using SPI_CONF[NUMBIT4:0] and are clocked out of MOSI starting from the LSB SPI_TX1 -> LSB SPI_TX2 -> LSB SPI_TX3.



9.5.4.10.4 SPI_RX3, SPI_RX2, and SPI_RX1

Address	0x0520 to 0x522								
Read Only	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0	
Name		DATA[7:0]							
Reset	0	0	0	0	0	0	0	0	
	R	R	R	R	R	R	R	R	

DATA[7:0] = Data returned from a read during SPI transaction. Updated, starting with LSB SPI_RX1 -> LSB SPI_RX2 -> LSB SPI_RX3, with the number of bits set by SPI_CONF[NUMBIT4:0] clocked in from MISO.

9.5.4.11 Diagnostic Control

9.5.4.11.1 DIAG_OTP_CTRL

Address	0x0335							
RW	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
Name	RSVD			FLIP_FACT_ CRC	MA	ARGIN_MODE[2	:0]	MARGIN_GO
Reset	0	0	0	0	0	0	0	0

RSVD = Reserved

FLIP FACT CRC = An enable bit to flip the factory CRC value. This is for factory CRC diagnostic.

0 = Normal operation. No modification of the factory CRC

1 = Flip the CRC value. This causes a factory CRC fault, FAULT_OTP[FACT_CRC].

MARGIN_MODE[2:0] = Configures OTP Margin read mode:

0b000 = Normal Read 0b001 = Reserved 0b010 = Margin 1 Read 0b011 to 0b111 = Reserved

MARGIN GO = Starts OTP Margin test set by the [MARGIN_MOD] bit. This bit self-clears and always reads 0.

0 = Ready

1 = Start the test

9.5.4.11.2 DIAG_COMM_CTRL

Address	0x0336							
RW	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
Name			SPI_ LOOPBACK	FLIP_TR_ CRC				
Reset	0 0 0 0 0 0 0							
<u>.</u>	RSVD = Reserved							

0 = Disable

1 = Enable

FLIP_TR_CRC = Sends a purposely incorrect communication (during transmitting response) CRC by inverting all of the calculated

CRC bits.

0 = Send CRC as calculated

1 = Send inverted CRC

9.5.4.11.3 DIAG_PWR_CTRL

Address	0x0337							
RW	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
Name	RSVD							PWR_BIST_ GO
Reset	0	0	0	0	0	0	0	0

RSVD = Reserved

BIST_NO_RST = Use for further diagnostic if the power supply BIST detects a failure. When this bit is set to 1, and then BIST cycle is run using [PWR_BIST_GO], the device will not clear the FAULT_PWR1 and FAULT_PWR2 register, and does not deassert the NFAULT signal at the end of BIST cycle.

0 = Cycle through BIST on the LDO comparators. The FAULT_PWR* registers are reset to 0 and NFAULT is deasserted at the end of each LDO BIST run.

1 = Cycle through BIST on the LDO comparators. The FAULT_PWR* registers are not reset to 0, and NFAULT remains asserted at the end of each LDO BIST run.

PWR_BIST_GO = When written to 1, the power supply BIST diagnostic will start. Any change in [BIST_NO_RST] has no effect until this bit is written to 1 again. The bit self-clears.

0 = Ready

1 = Start power supply BIST diagnostic.

9.5.4.11.4 DIAG_CBFET_CTRL1

Address	0x0338								
RW	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0	
Name	CBFET16 to CBFET9								
Reset	0	0	0	0	0	0	0	0	
CBFET16 to CBFET9 = Enables CBFET for CBFET diagnostic. This register is only sampled when [COMP_ADC_SEL2:0] = 0b100. 0 = CBFET off									

9.5.4.11.5 DIAG_CBFET_CTRL2

Address	0x0339								
RW	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0	
Name	CBFET8 to CBFET1								
Reset	0	0 0 0 0 0 0 0							
CBFET8 to CBFET1 = Enables CBFET for CBFET diagnostic. This register is only sampled when [COMP_ADC_SEL2:0] = 0b100.									

0 = CBFET off 1 = CBFET on

1 = CBFET on

9.5.4.11.6 DIAG_COMP_CTRL1

Address	0x033A							
RW	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
Name			VCCB_THR[4:0					
Reset	0	0	0	0	0	0	0	0

VCCB_THR[4:0] = Configures the VCELL vs. AUXCELL delta. The VCELL vs. AUXCELL check is considered pass if the measured delta is less than this threshold. This threshold applies to the bus bar comparison from Main to AUX ADC as well.

Range from 6 to 99mV in 3mV step

BB_THR[2:0] = RSVD = Additional delta value added to the VCCB_THR setting, used during VCELL vs. AUXCELL comparison when comparing a cell connected above a bus bar (with the bus bar connected to a VC channel individually).

Range is from 5 mV to 40 mV in 5-mV steps. Reserved

9.5.4.11.7 DIAG_COMP_CTRL2

Address	0x033B								
RW	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0	
Name	RSVD		GPIO_THR[2:0]		OW_THR[3:0]				
Reset	0	0	0 0 0			0	0	0	
RSVD = Reserved									

GPIO_THR[2:0] = Configures the GPIO comparison delta threshold between Main and AUX ADC measurements.

Range is from 4-mV to 32-mV in 4-mV steps



OW_THR[3:0] = Configures the OW detection threshold for diagnostic comparison. This threshold applies to the CB OW and VC OW diagnostics.

Range is from 500 mV to 5 V in 300-mV steps.

9.5.4.11.8 DIAG_COMP_CTRL3

Address	0x033C							
RW	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
Name	RSVD	CBFET_CTRL _GO	OW_SI	NK[1:0]	COMP_ADC_SEL[2:0]			COMP_ADC _GO
Reset	0	0	0	0	0	0	0	0

RSVD = Reserved

CBFET CTRL GO = When this GO bit = 1, device turns on the CBFET configured and turns off whichever CBFET is clear in DIAG CBFET CTRL1/2 regisetrs. This GO action is executed only if CB is not running or it's in pause, otherwise, CBFETs are controlled by regular CB control.

If CBFET are turned on by this GO bit, once CB is started or resume, the CBFET controls returns to the regular CB control (and not by this GO bit action)

OW SNK[1:0] = Turns on current sink on VC pins. CB pins, or BBP/N pins. Changes to these bits take effect immediately. Host MCU is responsible to turn on the correct sink current before performing open wire (OW) test and to turn off the sink current after OW test is completed.

00 = All VC, BBP/N, CB pins current sink is off.

01 = Turn on current sink on all VC pins

10 = Turn on current sink on all CB pins

11 = Turn on current sink on BBP/N pins

COMP ADC SEL[2:0] = Enables the device diagnostic comparison through the ADC measurements. Host enables the corresponding ADCs in continuous mode before enabling this diagnostic. These bits are sampled when [COMP ADC GO] = 1. 000 = No ADC comparison is performed

001 = Cell voltage measurement check.

Device compares the cell channels specified by [AUX_CELL_SEL4:0] against the following criteria:

VCELL (from Main ADC) vs. AUXCELL (from AUX ADC) delta is less than [VCCB_THR4:0].

The [DRDY VCCB] = 1 when this comparison is completed.

010 = Open wire (OW) check on VC pins.

MCU enables the current sink on all VC pins through the [OW SNK1:0] before enabling this comparison. Device compares corresponding VC pins specified by ACTIVE_CELL register against the following criteria: VCELL (from Main ADC) is less than DIAG_COMP_CTRL2 [OW_THR3:0].

The [DRDY VC OW] = 1 when the comparison is completed.

011 = Open wire (OW) check on CB pins

MCU enables the current sink on all VC pins through the [OW SNK1:0] before enabling this comparison. Device compares corresponding CB pins specified by [AUX_CELL_SEL4:0] against the following criteria: AUXCELL (from AUX ADC) is less than DIAG_COMP_CTRL2 [OW_THR3:0]. The [DRDY_CBOW] = 1 when the comparison is completed.

100 = CBFET check.

MCU preconfigures the following before starting this check:

- Pause cell balancing if balancing is enabled.
- Enable the CBFET configured by DIAG_CBFET_CTRL1/2 registers.
- Configure the [EXTD_CBFET] to decide if all CBFET returns to pause state (that is, turn off all CBFET) or remains their status as specified by DIAG_CBFET_CTRL1/2 registers.

When this test starts, device will turn on CBFET specified by DIAG CBFET CTRL1/2 registers and then compares the channel specified by [AUX_CELL_SEL4:0] with the following criteria:

AUXCELL (from AUX ADC) < 1/3 of VCELL (from Main ADC). [DRDY_CBFET] = 1 when the comparison is completed.

101 = GPIO measurement check (applies to GPIO configured as ADC and OTUT inputs or ADC only input). Device compares main GPIO measurement vs. AUX GPIO measurements delta is less than [GPIO_THR2:0]. The [DRDY GPIO] = 1 when the comparison is completed.

Other codes: No ADC comparison is performed

COMP ADC GO = Device starts diagnostic test specified by [COMP ADC SEL2:0] setting. When this bit is written to 1, the selected [COMP_ADC_SEL2:0] is sampled. Change of [COMP_ADC_SEL2:0] setting has no effect unless this GO bit is written to 1 again.

This bit is cleared to 0 in read.

0 = Ready. Writing 0 has no effect

1 = Star diagnostic selected by [COMP ADC SEL2:0]



9.5.4.11.9 DIAG_COMP_CTRL4

Address	0x033D									
RW	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0		
Name			COMP_ FAULT_INJ	LPF_FAULT _INJ						
Reset	0	0	0	0	0	0	0	0		
'	RSVD =	RSVD = Reserved								
COMP_FAULT_INJ = Injects fault to the ADC comparison logic. If any ADC comparison diagnostic is run with this bit set, the										

COMP_FAULT_INJ = Injects fault to the ADC comparison logic. If any ADC comparison diagnostic is run with this bit set, the comparison result is expected to fail.

0 = Disable 1 = Enable

LPF_FAULT_INJ = Injects fault condition to the diagnostic LPF during LPF diagnostic. The FAULT_COMP_MISC[LPF_FAIL] is expected to be set.

0 = Disable

1 = Enable

9.5.4.11.10 DIAG_PROT_CTRL

Address	0x033E									
RW	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0		
Name		RSVD								
Reset	0	0 0 0 0 0 0								
	RSVD =	Reserved								

PROT_BIST_NO_RST = Use for further diagnostic if the protector BIST detects a failure. When this bit is set to 1, the device will not clear the FAULT_OV1/2, FAULT_UV1/2, FAULT_OT, and FAULT_UT registers. The NFAULT signal will be latched once it is asserted.

Note: Host ensures there is no fault before starting the BIST run with this bit set to 0.

0 = During BIST run, when the device asserts a fault to check the protector comparators and MUX and asserts the correct OV, UV, OT, and UT fault bits the NFAULT pin. When this bit is 0, the device clears the fault and deasserts NFAULT before switching to the next channel.

1 = During BIST run, the fault created during the test will not be cleared before switching to next cell or GPIO channel. The NFAULT pin is latched once it is asserted.

9.5.4.12 Fault Configuration and Reset

9.5.4.12.1 FAULT_MSK1

Address	0x0016										
NVM	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0			
Name	MSK_PROT	MSK_UT	MSK_OT	MSK_UV	MSK_OV	MSK_COMP	MSK_SYS	MSK_PWR			
Reset	set 0 0 0 0 0 0 0										
	MSK_PROT = Masks the <i>FAULT_PROT*</i> registers to trigger NFAULT. 0 = Assert NFAULT if any bit from <i>FAULT_PROT*</i> is set to 1. 1 = No NFAULT action regardless of <i>FAULT_PROT*</i> bit status.										
	MSK_UT =		LT_UT* registers JLT if any bit fror action regardles	n <i>FAÜLT_UT*</i> is	set to 1.						
	MSK_OT =		LT_OT* registers JLT if any bit fror action regardles	n <i>FAÜLT_OT*</i> is	s set to 1.						
MSK_UV = Masks the FAULT_UV* registers to trigger NFAULT. 0 = Assert NFAULT if any bit from FAULT_UV* is set to 1. 1 = No NFAULT action regardless of FAULT_UV* bit status.											
	MSK_OV =		LT_OV* registers JLT if any bit from	n <i>FAÜLT_OV*</i> is	s set to 1.						



MSK_COMP = Masks the FAULT_COMP_* registers to trigger NFAULT.

0 = Assert NFAULT if any bit from FAULT_COMP_* is set to 1.

1 = No NFAULT action regardless of FAULT_COM_* bit status.

MSK_SYS = To mask the NFAULT assertion from any FAULT_SYS register bit.

0 = Assert NFAULT if any bit from FAULT_SYS is set to 1.

1 = No NFAULT action regardless of *FAULT_SYS* bit status.

MSK_PWR = To mask the NFAULT assertion from any FAULT_PWR1 to FAULT_PWR3 register bit.

0 = Assert NFAULT if any bit from FAULT_PWR1 to FAULT_PWR3 is set to 1.

1 = No NFAULT action regardless of FAULT PWR1 to FAULT PWR3 bit status.

9.5.4.12.2 FAULT_MSK2

Address	0x0017							
NVM	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
Name	SPARE[1]	MSK_OTP_ CRC	MSK_OTP_ DATA	MSK_COMM3 _FCOMM	MSK_COMM3 _FTONE	MSK_COMM3 _HB	MSK_COMM2	MSK_COMM1
Reset	0	0	0	0	0	0	0	0

SPARE[1] = Spare

MSK_OTP_CRC = Masks the FAULT_OTP register ([CUST_CRC] and [FACT_CRC] only) on NFAULT triggering.

0 = Assert NFAULT if any bit described above is set to 1.

1 = No NFAULT action regardless of the status of the bits described above.

MSK_OTP_DATA = Masks the FAULT_OTP register (all bits except [CUST_CRC] and [FACT_CRC]) on NFAULT triggering.

0 = Assert NFAULT if any bit described above is set to 1.

1 = No NFAULT action regardless of the status of the bits described above.

MSK_COMM3_FCOMM Masks FAULT_COMM3[FCOMM_DET] fault on NFAULT triggering.

= 0 = Assert NFAULT if FAULT COMM3[FCOMM DET] is set to 1.

1 = No NFAULT action regardless of FAULT_COMM3[FCOMM_DET] status.

MSK_COMM3_FTONE Masks FAULT_COMM3[FTONE_DET] fault on NFAULT triggering.

= 0 = Assert NFAULT if FAULT_COMM3[FTONE_DET] is set to 1.

1 = No NFAULT action regardless of FAULT_COMM3[FTONE_DET] status.

 ${\sf MSK_COMM3_HB=\ Masks\ \it FAULT_COMM3[HB_FAST]\ or\ \it [HB_FAIL]\ faults\ on\ NFAULT\ triggering.}$

0 = Assert NFAULT if FAULT_COMM3[HB_FAST] or [HB_FAIL] is set to 1.
1 = No NFAULT action regardless of FAULT_COMM3[HB_FAST] or [HB_FAIL] status.

MSK COMM2 = Masks FAULT_COMM2 register on NFAULT triggering.

0 = Assert NFAULT if any bit from FAULT_COMM2 register is set to 1.

1 = No NFAULT action regardless of FAULT_COMM2 register bit status.

MSK_COMM1 = Masks FAULT_COMM1 register on NFAULT triggering.

0 = Assert NFAULT if any bit from FAULT_COMM1 register is set to 1.

1 = No NFAULT action regardless of FAULT_COMM1 register bit status.

9.5.4.12.3 FAULT_RST1

Address	0x0331							
RW	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
Name	RST_PROT	RST_UT	RST_OT	RST_UV	RST_OV	RST_COMP	RST_SYS	RST_PWR
Reset	0	0	0	0	0	0	0	0

RST_PROT = Resets the FAULT_PROT1 and FAULT_PROT2 registers to 0x00.

0 = No reset

1 =Reset registers to 0x00

RST UT = Resets all FAULT UT registers to 0x00.

0 = No reset

1 = Reset registers to 0x00

RST_OT = Resets all FAULT_OT registers to 0x00.

0 = No reset

1 = Reset registers to 0x00

RST_UV = Resets all FAULT_UV* registers to 0x00.

0 = No reset

1 = Reset registers to 0x00



RST_OV	= Resets all FAULT_OV* registers to 0x00. 0 = No reset 1 = Reset registers to 0x00
RST_COMP	= Resets all FAULT_COMP_* registers to 0x00. 0 = No reset 1 = Reset registers to 0x00
RST_SYS	= To reset the FAULT_SYS register to 0x00. This bit self-clears to 0 after writing to 1. 0 = Do not reset 1 = Reset to 0x00
RST_PWR	= To reset the FAULT_PWR1 to FAULT_PWR3 registers to 0x00. This bit self-clears to 0 after writing to 1. 0 = Do not reset 1 = Reset to 0x00

9.5.4.12.4 FAULT_RST2

Address	0x0332							
RW	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
Name	RSVD	RST_OTP _CRC	RST_OTP_ DATA	RST_COMM3 _FCOMM	RST_COMM3 _FTONE	RST_COMM3 _HB	RST_COMM2	RST_COMM1
Reset 0 0 0 0 0 0 0								0
	RSVD =	Reserved						
RST_	OTP_CRC =	Resets the FAU 0 = No reset 1 = Reset the re		· ([CUST_CRC] a	and [FACT_CRC	J only).		
RST_	OTP_DATA =	Resets the FAU 0 = No reset 1 = Reset the re	_	([SEC_DETEC	T] and [DED_DE	TECT] only).		
RST_COM		Resets FAULT_ 0 = No reset 1 = Reset the re		M_DET].				
RST_COI		Resets FAULT_ 0 = No reset 1 = Reset the re		E_DETJ.				
RST_COMM3_HB = Resets FAULT_COMM3[HB_FAST] and [HB_FAIL] bits. 0 = No reset 1 = Reset the related bits to 0								
RST_COMM2 = Resets FAULT_COMM2, DEBUG_COML*, and DEBUG_COMM_COMH* registers. 0 = No reset 1 = Reset registers to 0x00						rs.		
RS	ST_COMM1 =	Resets FAULT_ 0 = No reset 1 = Reset regist		BUG_COMM_U	ART* registers.			

9.5.4.13 Fault Status

9.5.4.13.1 FAULT_SUMMARY

This register is the soft version of the NFAULT.

1 = Protector fault is detected

Address	0x052D									
Read Only	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0		
Name	FAULT_PRO T	FAULT_ COMP_ADC	FAULT_OTP	FAULT_ COMM	FAULT_OTUT	FAULT_OVUV	FAULT_SYS	FAULT_PWR		
Reset	0	0	0	0	0	0	0	0		
FA	FAULT_PROT = This bit is set if [MSK_PROT] = 0 and any of the FAULT_PROT1 or FAULT_PROT2 register bits is set. 0 = No protector (OVLIV OTLIT comparators) fault									



FAULT_COMP_ADC = This bit is set if [MSK_COMP] = 0 and any of the following registers is set:

- FAULT_COMP_VCCB1/2
- FAULT_COMP_VCOW1/2
- FAULT_COMP_CBOW1/2
- FAULT COMP CBFET1/2
- FAULT_COMP_GPIO
- FAULT_COMP_MISC

0 = No ADC comparison fault (that is, none of the FAULT_COMP_* registers are set).

1 = ADC comparison fault is detected.

FAULT OTP = This bit is set if [MSK_OTP] = 0 and any of the FAULT_OTP register bits is set.

0 = No OTP-related fault detected or OTP faults are masked.

1 = OTP-related fault is detected.

FAULT_COMM = This bit is set if any of the following is true:

- [MSK_COMM1] = 0 and any of the FAULT_COMM1 register bits is set.
- [MSK COMM2] = 0 and any of the FAULT COMM2 register bits is set.
- [MSK_COMM3_HB] = 0 and the FAULT_COMM3[HB_FAST] bit or [HB_FAIL] bit is set.
- [MSK_COMM3_FTONE] = 0 and the FAULT_COMM3[FTONE_DET] is set.
- [MSK_COMM3_FCOMM] = 0 and if FAULT_COMM3[FCOMM_DET] is set.

0 = No UART, VIF, or FTONE fault is detected, or UART, VIF, and FTONE faults are masked.

1 = UART, VIF, or UT fault is detected.

FAULT_OTUT = This bit is set if any of the following is true:

- [MSK_OT] = 0 and any of the FAULT_OT1 or FAULT_OT2 bits is set.
- [MSK_UT] = 0 and any of the FAULT_UT1 or FAULT_UT2 bits is set.

0 = No OT or UT fault is detected, or OT and UT faults are masked.

1 = OT or UT fault is detected

FAULT OVUV = This bit is set if any of the following is true:

- [MSK_OV] = 0 and any of the FAULT_OV1 or FAULT_OV2 bits is set.
- [MSK UV] = 0 and any of the FAULT UV1 or FAULT UV2 bits is set.

0 = No OV or UV fault is detected, or OV and UV faults are masked.

1 = OV or UV fault is detected.

FAULT_SYS = This bit is set if [MSK_SYS] = 0 and any of the FAULT_SYS register bits is set.

0 = No system related fault detected or system faults are masked.

1 = System related fault is detected.

FAULT PWR = This bit is set if [MSK PWR] = 0 and any of the FAULT PWR1 to FAULT PWR3 register bits is set.

0 = No power rail related fault is detected or power rail faults are masked.

1 = Power rail related fault is detected.

9.5.4.13.2 FAULT_COMM1

Address	0x0530							
Read Only	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
Name	RSVD			UART_TR	UART_RR	UART_RC	COMMCLR _DET	STOP_DET
Reset	0	0	0	0	0	0	0	0

RSVD = Reserved

UART_TR = Indicates a UART FAULT is detected when transmitting a response frame. Further details of the fault information are available in the DEBUG_UART_RR_TR register.

0 = No fault

1 = Fault

UART_RR = Indicates a UART FAULT is detected when receiving a response frame. Further details of the fault information are available in the DEBUG_UART_RR_TR register.

0 = No fault

1 = Fault

UART_RC = Indicates a UART FAULT is detected during receiving a command frame. Further details of the fault information are available in the *DEBUG_UART_RC* register.

0 = No fault

1 = Fault

COMMCLR_DET = A UART communication clear signal is detected. A detection of SLEEPtoACTIVE ping in ACTIVE or SLEEP mode or detection of WAKE pin in ACTIVE mode will also set this bit.

0 = No UART Clear

1 = UART Clear detected

STOP_DET = Indicates an unexpected STOP condition is received. A detection of SLEEPtoACTIVE signal in ACTIVE mode will also set this bit.

0 = No fault

1 = Fault

9.5.4.13.3 FAULT_COMM2

Address	0x0531									
Read Only	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0		
Name	COML_TR	COML_RR	COML_RC	COML_BIT	COMH_TR	COMH_RR	COMH_RC	COMH_BIT		
Reset	0	0	0	0	0	0	0	0		
	 COML_TR = Indicates a COML byte level fault is detected when transmitting a response frame. Further details of the fa information are available in the DEBUG_COML_RR_TR register. 0 = No fault 1 = Fault 									
	COML_RR =	Indicates a CON information are a 0 = No fault 1 = Fault			en receiving a re <i>RR_TR</i> register.		urther details of	the fault		
COML_RC = Indicates a COML byte level fault is detected when receiving a command frame. Further details of the fault information are available in the DEBUG_COML_RC register. 0 = No fault 1 = Fault								the fault		
	COML_BIT =	Indicates a COM fault information 0 = No fault 1 = Fault			n would cause at DML_BIT register		evel fault. Furthe	r details of the		
	COMH_TR =	Indicates a CON information are a 0 = No fault 1 = Fault			en transmitting a _RR_TR register.		e. Further details	of the fault		
COMH_RR = Indicates a COMH byte level fault is detected when receiving a response frame. Further details of the fau information are available in the DEBUG_COMH_RR_TR register. 0 = No fault 1 = Fault								the fault		
COMH_RC = Indicates a COMH byte level fault is detected when receiving a command frame. Further details of the fault information are available in the DEBUG_COMH_RC register. 0 = No fault 1 = Fault								f the fault		
	COMH_BIT =	Indicates a COM fault information 0 = No fault 1 = Fault			h would cause a DMH_BIT registe		evel fault. Furthe	er details of the		

9.5.4.13.4 FAULT_COMM3

Address	0x0532							
Read Only	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
Name		R	SVD		FCOMM_DET	FTONE_DET	HB_FAIL	HB_FAST
Reset	0	0	0	0	0	0	0	0



RSVD =	Reserved
FCOMM_DET =	Received communication transaction with the Fault Status bits set by any of the upper stack device(s). 0 = Fault Status are clear, indicating no fault is detected from any of the upper stack device(s). 1 = Fault Status are set from the receiving communication transaction.
FTONE_DET =	Indicates a FAULT TONE is received. Detection is monitoring the COML side if [DIR_SEL] = 0 and vice versa. 0 = No FAULT TONE detected 1 = FAULT TONE detected
HB_FAIL =	Indicates HEARTBEAT is not received within an expected time. Detection is monitoring the COML side if [DIR_SEL] = 0 and vice versa. 0 = No fault 1 = Fault
HB_FAST =	Indicates HEARTBEAT is received too frequently. Detection is monitoring the COML side if [DIR_SEL] = 0 and vice versa. This bit may also be set when [FTONE_DET] = 1 depends on how soon the FAULT TONE is detected from the previous HEATBEAT 0 = No fault 1 = Fault

9.5.4.13.5 FAULT_OTP

Address	0x0535										
Read Only	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0			
Name	RSVD	DED_DET	SEC_DET	CUST_CRC	FACT_CRC	CUSTLDERR	FACTLDERR	GBLOVERR			
Reset	Reset 0 0 0 0 0 0 0 0										
'	RSVD =	Reserved			1						
	DED_DET =	Indicates a DED 0 = No fault 1 = Fault	error has occur	red during the O	TP load. (Unkno	wn during encod	ling)				
	SEC_DET =	Indicates a SEC 0 = No fault 1 = Fault	error has occur	red during the O	TP load. (Unkno	wn during encod	ing)				
(CUST_CRC =	Indicates a CRC 0 = No fault 1 = Fault	error has occur	red in the custor	ner register spac	ce.					
	FACT_CRC =	Indicates a CRC 0 = No fault 1 = Fault	error has occur	red in the factory	/ register space.						
C	USTLDERR =	No CustomeThe highestThe highestLOADERR	TAT registers for order OTP page is processed on the control of th	r the specific error programmed. page has a [FM] page has [TRY] e selected Custon evice with this err	or condition. This TERR]. = 1 and is not [F mer OTP page. or must not be c	s error bit is set if	one of the follow				



FACTLDERR = Indicates errors during the factory space OTP load process. This error bit is set if one of the following is true:

- · No factory OTP page is programmed.
- The highest factory OTP page has a [FMTERR].
- The highest factory OTP page has [TRY] = 1 and is not [PROGOK].
- LOADERR happened on the selected factory OTP page.

Information received from the device with this error must not be considered reliable. Writing [RST_OTP_DATA] = 1 does not reset this bit. To recheck this error, a device reset or HW RESET is needed.

0 = No fault

1 = Fault

GBLOVERR = Indicates that on overvoltage error is detected on one of the OTP pages. Read OTP_CUST1_STAT and OTP_CUST2_STAT registers to determine the specific page(s). Information received from the device with this error must not be considered reliable.

Writing [RST_OTP_DATA] = 1 does not reset this bit. To clear this bit, a device reset or HW RESET is needed. Repeat the programming procedure on a different page (if available) will force the device to re-evaluate the condition.

0 = No fault

1 = Fault

9.5.4.13.6 FAULT SYS

Address	0x0536							
Read Only	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
Name	LFO	RSVD	GPIO	DRST	CTL	CTS	TSHUT	TWARN
Reset	0	0	0	0	0	0	0	0
	LFO =	Indicated LFO fr 0 = No fault detected 1 = Fault detected	ected	ide an expected	range			
	RSVD =	Reserved						
	GPIO =	Indicates GPIO8 0 = No fault dete 1 = FAULT input	ected	LT input when G	PIO_CONF1[FAI	<i>ULT_IN_EN]</i> = 1.		
	DRST =	Indicates a digital 0 = No digital re 1 = Digital reset	set	urred.				
	CTL =	Indicates a long observable if the 0 = No fault 1 = Long commo	e action is set to	device shutdow	n.	is configured by out action is set t		s bit is not
	CTS =	Indicates a shor system before re 0 = No fault 1 = Short comm	eaching long co	mmunication tim		n the device. Thi	s can be served	as an alert to
	TSHUT =	Indicates the pretthe thermal shut 0 = Die tempera 1 = The previous	tdown threshold ture is less thar		wn threshold	ch the die tempe	rature (die temp	2) is higher than
	TWARN =	shutdown.	oment yet. This	. , .	ing signal that th	A <i>RN_THR[1:0]</i> s ne die temperatui	•	•

9.5.4.13.7 FAULT_PROT1

Address	0x053A							
Read Only	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0

1 = Die temperature is greater than TWARN_THR[1:0]



Name			R	SVD			TPARITY_ FAIL	VPARITY_ FAIL
Reset	0	0	0	0	0	0	0	0

RSVD = Reserved

TPARITY FAIL = Indicates a parity fault is detected on any of the following OTUT related configurations:

- · OT or UT threshold setting
- [OTUT MODE1:0] setting
- GPIO_CONF1...4 settings

0 = No fault

1 = Fault

VPARITY_FAIL = Indicates a parity fault is detected on any of the following OVUV related configurations:

- · OV or UV threshold setting
- [OVUV_MODE1:0] setting
- [NUM_CELL3:0] setting

0 = No fault

1 = Fault

9.5.4.13.8 FAULT_PROT2

Address	0x053B							
Read Only	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
Name	RSVD	BIST_ABORT	TPATH_FAIL	VPATH_FAIL	UTCOMP_ FAIL	OTCOMP_ FAIL	OVCOMP_ FAIL	UVCOMP_ FAIL
Reset	0	0	0	0	0	0	0	0
	DSVD -	Docorvod	•					

RSVD = Reserved

BIST ABORT = Indicates either OVUV or OTUT BIST run is aborted.

0 = BIST runs to completion

1 = BIST abort

TPATH FAIL = Indicates a fault is detected along the OTUT signal path during BIST test.

0 = No fault

1 = Fault

VPATH_FAIL = Indicates a fault is detected along the OVUV signal path during BIST test.

0 = No fault

1 = Fault

UTCOMP_FAIL = Indicates the UT comparator fails during BIST test.

0 = No fault

1 = Fault

OTCOMP_FAIL = Indicates the OT comparator fails during BIST test.

0 = No fault

1 = Fault

OVCOMP_FAIL = Indicates the OV comparator fails during BIST test.

0 = No fault

1 = Fault

UVCOMP FAIL = Indicates the UV comparator fails during BIST test.

0 = No fault

1 = Fault

9.5.4.13.9 FAULT_OV1

Address	0x053C							
Read Only	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
Name	OV16_DET	OV15_DET	OV14_DET	OV13_DET	OV12_DET	OV11_DET	OV10_DET	OV9_DET
Reset	0	0	0	0	0	0	0	0

OV9_DET to OV16_DET OV fault status for Cell9 to Cell16, results are from the OV comparator detection.

9.5.4.13.10 FAULT_OV2

Address	0x053D							
Read Only	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
Name	OV8_DET	OV7_DET	OV6_DET	OV5_DET	OV4_DET	OV3_DET	OV2_DET	OV1_DET
Reset	0	0	0	0	0	0	0	0
OV1 DET	to OV8 DET =	OV fault status	for Cell1 to Cell8	B. results are from	n the OV compa	rator detection.		

9.5.4.13.11 FAULT_UV1

Address	0x053E							
Read Only	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
Name	UV16_DET	UV15_DET	UV14_DET	UV13_DET	UV12_DET	UV11_DET	UV10_DET	UV9_DET
Reset	0	0	0	0	0	0	0	0
IIV9 DET	Tto UV/16 DET	LIV fault status f	for Calla to Calla	6 reculte are fro	m the LIV comp	arator detection		

UV9_DET to UV16_DET_UV fault status for Cell9 to Cell16, results are from the UV comparator detection.

9.5.4.13.12 FAULT_UV2

Address	0x053F							
Read Only	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
Name	UV8_DET	UV7_DET	UV6_DET	UV5_DET	UV4_DET	UV3_DET	UV2_DET	UV1_DET
Reset	0	0	0	0	0	0	0	0
UV1_DET	to UV8_DET =	UV fault status t	for Cell1 to Cell8	, results are fron	n the UV compa	rator detection.		

9.5.4.13.13 FAULT_OT

Address	0x0540							
Read Only	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
Name	OT8_DET	OT7_DET	OT6_DET	OT5_DET	OT4_DET	OT3_DET	OT2_DET	OT1_DET
Reset	0	0	0	0	0	0	0	0
OT1_DET	to OT8_DET =	OT fault status	or GPIO1 to GP	IO8, results are	from the OT com	nparator detection	n.	

9.5.4.13.14 FAULT_UT

Address	0x0541									
Read Only	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0		
Name	UT8_DET	UT7_DET	UT6_DET	UT5_DET	UT4_DET	UT3_DET	UT2_DET	UT1_DET		
Reset	0	0	0	0	0	0	0	0		
UT1_DET	UT1_DET to UT8_DET = UT fault status for GPIO1 to GPIO8, results are from the UT comparator detection.									

9.5.4.13.15 FAULT_COMP_GPIO

Address	0x0543							
Read Only	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
Name	GPIO8_FAIL	GPIO7_FAIL	GPIO6_FAIL	GPIO5_FAIL	GPIO4_FAIL	GPIO3_FAIL	GPIO2_FAIL	GPIO1_FAIL

Copyright © 2022 Texas Instruments Incorporated

Submit Document Feedback



Reset 0 0 0 0 0 0									
	Reset	0	0	0	0	0	0	0	0

GPIO1_FAIL to Indicates ADC vs. AUX ADC GPIO measurement diagnostic results for GPIO1 to GPIO8. GPIO8 FAIL = 0 = Diagnostic pass

1 = Diagnostic fail. GPIO from Main ADC vs. AUX ADC measurement is greater than [GPIO_THR2:0]

9.5.4.13.16 FAULT_COMP_VCCB1

Address	0x0545							
Read Only	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
Name	CELL16_FAI	CELL15_FAIL	CELL14_FAIL	CELL13_FAIL	CELL12_FAIL	CELL11_FAIL	CELL10_FAIL	CELL9_FAIL
Reset	0	0	0	0	0	0	0	0

CELL9_FAIL to Indicates voltage diagnostic results for cell9 to cell16.

CELL16_FAIL = 0 = Diagnostic pass

1 = Diagnostic fail. VCELL vs. AUXCELL measurement is greater than [VCCB_THR4:0]

9.5.4.13.17 FAULT_COMP_VCCB2

Address	0x0546							
Read Only	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
Name	CELL8_FAI	CELL7_FAIL	CELL6_FAIL	CELL5_FAIL	CELL4_FAIL	CELL3_FAIL	CELL2_FAIL	CELL1_FAIL
Reset	0	0	0	0	0	0	0	0

CELL1_FAIL to Indicates voltage diagnostic results for cell1 to cell8.

CELL8 FAIL = 0 = Diagnostic pass

1 = Diagnostic fail. VCELL vs. AUXCELL measurement is greater than [VCCB_THR4:0]

9.5.4.13.18 FAULT_COMP_VCOW1

Address	0x0548							
Read Only	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
Name	VCOW16 _FAIL	VCOW15 _FAIL	VCOW14 _FAIL	VCOW13 _FAIL	VCOW12 _FAIL	VCOW11 _FAIL	VCOW10 _FAIL	VCOW9_FAIL
Reset	0	0	0	0	0	0	0	0

VCOW9_FAIL to Indicates VC OW diagnostic results for cell9 to cell 16.

VCOW16_FAIL = 0 = Diagnostic pass

1 = Diagnostic fail. VCELL measurement is less than [OW_THR3:0]

9.5.4.13.19 FAULT_COMP_VCOW2

Address	0x0549							
Read Only	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
Name	VCOW8_FA IL	VCOW7_FAIL	VCOW6_FAIL	VCOW5_FAIL	VCOW4_FAIL	VCOW3_FAIL	VCOW2_FAIL	VCOW1_FAIL
Reset	0	0	0	0	0	0	0	0

VCOW1_FAIL to Indicates VC OW diagnostic results for cell1 to cell 8.

VCOW8_FAIL = 0 = Diagnostic pass

1 = Diagnostic fail. VCELL measurement is less than [OW_THR3:0]

9.5.4.13.20 FAULT_COMP_CBOW1

Address	0x054B							
Read Only	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0



Name	CBOW16_ FAIL	CBOW15_ FAIL	CBOW14_ FAIL	CBOW13_ FAIL	CBOW12_ FAIL	CBOW11_ FAIL	CBOW10_ FAIL	CBOW9_FAIL
Reset	0	0	0	0	0	0	0	0

CBOW9_FAIL to Results of the CB OW diagnostic for CB FET9 to CB FET16.

CBOW16_FAIL = 0 = Pass

1 = Fail

9.5.4.13.21 FAULT_COMP_CBOW2

Address	0x054C							
Read Only	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
Name	CBOW8_FA	CBOW7_FAIL	CBOW6_FAIL	CBOW5_FAIL	CBOW4_FAIL	CBOW3_FAIL	CBOW2_FAIL	CBOW1_FAIL
Reset	0	0	0	0	0	0	0	0

CBOW1 FAIL to Results of the CB OW diagnostic for CB FET1 to CB FET8.

CBOW8_FAIL = 0 = Pass

1 = Fail

9.5.4.13.22 FAULT_COMP_CBFET1

Address	0x054E							
Read Only	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
Name	CBFET16_ FAIL	CBFET15_ FAIL	CBFET14_ FAIL	CBFET13_ FAIL	CBFET12_ FAIL	CBFET11_ FAIL	CBFET10_ FAIL	CBFET9_FAIL
Reset	0	0	0	0	0	0	0	0

CBFET9_FAIL to Results of the CB FET diagnostic for CB FET9 to CB FET16.

CBFET16_FAIL = 0 = Pass

1 = Fail

9.5.4.13.23 FAULT_COMP_CBFET2

Address	0x054F							
Read Only	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
Name	CBFET8_FA IL	CBFET7_FAIL	CBFET6_FAIL	CBFET5_FAIL	CBFET4_FAIL	CBFET3_FAIL	CBFET2_FAIL	CBFET1_FAIL
Reset	0	0	0	0	0	0	0	0

CBFET1_FAIL to Results of the CB FET diagnostic for CB FET1 to CB FET8.

CBFET8_FAIL = 0 = Pass

1 = Fail

9.5.4.13.24 FAULT_COMP_MISC

Address	0x0550							
Read Only	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
Name			COMP_ADC _ABORT	LPF_FAIL				
Reset	0	0	0	0	0	0	0	0

RSVD = Reserved

COMP ADC ABORT = Indicates the most recent ADC comparison diagnostic is aborted due to improper setting. Valid only if one of the ADC comparison diagnostics has started.

0 = ADC comparison diagnostic run to completion

1 = ADC comparison diagnostic is aborted



LPF_FAIL = Indicates LPF diagnostic result.

0 = Pass

1 = Fai

9.5.4.13.25 FAULT_PWR1

Address	0x0552											
Read Only	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0				
Name	CVSS_OPE N	DVSS_OPEN	REFHM_ OPEN	CVDD_UV	CVDD_OV	DVDD_OV	AVDD_OSC	AVDD_OV				
Reset	0	0	0	0	0	0	0	0				
C,	CVSS_OPEN = Indicates an open condition on CVSS pin.											

0 = No fault

1 = Fault

DVSS OPEN = Indicates an open condition on DVSS pin.

0 = No fault

1 = Fault

REFHM_OPEN = Indicates an open condition on REFHM pin.

0 = No fault

1 = Fault

CVDD_UV = Indicates an undervoltage fault on the CVDD LDO.

0 = No fault

1 = Fault

CVDD_OV = Indicates an overvoltage fault on the CVDD LDO.

0 = No fault

1 = Fault

DVDD OV = Indicates an overvoltage fault on the DVDD LDO.

0 = No fault

1 = Fault

AVDD_OSC = Indicates AVDD is oscillating outside of acceptable limits.

0 = No fault

1 = Fault

This fault could trigger when transitioning from SLEEP to ACTIVE mode. So, if this fault is set, please ignore it and reset the fault.

AVDD_OV = Indicates an overvoltage fault on the AVDD LDO.

0 = No fault

1 = Fault

9.5.4.13.26 FAULT_PWR2

Address	0x0553							
Read Only	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
Name	RSVD	PWRBIST_ FAIL	RSVD	REFH_OSC	NEG5V_UV	TSREF_OSC	TSREF_UV	TSREF_OV
Reset	0	0	0	0	0	0	0	0

RSVD = Reserved

PWRBIST_FAIL = Indicates a fail on the power supply BIST run.

0 = No fault

1 = Fault

REFH_OSC = Indicates REGH reference is oscillating outside of an acceptable limit.

0 = No fault

1 = Fault

NEG5V_UV = Indicates an undervoltage fault on the NEG5V charge pump.

0 = No fault

1 = Fault



TSREF_OSC = Indicates TSREF is oscillating outside of an acceptable limit.

0 = No fault

1 = Fault

TSREF_UV = Indicates an undervoltage fault on the TSREF LDO.

0 = No fault

1 = Fault

TSREF_OV = Indicates an overvoltage fault on the TSREF LDO.

0 = No fault

1 = Fault

9.5.4.13.27 FAULT_PWR3

Address	0x0554							
Read Only	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
Name	RSVD					RSVD	RSVD	AVDDUV_ DRST
Reset	0	0	0	0	0	0	0	0

RSVD = Reserved

AVDDUV_DRST = Indicates a digital reset occurred due to AVDD UV detected. This also applies when device wakes up after a SHUTDOWN or HW Reset event.

0 = No reset

1 = Digital reset occurred due to AVDD UV

9.5.4.14 Debug Control and Status

9.5.4.14.1 DEBUG_CTRL_UNLOCK

Address	0x0700										
RW	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0			
Name	CODE[7:0]										
Reset	0	0	0	0	0	0	0	0			

CODE[7:0] = Write the unlock code (0xA5) to this register to activate the setting in the <code>DEBUG_COMM_CTRL*</code> register.

Any other value than the unlock code will deactivate any effect in the <code>DEBUG_COMM_CTRL*</code> setting and return to the normal settings of the device.

9.5.4.14.2 DEBUG_COMM_CTRL1

Address	0x0701							
RW	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
Name		RSVD		UART_BAUD	UART_ MIRROR_EN	UART_TX_EN	USER_ UART_EN	USER_ DAISY_EN
Reset	0	0	0	0	0	1	0	0

RSVD = Reserved

UART_BAUD = This bit changes the UART baud rate to 250kb/s. Useful on VIF debug. When system sets all daisy chain devices to the 250kb/s baud rate, it slows down the response byte through the VIF to increase the robustness of the VIF for debug purposes.

0 = Default 1Mb/s

1 = 250 kb/s

UART_MIRROR_EN = This bit enables the stack VIF communication to mirror to UART. To use this debug function, the stack device's UART TX has to be enabled first by setting [UARTTX_EN] = 1.

0 = Disable

1 = Enable

Note: This test mode only mirrors received response frames that are received on COMH/COML in a stack device. It does not mirror received command frames or locally generated response frames that originate in the device.

UART_TX_EN = Stack device, by default, has the UART TX disabled. This bit enables the UART TX to allow read/write via UART on the stack device.

0 = Disable

1 = Enable



USER_UART_EN = This bit enables the debug UART control bits, [UART_TX_EN] and [UART_MIRROR_EN].

0 = The setting of the bits mentioned above has no effect.

1 = The device configures the UART per [UART_TX_EN] and [UART_MIRROR_EN] settings

USER_DAISY_EN = This bit enables the debug COML and COMH control bits in the DEBUG_COMM_CTRL2 register

0 = The setting of DEBUG_COMM_CTRL2 register has no effect.

1 = The device configures the COML and COMH per DEBUG_COMM_CTRL2 register setting.

9.5.4.14.3 DEBUG_COMM_CTRL2

Address	0x0702							
RW	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
Name	RSVD				COML_TX _EN	COML_RX _EN	COMH_TX _EN	COMH_RX _EN
Reset	0	0	0	0	1	1	1	1
	RSVD =	Reserved		1	1			
COM		Enables COML to 0 = Disable 1 = Enable	ransmitter.					
CON		Enables COML of a Disable of a Enable	receiver.					
COM	MH_TX_EN =	Enables COMH 0 = Disable	transmitter.					

COMH_RX_EN = Enables COMH receiver.

0 = Disable

1 = Enable

1 = Enable

9.5.4.14.4 DEBUG_COMM_STAT

Address	0x0780							
Read Only	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
Name	RSVD		HW_UART _DRV	HW_DAISY _DRV	COML_TX _ON	COML_RX _ON	COMH_TX _ON	COMH_RX _ON
Reset (Base)	0	0	1	1	0	0	1	1
Reset (Stack)	0	0	1	1	1	1	1	1

RSVD = Reserved

HW_UART_DRV = Indicates the UART TX is controlled by the device itself or by MCU control. Applicable to the stack device in which the UART TX is disabled by default once a device is configured as 'STACK'.

0 = The DEBUG_COMM_CTRL1[USER_UART_EN] = 1. UART TX is under manual control through the DEBUG_COMM_CTRL2 register.

1 = UART TX is controlled by the device

HW DAISY DRV = Indicates the COML and COMH are controlled by the device itself or by MCU control.

0 = The DEBUG_COMM_CTRL1[USER_DAISY_EN] = 1. COML and COMH are under manual control through the DEBUG_COMM_CTRL2 register.

1 = COML and COMH are controlled by the device

COML_TX_ON = Shows the current COML transmitter status.

0 = off

1 = on

COML_RX_ON = Shows the current COML receiver status.

0 = off1 = on

COMH_TX_ON = Shows the current COMH transmitter status.

0 = off

1 = on



COMH_RX_ON = Shows the current COMH receiver status.

0 = off

1 = 0

9.5.4.14.5 DEBUG_UART_RC

Address	0x0781							
Read Only	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
Name	R	SVD	RC_IERR	RC_TXDIS	RC_SOF	RC_BYTE _ERR	RC_UNEXP	RC_CRC
Reset	0	0	0	0	0	0	0	0
	RSVD =	Reserved						
	RC_IERR =	has a stop error until a commun When a commu	r, incorrect frame ication CLEAR is inication frame is nor counting it as	type is set, or re received.	eserved comman vice will not atter	d type bit is set. npt to detect any	to the frame initia All bytes that follo communication	ow are ignored
	RC_TXDIS =	Detects if UAR 0 = No error 1 = Error detect	•	but the host MC	U has issued a c	command to read	I data from the de	evice.
	RC_SOF =	Detects a start- is finished. 0 = No error 1 = Error detect	, ,	error. That is, an	UART CLEAR is	received on the	UART before the	current frame
RC_	BYTE_ERR =	follow are ignor When a commu	ed until a commu unication frame is nor counting it as	unication CLEAR	is received. vice will not atter	npt to detect any	d command frame	
	RC_UNEXP =	broadcast comr	mand through the igured with <i>[MUI</i>		. If so, this is det	tected as an erro	ected to receive a	
	RC_CRC =	Detects a CRC frame. 0 = No error 1 = Error detect		ived command fr	ame from UART	. The frame will I	oe considered as	discarded

9.5.4.14.6 DEBUG_UART_RR_TR

Address	0x0782							
Read Only	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
Name	RSVD			TR_SOF	TR_WAIT	RR_SOF	RR_BYTE _ERR	RR_CRC
Reset	0	0	0	0	0	0	0	0
RSVD = Reserved								

TR_SOF = Indicates that a UART CLEAR is received while the device is still transmitting data.

0 = No error

1 = Error detected



TR_WAIT = The device is waiting for its turn to transfer a response out but the action is terminated because either:

- · The device receives a UART CLEAR signal.
- The device receives a new command.

This bit is valid when broadcast or stack read command has been issued.

0 = No error

1 = Error detected

RR_SOF = Indicates a UART CLEAR is received while receiving the response frame. Response frames on the UART only apply in multidrop mode.

0 = No error

1 = Error detected

RR_BYTE_ERR = Detects any byte error, other than the error in the initialization byte, in the received response frame. All bytes that follow are ignored until a communication CLEAR is received.

When a communication frame is ignored, the device will not attempt to detect any communication error in the ignored frame nor counting it as valid/discard in the frame counters.

0 = No error

1 = Error detected

RR_CRC = Detects are CRC error in the received response frame from UART. The frame will be considered as a discarded frame

0 = No error

1 = Error detected

9.5.4.14.7 DEBUG_COMH_BIT

Address	0x0783							
Read Only	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
Name		RSVD		PERR	BERR_TAG	SYNC2	SYNC1	BIT
Reset	0	0	0	0	0	0	0	0

RSVD = Reserved

PERR = Detects abnormality of the incoming communication frame and hence, the device will forward the communication frame with [BERR] bit set. Any error bit that is set in this register will also set the [PERR] bit. However, an abnormality that isn't classified in the register can also trigger the [PERR] bit (for example, detecting missing data or wrong data order).

0 = No communication error detected, the forwarded communication frame does not have the [BERR] inserted.

1 = Detected abnormality of the received communication frame. [BERR] is asserted to the forwarded communication.

BERR TAG = Set when the received communication is tagged with [BERR] = 1.

0 = Received communication frame has no [BERR]

1 = Received communication frame has [BERR]

SYNC2 = The Preamble half-bit and the [SYNC1:0] bits are detected. Device is using the timing information extracted from these bits but it is unable to detect valid data.

0 = No error

1 = Error detected

SYNC1 = Unable to detect the preamble half-bit or any of the [SYNC1:0] bits. It could be the bit is missing or the signal is too distorted to be detectable.

0 = No error

1 = Error detected

BIT = The device has detected a data bit; however, the detection samples are not enough to assure a strong 1 or 0.

0 = No error

1 = Error detected

9.5.4.14.8 DEBUG COMH RC

Address	0x0784							
Read Only	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
Name	RSVD		RC_IERR	RC_TXDIS	RC_SOF	RC_BYTE _ERR	RC_UNEXP	RC_CRC
Reset	0 0		0	0	0	0	0	0
RSVD = Reserved								



RC_IERR = Detects initialization byte error in the received command frame. This may due to improper formatting of a byte such as a frame initialization byte is expected, but start-of-frame (SOF) bit is not set, or an invalid frame type is selected. Because bytes received on the COMH/COML are propagated up the stack, it is likely devices in the upper stack will also detect this error.

All bytes that follow are ignored until a SOF bit is set is received.

When a communication frame is ignored, the device will not attempt to detect any communication error in the ignored frame nor counting it as valid/discard in the frame counters.

0 = No error

1 = Error detected

RC_TXDIS = Valid when [DIR_SEL] = 1. Device detects the COMH TX is disabled but the device receives a command to read data (that is, to transmit data out). The command frame will be counted as a discard frame.

0 = No error

1 = Error detected

RC_SOF = Valid when [DIR_SEL] = 1. Detects a start-of-frame (SOF) error on COMH. The SOF bit is set only in the initialization frame but the SOF bit is set in the current frame that is not expected.

0 = No error

1 = Error detected

RC_BYTE_ERR = Valid when [DIR_SEL] = 1. Detected any byte error, other than the error in the initialization byte, in the received command frame. This error can trigger one or more error bit set in the DEBUG_COMMH_BIT register.

0 = No error

1 = Error detected

RC_UNEXP = If [DIR_SEL] = 0, but device receives command frame from COMH which is an invalid condition and device will set this error bit.

0 = No error

1 = Error detected

RC_CRC = Indicates a CRC error that resulted in one or more COMH command frames being discarded. Any other errors in the frame are not indicated as the frame was discarded.

0 = No error

1 = Error detected

9.5.4.14.9 DEBUG_COMH_RR_TR

Address	0x0785							
Read Only	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
Name	R	SVD	TR_WAIT	RR_TXDIS	RR_SOF	RR_BYTE _ERR	RR_UNEXP	RR_CRC
Reset	0	0	0	0	0	0	0	0

RSVD = Reserved

TR_WAIT = The device is waiting for its turn to transfer a response out but the action is terminated because the device receives a new command.

This bit is valid when broadcast or stack read command has been issued.

0 = No error

1 = Error detected

RR_TXDIS = Valid when [DIR_SEL] = 0, device receives a response but fails to transmit to the next device because the COMH TX is disabled. The frame is counted as a discarded frame.

0 = No error

1 = Error detected

RR_SOF = Valid when [DIR_SEL] = 0. Detects a start-of-frame (SOF) error on COMH. The SOF bit is set only in the initialization frame but the SOF bit is set in the current frame that is not expected.

0 = No error

1 = Error detected

RR_BYTE_ERR = Valid when [DIR_SEL] = 0. Detects any byte error, other than the error in the initialization byte, in the received response frame. This error can trigger one or more error bits set in the DEBUG_COMMH_BIT register.

0 = No error

1 = Error detected

RR_UNEXP = If [DIR_SEL] = 1, but device received response frame from COMH which is an invalid condition and device sets this error bit.

0 = No error

1 = Error detected



RR_CRC = Indicates a CRC error that resulted in one or more COMH response frames being discarded. Most other errors in the frame are not indicated as the frame was discarded. If [RR_BYTE_ERR] is observed on the final byte of the CRC, both CRC and BERR will be indicated.

0 = No error

1 = Error detected

9.5.4.14.10 DEBUG_COML_BIT

Address	0x0786							
Read Only	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
Name		RSVD		PERR	BERR_TAG	SYNC2	SYNC1	BIT
Reset	0	0	0	0	0	0	0	0
	RSVD =	Reserved		•				
		BERR. Any erro classified in the 0 = No commun	or bit that is set in register can also ication error det normality of the	n this register wo trigger the <i>[PE</i> ected, the forwa	tion frame and the ill also set the [PEIERR] bit (for examparded communication frame. B	RR] bit. However ble, detecting m ion frame does	er, abnormality tha issing data or wro not have the BEF	at isn't ong data order. RR inserted
В	ERR_TAG =	Set when the re 0 = Received co 1 = Received co	mmunication fra	ame has no BEf				
	SYNC2 =	The Preamble h from these bits I 0 = No error 1 = Error detect	out it is unable to		re detected. Devic ata.	e is using the ti	ming information	that is extracted
	SYNC1 =	Unable to detection distorted to 0 = No error		nalf-bit or any of	the [SYNC1:0] bits	s. It could be the	e bit is missing or	the signal is

1 = Error detected

BIT = The device has detected a data bit. However, the detection samples are not enough to assure a strong 1 or 0.

0 = No error

1 = Error detected

9.5.4.14.11 DEBUG_COML_RC

	_	_						
Address	0x0787							
Read Only	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
Name	RSVD		RC_IERR	RC_TXDIS	RC_SOF	RC_BYTE _ERR	RC_UNEXP	RC_CRC
Reset	0	0	0	0	0	0	0	0
	RSVD =	Reserved			1			
		selected. Becau upper stack will When a commu	use bytes receive also detect this unication frame is nor counting it as etected	ed on the COMH, error. All bytes th	COML are proparat follow are ignorice will not atter	agated up the sta ored until a SOF npt to detect any	set, or an invalid ack, it is likely de bit is received. communication	vices in the
	RC_TXDIS =	•	transmit data ou	ce detects the C t). The command			ce receives a con arded frame.	nmand to read
RC_SOF = Valid when [DIR_SEL] = 0. Detects a start-of-frame (SOF) error on COML. The SOF bit is set only in the initialization frame but the SOF bit is set in the current frame that is not expected.								in the

Submit Document Feedback

0 = No error 1 = Error detected

Copyright © 2022 Texas Instruments Incorporated

Instruments www.ti.com.cn

> RC_BYTE_ERR = Valid when [DIR_SEL] = 0. Detected any byte error, other than the error in the initialization byte, in the received command frame. This error can trigger one or more error bits set in the DEBUG_COMML_BIT register. 0 = No error 1 = Error detected RC UNEXP = If [DIR_SEL] = 1, but device received command frame from COML which is an invalid condition and device will set this error bit. 0 = No error 1 = Error detected RC CRC = Indicates a CRC error that resulted in one or more COML command frames being discarded. Any other errors in the frame are not indicated as the frame was discarded.

9.5.4.14.12 DERUG COMI RR TR

1 = Error detected

Address	0x0788							
Read Only	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
Name	RS	SVD	TR_WAIT	RR_TXDIS	RR_SOF	RR_BYTE _ERR	RR_UNEXP	RR_CRC
Reset	0	0	0	0	0	0	0	0
	RSVD =	Reserved				1		
	RR TXDIS =	0 = No error 1 = Error detec Valid when [DIII		ce receives a res	ponse but fails to	o transmit to the	next device beca	use the CON
	RR_TXDIS =	TX is disabled. 0 = No error	The frame is cou	ce receives a res unted as a discard		o transmit to the	next device beca	use the COM
		1 = Error detec						
	RR_SOF =	•	me but the SOF	ects a start-of-frar bit is set in the cu	'		OF bit is set only	in the
RR_I	BYTE_ERR =			ects any byte erro	r, other than the	error in the initia	alization byte, in th	ne receiv

response frame. This error can trigger one or more error bits set in the DEBUG_COMML_BIT register. 0 = No error

1 = Error detected

RR UNEXP = If [DIR_SEL] = 0, but device received a response frame from COML which is an invalid condition and device will set this error bit.

0 = No error

1 = Error detected

RR CRC = Indicates a CRC error that resulted in one or more COML response frames being discarded. Most other errors in the frame are not indicated as the frame was discarded. If [RR_BYTE_ERR] is observed on the final byte of the CRC, both CRC and BERR are indicated.

0 = No error

1 = Error detected

9.5.4.14.13 DEBUG_UART_DISCARD

Address	0x0789							
Read Only	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
Name				COU	NT[7:0]			
Reset	0	0	0	0	0	0	0	0

COUNT[7:0] = UART frame counter to track the number of discard frames received or transmitted. The registers of the DEBUG_UART_DISCARD and DEBUG_UART_VALID* are latched and the related counters are reset when this register is read.



9.5.4.14.14 DEBUG_COMH_DISCARD

Address	0x078A							
Read Only	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
Name				COU	NT[7:0]			
Reset	0	0	0	0	0	0	0	0

COUNT[7:0] = COMH frame counter to track the number of discard frames received or transmitted. The registers of the DEBUG_COMH_DISCARD and DEBUG_COMH_VALID* are latched and the related counters are reset when this register is read.

9.5.4.14.15 DEBUG_COML_DISCARD

Address	0x078B							
Read Only	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
Name				COU	NT[7:0]			
Reset	0	0	0	0	0	0	0	0

COUNT[7:0] = COML frame counter to track the number of discard frames received or transmitted. The registers of the DEBUG_COML_DISCARD and DEBUG_COML_VALID* are latched and the related counters are reset when this register is read.

9.5.4.14.16 DEBUG_UART_VALID_HI/LO

DEBUG_UART_VALID_HI

Address	0x078C							
Read Only	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
Name				COU	NT[7:0]			
Reset	0	0	0	0	0	0	0	0

COUNT[7:0] = The high-byte of UART frame counter to track the number of valid frames received or transmitted. Counter saturates when both DEBUG_UART_VALID_HI/LO is 0xFF. This register is latched and the related counter is reset when DEBUG_UART_DISCARD is read.

DEBUG_UART_VALID_LO

Address	0x078D							
Read Only	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
Name		COUNT[7:0]						
Reset	0	0	0	0	0	0	0	0

COUNT[7:0] = The low-byte of UART frame counter to track the number of valid frames received or transmitted. Counter saturates when both DEBUG_UART_VALID_HI/LO is 0xFF. This register is latched and the related counter is reset when DEBUG_UART_DISCARD is read.

9.5.4.14.17 DEBUG_COMH_VALID_HI/LO

DEBUG_COMH_VALID_HI

Address	0x078E							
Read Only	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
Name				COU	NT[7:0]			
Reset	0	0	0	0	0	0	0	0



COUNT[7:0] = The high-byte of COMH frame counter to track the number of valid frames received or transmitted. Counter saturates when both DEBUG_COMH_VALID_HI/LO is 0xFF. This register is latched and the related counter is reset when DEBUG_COMH_DISCARD is read.

DEBUG_COMH_VALID_LO

Address	0x078F							
Read Only	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
Name				COU	NT[7:0]			
Reset	0	0	0	0	0	0	0	0

COUNT[7:0] = The low-byte of COMH frame counter to track the number of valid frames received or transmitted. Counter saturates when both DEBUG_COMH_VALID_HI/LO is 0xFF. This register is latched and the related counter is reset when DEBUG_COMH_DISCARD is read.

9.5.4.14.18 DEBUG_COML_VALID_HI/LO

DEBUG_COML_VALID_HI

Address	0x0790							
Read Only	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
Name				COU	NT[7:0]			
Reset	0	0	0	0	0	0	0	0

COUNT[7:0] = The high-byte of COML frame counter to track the number of valid frames received or transmitted. Counter saturates when both DEBUG_COML_VALID_HI/LO is 0xFF. This register is latched and the related counter is reset when DEBUG_COML_DISCARD is read.

DEBUG_COML_VALID_LO

Address	0x0791							
Read Only	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
Name				COU	NT[7:0]			
Reset	0	0	0	0	0	0	0	0

COUNT[7:0] = The low-byte of COML frame counter to track the number of valid frames received or transmitted. Counter saturates when both DEBUG_COML_VALID_HI/LO is 0xFF. This register is latched and the related counter is reset when DEBUG_COML_DISCARD is read.

9.5.4.14.19 DEBUG_OTP_SEC_BLK

Address	0x07A0								
Read Only	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0	
Name	BLOCK[7:0]								
Reset	0	0	0	0	0	0	0	0	
i	BLOCK[7:0] = Holds last OTP block address where SEC occurred. Valid only when FAULT_OTP[SEC_DET] = 1.								

9.5.4.14.20 DEBUG_OTP_DED_BLK

Address	0x07A1								
Read Only	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0	
Name	BLOCK[7:0]								
Reset	0	0	0	0	0	0	0	0	
E	BLOCK[7:0] = Holds last OTP block address where DED occurred. Valid only when FAULT_OTP[DED_DET] = 1.								

Copyright © 2022 Texas Instruments Incorporated

Submit Document Feedback



9.5.4.15 OTP Programming Control and Status

9.5.4.15.1 OTP_PROG_UNLOCK1A through OTP_PROG_UNLOCK1D

Address	0x0300 to 0x0303							
RW	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
Name				COL	DE[7:0]	•		
Reset	0	0	0	0	0	0	0	0

CODE[7:0] = The first 32-bit OTP programming unlock code is required as part of the OTP programming unlock sequence before performing OTP programming. This 32-bit code is entered in the sequence from OTP_PROG_UNLOCK1A to OTP_PROG_UNLOCK1D. These registers always read back 0.

9.5.4.15.2 OTP_PROG_UNLOCK2A through OTP_PROG_UNLOCK2D

Address	0x0352 to 0x0355							
RW	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
Name				COL	DE[7:0]			
Reset	0	0	0	0	0	0	0	0

CODE[7:0] = The second 32-bit OTP programming unlock code, required as part of the OTP programming unlock sequence before performing OTP programming. This 32-bit code is entered in the sequence from OTP_PROG_UNLOCK2A to OTP_PROG_UNLOCK2D. These registers always read back 0.

9.5.4.15.3 OTP_PROG_CTRL

Address	0x030B							
RW	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
Name			PAGESEL	PROG_GO				
Reset	0	0	0	0	0	0	0	0

RSVD = Reserved

PAGESEL = Selects which customer OTP page to be programmed.

0 = page 1

1 = page 2

PROG_GO = Enables programming for the OTP page selected by OTP_PROG_CTRL[PAGESEL]. Requires

OTP PROG UNLOCK1* and OTP PROG UNLOCK2* registers are set to the correct codes.

0 = Ready

1 = Start OTP programming

9.5.4.15.4 OTP_ECC_TEST

Address	0x034C							
RW	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
Name		R	SVD		DED_SEC	MANUAL_ AUTO	ENC_DEC	ENABLE
Reset	0	0	0	0	0	0	0	0
	RSVD = Reserved							

DED_SEC = Sets the decoder function (SEC or DED) to test. This bit is ignored during encoder testing.

0 = Test SEC functionality. Sets the FAULT_OTP[SEC_DETECT] flag and outputs test result to

OTP_ECC_DATAOUT* registers.

1 = Test DED functionality. Sets the FAULT_OTP[DED_DETECT] flag and outputs test result

OTP_ECC_DATAOUT*.

Note: If SEC or DEC fault is detected, host sets [RST_OTP_DATA] = 1 to reset the corresponding fault. Switch to run SEC test does not clear DEC fault or vice versa.

MANUAL_AUTO = Sets the location of the data to use for the ECC test.

0 = Auto mode. Use the internal data for test.

1 = Manual mode. Uses data in *ECC_DATAIN_n* registers for test. Use for MPF test.

ENC_DEC = Sets the encoder/decoder test to run when OTP_ECC_TEST[ENABLE] = 1.

0 = Run decoder test

1 = Run encoder test

ENABLE = Executes the OTP ECC test configured by [ENC_DEC] and [DED_SEC] bits.

0 = Normal operation, ECC test disabled

1 = Initiate test

9.5.4.15.5 OTP_ECC_DATAIN1 through OTP_ECC_DATAIN9

Address	0x0343 to 0x034B							
RW	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
Name		•		DAT	A[7:0]			
Reset	0	0	0	0	0	0	0	0

DATA[7:0] = When ECC is enabled in manual mode, CUST_ECC_TEST[MANUAL_AUTO] = 1, OTP_ECC_DATAIN1 ···9 registers are used to test the ECC encoder/decoder.

If CUST_ECC_TEST[ENC_DEC] = 1, ECC_DATAIN8 through ECC_DATAIN1 are fed to the encoder. If CUST_ECC_TEST[ENC_DEC] = 0, ECC_DATAIN9 through ECC_DATAIN1 are fed to the decoder. The ECC_DATAOUT0···8 bytes must be read back to verify functionality.

9.5.4.15.6 OTP_ECC_DATAOUT1 through OTP_ECC_DATAOUT9

Address	0x0510 to 0x0518							
Read Only	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
Name	DATA[7:0]							
Reset	0	0	0	0	0	0	0	0

DATA[7:0] = OTP_ECC_DATAOUT* bytes output the results of the ECC decoder and encoder tests.

If CUST_ECC_TEST[ENC_DEC] = 0, ECC_DATAOUT8 through ECC_DATAOUT1 are read to determine a successful decoder test.

If CUST_ECC_TEST[ENC_DEC] = 1, ECC_DATAOUT9 through ECC_DATAOUT1 are read to determine a

If CUST_ECC_TEST[ENC_DEC] = 1, ECC_DATAOUT9 through ECC_DATAOUT1 are read to determ successful encoder test. The correct result depends on the input to the test.

9.5.4.15.7 OTP_PROG_STAT

Address	0x0519							
Read Only	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
Name	UNLOCK	OTERR	UVERR	OVERR	SUVERR	SOVERR	PROGERR	DONE
Reset	0	0	0	0	0	0	0	0
UNLOCK = Indicates the OTP programming function unlock status. After this bit is set (that is, OTP programming is enabled the host writes to the OTP_PROG_CTRL register to start the OTP programming. Writing to any other register relocks the OTP programming function and clears this bit to 0. [PROG_GO] = 1 also clears this bit to 0. 0 = OTP programming locked 1 = OTP programming is unlocked							ther register	
	OTERR =	Indicates the die temperature is greater than T _{OTP_PROG} and device does not start OTP programming. 0 = No fault 1 = Detected die temperature is greater than T _{OTP_PROG} . Abort OTP programming.						ning.
UVERR = Indicates an undervoltage error detected on the programming voltage during OTP programming. This bit is cleared with [PROG_GO] = 1. 0 = No error 1 = UV error detected						This bit is		
OVERR = Indicates an overvoltage error detected on the programming voltage during OTP programming. This bit is c with [PROG_GO] = 1. Information received from the device with this error must not be considered reliable. 0 = No error 1 = OV error detected								



SUVERR = A programming voltage stability test is performed before starting the actual OTP programming. This bit indicates an undervoltage error is detected during the voltage stability test. This bit is cleared with [PROG_GO] = 1.

0 = No error

1 = UV error detected during OTP programming voltage stability test

SOVERR = A programming voltage stability test is performed before starting the actual OTP programming. This bit indicates an overvoltage error is detected during the voltage stability test. This bit is cleared with [PROG_GO] = 1.

0 = No error

1 = OV error detected during OTP programming voltage stability test

PROGERR Indicates when an error is detected due to incorrect page setting caused by any of the following:

- = Trying to program but OTP programming [UNLOCK] = 0.
 - Trying to program a page that has [TRY] = 1.
 - Trying to program a page which has [FMTERR] = 1.

This bit is cleared with [PROG_GO] = 1.

0 = No error or programming not attempted

1 = Error detected

DONE = Indicates the status of the OTP programming for the selected page. This bit is cleared with [PROG_GO] = 1.

0 = Not completed or programming not attempted

1 = Complete.

9.5.4.15.8 OTP_CUST1_STAT

Address	0x051A							
Read Only	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
Name	LOADED	LOADWRN	LOADERR	FMTERR	PROGOK	UVOK	OVOK	TRY
Reset	0	0 0 0 0 0 0						
LOADED = Indicates OTP page 1 has been selected for loading into the related registers. See [LOADERR] and [LOADWR for error and warning status. 0 = Not selected for loading 1 = Page 1 selected and loaded								nd [LOADWRN]
		Indicates OTP p 0 = No warning, 1 = Warning			r more SEC war	nings.		
	LOADERR =	Indicates an erro 0 = No error, or 1 = Error detect	no load was atte		page 1; that is, D	ED is detected v	vhile loading the	selected page.
	FMTERR = Indicates a formatting error in OTP page 1; that is, when [UVOK] or [OVOK] is set, but [TRY] = 0. Do not progr if this bit is set. 0 = No error 1 = Error detected						Do not program	
	PROGOK =	Indicates the va 0 = Not valid 1 = Valid	lidity for loading	for OTP page 1.	A valid page ind	icates that succe	essful programm	ing occurred.
UVOK = Indicates an OTP programming voltage undervoltage condition is detected during programming attempt for C page 1. The OV condition may also trigger the UV as part of the shutdown process. 0 = UV condition detected. Also reads as 0 if no programming attempt is performed. 1 = No UV condition detected						ttempt for OTP		
OVOK = Indicates an OTP programming voltage overvoltage condition is detected during programming attempt for OT page 1. The OV condition will trigger the UV as part of the shutdown process. The device must be taken out service. 0 = OV condition detected. Also reads as 0 if no programming attempt is performed. 1 = No OV condition detected								
	TRY = Indicates a first programming attempt for OTP page 1. 0 = No first attempt made 1 = First attempt made							

9.5.4.15.9 OTP_CUST2_STAT

Address	0x051B							
Read Only	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0



www.ti.com.cn

Name	LOADED	LOADWRN	LOADERR	FMTERR	PROGOK	UVOK	OVOK	TRY
Reset	0	0	0	0	0	0	0	0
LOADED = Indicates OTP page 2 has been selected for loading into the related registers. See [LOADERR] and [LOADWR for error and warning status. 0 = Not selected for loading 1 = Page 2 selected and loaded								nd [LOADWRN]
		Indicates OTP p 0 = No warning, 1 = Warning			or more SEC war	nings.		
		Indicates an erro 0 = No error, or 1 = Error detected	no load was atte		page 2; that is, D	ED is detected v	vhile loading the	selected page.
FMTERR = Indicates a formatting error in OTP page 2; that is, when [UVOK] or [OVOK] is set, but [TRY] = 0. Do not pr if this bit is set. 0 = No error 1 = Error detected						Do not program		
	PROGOK =	Indicates the va 0 = Not valid 1 = Valid	lidity for loading	for OTP page 2.	A valid page ind	icates that succe	essful programmi	ng occurred.
UVOK = Indicates an OTP programming voltage undervoltage condition is detected during programming attempt for page 2. The OV condition may also trigger the UV as part of the shutdown process. 0 = UV condition detected. Also reads as 0 if no programming attempt is performed. 1 = No UV condition detected						tempt for OTP		
OVOK = Indicates an OTP programming voltage overvoltage condition is detected during programming attempt f page 2. The OV condition will trigger the UV as part of the shutdown process. The device must be taker service. 0 = OV condition detected. Also reads as 0 if no programming attempt is performed. 1 = No OV condition detected						'		
TRY = Indicates a first programming attempt for OTP page 2. 0 = No first attempt made 1 = First attempt made								



10 Application and Implementation

备注

以下应用部分中的信息不属于 TI 器件规格的范围, TI 不担保其准确性和完整性。TI 的客户应负责确定 器件是否适用于其应用。客户应验证并测试其设计,以确保系统功能。

10.1 Application Information

The BQ7961x-Q1 device family provides high-accuracy, cell voltages and temperature measurements for 6series to 16-series battery modules.

10.2 Typical Applications

10.2.1 Base Device Application Circuit

The following application circuit (see <a>8 10-1) is based on the BQ79616-Q1 device connecting to a 16S module.

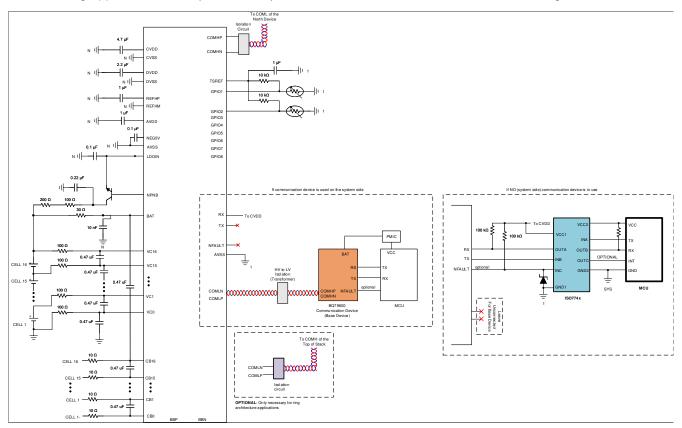


图 10-1. Typical Base Device with Measurement Application Circuit

10.2.1.1 Design Requirements

表 10-1 below shows the design parameters.

表 10-1. Recommended Design Requirements

• • • • • • • • • • • • • • • • • • • •	•
PARAMETER	VALUE
Module Voltage Range (Voltage at the BAT pin)	9V to 80V
Number of cells (single device)	6 to 16 cells (BQ79616-Q1), 6 to 14 cells (BQ79614-Q1), 6 to 12 cells (BQ79612-Q1)
Cell voltage range	0V to 5V




10.2.1.2 Detailed Design Procedure


10.2.1.2.1 Cell Sensing and Balancing Inputs

Related Pins	Components	Value	Description				
VC0 to VC16	Filter resistor	100 Ω	Only differential RC filters are needed for VC channels. Besides serving for				
	Filter capacitor 0.47 μ F/16 V during cell		nput signal filtering, these components are required to support hot-plug event during cell module insertion. Hence, it is highly recommended to use the component values as suggested.				
CB0 to CB16	Filter resistor	Depends on system's balancing current requirements	The filter resistor on CB pins sets the maximum balancing current. See † 9.3.3 for details. Only differential RC filters are needed for CB channels. Besides serving for input signal filtering, these components are required to				
	Filter capacitor	0.47 μ F/16 V or 1 μ F/16 V	support hot-plug events during cell module insertion. Hence, it is highly recommended to use the component values as suggested.				

Cell Connections




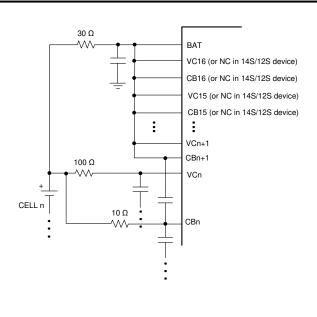

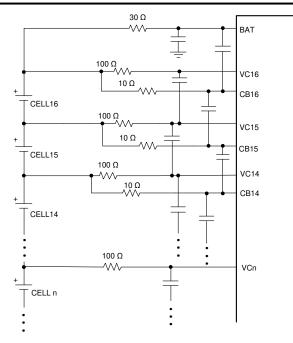


(a) Customized PCB for certain channels applications - Short unused pins to BAT Pin

(b) One PCB for all channels applications – For BQ79616: Configured for 16 VC and CB

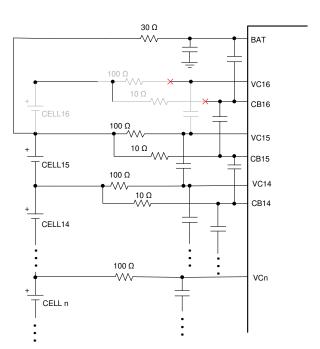

(c) One PCB for all channels applications – For BQ79616: Configured for 15 VC and CB If floating the unused VC and CB pins, capacitors in black corresponding to CB pins need to be populated, but capacitors and resistors in grey corresponding to VC and CB pins need to be unpopulated

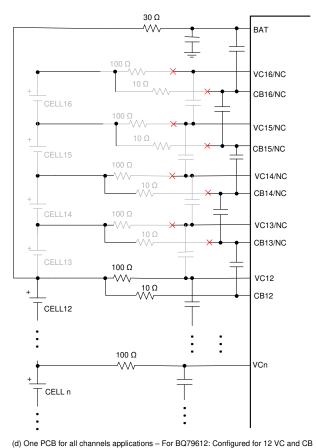

(a) One PCB for all charmers applications — For BQ79612: Conligured for 12 VC and CB if floating the unused VC and CB pins, capacitors in black corresponding to CB pins need to be populated, but capacitors and resistors in grey corresponding to VC and CB pins need to be unpopulated

图 10-2. Unused VC and CB Channels



10.2.1.2.2 BAT and External NPN

Related Pins	Components	Value	Description
BAT	Filter resistor	30 Ω	Single-ended RC filter, recommended values must be used for
	Filter capacitor	10 nF/100 V Can use lower voltage rating based on module size	hot-plug performance.
NPNB	NPN (Q1)	Collector - emitter breakdown voltage 80 V to 100 V, but can use lower rating based on module size Power rating ≥ 1 W Gain > 80 at the expected load current Current handling >100 mA	The external NPN is used to form a pre-regulation circuit to provide a 6-V (typical) input to the LDOIN pin. The voltage rating of the NPN can be optimized by the following equation: NPN voltage rating = Max VModule - Min VLDOIN + Margin Where: Max VModule = maximum module voltage with fully charged cells Min VLDOIN = the minimum spec of the VLDOIN parameter Margin = system transient voltage + design margin per application requirement
	Resistor on external NPN collector (R _{NPN})	Various based on module voltage	The resistor has a couple purposes: (a) For an RC filter for the NPN pre-regulation circuit (b) Share the thermal dissipation with the NPN
	Capacitor on external NPN collector	0.22 µ F/100 V Can use lower voltage rating based on module size	The capacitor forms the RC filter for the NPN pre-regulation circuit The capacitor rating is based on peak voltage spike seen on the module. For smaller module size, <100-V rated capacitor can be used. System designer selects the optimized voltage-rated capacitor per their system tolerance and requirements.

To reduce the power rating needed for the external NPN (Q1), system designer can put power resistors on the NPN collector to create IR drop from the module voltage (VModule).

10-3 shows the current paths to power the BQ7961x device.

Typical ISTARTUP current i.e. Inrush startup current when device enters from SHUTDOWN to ACTIVE is 20mA for TI recommended components. This current is sum of IBAT + ILDOIN, and is dependent on PCB board components and layout, so recommend user to characterize on their end.

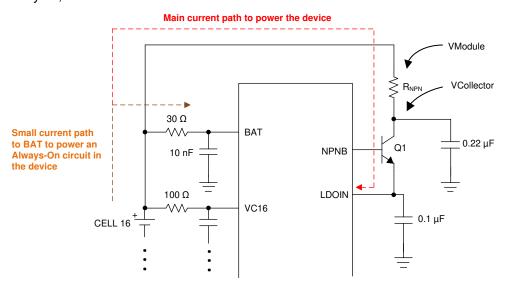


图 10-3. Power Consumption Paths

To ensure there is sufficient headroom to maintain 6 V (typical) regulated voltage on LDOIN pin, system designer ensures VCollector has \geq 8 V at any time with the assumption of about 2-V drop across the NPN.

Hence, maximum allowable R_{NPN} value = ((Min VModule) - (VCollector)) / (Max peak current)

Where:

Min VModule: based on module size and minimum cell voltage per application

VCollector: 8 V with the assumption of about 2-V drop across NPN

Max peak current: highest operation current, which is the active current with all functions turned on. Note that different communication isolation components (for example, capacitor isolation versus transformer, or the type of transformer) contribute different loading to the total power consumption.

Power the device separately from the to of the battery stack:

The device is designed to be powered by the battery stack. If there is a need to power the device from a separately source such as in 3 10-4, the following relationship between the voltage on the BAT pin and the highest VC pin voltage (with respected to ground): BAT voltage >= (0.5 * highest VC voltage) + 2

For example, if the device is connected to a 14S module with max cell voltage of 4.2V/cell, the highest VC pin is VC14, and the highest VC14 voltage is (4.2V * 14) = 58.8V. If the BAT pin is powered separately, BAT voltage must be >= 31.4V.

Similarly, if BBP/N channel is connected above the highest cell stack, the BBP pin will has the highest voltage (with respected to ground) than the VC pins. In this scenario, VBAT >= [(VBBP-2.5) * 0.84] + 4.5.The requirement applies when BAT is power separately and it is to ensure proper operation of the internal level shifter. Fail to maintain the voltage relationship will increase the ADC measurement error on the VC and BB channels.

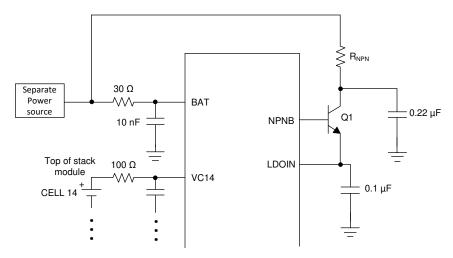


图 10-4. Separate Power Source to BAT

10.2.1.2.3 Power Supplies, Reference Input

Related Pins	Components	Value	Description
AVDD, TSREF	Bypass capacitor	1 μ F/10 V	Bypass capacitor for the internal LDOs
DVDD	Bypass Capacitor	2.2 μ F/10 V	Bypass capacitor for DVDD
CVDD	Bypass capacitor	4.7 μF/10 V	Bypass capacitor for CVDD
NEG5V	Bypass capacitor	0.1 μ F/10 V	Bypass capacitor for the negative charge pump

10.2.1.2.4 GPIO For Thermistor Inputs

When using external thermistor, for ADC measurement only, there is no limitation of what type of thermistors (NTC or PTC) or the bias resistor (R1) value or whether the thermistor is placed on high side or low side with respected to the bias resistor.

www.ti.com.cn

However, when using with the integrated OTUT comparators, the programmable OT and UT threshold ranges are designed to work with a 103NTC (10 k Ω at 25°C) type of NTC thermistor, following the connection shown in № 10-5 with different options for the R1 and R2 resistors.

- Option 1: $R_1 = 10 \text{ k}\Omega$, and no R_2
- Option 2: R_1 = 10 $k\Omega$, and R_2 = 100 $k\Omega$ for better linearity at cold temperature
- Option 3: R_1 = 3.6 k Ω , and R_2 = 15 k Ω . This base option can be used for NTC used for the OTCB feature assuming system designer allows the PCB temperature to be higher than the cell temperature during balancing. Because the device does not differentiate which NTC is used on the cells versus the PCB, NTC biasing with this option scales the NTC's hot temperature curve differently, allowing the threshold set for OT comparator to be triggered at a lower GPIO voltage. Thus, making the device to only trigger OTCB threshold on this NTC.

The device does not require external RC for temperature measurement. However, it is common for system designer to add an RC filter on the GPIO pin for the NTC circuit. System designer can select the RC values for the application need. Example: R_{GPIO} = 1 k Ω , C_{GPIO} = 0.1 μ F to 1 μ F.

Unused GPIO must be grounded to AVSS with a 10-k Ω resistor.

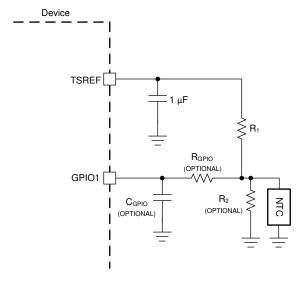


图 10-5. NTC Connection

10.2.1.2.5 Internal Balancing Current

When internal cell balancing is used, the max balancing current the device can support (before going into thermal pause) can vary based on the ambient temperature.

10.2.1.2.6 UART, NFAULT

If device is used as a base device, the UART interface requires the TX and RX pins are pulled up through a 10 $k\Omega$ to 100-k Ω resistor. Do not leave TX and RX unconnected. The TX must be pulled high to prevent triggering an invalid communications frame during the idle state. When using a serial cable to connect to the host controller, connect the TX pull-up on the host side and the RX pull-up to the CVDD on the device side.

If device is used as a stack device, the TX pin is disabled by default and is left floating. RX pin is shorted to CVDD.

NFAULT pin for base device, if not used, must be left floating. Otherwise, pull it up with 100-k Ω to CVDD. NFAULT pin on stack device is floating.


10.2.1.2.7 Daisy Chain Isolation

The device works with multiple daisy chain isolation types: capacitor isolation, capacitor-choke isolation, and transformer isolation. For devices that are daisy-chained on the same PCB, capacitor isolation without ESD diode as shown in $\[\]$ 10-6 is sufficient. Unused COMLP/H or COMHP/N pins must be connected with 1-k Ω termination resistor.

10.2.1.2.7.1 Devices Connected on the Same PCB

表 10-2. Isolation Components for Devices Connected on the Same PCB

Components	Value	Description (Capacitor Isolation on the Same PCB)
R _{TERM}	1 kΩ	Termination resistor
R _{SERIES}	49 Ω	Filter resistor and impedance matching resistor. The connection between devices must be ~120 Ω (~50 Ω on each end of the signal connection of the device plus 10- Ω internal resistance)
C _{BYPASS}	220 pF/50 V	Bypass capacitor
C _{ISO}	2.2 nF	Isolation capacitor Voltage rating depends on application requirement. It is common to select 2x of module voltage rating to provide standoff margin in the event of a fault in the system.

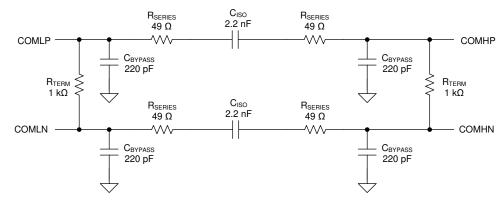

Components Required for Cap Coupled Daisy Chain on the same PCB

图 10-6. Capacitor Isolation with Devices on the Same PCB

10.2.1.2.7.2 Devices Connected on Different PCBs

For devices that are daisy-chained to different PCBs through a pair of twisted cables, all three isolation types can be used for daisy chain isolation, however it is not possible to use one type of isolation on one side of the daisy chain (for example, transformer isolation on COMLP/N to the Battery Management Unit) while using a different type of isolation for the other side of the daisy chain (for example, capacitor isolation on COMH/N to the Cell Module Unit).

Option 1: Capacitor Isolation

表 10-3. Components for Capacitor Isolation on Different PCBs

Components	Value	Description (Capacitor Isolation Between PCBs)
R _{TERM}	1 kΩ	Termination resistor
R _{SERIES}	49 Ω	Filter resistor and impedance matching resistor. The connection between devices must be ~120 Ω (~50 Ω on each end of the signal connection of the device plus 10- Ω internal resistance)
C _{BYPASS}	220 pF/50 V	Bypass capacitor
C _{ISO}	2.2 nF	Isolation capacitor Voltage rating depends on application requirement. It is common to select 2x of module voltage rating to provide standoff margin in the event of a fault in the system.

表 10-3. Components for Capacitor Isolation on Different PCBs (continued)

Components	Value	Description (Capacitor Isolation Between PCBs)
ESD diode	TVS diode	The ESD protector should provide protection to the communication interface pins during hot-plug events and also for absorption of high-voltage transients during service disconnect or reconnect. Select the ESD diodes to limit the maximum voltage on the COM* bus to below the maximum rating. A voltage rating close to the maximum voltage to provide the highest possible common-mode voltage range is recommended for best EMC performance. The capacitance must be low compared to the coupling capacitance (if using capacitor coupling).

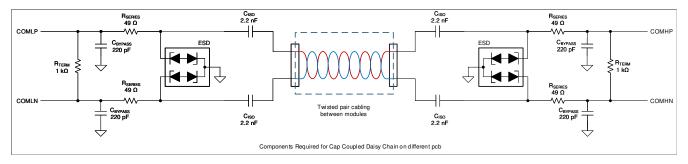


图 10-7. Capacitor Isolation on Different PCB

☑ 10-7 shows the capacitor isolation circuit for devices connecting between PCBs. Similar to the capacitor isolation on the same PCB case, the capacitor must be rated with a high enough voltage to provide standoff margin in the event of a fault in the system that exposes the device to a local hazardous voltage. The voltage is determined by the application requirement but it is common to select 2x of the module voltage.

The capacitance on the daisy chain bus has a direct effect on performance. All parasitic capacitances from the support components and cabling must be taken into consideration when designing for communication robustness to EMC. Capacitance from the cables, ESD diodes, bypass capacitance, and chokes form a capacitive divider with the isolation capacitors that may affect performance. Additionally, the amount of capacitance on the bus has a direct impact to the operating current during communication (the capacitor charging or discharging).

Option 2: Capacitor Plus Common-Mode Choke Isolation

表 10-4. Components for Capacitor Plus Common-Mode Choke Isolation

Components	Value	Description (Capacitor Plus Choke Isolation Between PCBs)						
R _{TERM}	1 kΩ	Termination resistor						
R _{SERIES}	49 Ω	Filter resistor and impedance matching resistor. The connection between devices must be ~120 Ω (~50 Ω on each end of the signal connection of the device plus 10- Ω internal resistance)						
C _{BYPASS}	220 pF/50 V	Bypass capacitor						
C _{ISO}	2.2 nF	Isolation capacitor Voltage rating depends on application requirement. It is common to select 2x of module voltage rating to provide a standoff margin in the event of a fault in the system.						
Common-mode choke	100 μH to 500 μH	Common-mode choke (The inductance range 100 μ H to 500 μ H is a general guidance value, not a guaranteed range as there are many parameters affecting the performance of common-mode choke. When coming to specific recommended part, please refer to SLVAEP4 <i>BQ79616-Q1 Daisy Chain Communications Application Report</i> . User shall perform the through test in their environment.)						
ESD diode (optional)	TVS diode	Optional ESD protection depends on pcb level ESD requirement (Adding this diode or not is subject to the user's system level ESD requirement)						



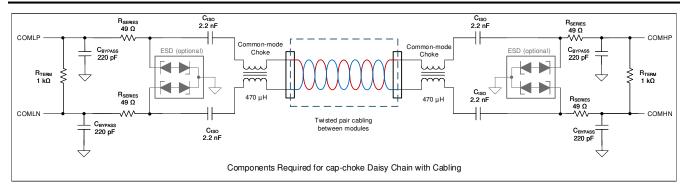


图 10-8. Capacitor Plus Choke Isolation

Longer cable lengths, or abnormally noisy applications may require the use of a common-mode choke filter. Capacitor plus choke isolation has better noise immunity than capacitor only. For these applications, use an automotive grade from 100 $\,\mu$ H to 500 $\,\mu$ H common-mode filter minimum for proper operation. To achieve the best performance in noisy environments, use dual common-mode filters (470 $\,\mu$ H). The recommended impedance of the choke is at least 1 k $\,\Omega$ from 1 MHz to 100 MHz and above 300 $\,\Omega$ for higher frequencies.

Option 3: Transformer Isolation

表 10-5. Components for Transformer Isolation

Components	Value	Description (Capacitor Plus Choke Isolation Between PCBs)
R _{TERM}	1 kΩ	Termination resistor
R _{SERIES}	49 Ω	Filter resistor and impedance matching resistor. The connection between devices must be ~120 Ω (~50 Ω on each end of the signal connection of the device plus 10- Ω internal resistance)
C _{BYPASS}	220 pF/50 V	Bypass capacitor
Transformer	Inductance: 150 µH to 1400 µH	The inductance range 150 μ H to 1400 μ H is a general guidance value, not a guaranteed range as there are many parameters affecting the performance of transformer. When coming to specific recommended part, please refer to SLVAEP4 BQ79616-Q1 Daisy Chain Communications Application Report. User shall perform the through test in their environment.
ESD diode (optional)	TVS diode	Optional ESD protection depends on pcb level ESD requirement (Adding this diode or not is subject to the user's system level ESD requirement)

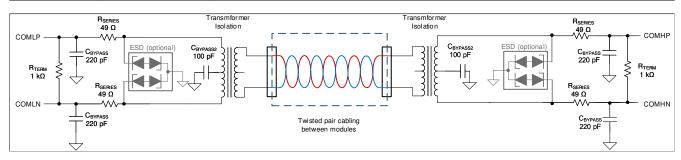


图 10-9. Transformer Isolation

Transformer isolation is supported and can be implemented as above. For example, transformer isolation can be used between the low-voltage and high-voltage boundary for galvanic isolation.

10.2.1.3 Application Curve

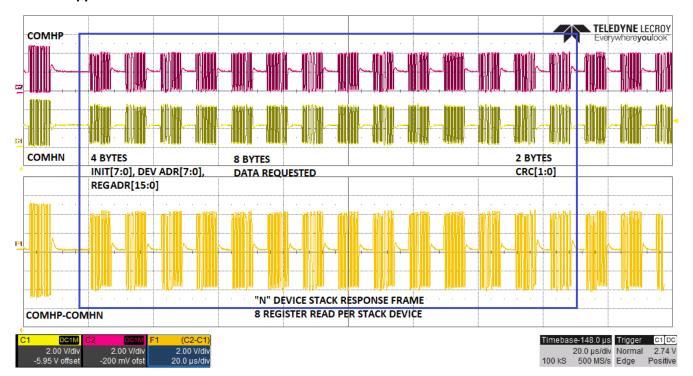


图 10-10. Response Frame for 8 Registers Read from Stack Devices

10.2.2 Daisy Device Application Circuit

The following application circuit (see 🗵 10-11) is based on the BQ79616-Q1 device connecting to a 16S module.



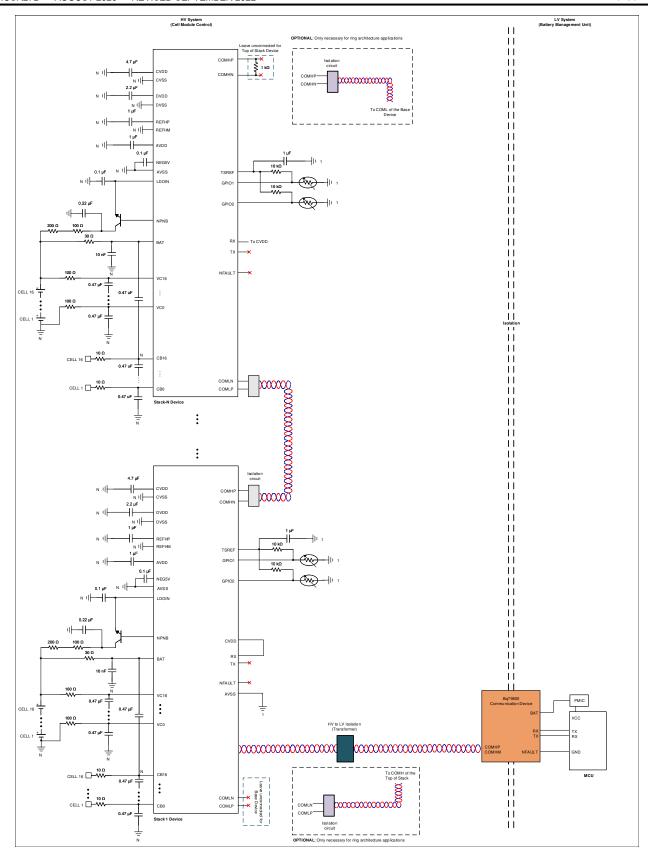


图 10-11. Daisy Device Application Circuit



10.2.2.1 Design Requirements

See 节 10.2.1.1 section for design requirements.

10.2.2.2 Detailed Design Procedure

See 节 10.2.1.2 section for detailed design procedure.



11 Power Supply Recommendations

The device is powered by BAT pin and the LDOIN pin, with which the LDOIN pin is regulated by the pregulation circuit form with an external NPN. The device can be powered by a battery module as low as 9 V (without OTP programming) on the BAT pin. However, system designer must scale the R_{NPN} resistor accordingly to ensure there is sufficient headroom to have 6 V on the LDOIN pin after the IR drop across R_{NPN} and the external NPN. Example, if BAT voltage is at 9 V, the R_{NPN} reduces to 10 Ω to allow sufficient voltage at the LDOIN pin.

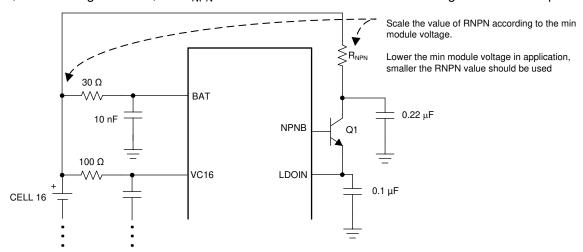


图 11-1. Device Powering Path

Multiple cell modules can be connected to the same device through the bus bar support of the BQ7961x-Q1 family. The same power will be drawn from each of the cell modules.

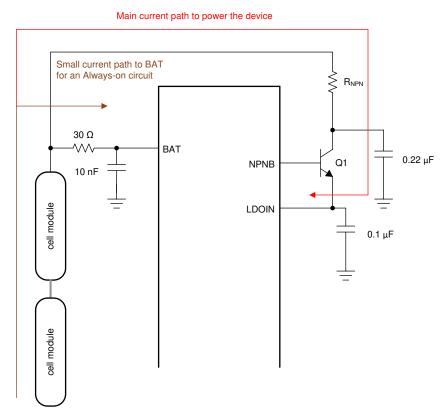


图 11-2. Device Can Be Powered by Multiple Cell Modules in Stack



12 Layout

The layout for this device must be designed carefully. Any design outside these guidelines can affect the ADC accuracy and EMI performance. Care must be taken in the layout of signals to and from the device to avoid coupling noise onto sensitive inputs. The layout of ground and power connections, as well as communication signals, should also be made carefully.

12.1 Layout Guidelines

12.1.1 Ground Planes

It is very important to establish a clean grounding scheme to ensure best performance of the device. There are three ground pins (AVSS, DVSS, CVSS) for the device's internal power supplies and one ground reference (REFHM) for the precision reference. There are noisy grounds and quiet grounds that must be separated in the layout initially and re-joined together in a lower PCB layer. The external components (for example, bypass capacitors) must be tied to the proper grounding group if possible to keep the separation of noisy and quiet grounds apart.

- · AVSS ground:
 - Bypass capacitor for these pins: BAT, VC0, CB0, and AVDD.
 - Package power pad.
- DVSS ground:
 - Bypass capacitor for DVDD.
 - GPIO filter capacitor (if used). It can also connect to AVSS ground plane, if needed.
- CVSS ground:
 - Bypass capacitor for GPIOs, CVDD, TSREF, NEG5V, LDOIN, COMHP/N, and COMLP/N.
- REFHM ground:
 - Bypass capacitor for REFHP.
 - If possible, separate out REFHM from AVSS on the signal connection layer and re-connect REFHM to AVSS ground plane in the lower layer.

Even on a PCB layer that is mainly for signal routing, it is good practice to pour have a small island of ground pour if possible to provide a low-impedance ground, rather than simply a via through the ground trace to an lower ground plane.



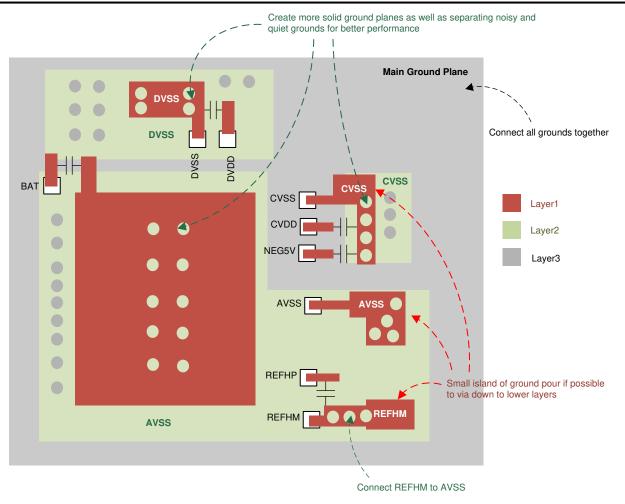


图 12-1. Grounding Layout Consideration

If multiple devices are placed on the same PCB, each device must have its own ground plane with proper layout clearance.

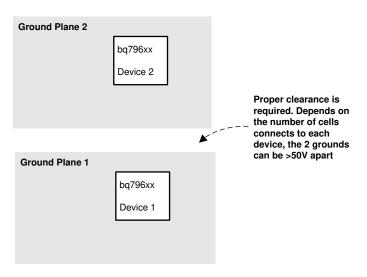


图 12-2. Separate Ground Planes Per Device on the Same PCB



12.1.2 Bypass Capacitors for Power Supplies and Reference

The bypass capacitors of the following pins must be placed as close to the device pins as possible to ensure proper performance, especially for the REFHP capacitor.

REFHP, BAT, LDOIN, AVDD, DVDD, CVDD, TSREF, and NEG5V

12.1.3 Cell Voltage Sensing

Cell voltage sensing traces (VC pins and CB pins) must be placed in parallel with impedance matching. The balancing traces (CB pins) must be sized properly to carry the maximum balancing current and proper thermal performance for the application.

It is recommended to use separate cables, connect tabs, and PCB traces for the BAT pin and top VC pin connections. Same applies to AVSS and VC0 connections. This avoids the device current impact on the top and bottom cell voltage measurements.

If the same cable and connector tab is used for BAT/top VC pins connection and AVSS/VC0 pins connection, the PCB trace going to BAT/top VC pins and AVSS/VC0 pins must be separated at the connector tabs. Note the device current will still go through the cell to the PCB cable, which may introduce IR errors across the cable connection to the top and bottom cell measurements.

12.1.4 Daisy Chain Communication

It is important to have proper layout on the COMHP/N and COMLP/N circuits in order to have the best robust daisy chain communication.

- Keep differential traces as short as possible and as straight as possible. Minimize turns and avoid any looping on the traces.
- Keep the differential traces on the same layers. Run the trace in parallel with shielding and matching trace impedance.
- Place the isolation components close to the connectors.
- When using capacitive isolation, place the high-voltage capacitor of the COMxP/N pair (where x = H or L) close to each other along the parallel traces.
- Create a keep-out area (no other traces and no ground plane) around the daisy chain components in all PCB layers.

Copyright © 2022 Texas Instruments Incorporated



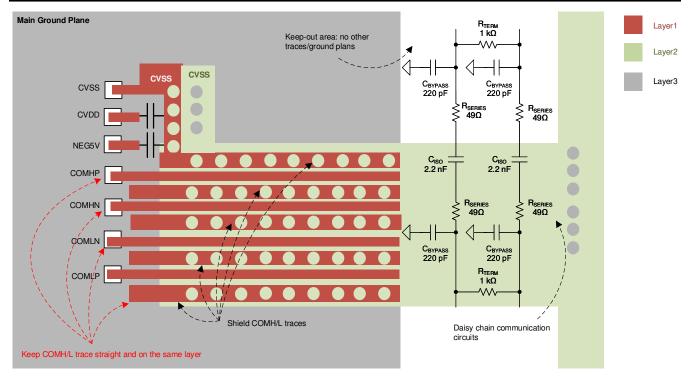


图 12-3. Daisy Chain Layout Consideration

12.2 Layout Example

This section presents the BQ79616-Q1 Evaluation Module (EVM) design as a layout example.



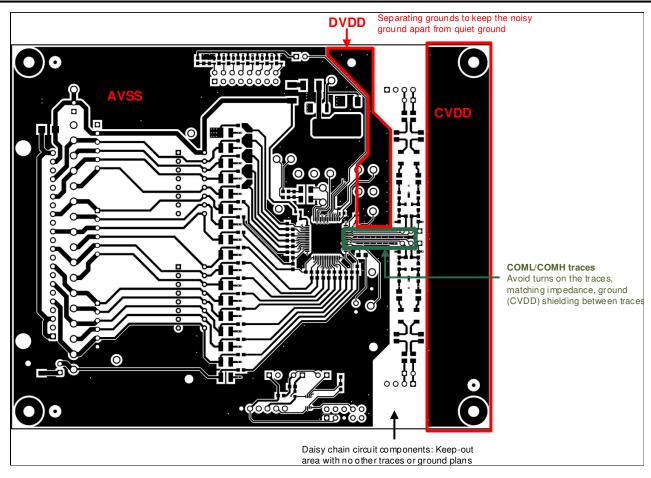


图 12-4. Top Signal Layer



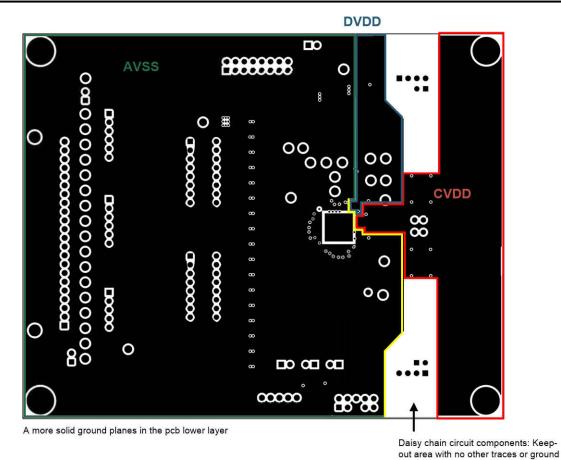


图 12-5. Second Layer with Solid, Separate Ground Planes



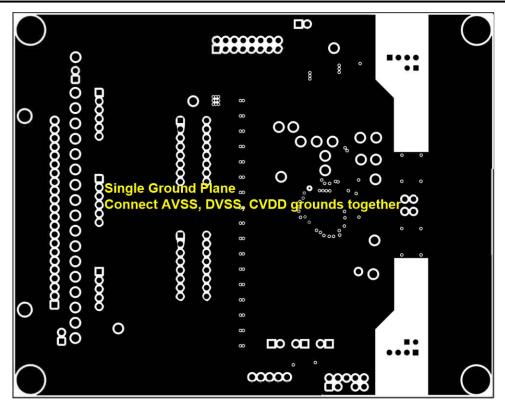


图 12-6. Third Layer with Single Ground Plane



13 Device and Documentation Support

13.1 Device Support

13.1.1 第三方产品免责声明

TI 发布的与第三方产品或服务有关的信息,不能构成与此类产品或服务或保修的适用性有关的认可,不能构成此 类产品或服务单独或与任何 TI 产品或服务一起的表示或认可。

13.2 接收文档更新通知

要接收文档更新通知,请导航至 ti.com 上的器件产品文件夹。点击*订阅更新* 进行注册,即可每周接收产品信息更 改摘要。有关更改的详细信息,请查看任何已修订文档中包含的修订历史记录。

13.3 支持资源

TI E2E™ 支持论坛是工程师的重要参考资料,可直接从专家获得快速、经过验证的解答和设计帮助。搜索现有解 答或提出自己的问题可获得所需的快速设计帮助。

链接的内容由各个贡献者"按原样"提供。这些内容并不构成 TI 技术规范,并且不一定反映 TI 的观点;请参阅 TI的《使用条款》。

13.4 Trademarks

TI E2E[™] is a trademark of Texas Instruments.

所有商标均为其各自所有者的财产。

13.5 Electrostatic Discharge Caution



This integrated circuit can be damaged by ESD. Texas Instruments recommends that all integrated circuits be handled with appropriate precautions. Failure to observe proper handling and installation procedures can cause damage.

ESD damage can range from subtle performance degradation to complete device failure. Precision integrated circuits may be more susceptible to damage because very small parametric changes could cause the device not to meet its published specifications.

13.6 术语表

TI 术语表 本术语表列出并解释了术语、首字母缩略词和定义。



14 Mechanical, Packaging, and Orderable Information

The following pages include mechanical, packaging, and orderable information. This information is the most current data available for the designated devices. This data is subject to change without notice and revision of this document. For browser-based versions of this data sheet, refer to the left-hand navigation.

Copyright © 2022 Texas Instruments Incorporated

Submit Document Feedback

www.ti.com 31-Oct-2025

PACKAGING INFORMATION

Orderable part number	Status	Material type	Package Pins	Package qty Carrier	RoHS	Lead finish/ Ball material	MSL rating/ Peak reflow	Op temp (°C)	Part marking (6)
	(.,	(=)			(0)	(4)	(5)		(0)
BQ79612PAPRQ1	Active	Production	HTQFP (PAP) 64	1000 LARGE T&R	Yes	NIPDAU	Level-3-260C-168 HR	-40 to 125	BQ79612
BQ79612PAPRQ1.A	Active	Production	HTQFP (PAP) 64	1000 LARGE T&R	Yes	NIPDAU	Level-3-260C-168 HR	-40 to 125	BQ79612
BQ79614PAPRQ1	Active	Production	HTQFP (PAP) 64	1000 LARGE T&R	Yes	NIPDAU	Level-3-260C-168 HR	-40 to 125	BQ79614
BQ79614PAPRQ1.A	Active	Production	HTQFP (PAP) 64	1000 LARGE T&R	Yes	NIPDAU	Level-3-260C-168 HR	-40 to 125	BQ79614
BQ79616PAPRQ1	Active	Production	HTQFP (PAP) 64	1000 LARGE T&R	Yes	NIPDAU	Level-3-260C-168 HR	-40 to 125	BQ79616
BQ79616PAPRQ1.A	Active	Production	HTQFP (PAP) 64	1000 LARGE T&R	Yes	NIPDAU	Level-3-260C-168 HR	-40 to 125	BQ79616

⁽¹⁾ Status: For more details on status, see our product life cycle.

Multiple part markings will be inside parentheses. Only one part marking contained in parentheses and separated by a "~" will appear on a part. If a line is indented then it is a continuation of the previous line and the two combined represent the entire part marking for that device.

Important Information and Disclaimer: The information provided on this page represents TI's knowledge and belief as of the date that it is provided. TI bases its knowledge and belief on information provided by third parties, and makes no representation or warranty as to the accuracy of such information. Efforts are underway to better integrate information from third parties. TI has taken and continues to take reasonable steps to provide representative and accurate information but may not have conducted destructive testing or chemical analysis on incoming materials and chemicals. TI and TI suppliers consider certain information to be proprietary, and thus CAS numbers and other limited information may not be available for release.

In no event shall TI's liability arising out of such information exceed the total purchase price of the TI part(s) at issue in this document sold by TI to Customer on an annual basis.

⁽²⁾ Material type: When designated, preproduction parts are prototypes/experimental devices, and are not yet approved or released for full production. Testing and final process, including without limitation quality assurance, reliability performance testing, and/or process qualification, may not yet be complete, and this item is subject to further changes or possible discontinuation. If available for ordering, purchases will be subject to an additional waiver at checkout, and are intended for early internal evaluation purposes only. These items are sold without warranties of any kind.

⁽³⁾ RoHS values: Yes, No, RoHS Exempt. See the TI RoHS Statement for additional information and value definition.

⁽⁴⁾ Lead finish/Ball material: Parts may have multiple material finish options. Finish options are separated by a vertical ruled line. Lead finish/Ball material values may wrap to two lines if the finish value exceeds the maximum column width.

⁽⁵⁾ MSL rating/Peak reflow: The moisture sensitivity level ratings and peak solder (reflow) temperatures. In the event that a part has multiple moisture sensitivity ratings, only the lowest level per JEDEC standards is shown. Refer to the shipping label for the actual reflow temperature that will be used to mount the part to the printed circuit board.

⁽⁶⁾ Part marking: There may be an additional marking, which relates to the logo, the lot trace code information, or the environmental category of the part.

PACKAGE OPTION ADDENDUM

www.ti.com 31-Oct-2025

OTHER QUALIFIED VERSIONS OF BQ79616-Q1:


NOTE: Qualified Version Definitions:


Catalog - TI's standard catalog product

PACKAGE MATERIALS INFORMATION

www.ti.com 28-Aug-2025


TAPE AND REEL INFORMATION

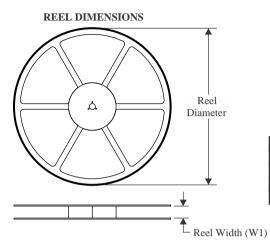

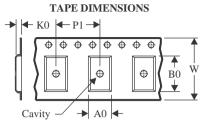

A0	Dimension designed to accommodate the component width					
В0	Dimension designed to accommodate the component length					
K0	Dimension designed to accommodate the component thickness					
W	Overall width of the carrier tape					
P1	Pitch between successive cavity centers					

QUADRANT ASSIGNMENTS FOR PIN 1 ORIENTATION IN TAPE

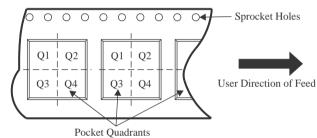


*All dimensions are nominal

Device	Package Type	Package Drawing		SPQ	Reel Diameter (mm)	Reel Width W1 (mm)	A0 (mm)	B0 (mm)	K0 (mm)	P1 (mm)	W (mm)	Pin1 Quadrant
BQ79616PAPRQ1	HTQFP	PAP	64	1000	330.0	24.4	13.0	13.0	1.5	16.0	24.0	Q2

PACKAGE MATERIALS INFORMATION

www.ti.com 28-Aug-2025

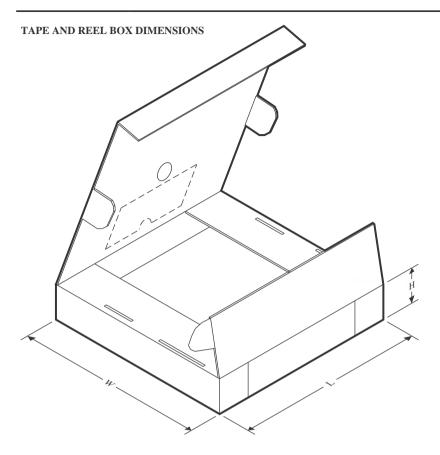


*All dimensions are nominal

Device	Package Type	Package Drawing	Pins	SPQ	Length (mm)	Width (mm)	Height (mm)
BQ79616PAPRQ1	HTQFP	PAP	64	1000	367.0	367.0	55.0


10 x 10, 0.5 mm pitch

QUAD FLATPACK

This image is a representation of the package family, actual package may vary. Refer to the product data sheet for package details.

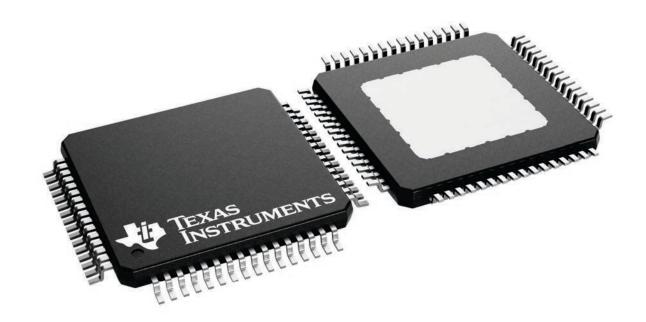

PLASTIC QUAD FLATPACK

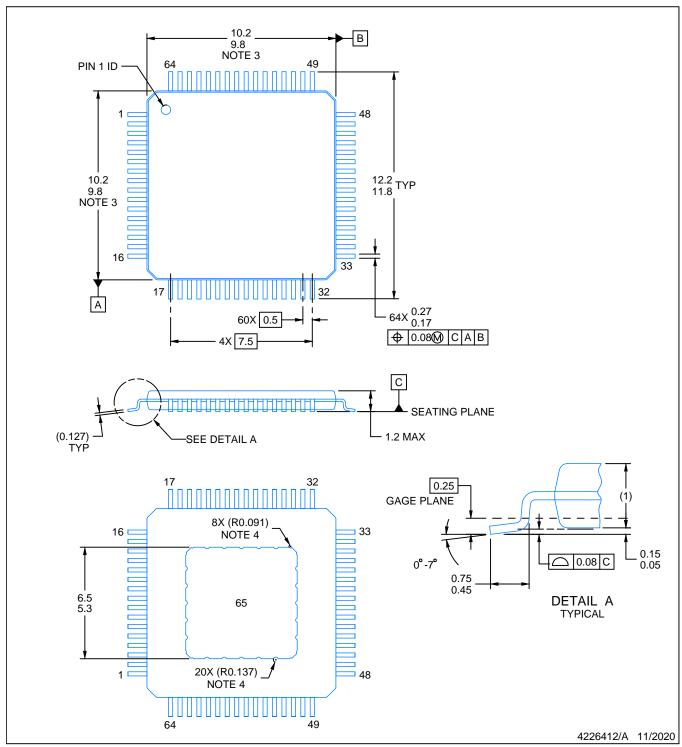


NOTES:

PowerPAD is a trademark of Texas Instruments.

- All linear dimensions are in millimeters. Any dimensions in parenthesis are for reference only. Dimensioning and tolerancing per ASME Y14.5M.
- 2. This drawing is subject to change without notice.
- 3. This dimension does not include mold flash, protrusions, or gate burrs.
- 4. Strap features may not be present.
- 5. Reference JEDEC registration MS-026.



PLASTIC QUAD FLATPACK

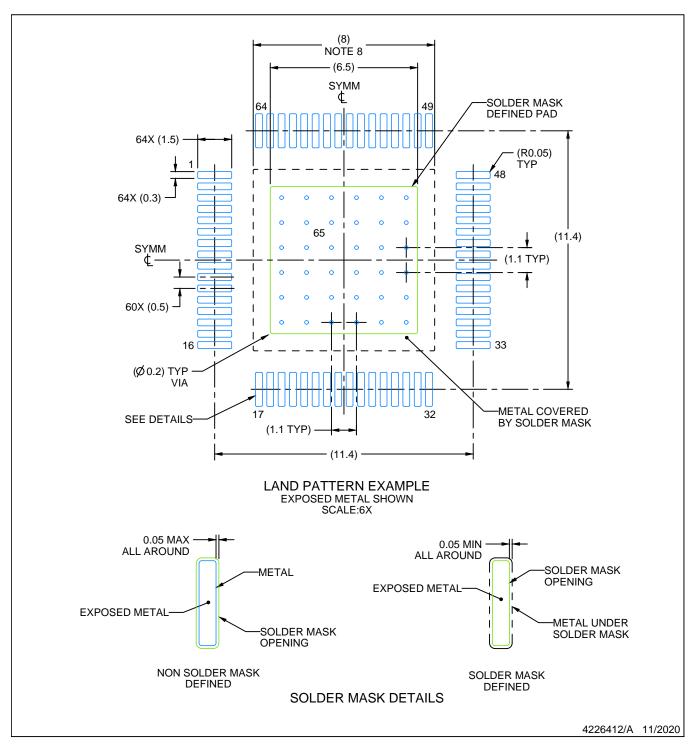


NOTES: (continued)

- 6. Publication IPC-7351 may have alternate designs.
- 7. Solder mask tolerances between and around signal pads can vary based on board fabrication site.
- 8. This package is designed to be soldered to a thermal pad on the board. See technical brief, Powerpad thermally enhanced package, Texas Instruments Literature No. SLMA002 (www.ti.com/lit/slma002) and SLMA004 (www.ti.com/lit/slma004).
- 9. Vias are optional depending on application, refer to device data sheet. It is recommended that vias under paste be filled, plugged or tented.
- 10. Size of metal pad may vary due to creepage requirement.



PLASTIC QUAD FLATPACK

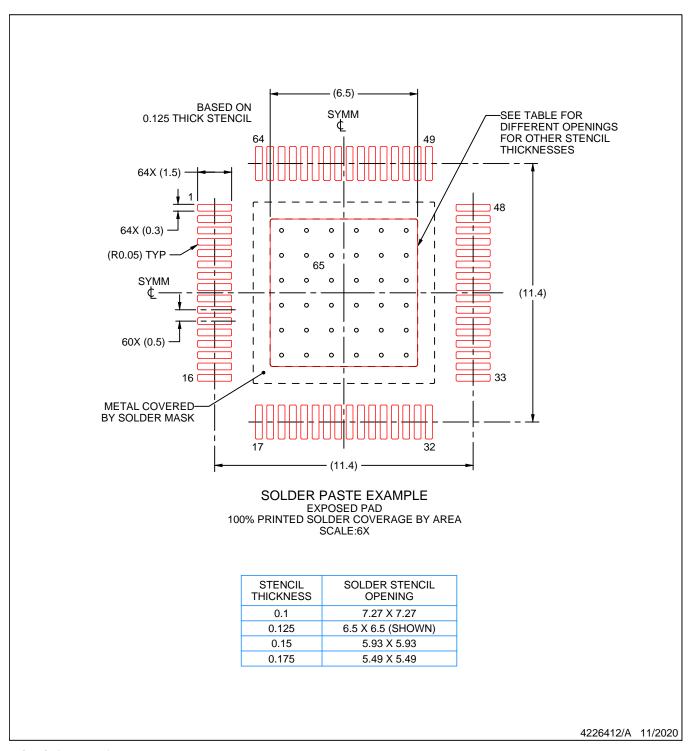

NOTES: (continued)

- 11. Laser cutting apertures with trapezoidal walls and rounded corners may offer better paste release. IPC-7525 may have alternate design recommendations.
- 12. Board assembly site may have different recommendations for stencil design.



重要通知和免责声明

TI"按原样"提供技术和可靠性数据(包括数据表)、设计资源(包括参考设计)、应用或其他设计建议、网络工具、安全信息和其他资源,不保证没有瑕疵且不做出任何明示或暗示的担保,包括但不限于对适销性、与某特定用途的适用性或不侵犯任何第三方知识产权的暗示担保。

这些资源可供使用 TI 产品进行设计的熟练开发人员使用。您将自行承担以下全部责任:(1) 针对您的应用选择合适的 TI 产品,(2) 设计、验证并测试您的应用,(3) 确保您的应用满足相应标准以及任何其他安全、安保法规或其他要求。

这些资源如有变更,恕不另行通知。TI 授权您仅可将这些资源用于研发本资源所述的 TI 产品的相关应用。严禁以其他方式对这些资源进行复制或展示。您无权使用任何其他 TI 知识产权或任何第三方知识产权。对于因您对这些资源的使用而对 TI 及其代表造成的任何索赔、损害、成本、损失和债务,您将全额赔偿,TI 对此概不负责。

TI 提供的产品受 TI 销售条款)、TI 通用质量指南 或 ti.com 上其他适用条款或 TI 产品随附的其他适用条款的约束。TI 提供这些资源并不会扩展或以其他方式更改 TI 针对 TI 产品发布的适用的担保或担保免责声明。 除非德州仪器 (TI) 明确将某产品指定为定制产品或客户特定产品,否则其产品均为按确定价格收入目录的标准通用器件。

TI 反对并拒绝您可能提出的任何其他或不同的条款。

版权所有 © 2025, 德州仪器 (TI) 公司

最后更新日期: 2025 年 10 月