TI Designs: TIDA-01486 超声波流量变送器参考设计

TEXAS INSTRUMENTS

说明

此参考设计 采用 超声波流量变送器,能够测量应用在 流程工业领域的大型管道中的水流。该参考设计可驱动 四个脉冲最高为 2MHz、±12V 的不同的压电传感器, 并且能够将其发出的超声波信号放大高达 50dB。


该参考设计利用 MSP430FR6047 微控制器 (MCU) 提 供了集成的超声波感应解决方案 (USS) 模块,不仅支持 基于 ADC 的高速信号采集,而且使用集成式低功耗加 速器 (LEA) 实现了优化数字信号处理,从而能够提供高 精度、超低功耗的计量解决方案。

资源

TIDA-01486 设计文件夹 产品文件夹 MSP430FR6047 THS3095 产品文件夹 产品文件夹 TS5A3357 产品文件夹 SN74LVC1G08



咨询我们的 E2E 专家

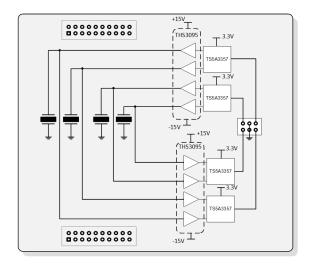


特性

- 能够驱动四个压电传感器(2MHz,最高 ±12V)
- 高达 50dB 增益
- 基于 ADC 的高速信号采集
- 高精度: 50ps ZFD
- 低功耗

应用范围

- 超声波流量变送器
- 水表
- 燃气表

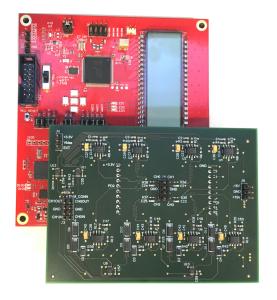



该 TI 参考设计末尾的重要声明表述了授权使用、知识产权问题和其他重要的免责声明和信息。



System Description www.ti.com.cn

1 System Description

2

1.1 Key System Specifications

表 1 lists the key system specifications.

表 1. Key System Specifications

PARAMETER	SPECIFICATIONS	DETAILS
Sensor type	Piezoelectric Transducer	
# of transducer pair	2	
Transducer driving voltage	Up to ±12V	
Zero Flow Drift	Approximately 50 ps	
Single shot STD deviation	Approximately 40 ps	
Total gain	50 dB	
Temperature Range	-40°C to 85°C	



2 System Overview

2.1 Block Diagram

1 shows the TIDA-01486 block diagram.

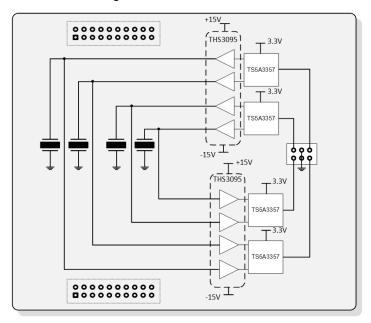


图 1. TIDA-01486 Block Diagram

2.2 Design Considerations

This reference design is in a BoosterPack™ plug-in module form factor which can be plugged into the MSP430FR6047 EVM. The board features a driving stage, a receiving stage, and a switching stage which add the following benefits to the MSP430FR6047 MCU:

- Additional pair of transducers
- Additional 20-dB gain
- Driving voltage up to ±12 V

The TIDA-01486 is enabled to control 2 pairs of transducers by driving and receiving them with four different high-speed op amps.

The following sections analyze the design considerations taken for the different stages.

2.2.1 Driving Stage

Each transducer can act as a transmitter and receiver. The transducers are driven one by one, pair by pair sequentially.

To drive each transducer an high speed, a low impedance driver able to provide up to ±12 V is required.

The THS3095 is a very good fit for this purpose due to its wide supply range from ± 5 V to ± 15 V combined with its wide bandwidth 210 MHz with a $100-\Omega$ load.

Another good feature of this device is the power shutdown feature that puts the amplifier in low-power standby mode, and lowers the quiescent current from 9.5 mA to $500 \mu\text{A}$.



Indeed, all the op amps will be on when transmitting and receiving. However, this happens only at regular intervals. The rest of the time, the whole AFE could be powered down or even turned off completely.

Four THS3095s were used in the TIDA-01486 to drive two transducer pairs.

2.2.2 Receiving Stage

It is important that the receiving and transmitting op amps are the same. Having different op amp chips in the two directions would mean there will be a differential time of flight delay, even in zero flow.

Additionaly, in this particular configuration the receiving op amp cannot be low voltage because it could be damaged when hit by the ±12-V transmitting signal since the receiving and transmitting stage share the same path (see 8 1).

This is why the THS3095 devices are selected for the receiving stage.

A non-inverting configuration stage was selected for the amplifier. The recommended resistor values table in *High-Voltage, Low-Distortion, Current-Feedback Operational Amplifiers* shows the recommended resistor values for optimum frequency response. In this case, a 20-dB gain is selected so 95.3 Ω and 866 Ω are used considering ±15-V supply voltage (see \mathbb{Z} 2).

At the receiving signal, a 750-mV bias voltage is needed to cover the full range of the MSP430FR6047 MCU. The bias voltage is generated by R8 and R7 (see
2). Putting a DC bias on the output of the RX op amp allows the use of a regular single-supply MUX. No negative supply is required.

The signal is clamped and after that is amplified to avoid damage to the switch and MSP430FR6047 MCU in case the signal is higher than what their input pins can withstand. For the signal clamping action, a Schottky diode (SD1) for the low-side clamping and three silicon diodes (D1, D2, and D3) for the high-side clamping are used (see 2).

A capacitor (C3) in series with the feedback resistor to ground allows removal of the DC bias voltage removed from the op amp gain equation (see <a>S 2).

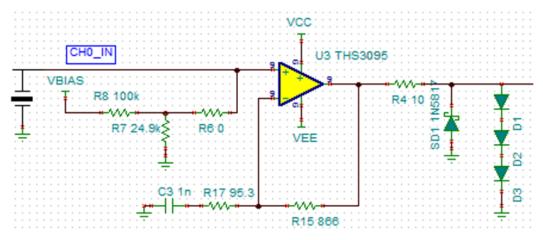


图 2. TIDA-01486 Receiving Stage

2.2.3 Switching Stage

For the receiver side and transmitting side, switches are needed to select the RX and TX path.



One of the main features of the switching stage is the low on-state resistance (R_{on}) because of the low impedance which characterizes the ultrasonic transducer. Consider a transmit frequency of 2 MHz and a typical transducer capacitor of 1 nF R << 1/2 mfC = 80 Ω to not influence the measurement.

The TS5A3357 device, a single 5- Ω analog switch, is selected for the switching stage.

The two pairs are driven as follows:

- Pair 1 upstream: EVM_CH0_OUT ⇒ CH0_T, CH1_R ⇒ EVM_CH1_IN
- Pair 1 downstream: EVM_CH1_OUT → CH1_T,CH0_R → EVM_CH0_IN

Pair 2 Upstream

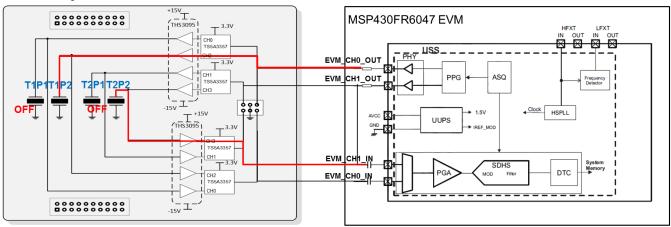


图 3. Pair 1 Upstream

Pair 1 Downstream

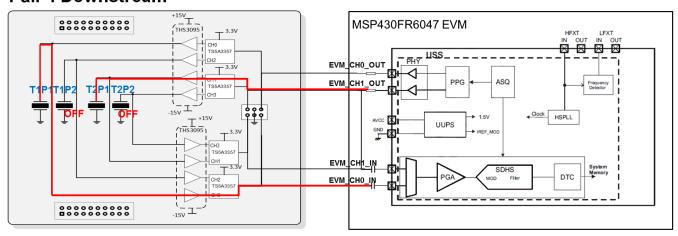


图 4. Pair 1 Downstream

- Pair 2 upstream: EVM_CH0_OUT ⇒ CH2_T, CH3_R ⇒ EVM_CH1_IN
- Pair 2 downstream: EVM_CH1_OUT ⇒ CH3_T, CH2_R ⇒ EVM_CH0_IN



Pair 1 Upstream

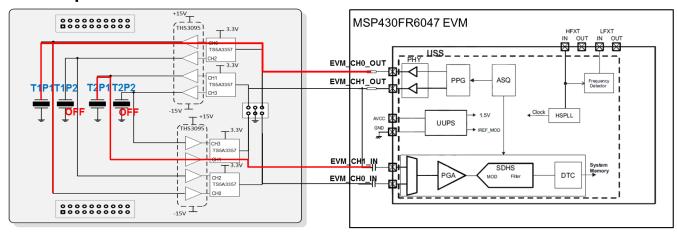


图 5. Pair 2 Upstream

Pair 2 Downstream

6

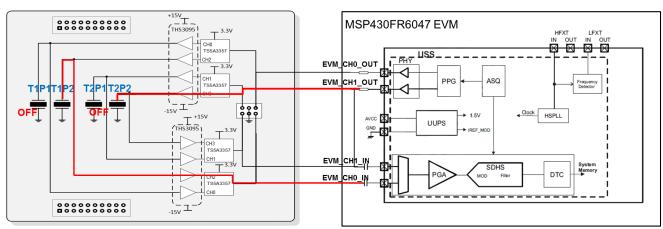


图 6. Pair 2 Downstream

表 2 is used to control the switch and the shutdown pin of the op amps. S1, S2, S3, S4, PD1, and PD2 are GPIOs from the MSP430FR6047 that control, respectively, the switches and the op amps (see 图 7).

表 2. Switching Stage Truth Table

	S1	S2	S3	S4	PD1	PD2
Pair 1	1	0	1	0	1	0
Pair 2	0	1	0	1	0	1



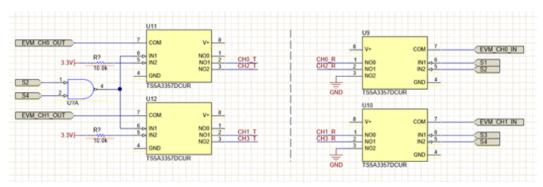


图 7. Switching Stage

2.2.4 Impedance Matching

Impedance matching is very important for this type of application. For impedance matching to work, everything from each transducer pin back into the board must look as much the same as possible.

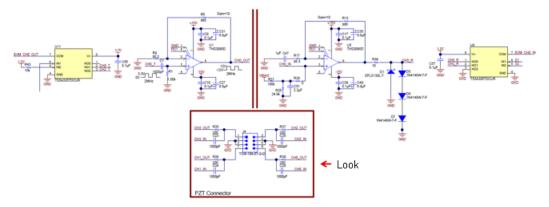


图 8. Transducer Pin View for Impedance Matching

Matching from the Point of View of the Transducer:

- Make your point of view the same as the transducer signal pin and look backwards into the board. The impedance should be the same when transmitting and receiving.
- For the TIDA-01486 when transmitting the output impedance of U1 via the 200- Ω resistor and the U5 input impedance and bias via the 1000-pF capacitor is seen.
- When receiving the output impedance of U1 via the 200- Ω resistor and the U5 input impedance and bias via the 1000-pF capacitor is seen
- The two points of view, when transmitting and receiving, are the same.

Are the impedances the same for TX and RX?:

- · Because active components are used, the impedance may change with the signal.
- The output impedance of U1 is 0.06 Ω (from the device data sheet).
- The input impedance of U5 may be slightly different when hitting it with a large square wave signal
 versus when using the small signal due to the RX signal. When it sees the large square wave, U5 goes
 into saturation because of the gain, even though the output is limited with diodes.
- Since U5 is used in the non-inverting configuration, the transducer only sees the 1.3-M Ω (from the



device data sheet) input impedance. If U5 were in the inverting configuration, the feedback resistors would come into play. The input impedance is also large compared to the biasing resistors.

Other Sources of Impedance Mismatch:

- Active component package variation regardless of signal input. The THS3095 device is a high-speed op amp, so chip-to-chip variations are very low.
- Passive component variation Use 1% resistors(especially for the 200 Ω), and 5% (X7R or better) capacitors.
- Board Layout Match trace lengths, use symmetry for channel paths. The narrower the TX and RX trace widths, the less the parasitic capacitive effects; however, inductance increases. Pour a GND fill on the power layer, so that all the signal traces see a GND plane under it.
- From each transducer pin, look back into the board and everything should look as much the same as possible. Impedance mismatch causes zero flow offset drift to vary greatly with temperature.
- Match the trace lengths of the paths from the MUXes to the MSP430FR6047 MCU header so that there are no fixed-delay differences from channel to channel requiring calibration.

2.3 Highlighted Products

2.3.1 MSP430FR6047

Description

8


TI's MSP430FR604x and MSP430FR603x family of ultrasonic sensing and measurement SoCs are powerful, highly-integrated MCUs that are optimized for water and heat meters. The MSP430FR604x MCUs offer an integrated USS module, which provides high accuracy for a wide range of flow rates. The USS module helps achieve ultra-low-power metering combined with lower system cost due to the maximum integration requiring very few external components. MSP430FR604x and MSP430FR603x MCUs implement a high-speed ADC-based signal acquisition followed by optimized digital signal processing using the integrated LEA module to deliver a high-accuracy metering solution with ultra-low power, optimum for battery-powered metering applications.

The USS module includes a programmable pulse generator (PPG) and a physical interface (PHY) with a low-impedance output driver for optimum sensor excitation and accurate impendence matching to deliver best results for zero-flow drift (ZFD). The module also includes a programmable gain amplifier (PGA) and a high-speed 12-bit 8-Msps sigma-delta ADC (SDHS) for accurate signal acquisition from industry-standard ultrasonic transducers. Additionally, MSP430FR604x and MSP430FR603x MCUs integrate other peripherals to improve system integration for metering. The devices have a metering test interface (MTIF) module to implement pulse generation to indicate flow measured by the meter. The MSP430FR604x and MSP430FR603x MCUs also have an on-chip 8-MUX LCD driver, an RTC, a 12-bit SAR ADC, an analog comparator, an advanced encryption accelerator (AES256), and a cyclic redundancy check (CRC) module. MSP430FR604x and MSP430FR603x MCUs are supported by an extensive hardware and software ecosystem with reference designs and code examples to quickly start a design. Development kits include the MSP-TS430PZ100E 100-pin target development board and EVM430-FR6047 ultrasonic water flow meter EVM. TI also provides free software including the ultrasonic sensing design center, ultrasonic



sensing software library, and MSP430Ware software. TI's MSP430 ultra-low-power (ULP) FRAM microcontroller platform combines uniquely embedded FRAM and a holistic ultra-low-power system architecture, letting system designers increase performance while lowering energy consumption. FRAM technology combines the low-energy fast writes, flexibility, and endurance of RAM with the nonvolatility of flash.

S 9 shows the MSP430FR6047 functional block diagram.

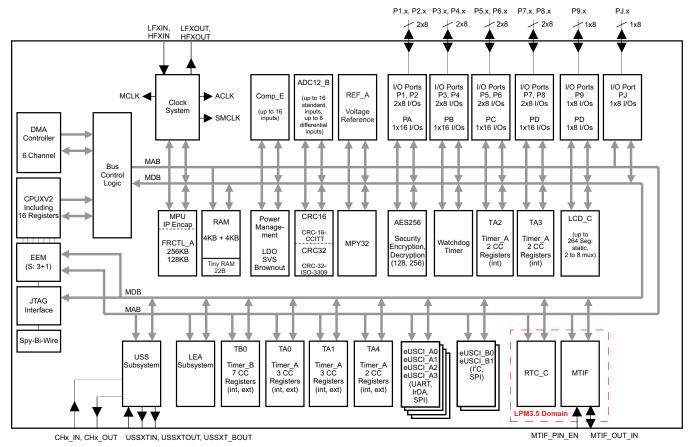

Copyright © 2017, Texas Instruments Incorporated

图 9. MSP430FR6047 Functional Block Diagram

Features

- < 25-ps Differential Time-of-Flight (dTOF) Accuracy
- High-Precision Time Measurement Resolution of < 5 ps
- Ability to Detect Low Flow Rates (< 1 Liter per Hour)
- Approximately 3-µA Overall Current Consumption With One Measurement per Second
- Compliant to and Exceeds ISO 4064, OIML R49, and EN 1434 Accuracy Standards
- Ability to Directly Interface Standard Ultrasonic Sensors (up to 2.5 MHz)
- Integrated Analog Front End (AFE) Ultrasonic Sensing Solution (USS)
 - Programmable Pulse Generation (PPG) to Generate Pulses at Different Frequencies
 - Integrated Physical Interface (PHY) With Low-Impedance (4-Ω) Output Driver to Control Input and Output Channels

ZHCU492-May 2018 超声波流量变送器参考设计 9



- High-Performance High-Speed 12-Bit Sigma-Delta ADC (SDHS) With Output Data Rates up to 8 Msps
- Programmable Gain Amplifier (PGA) With –6.5 dB to 30.8 dB
- High-Performance Phase-Locked Loop (PLL) With Output Range of 68 MHz to 80 MHz
- Metering Test Interface (MTIF)
 - Pulse Generator and Pulse Counter
 - Count Capacity up to 65535 (16 Bit)
 - Operates in LPM3.5 With 200 nA (Typical)
- Low-Energy Accelerator (LEA)
 - Operation Independent of central processing unit (CPU)
 - 4KB of RAM Shared With CPU
 - Efficient 256-Point Complex FFT:
 Up to 40 x Faster Than Arm® Cortex®-M0+ Core
- Embedded Microcontroller
 - 16-Bit RISC Architecture up to 16-MHz Clock
 - Wide Supply Voltage Range:
 2 V to 3.6 V (1)
- · Optimized Ultra-Low-Power Modes
 - Active Mode: Approximately 120 μA/MHz
 - Standby Mode With Real-Time Clock (RTC) (LPM3.5): 450 nA
 - Shutdown (LPM4.5): 30 nA
- Ferroelectric Random Access Memory (FRAM)
 - Up to 256KB of Nonvolatile Memory
 - Ultra-Low-Power Writes
 - Fast Write at 125 ns Per Word (64KB in 4 ms)
 - Unified Memory = Program + Data + Storage in One Space
 - 10¹⁵ Write Cycle Endurance
 - Radiation Resistant and Nonmagnetic
- · Intelligent Digital Peripherals
 - 32-Bit Hardware Multiplier (MPY)
 - 6-Channel Internal DMA
 - RTC With Calendar and Alarm Functions
 - Six 16-Bit Timers With up to Seven Capture or Compare Registers Each
 - 32-Bit and 16-Bit Cyclic Redundancy Check (CRC)
- High-Performance Analog
 - 16-Channel Analog Comparator
 - 12-Bit SAR ADC Featuring Window Comparator, Internal Reference, and Sample-and-Hold, up to

⁽¹⁾ Minimum supply voltage is restricted by SVS levels.

⁽²⁾ The RTC is clocked by a 3.7-pF crystal.



- 16 External Input Channels
- Integrated LCD Driver With Contrast Control for up to 264 Segments
- Multifunction Input/Output Ports
 - All Pins Support Capacitive-Touch Capability With No Need for External Components
 - Accessible Bit-, Byte-, and Word-Wise (in Pairs)
 - Edge-Selectable Wake From LPM on All Ports
 - Programmable Pullup and Pulldown on All Ports
- Code Security
 - Random Number Seed for Random Number Generation Algorithms
 - IP Encapsulation Protects Memory From External Access
 - FRAM Provides Inherent Security Advantages
- Enhanced Serial Communication
 - Up to Four eUSCI_A Serial Communication Ports
 - UART With Automatic Baud-Rate Detection
 - IrDA Encode and Decode
 - Up to Two eUSCI B Serial Communication Ports
 - I²C With Multiple-Slave Addressing
 - Hardware UART or I²C Bootloader (BSL)
- Flexible Clock System
 - Fixed-Frequency DCO With 10 Selectable Factory-Trimmed Frequencies
 - Low-Power Low-Frequency Internal Clock Source (VLO)
 - 32-kHz Crystals (LFXT)
 - High-Frequency Crystals (HFXT)
- Development Tools and Software (see the tools and software section of the MSP430FR604x(1), MSP430FR603x(1) Ultrasonic Sensing MSP430™ Microcontrollers for Water-Metering Applications Data Sheet)
 - Ultrasonic Sensing Design Center Graphical User Interface
 - Ultrasonic Sensing Software Library
 - EVM430-FR6047 Water Meter Evaluation Module Board
 - MSP-TS430PZ100E Target Socket Board for 100-Pin Package
 - Free Professional Development Environments With EnergyTrace++ Technology
 - MSP430Ware[™] for MSP[™] Microcontrollers
- The device comparison section of the MSP430FR604x(1), MSP430FR603x(1) Ultrasonic Sensing MSP430[™] Microcontrollers for Water-Metering Applications Data Sheet Summarizes the Available Device Variants and Package Options
- For Complete Module Descriptions, see the MSP430FR58xx, MSP430FR59xx, and MSP430FR6xx Family User's Guide



2.3.2 THS3095

Description

The THS3091 and THS3095 devices are high-voltage, low-distortion, high-speed, current-feedback amplifiers designed to operate over a wide supply range of ±5 V to ±15 V for applications requiring large, linear output signals such as pin, power FET, and VDSL line drivers.

The THS3095 device features a power-down pin (\overline{PD}) that puts the amplifier in low-power standby mode, and lowers the quiescent current from 9.5 mA to 500 μ A.

The wide supply range combined with total harmonic distortion as low as -69 dBc at 10 MHz, in addition to the high slew rate of $7300 \text{ V/}\mu\text{s}$ makes the THS309x ideally suited for high-voltage arbitrary waveform driver applications. Moreover, having the ability to handle large voltage swings driving into high-resistance and high-capacitance loads while maintaining good settling time performance makes the devices ideal for pin driver and power FET driver applications.

The THS3091 and THS3095 devices are offered in an 8-pin SOIC (D), and the 8-pin SOIC (DDA) packages with the PowerPAD™ integrated circuit package.

Features

- Low Distortion
 - 77-dBc HD2 at 10 MHz, $R_1 = 1 \text{ k}\Omega$
 - 69-dBc HD3 at 10 MHz, $R_L = 1 \text{ k}\Omega$
- Low Noise
 - 14-pA/√Hz Noninverting Current Noise
 - 17-pA/√Hz Inverting Current Noise
 - 2-nV/√Hz Voltage Noise
- High Slew Rate: 7300 V/μs (G = 5, V_O = 20 V_{PP})
- Wide Bandwidth: 210 MHz (G = 2, R_L = 100 Ω)
- High Output Current Drive: ±250 mA
- Wide Supply Range: ±5 V to ±15 V
- Power-Down Feature: THS3095 Only



2.3.3 TS5A3357

Description

The TS5A3357 device is a high-performance, single-pole triple throw (SP3T) analog switch that is designed to operate from 1.65 V to 5.5 V. The device offers a low on-state resistance and low input/output capacitance and thus, causes a very low signal distortion. The break-before-make feature allows transferring of a signal from one port to another, with a minimal signal distortion. This device also offers a low charge injection which makes this device suitable for high-performance audio and data acquisition systems.

Features

- Specified Break-Before-Make Switching
- Low On-State Resistance
- High Bandwidth
- Control Inputs Are 5.5-V Tolerant
- Low Charge Injection
- Excellent On-State Resistance Matching
- Low Total Harmonic Distortion (THD)
- 1.65-V to 5.5-V Single-Supply Operation
- Latch-Up Performance Exceeds 100 mA per JESD78, Class II
- ESD Performance Tested per JESD22
 - 2000-V Human-Body Model (A114-B, Class II)
 - 1000-V Charged-Device Model (C101)

2.4 System Design Theory

Ultrasonic sensing uses the time of flight (TOF) of an ultrasonic wave and its dependency on the flow rate of the medium to measure and calculate volume flow, using the difference in the propagation time of the ultrasonic wave when transmitted into and against the direction of the flow. This technology is outstanding at measuring volume flow rates across a wide range and works with fluids like water and oil as well as gases like air and methane. TOF-based ultrasonic meters measure flow rates based on the difference in propagation time of ultrasonic signals in the upstream and downstream directions. The ultrasound wave travels faster when traveling in the direction of the flow and slower when against the flow. This technology works whether the transducer pairs are located inside of a pipe or clamped to the outside of a pipe. This approach does require a direct path between the two transducers, requiring careful mechanical construction of the flow tube where the transducers are housed. The technology does not work in the presence of air bubbles, which lead to significant attenuation of the ultrasound signal. Because the propagation velocity of an ultrasound wave varies between a single fluid or a composition of multiple fluids in a mixture, TOF-based ultrasonic technology can also be used for material composition analysis.



2.4.1 Ultrasonic Flow Meter Configurations

TOF-based ultrasonic flow meters have two types of construction: in-line or clamp-on. In-line meters are intrusive flow meters where transducers are installed inside the flow tubes and make contact with the liquid; clamp-on flow meters are non-intrusive by installing the transducers on the surface of the pipe and sense the sound wave traveling through the pipe. 10 shows in-line flow meters can be diagonal and give the transducers a direct line of sight.

It shows a reflective in-line meter where the sound wave from a transmitting transducer reaches a second transducer only after reflection from a material on the surface of the pipe.

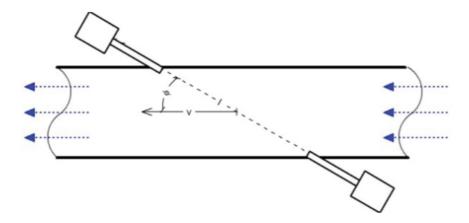


图 10. In-Line and Diagonal Transducer Placement

12 shows how some industrial flow meters with large diameter flow tubes use two pairs of transducers for improved performance, accommodating the larger attenuation that will occur with larger pipe diameters.

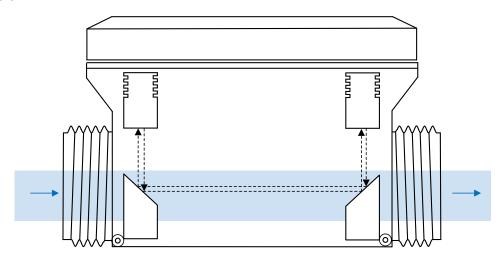


图 11. In-Line and Reflective Transducer Placement



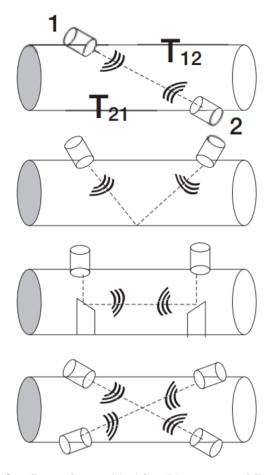


图 12. Various Configurations of In-Line Placement of Transducer Pairs

Is shows a clamp-on transducer placement that encounters additional signal attenuation because the ultrasonic wave needs to traverse through the pipe material. One of the key challenges associated with ultrasonic flow meters is maintaining accuracy over a wide range of flow rates, from a few liters per hour (lph) to tens of thousands of lph. Another challenge is maintaining flow-rate accuracy over fluid temperatures that can range from 0°C to 85°C, depending on the application. Because the velocity of an ultrasonic wave in fluid varies with the temperature of the fluid, the difference in propagation time to take flow-rate measurements will introduce errors when the fluid temperature changes.

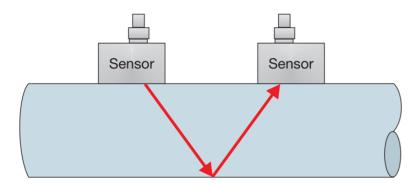


图 13. Clamp-On Transducer Placement



It is possible, however, to construct an alternate approach that takes measurements independent of temperature. This method entails obtaining the volume flow rate of a fluid using the absolute time of upstream and downstream propagation or TOF, in addition to the difference of the propagation.

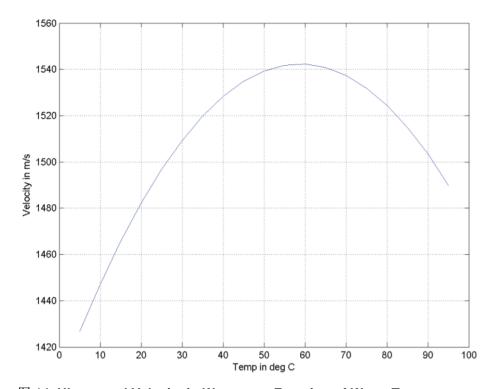


图 14. Ultrasound Velocity in Water as a Function of Water Temperature

2.4.2 Analog-to-Digital Converter (ADC)-Based Processing Advantages

Several different approaches can be used to obtain the difference in the upstream and downstream TOF. In the TIDA-01486 design, the approach that correlates the signal obtained after ADC to the signal received at the transducer is used. In the correlation-based ADC technique, the whole waveform is captured and stored for the signal received at the transducer for both the upstream and downstream measurements. Performing post-processing on the waveform determines the differential TOF.

The ADC-based approach has these inherent advantages:

- Performance The correlation also provides low-pass filtering to suppress noise. This is implemented
 efficiently on the low-energy accelerator in TI's MSP430FR6047 MCU. The correlation approach
 results in a benefit of approximately 3–4 × noise lower standard deviation. The correlation filter also
 suppresses interference like line noise.
- Robustness to signal-amplitude variations The algorithm based on the correlation technique, is
 insensitive to the received signal amplitude, transducer-to-transducer variation and temperature
 variation. Signal amplitude variation is observed frequently in high flow rates. Robustness is a
 significant advantage when transducer performance degrades over time, since some applications
 deploy flow meters for more than 10 years.



ADC-based processing obtains the signal envelope naturally – The availability of the signal amplitude information enables tuning to the transducer frequencies. Also, you can use slow variations in the envelope across time to detect transducer aging. The ADC-based approach is also amenable to automatic gain control (AGC), which can boost the received signal if the transducer gain reduces over time (again, due to aging). As the correlation-based algorithm receives the amplified signal that maintains the output signal level, even with transducer aging, the system performance does not degrade over time.

15 is a functional block diagram of the correlation-based ADC approach, which requires the use of an ADC that oversamples the received signal.

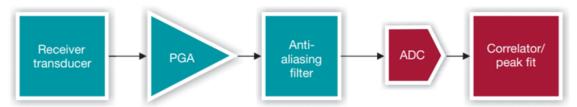



图 15. Correlation-Based Differential TOF Estimator



2.4.3 **Absolute TOF Measurement**

An absolute TOF measurement eliminates the need for a temperature sensor and the need to compute the velocity of sound in water. There are several approaches to calculating absolute TOF accurately. One approach computes the envelope of the received signal and the envelope crossing at a specified ratio to the maximum of the signal.

图 16 illustrates that the absolute TOF will be a constant offset from this threshold crossing of the envelope.

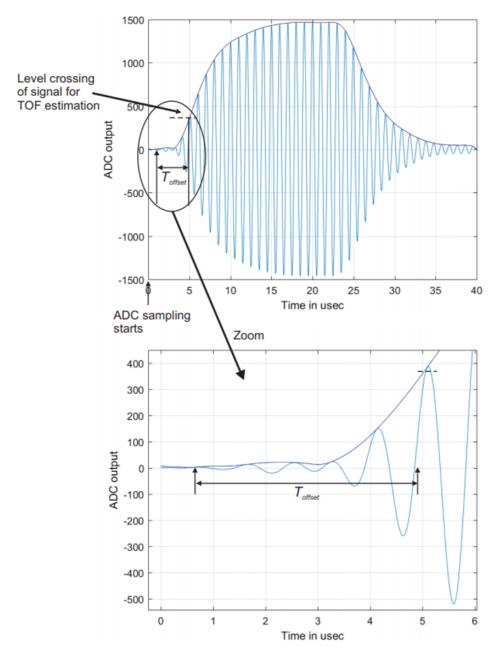

Zoomed-In Version of the Initial Waveform Cycles in the Bottom Panel

图 16. ADC-Captured Waveform and Envelope for Absolute TOF Calculation



2.4.4 MSP430FR6047 MCU Ultrasonic Sensing Module

The functional blocks that help achieve high performance for an ultrasonic flow meter application are part of an AFE called the USS IP block, which operates independently of the CPU of the MSP430 MCU .

17 shows a conceptual block diagram. The ultrasonic-sensing module includes a universal USS power supply (UUPS), a power sequencer (PSQ), a PPG, a physical driver and PHY, a PGA, a high-speed phase-locked loop (HSPLL), a sigma-delta high-speed (SDHS) ADC, and an acquisition sequencer (ASQ). The ultrasonic-sensing module has its own power domain and can be powered ON and OFF independent of the other blocks on the MSP430FR6047 MCU. You can also reset it without affecting any of the other modules on the device. The impedance matching in the ultrasonic-sensing module is critical to obtain a very low drift in the delta time-of-flight measurement over time and any variation in water temperature. This also leads to the ability to detect very low flow rates.

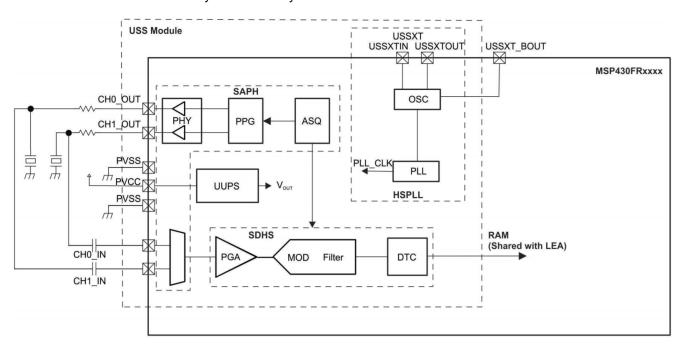


图 17. Ultrasonic-Sensing Solution Functional Block Diagram



3 Hardware, Software, Testing Requirements, and Test Results

Required Hardware and Software 3.1

3.1.1 Hardware

BoosterPack connectors J1, J2.

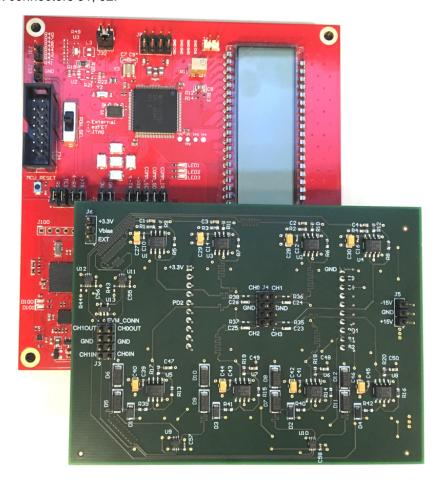


图 18. TIDA-01486 Connected to MSP430FR6047 EVM

Follow these steps to configure the TIDA-01486 (see 2 19):

- The BoosterPack connectors provide the GPIOs to control the switches and op amps and the power supply, 3.3 V, for the switches and logic.
- The bias voltage can be selected from connector J6, J7: internally, from the BoosterPack, or externally from a power supply.
- The power for the THS3095 device must be provided externally from the connector J5.
- The transmit and receive signals from the EVM must be connected to the TIDA-01486 through the connector J3.
- The external transducer must be connected to the connector J4.



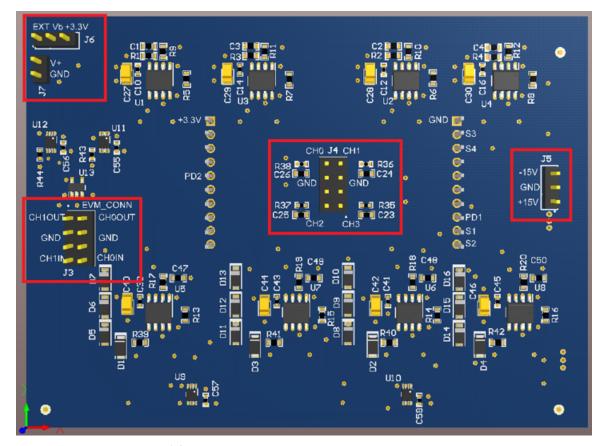


图 19. TIDA-01486 Hardware Configuration

On the MSP430FR6047 EVM, ensure that the jumpers are placed at the connector J30.

Once the previous steps are performed, connect the MSP430FR6047 EVM via USB to the computer.

The MSP430 MCUs Ultrasonic Sensing Design Center was used to take measurements.

Parameters must be set according the used transducers and mechanical setup.



3.2 Testing and Results

3.2.1 Test Setup

22

A 10-cm diameter pipe with 4 in-line transducers was used for the measurements.

For this particular pipe, the following hardware changes were done to the TIDA-01486:

- The transmit signal was lowered to ±6.6 V by amplifying only by 2 the signal coming from the MSP430FR6047 MCU. The op amp gain was changed by changing the resistors according to the recommended resistor values table in *High-Voltage*, *Low-Distortion*, *Current-Feedback Operational Amplifiers*. 节 2.2.3 shows the switching configuration.
- A gain of 7.9 dB (6-dB external + 1.9-dB internal) is enough for this particular test setup. The external gain was lowered to 6 dB by changing the resistors according to the recommended resistor values in *High-Voltage, Low-Distortion, Current-Feedback Operational Amplifiers*.

The following parameters were set in the GUI (see \(\begin{aligned} \begin{aligned} 20 \end{aligned} \).

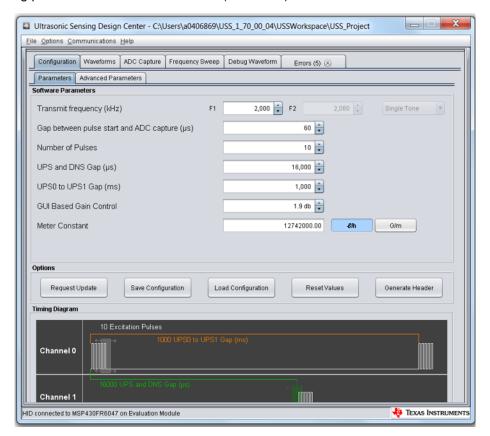


图 20. Configuration Parameters



3.2.2 Test Results

图 21 and 图 22 show the ADC capture for pair 1 and pair 2, respectively.

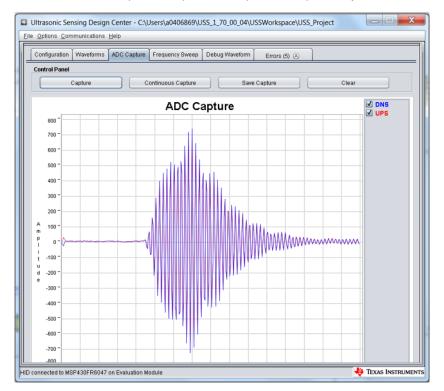


图 21. ADC Capture Pair One

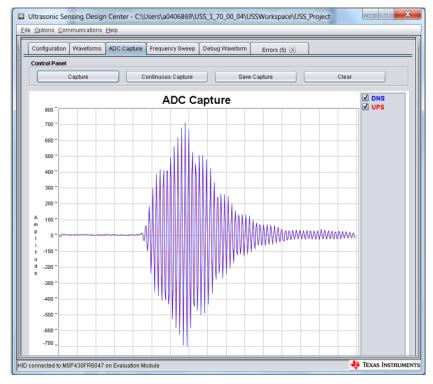


图 22. ADC Capture Pair Two



Design Files www.ti.com.cn

Offset drift for both pairs is around 50 ps. Single shot standard deviation is around 40 ps. Offset drift was calculated by taking the average of 200 measurements of delta TOF values. On that variable, the difference between the MAX and MIN to obtain the ZFD is performed. The measurements were taken over a time period longer than 5 hours.

4 Design Files

4.1 Schematics

To download the schematics, see the design files at TIDA-01486.

4.2 Bill of Materials

To download the bill of materials (BOM), see the design files at TIDA-01486.

4.3 PCB Layout Recommendations

Use the following TIDA-01486 PCB layout recommendations:

- · Avoid vias for transmitting and receiving signals
- Remove polygon fills under the inputs and outputs on all op amps (图 23)
- Add a GND fill on layer Signal 2 if the open area has not being used. The GND fill helps CH2_OUT and CH1_IN because they have to go through vias to the bottom layer (图 24).
- Match trace lengths (图 25):
 - (CH0_OUT, CH0_IN, CH1_OUT, CH1_IN, CH2_OUT, CH2_IN, CH3_OUT, CH3_IN)
 - (CH0_T, CH1_T, CH2_T, CH3_T)
 - (CH0_R, CH1_R, CH2_R, CH3_R)
 - (EVM_CH0_IN, EVM_CH1_IN)
 - (EVM_CH0_OUT, EVM_CH1_OUT)

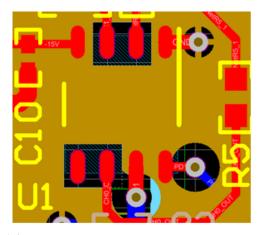


图 23. Op Amp Inputs and Outputs Test



www.ti.com.cn Design Files

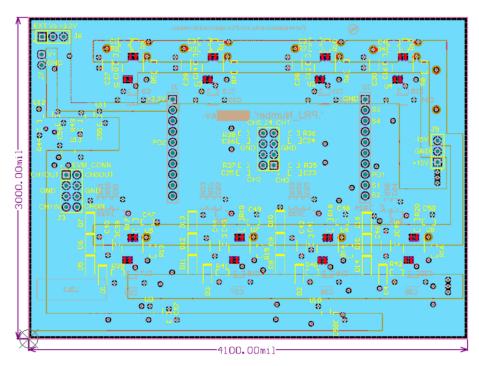


图 24. GND Fill on Layer Two

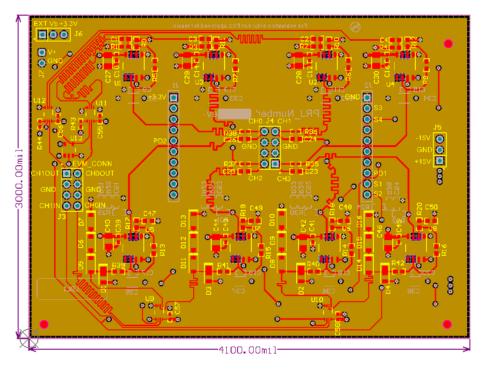


图 25. Match Trace Lengths



Design Files www.ti.com.cn

4.3.1 Layout Prints

To download the layer plots, see the design files at TIDA-01486.

4.4 Altium Project

To download the Altium project files, see the design files at TIDA-01486.

4.5 Gerber Files

To download the Gerber files, see the design files at TIDA-01486.

4.6 Assembly Drawings

To download the assembly drawings, see the design files at TIDA-01486.

5 Software Files

To download the software files, see the design files at TIDA-01486.

6 Related Documentation

1. Texas Instruments, High-Voltage, Low-Distortion, Current-Feedback Operational Amplifiers Data Sheet

6.1 商标

BoosterPack, MSP430Ware, MSP, PowerPAD are trademarks of Texas Instruments. Arm, Cortex are registered trademarks of Arm Limited. All other trademarks are the property of their respective owners.

7 Acknowledgments

The author wishes to thank Johann Zipperer, Srinivas Lingam, Eddie LaCost, Winter Yu, and Domingo Garcia for all their help throughout this project and on all key aspects of the MSP430FR6047 MCU.

8 About the Author

Giovanni Campanella is a systems engineer at Texas Instruments, where he is responsible for defining and developing reference design solutions for the industrial segment. He earned his bachelor's degree in electronic and telecommunication engineering at the University of Bologna and his master's degree in electronic engineering at the Polytechnic of Turin in Italy. He is an expert in sensors and analog signal chain.

有关 TI 设计信息和资源的重要通知

德州仪器 (TI) 公司提供的技术、应用或其他设计建议、服务或信息,包括但不限于与评估模块有关的参考设计和材料(总称"TI 资源"),旨在帮助设计人员开发整合了 TI 产品的 应用; 如果您(个人,或如果是代表贵公司,则为贵公司)以任何方式下载、访问或使用了任何特定的 TI 资源,即表示贵方同意仅为该等目标,按照本通知的条款进行使用。

TI 所提供的 TI 资源,并未扩大或以其他方式修改 TI 对 TI 产品的公开适用的质保及质保免责声明;也未导致 TI 承担任何额外的义务或责任。 TI 有权对其 TI 资源进行纠正、增强、改进和其他修改。

您理解并同意,在设计应用时应自行实施独立的分析、评价和 判断, 且应全权负责并确保 应用的安全性, 以及您的 应用 (包括应用中使用的所有 TI 产品))应符合所有适用的法律法规及其他相关要求。你就您的 应用声明,您具备制订和实施下列保障措施所需的一切必要专业知识,能够 (1) 预见故障的危险后果,(2) 监视故障及其后果,以及 (3) 降低可能导致危险的故障几率并采取适当措施。您同意,在使用或分发包含 TI 产品的任何 应用前, 您将彻底测试该等 应用 和该等应用所用 TI 产品的 功能而设计。除特定 TI 资源的公开文档中明确列出的测试外,TI 未进行任何其他测试。

您只有在为开发包含该等 TI 资源所列 TI 产品的 应用时, 才被授权使用、复制和修改任何相关单项 TI 资源。但并未依据禁止反言原则或其他法理授予您任何TI知识产权的任何其他明示或默示的许可,也未授予您 TI 或第三方的任何技术或知识产权的许可,该等产权包括但不限于任何专利权、版权、屏蔽作品权或与使用TI产品或服务的任何整合、机器制作、流程相关的其他知识产权。涉及或参考了第三方产品或服务的信息不构成使用此类产品或服务的许可或与其相关的保证或认可。使用 TI 资源可能需要您向第三方获得对该等第三方专利或其他知识产权的许可。

TI 资源系"按原样"提供。TI 兹免除对 TI 资源及其使用作出所有其他明确或默认的保证或陈述,包括但不限于对准确性或完整性、产权保证、无屡发故障保证,以及适销性、适合特定用途和不侵犯任何第三方知识产权的任何默认保证。

TI 不负责任何申索,包括但不限于因组合产品所致或与之有关的申索,也不为您辩护或赔偿,即使该等产品组合已列于 TI 资源或其他地方。 对因 TI 资源或其使用引起或与之有关的任何实际的、直接的、特殊的、附带的、间接的、惩罚性的、偶发的、从属或惩戒性损害赔偿,不管 TI 是否获悉可能会产生上述损害赔偿,TI 概不负责。

您同意向 TI 及其代表全额赔偿因您不遵守本通知条款和条件而引起的任何损害、费用、损失和/或责任。

本通知适用于 TI 资源。另有其他条款适用于某些类型的材料、TI 产品和服务的使用和采购。这些条款包括但不限于适用于 TI 的半导体产品 (http://www.ti.com/sc/docs/stdterms.htm)、评估模块和样品 (http://www.ti.com/sc/docs/sampterms.htm) 的标准条款。

邮寄地址: 上海市浦东新区世纪大道 1568 号中建大厦 32 楼,邮政编码: 200122 Copyright © 2018 德州仪器半导体技术(上海)有限公司